

Isuzu Rodeo 1992 – 1993 fuse box diagram

Fuse box diagram

1 10A TAIL. L ILLUM. L	6 15A WIPER	11 10A START
2 10A STOP. L	7 10A GAUGE, TURN. L	12 15A CIGAR RADIO
3 10A ROOM. L	8 10A ENGINE, BACK. L	13 20A RWAL
4 25A (RR DEF)	9 15A IGNITION	14 SPARE 25A
5 20A (FUEL PUMP)	10 10A (RR, WIPER)	15 SPARE 10A
(Not used)		16 SPARE 15A
		17 SPARE 20A

Isuzu Rodeo – fuse box diagram

Number	A	Function
1	10	Exterior lights: front park. rear side marker. park. and license lights; electronic engine control; dash and console lights; rear wheel anti-lock brake system
2	10	Brake lights
3	10	Dome and luggage room lights; radio; electronic engine control
4	25	Rear defogger
5	20	Electronic engine control
6	15	Windshield wiper/washer
7	10	Indicators; gauges; turn and hazard lights; power windows

8	10	Charging system: back up lights; electronic engine control
9	15	Ignition system
10	10	Rear wiper/washer
11	10	Starting system
12	15	Cigarette lighter: sound system
13	20	Rear wheel antilock brakes system
14	25	Spare
15	10	Spare
16	15	Spare
17	20	Spare