



Suzuki Celerio 2014 – present - fuse box diagram


Fuse box in the engine compartment

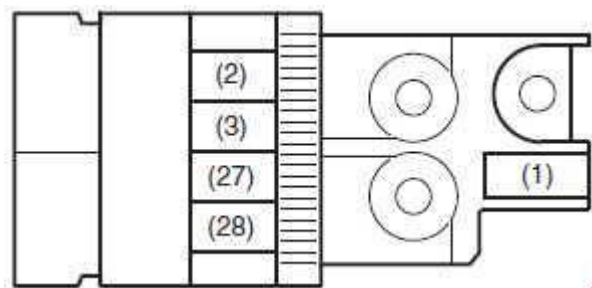

. Suzuki Celerio – fuse box diagram –

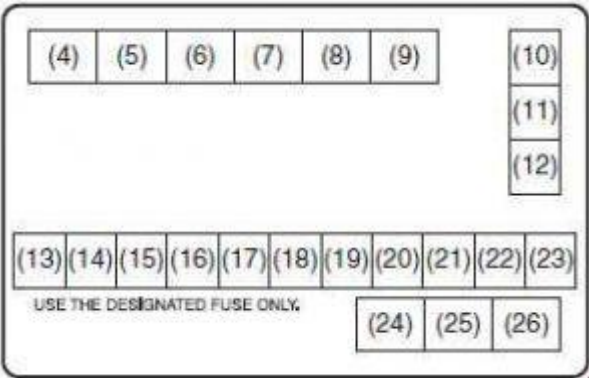

engine compartment . Suzuki Celerio –
fuse box diagram – engine compartment

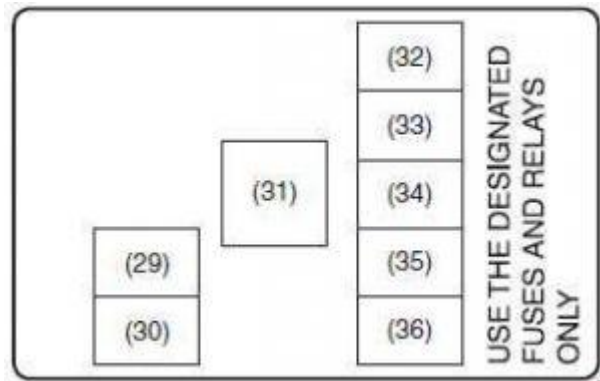

. Suzuki Celerio – fuse box diagram –

engine compartment


No.	A	Function/component
1	80	FL1 (PETROL)
	120	FL1 (DIESEL)
2	50	FL5 (PETROL)

	40	FL5 (DIESEL)
3	50	FL4
10	40	ABS motor
11	40	T/M pump (PETROL)
	40	IGN2 (DIESEL)
12	40	Power steering
13	20	Front fog light
14	7.5	T/M 2 (PETROL), CNG Valve (Compressed Natural Gas)
	25	F/P (DIESEL)
15	30	Ignition switch
16	10	Air compressor
17	15	FI (PETROL)
	30	FI (DIESEL)
18	10	T/M (PETROL)
	10	EPI (DIESEL)

19	15	Headlight (Right)
20	25	ABS control module
21	15	Headlight (Left)
22	30	Starting motor
23	30	Radiator fan
27	80	FL3 (PETROL)
	100	FL3 (DIESEL)
28	80	FL2 (PETROL)
	100	FL2 (DIESEL)
29	20	Glow plug
30	20	Glow plug 2
32	–	Not used
33	15	FI2
34	20	INJ DRV
35	–	Not used

36	–	Not used
Relay		
4	Front fog light relay	
5	Glow plug relay	
6	CNG Valve relay (Compressed Natural Gas)	
7	Air compressor relay	
8	Back up relay	
9	F/P relay	
24	FI main relay (PETROL)	
	Glow plug 2 relay (DIESEL)	
25	Starting motor relay	
26	Radiator fan relay	
31	FI main relay	

Fuse box under the dashboard

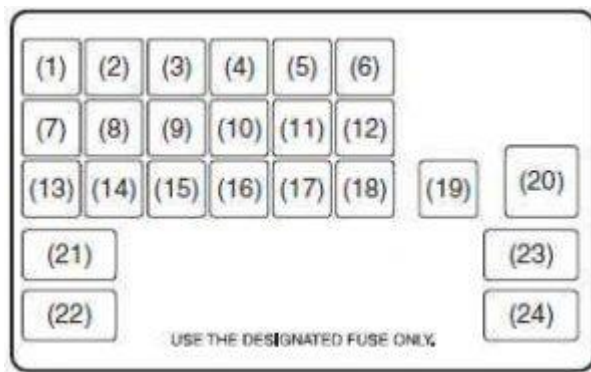

. Suzuki Celerio – fuse box diagram –

dashboard

No.	A	Function/component
1	10	Stop light
2	30	Blower motor
3	10	STSIG
4	15	Accessory
5	10	Rear fog light
6	10	Tail light
7	10	Back-up light
8	10	ABS
9	10	Meter
10	15	Ignition coil

11	20	Wiper/Washer
12	10	IG2 SIG
13	10	IG1 SIG
14	10	Air bag
15	20	Power window timer
16	20	Door lock
17	15	Horn/Hazard
18	20	Rear defogger
19	15	Dome
20	30	Power window
21	7.5	ACC 2
21		CNG (Compressed Natural Gas)
22	15	Radio 2
23	–	ACC 2 (Compressed Natural Gas)
24	–	Not used