

Wiring Diagram Type 928 S Model 88

COORDINATES

PAGE 1	1- 10	LIGHTS ROW
PAGE 2	1- 10	LIGHTS USA
PAGE 3	11- 20	BODY
PAGE 4	21- 30	INSTRUMENT CLUSTER AND SENDERS
PAGE 5	31- 40	ENGINE COOLING, HEATER, AIR CONDITIONER
PAGE 6	41- 50	OUTSIDE MIRROR, POWER SEAT
PAGE 7	51- 60	SEAT AND MIRROR MEMORY
PAGE 8	61- 70	RADIO
PAGE 9	71- 80	ABS, ALARM SWITCH, TRAILER HITCH
PAGE 10	81- 90	MOTOR, FUEL AND IGNITION, CRUISE CONTROL
PAGE 11	91-100	CENTRAL ELECTRIC
PAGE 12		CONSTR. COMPONENTS, PLUG CONNECTIONS, GROUND POINTS

Wiring Diagram Type 928 S Model 88

The wiring diagram comprises 12 individual wiring diagrams.
They are subdivided into coordinate fields.

Each individual wiring diagram comprises a part of the central electrical system within a dash-dot frame.

This part of the central electrical system shows all the lines and relays required for individual wiring diagram.

The ground-connecting points are designated with "MP" and their location is shown in a vehicle diagram.

The 10-pole plugs on central electrical system are clipped together from 3 parts.

Part 1, with the cast-on fastening pin, is the "initial element".

Part 2 is the "module element".

Both parts are identified by the digits 1 . . . 5.

Part 3 is a "coding element".


The designations of the plug connections in wiring diagram for central electrical system refer e. g. from A 11 . . . 15 to the "initial element", from A 21 . . . 26 to module element.


Wiring Diagram Type 928 S Model 88 page 1

LIGHTS ROW
COORDINATES
1- 10

Wiring Diagram Type 928 S Model 88 page 1

LIGHTS ROW

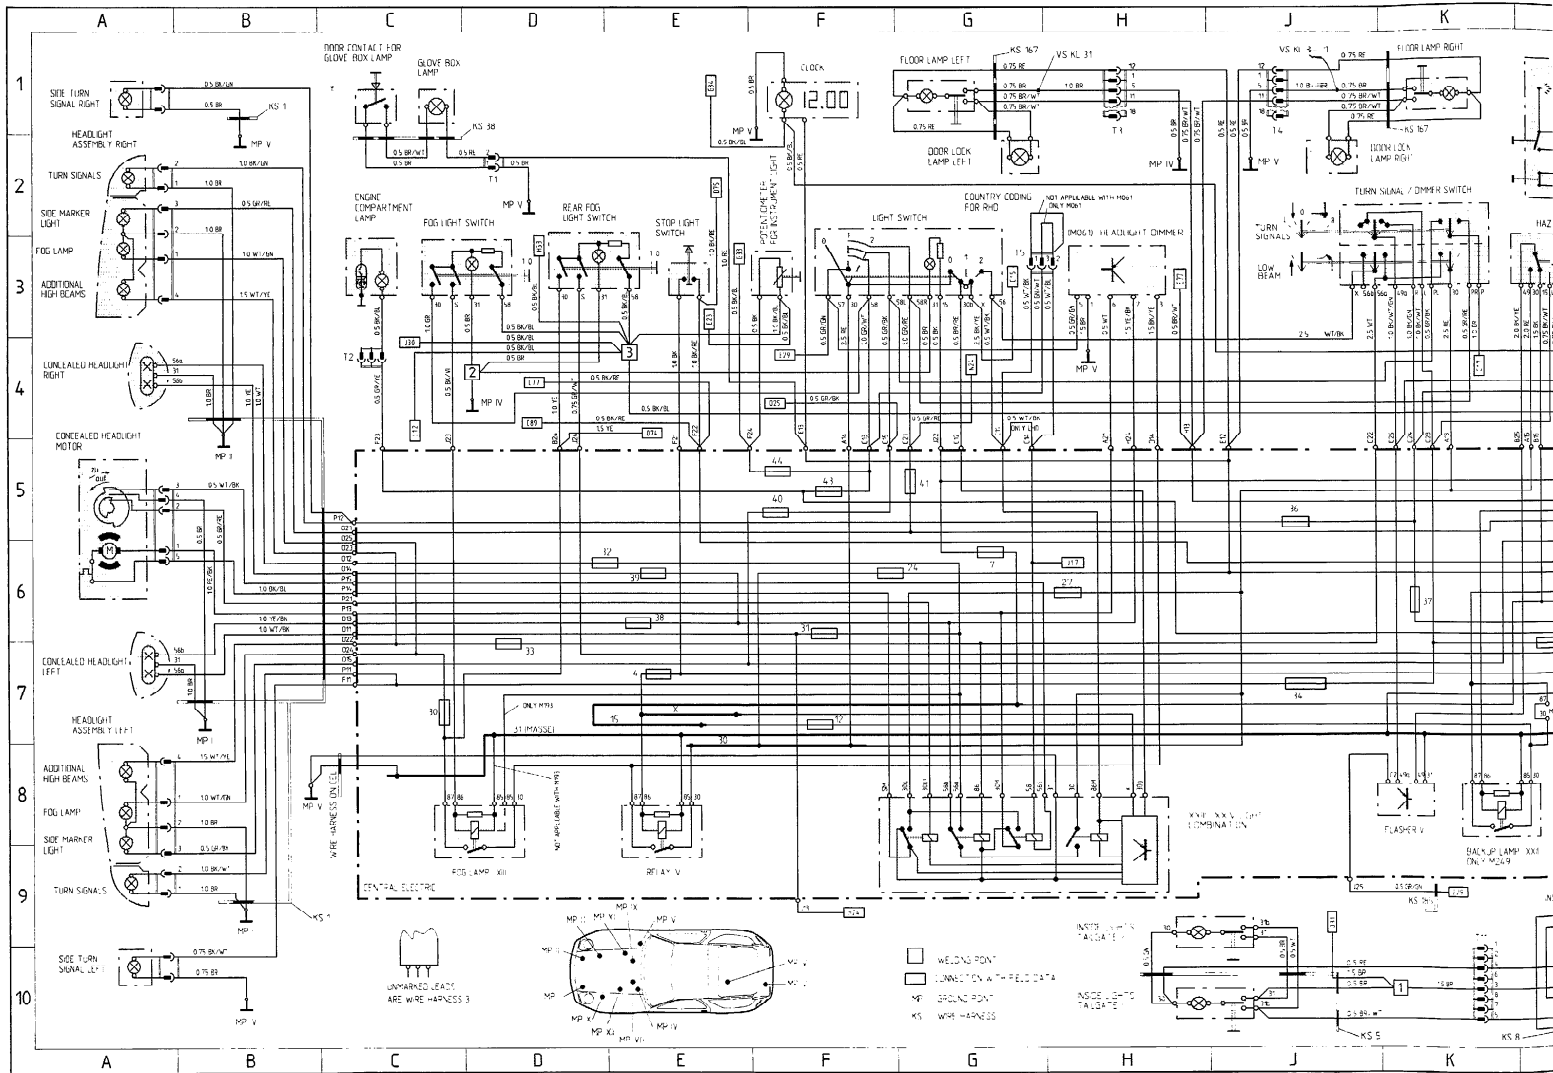

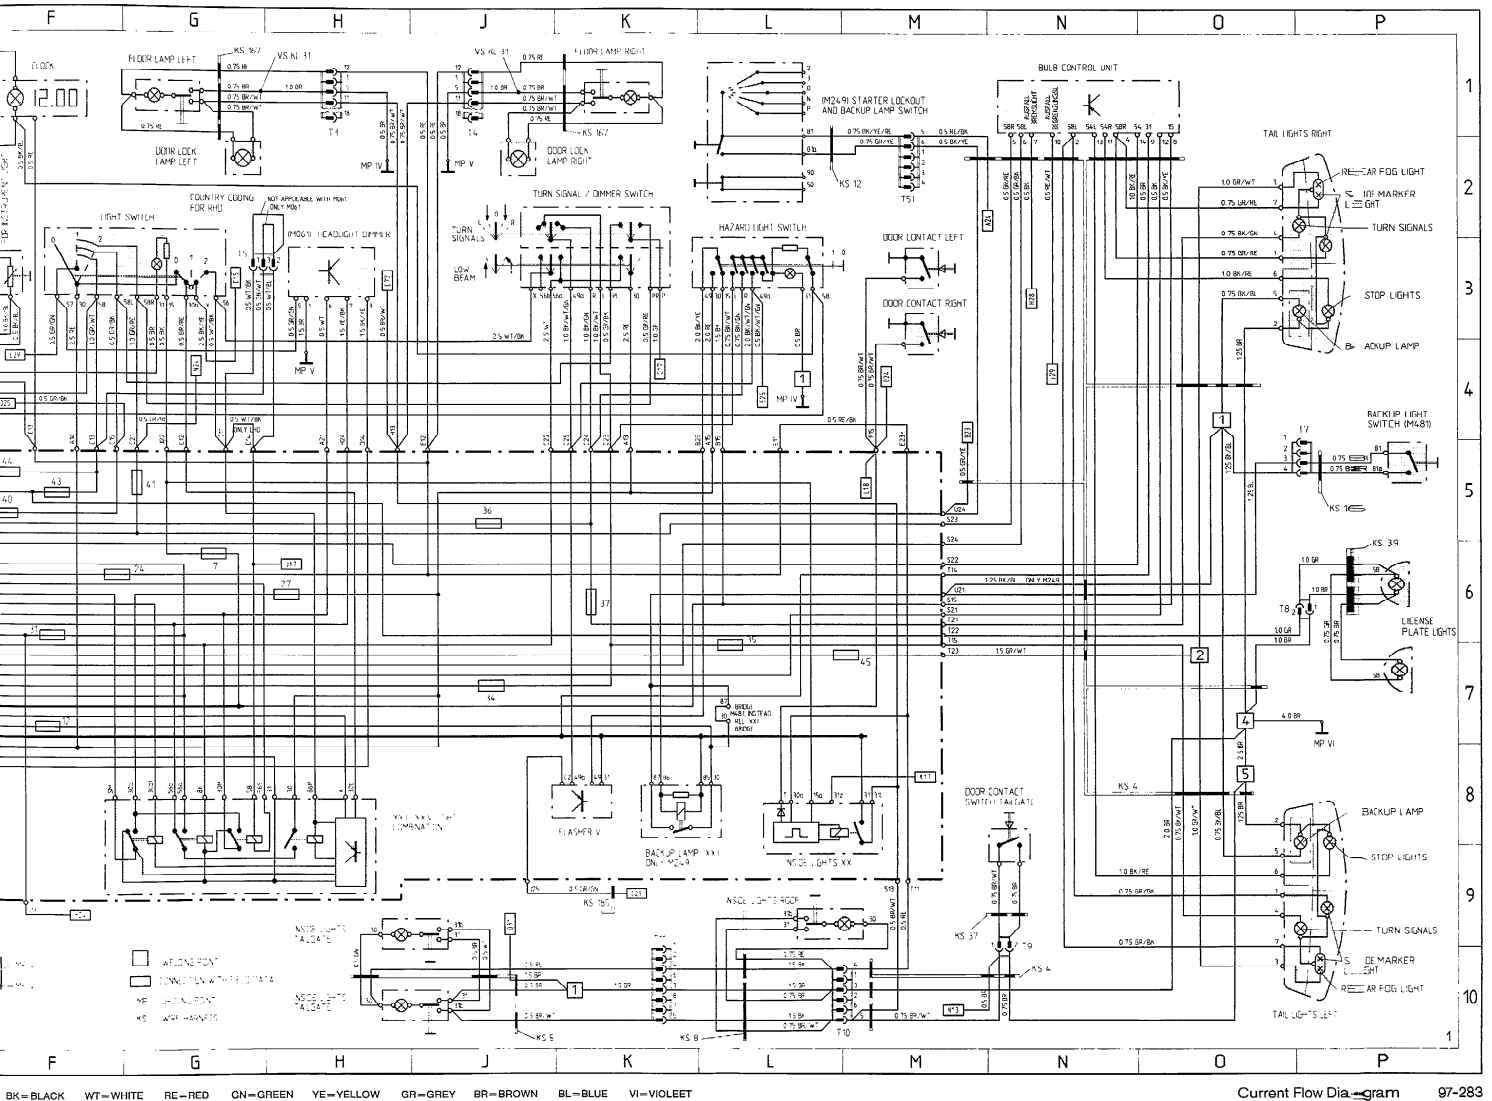


Current Flow Diagram 97-283

Wiring Diagram Type 928 S Model 88 page 2

LIGHTS USA
COORDINATES
1- 10


Wiring Diagram Iype 928 S Model 88 page 2

LIGHTS USA

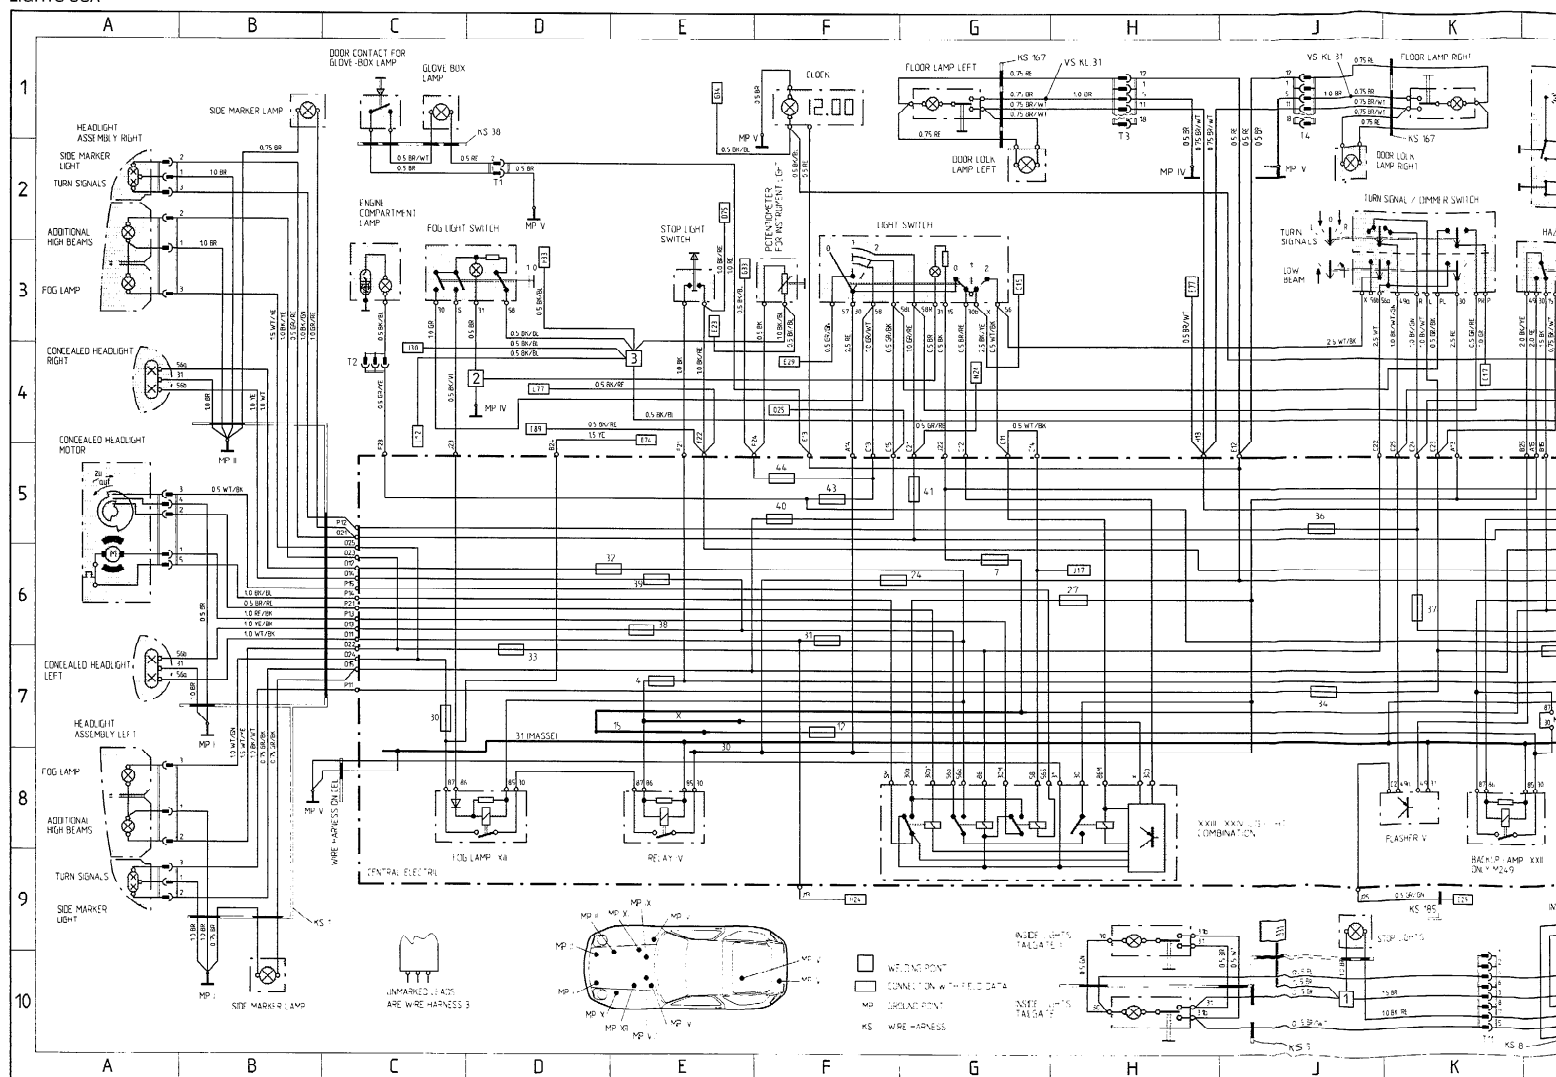

Printed in Germany - XVIII, - 1987

BK=BLACK WT=WHITE RE=RED GN=GREEN YE=YELLOW GR=GRAY BR=BROWN BL=BLUE VI=VIOLET

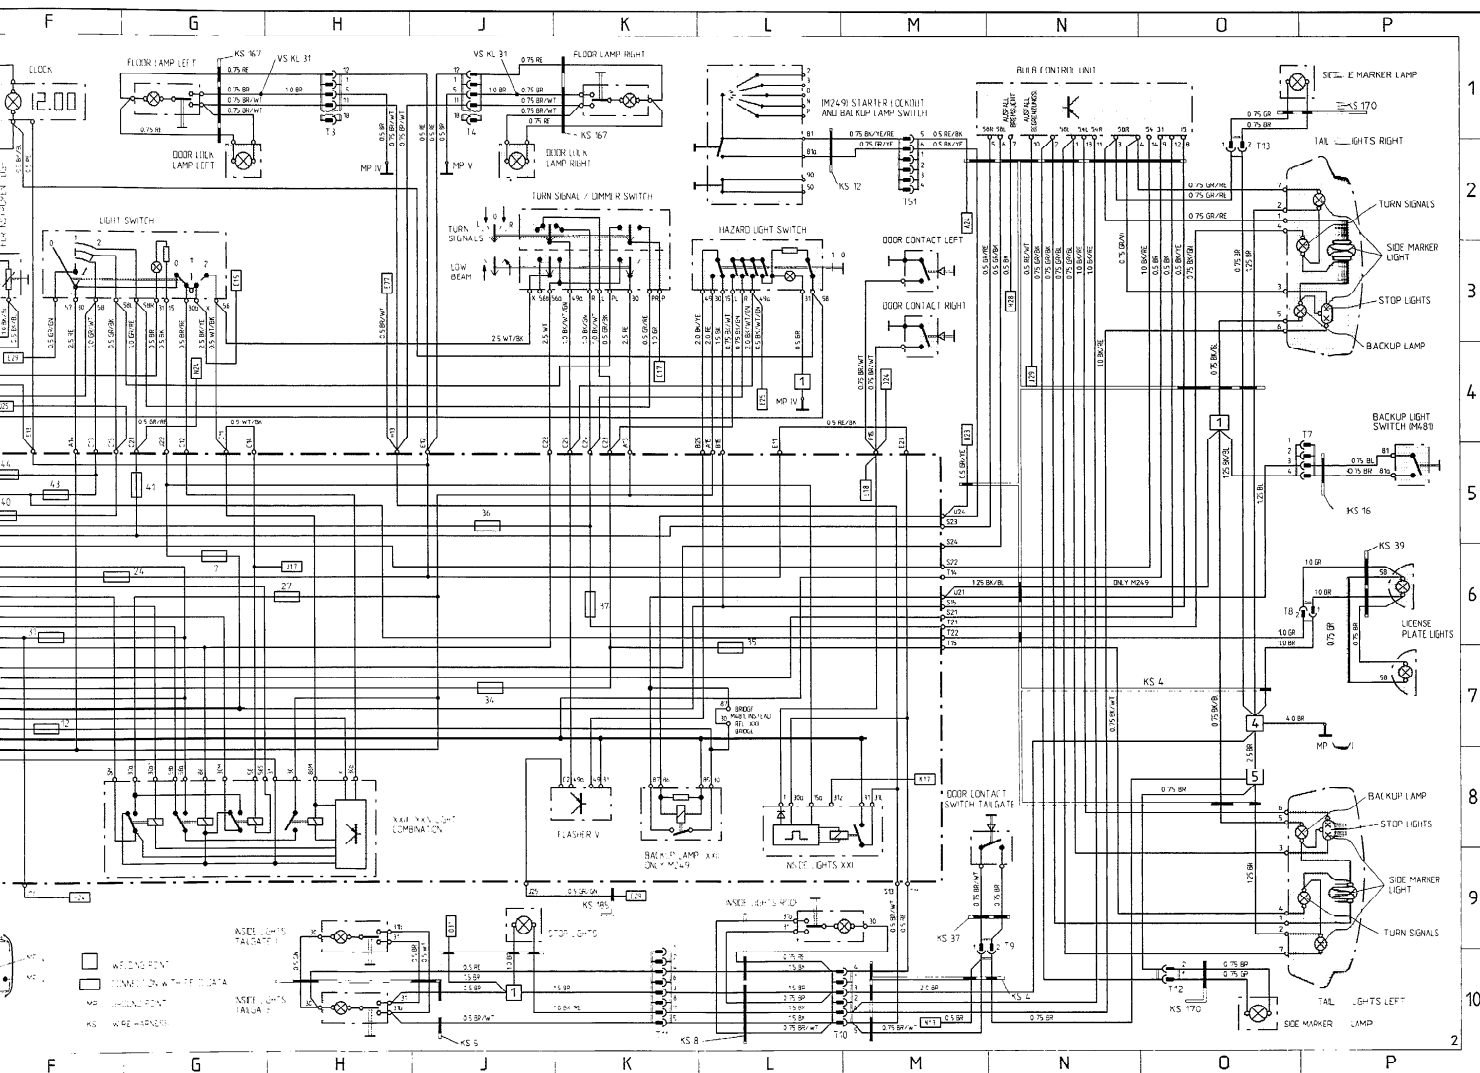



Wiring Diagram Type 928 S Model 88 page 3

BODY
COORDINATES
11 - 20

Wiring Diagram Iype 928 S Model 88 page 3

BODY

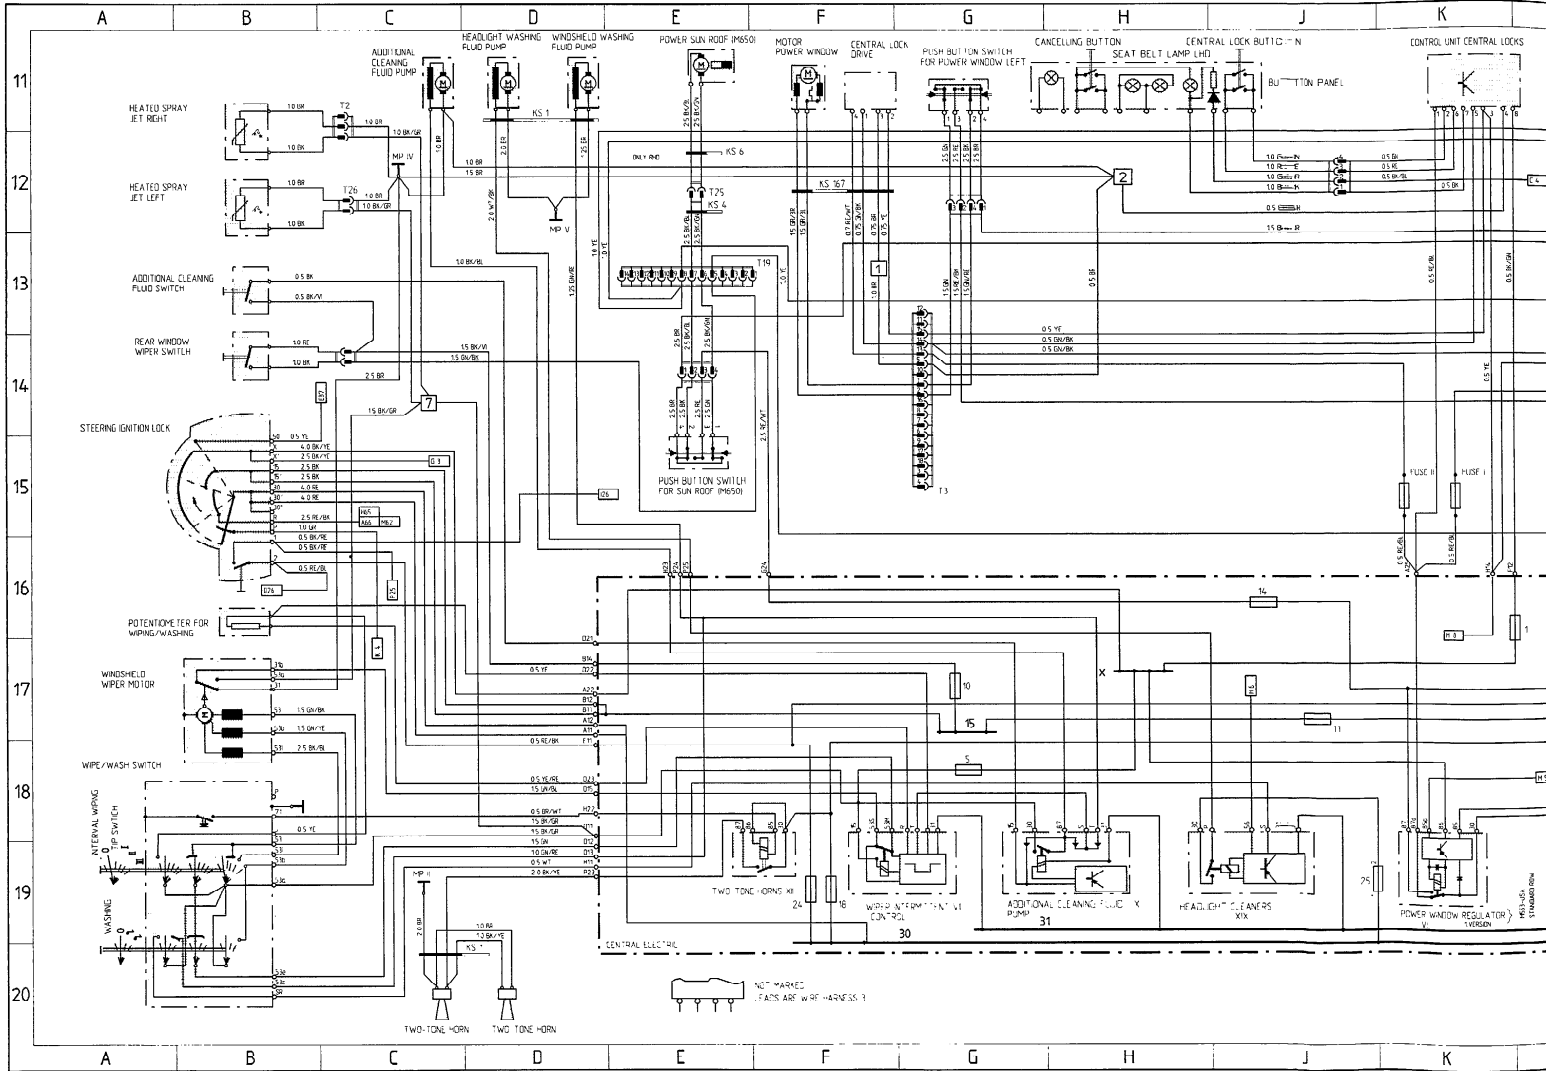

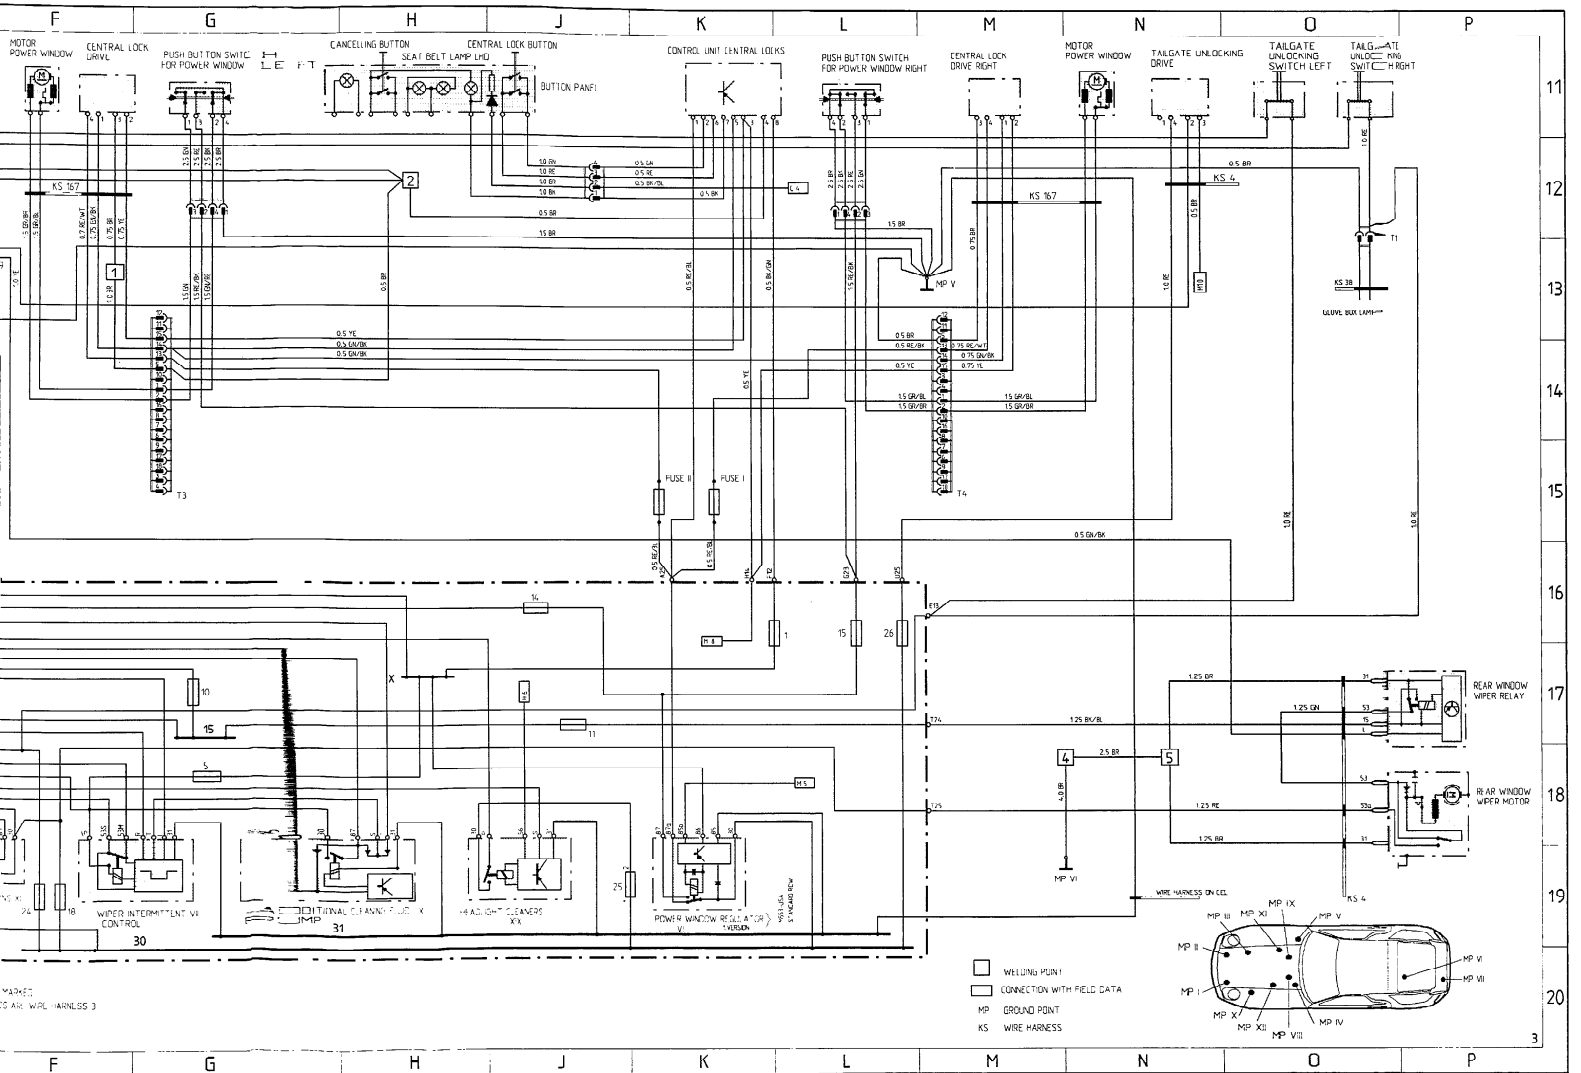

BLACK - BLACK WT - WHITE RE - RED GN - GREEN YE - YELLOW GR - GREY BR - BROWN BL - BLUE VI - VIOLETT

Current Flow Diagram 97-287

 
Wiring Diagram Type 928 S Model 88 page 4

INSTRUMENT CLUSTER AND SENDERS


COORDINATES

21- 30

INSTRUMENT CLUSTER AND SENDERS



 BK=BLACK WT=WHITE RE=RED GN=GREEN YE=YELLOW GR=GREY BR=BROWN BL=BLUE VI=VIOLET




Current Flow Diagram 97-289

Wiring Diagram Type 928 S Model 88 page 5

ENGINE COOLING, HEATER,
AIR CONDITIONER
COORDINATES
31- 40

Wiring Diagram Type 928 S Model 88 page 5

ENGINE COOLING, HEATER, AIR CONDITIONER

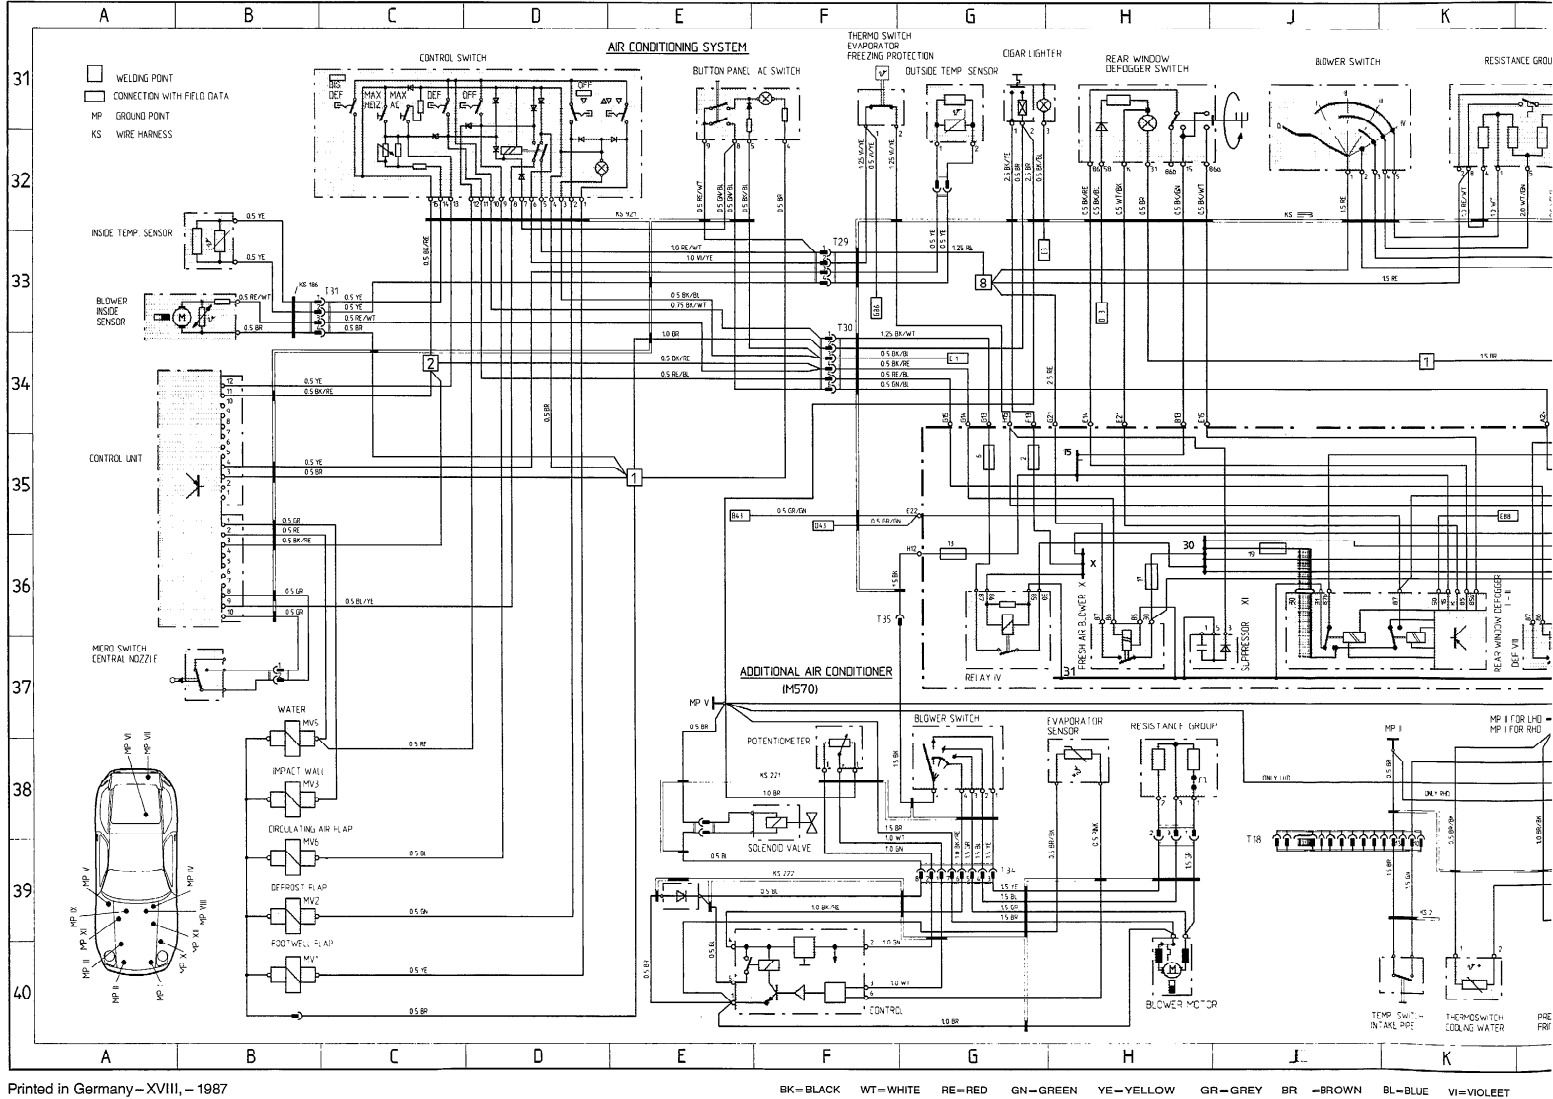




Wiring Diagram Type 928 S Model 88 page 6

OUTSIDE MIRROR, POWER SEAT
COORDINATES
41- 50

Wiring Diagram Type 928 S Model 88 page 6

OUTSIDE MIRROR, POWER SEAT

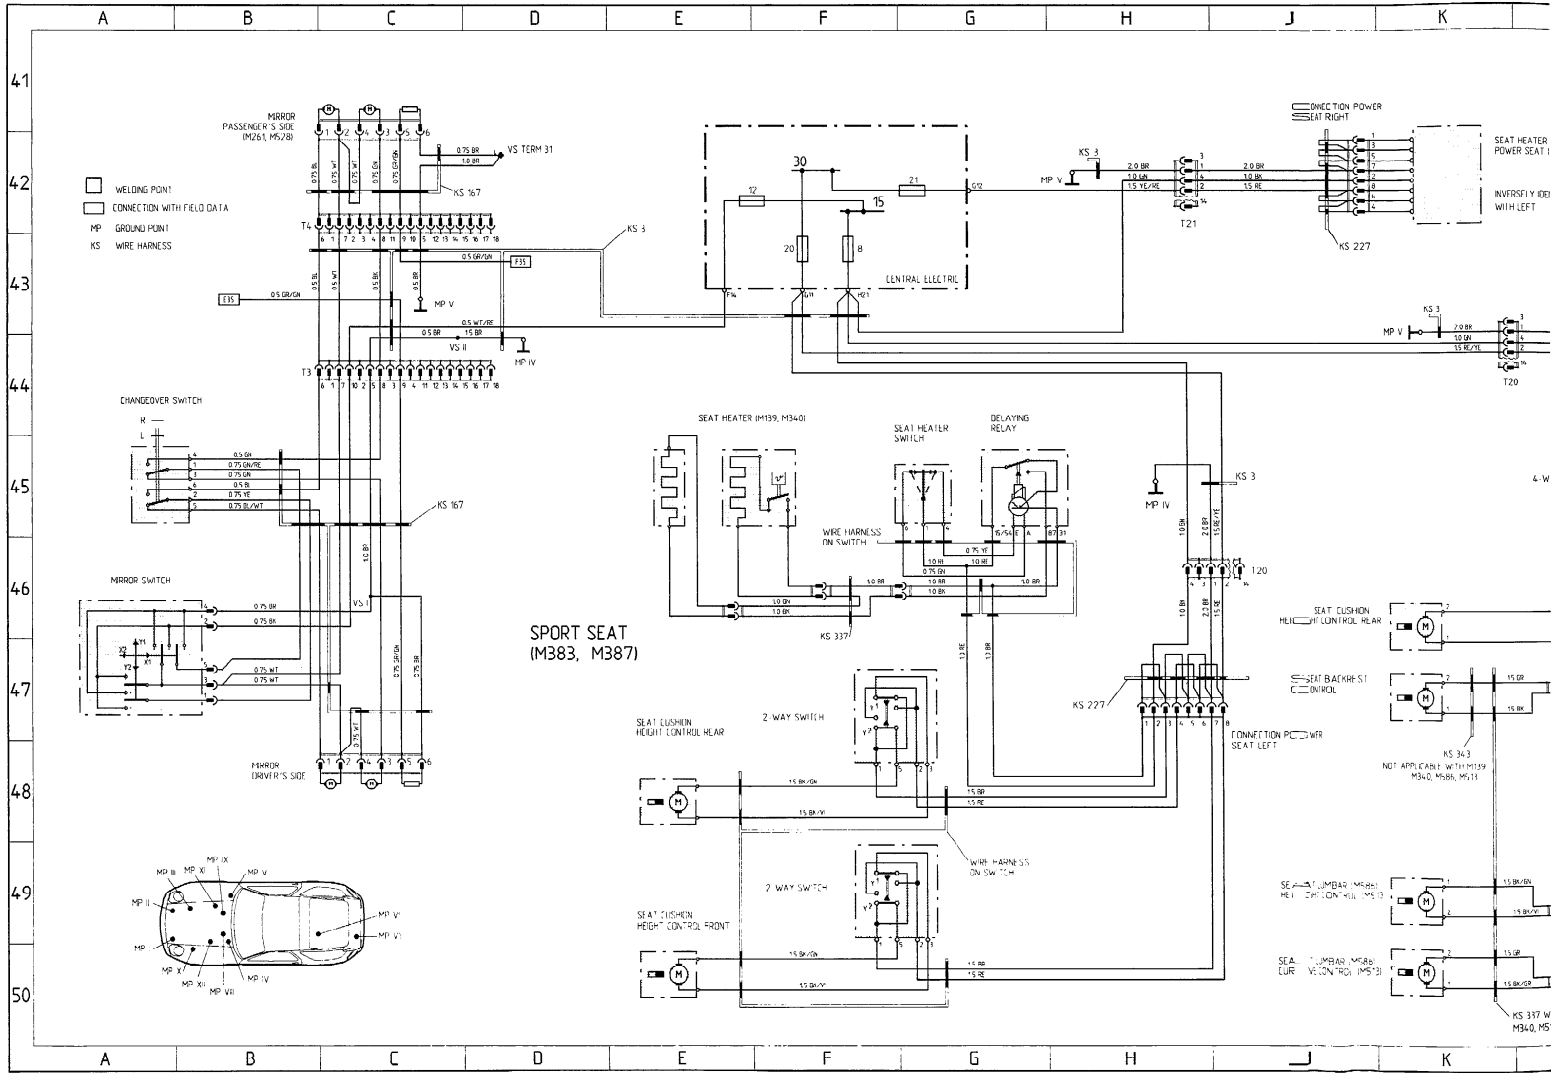

BK=BLACK WT=WHITE RE=RED GN=GREEN YE=YELLOW GR=GREY BR=Brown BL=BLUE VI=VIOLET



Current Flow Diagram

97-293


Wiring Diagram Type 928 S Model 88 page 7

SEAT AND MIRROR MEMORY
COORDINATES

51 - 60


Wiring Diagram Type 928 S Model 88 page 7

SEAT AND MIRROR MEMORY

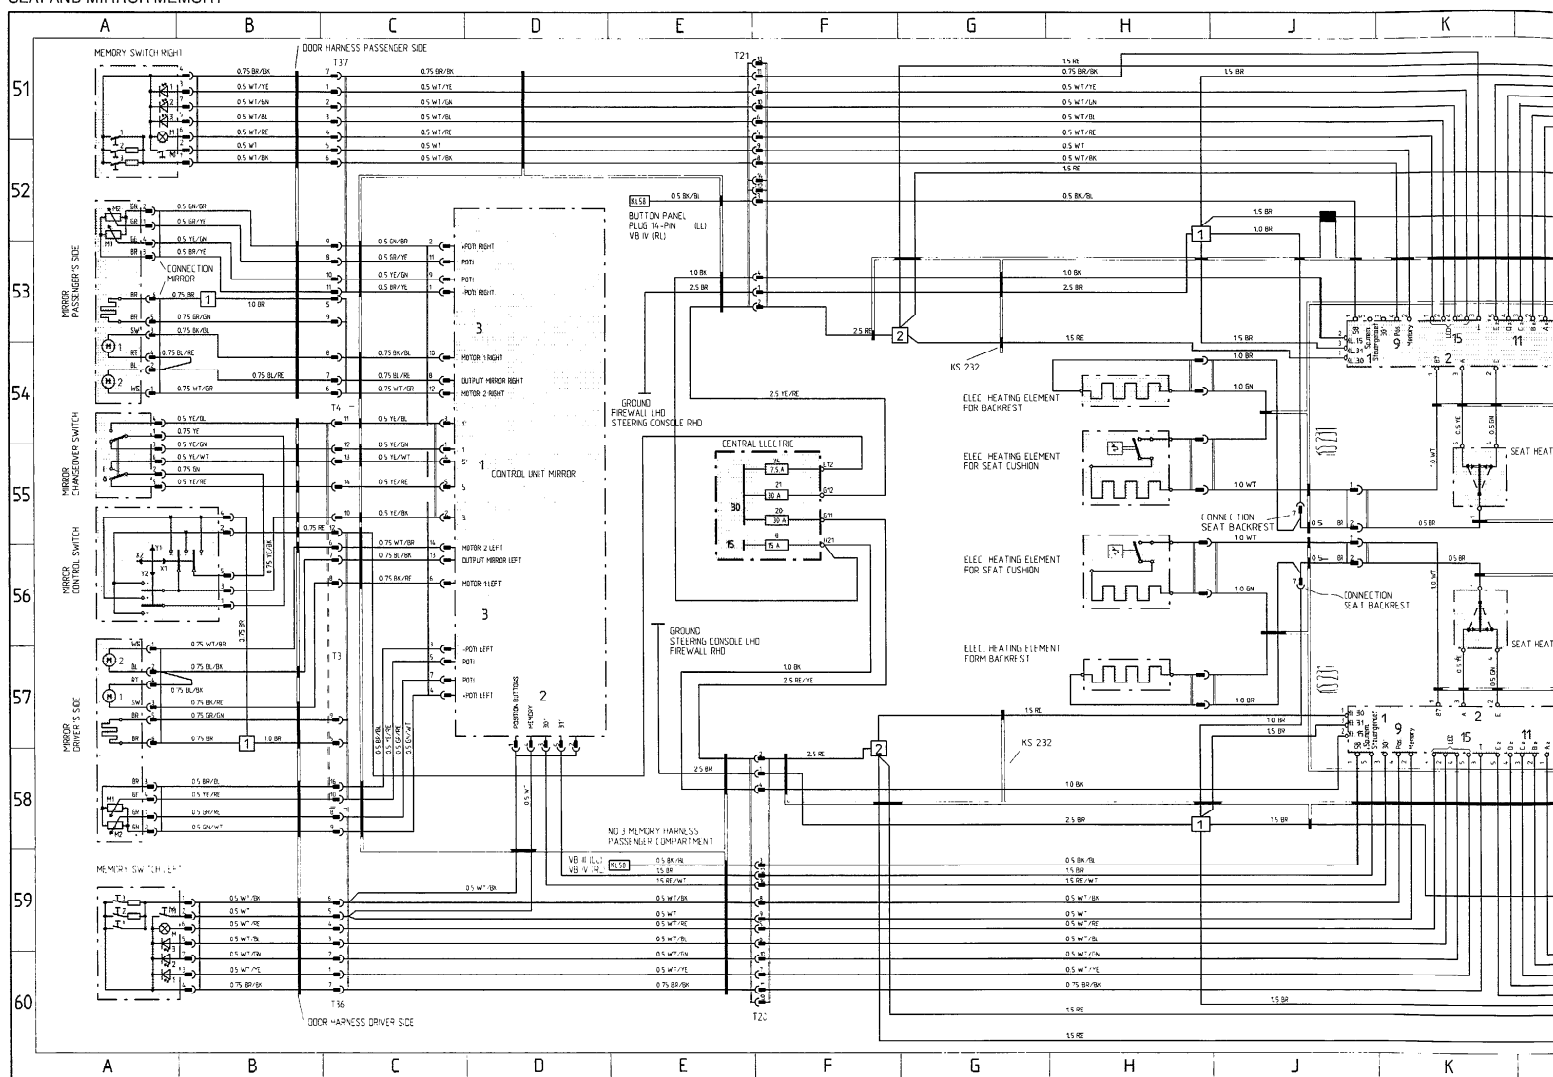

Printed in Germany - XVIII, - 1987


BK=BLACK WT=WHITE RE=RED GN=GREEN YE=YELLOW GR=GREY BR= BROWN BL=BLUE VI=VIOLET

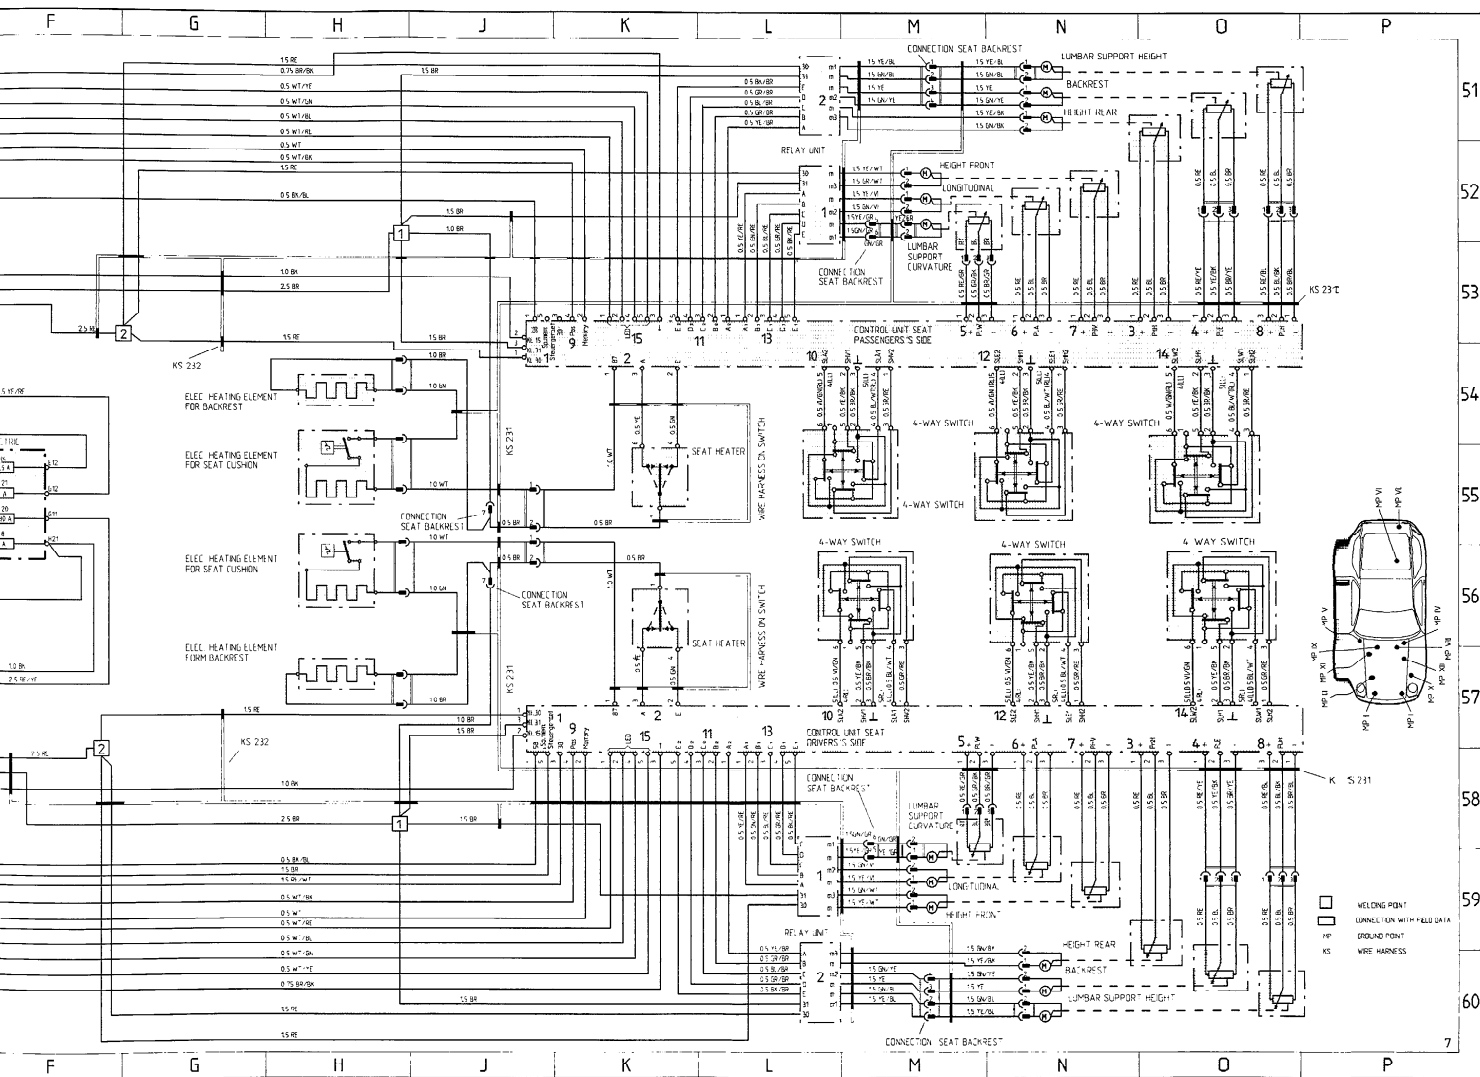


Wiring Diagram Type 928 S Model 88 page 8

RADIO
COORDINATES
61- 70

 RADIO



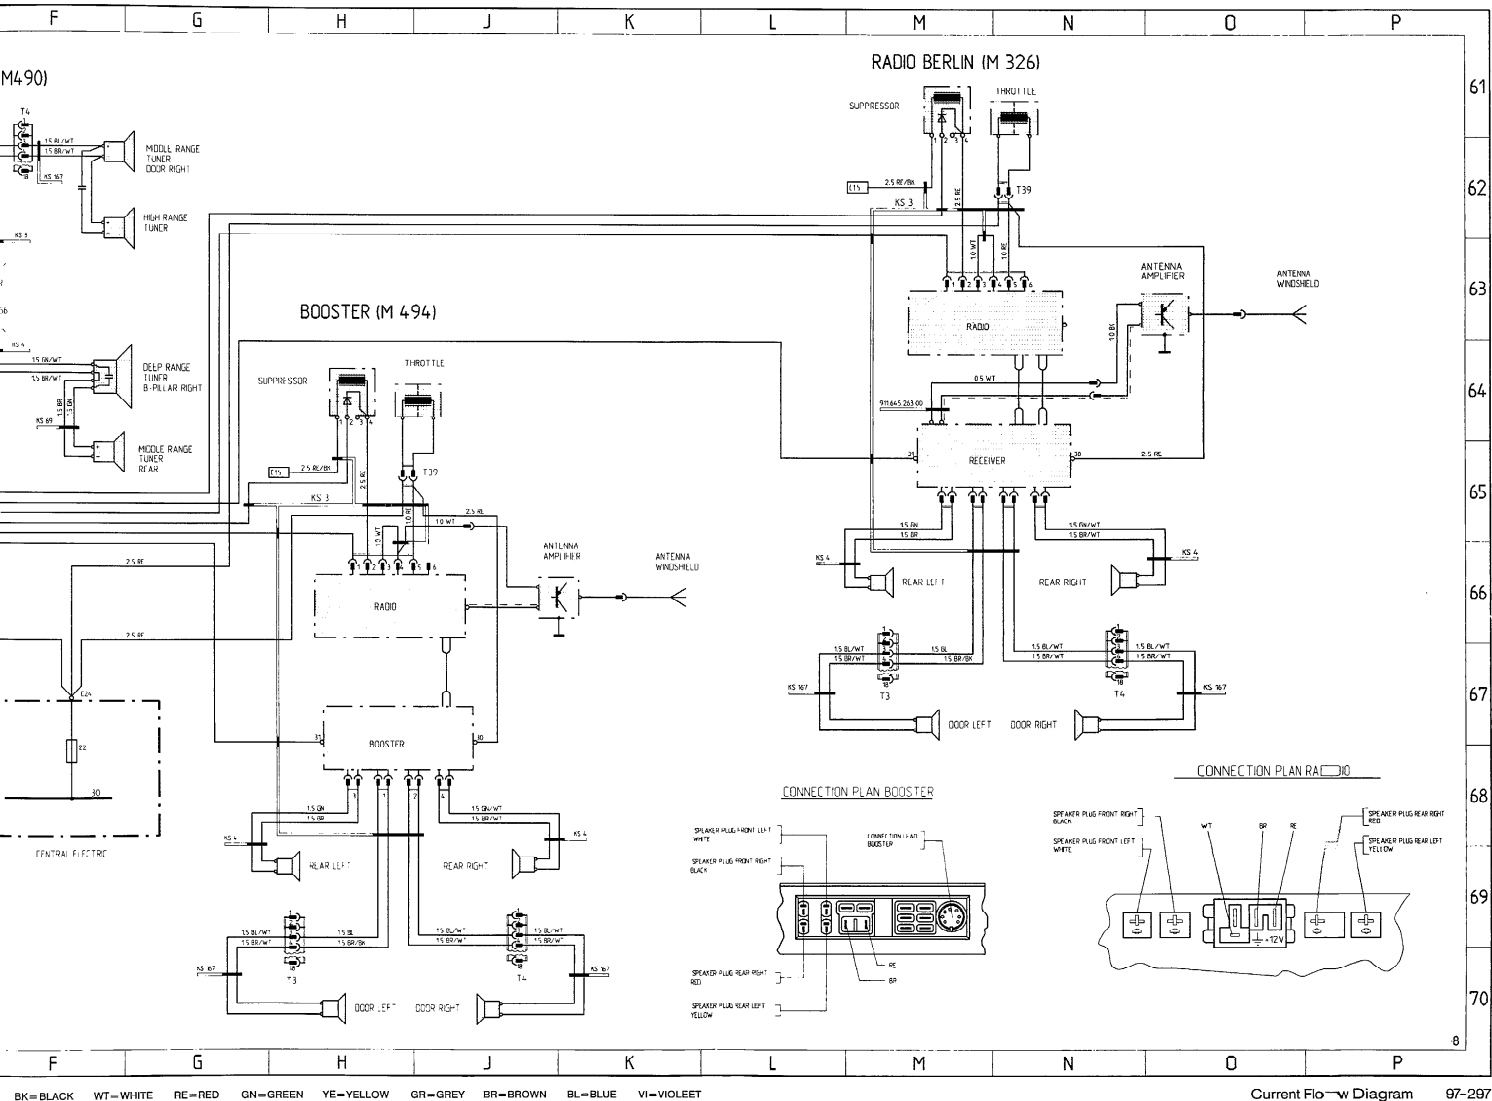

Wiring Diagram Type 928 S Model 88 page 9


ABS, ALARM SWITCH, TRAILER HITCH

COORDINATES

71- 80

Wiring Diagram Type 928 S Model 88 page 9

ABS, ALARM SWITCH, TRAILER HITCH

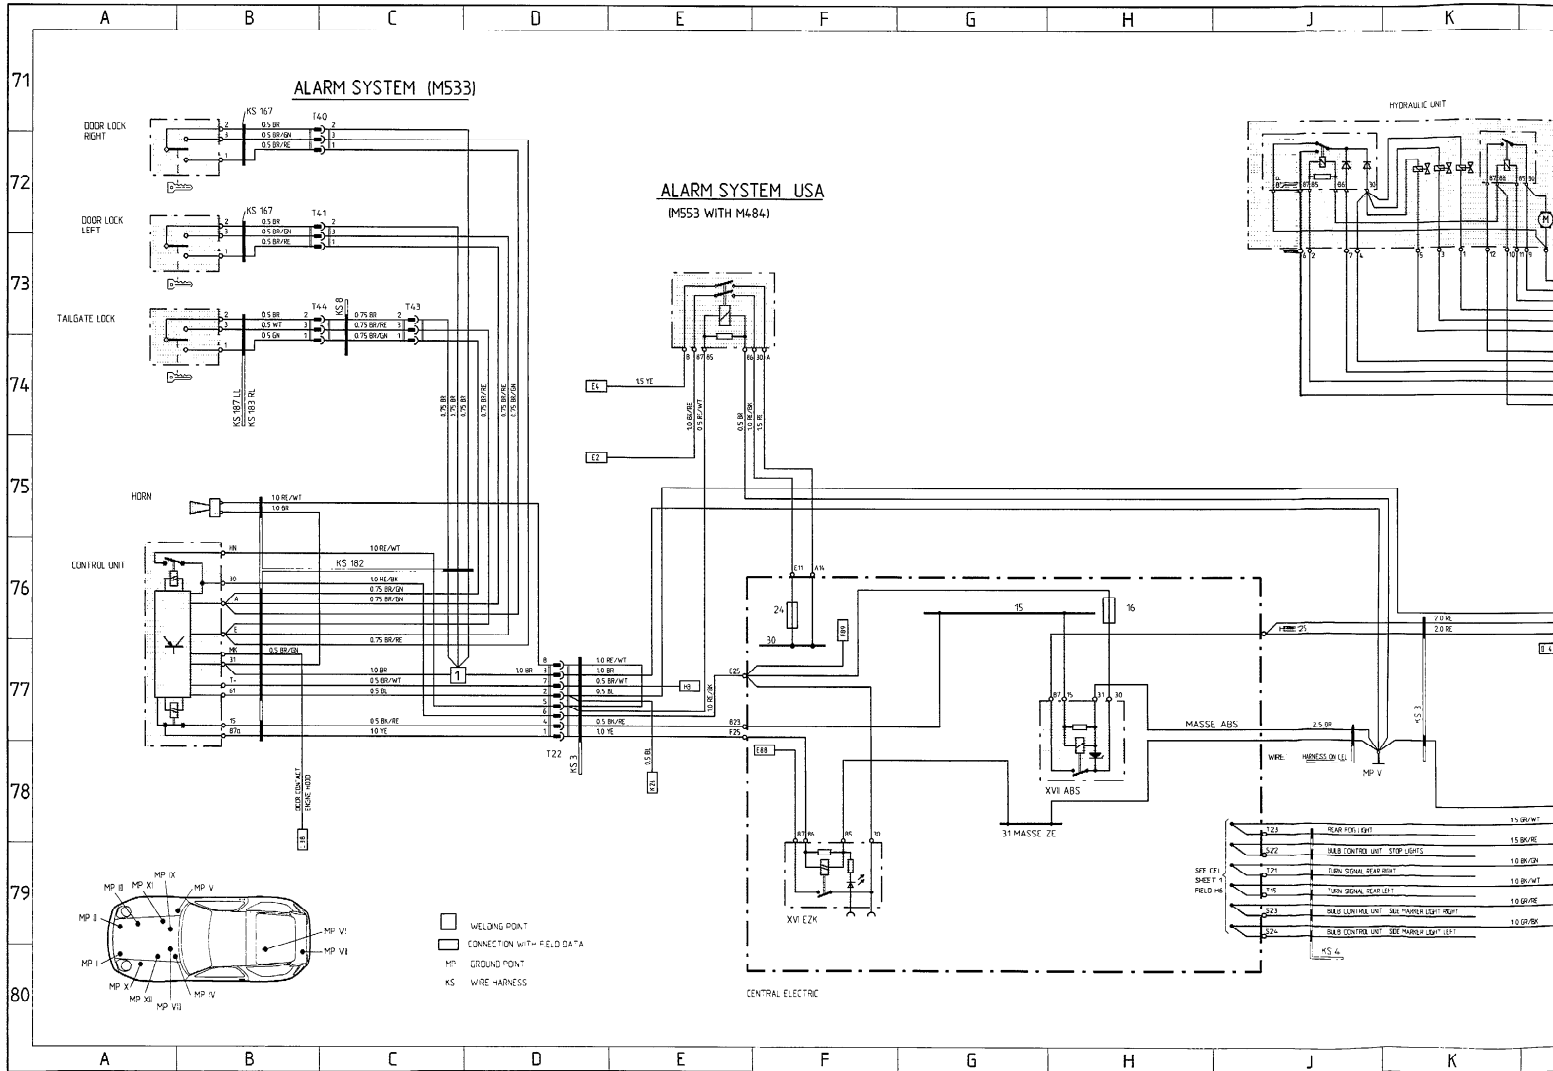

Printed in Germany - XVIII, - 1987

BK=BLACK WT=WHITE RE=RED GN=GREEN YE=YELLOW GR=GREY BR=BROWN BL=BLUE VI=VIOLEET




Wiring Diagram Type 928S Model 88 page 10

MOTOR, FUEL AND IGNITION,
CRUISE CONTROL
COORDINATES
81- 90


Wiring Diagram Type 928 S Model 88 page 10

MOTOR, FUEL AND IGNITION, CRUISE CONTROL

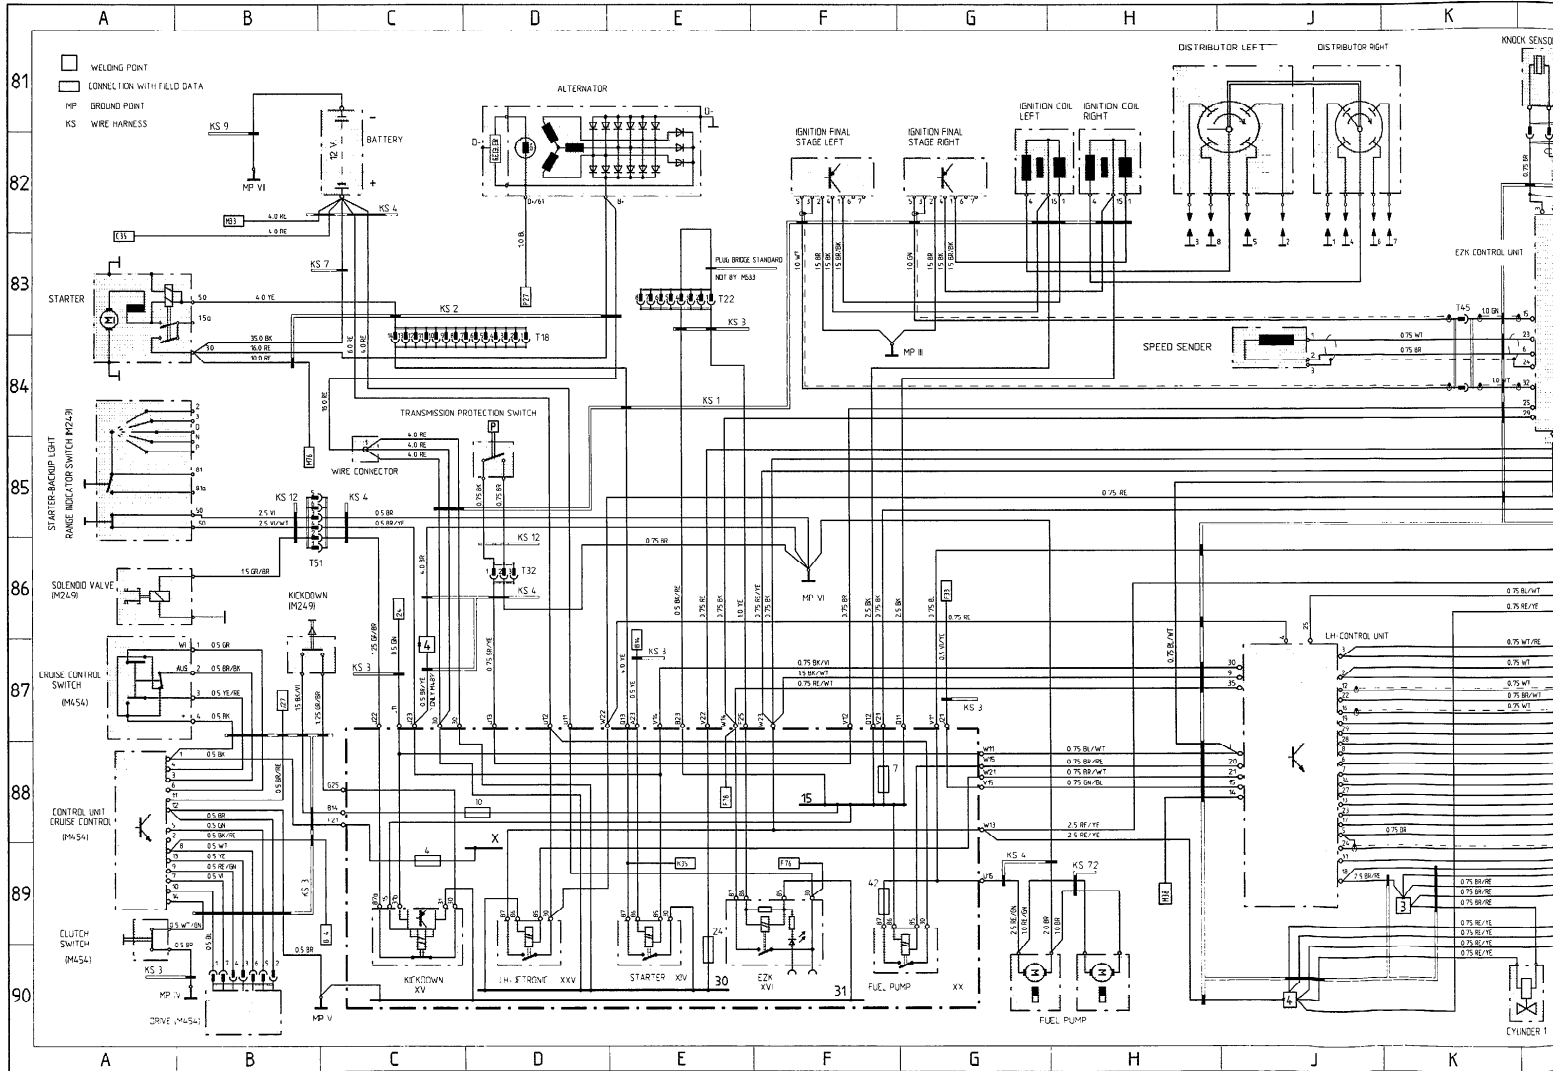

Printed in Germany - XVIII, - 1987

BK=BLACK WT=WHITE RE=RED GN=GREEN YE=YELLOW GR=GREEN BR=BROWN BL=BLUE VI=VIOLET

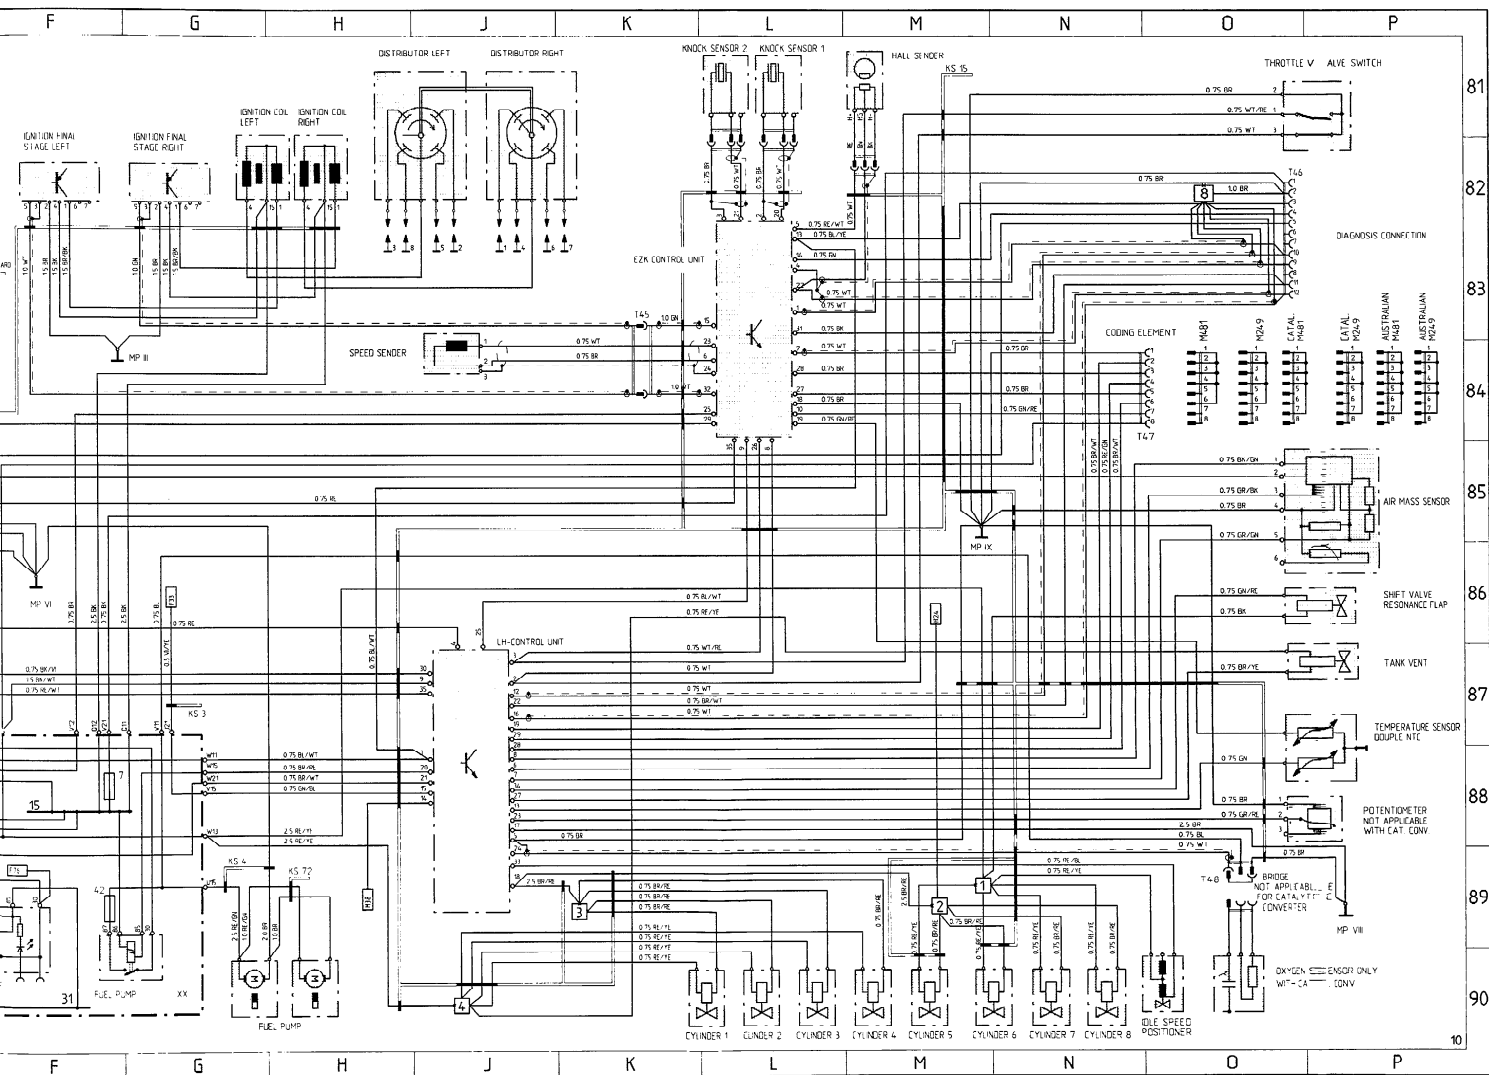

BK=BLACK WT=WHITE RE=RED GN=GREEN YE=YELLOW GR=GREY BR=BROWN BL=BLUE VI=VIOLEET


Current Flow Diagram 97-301

Wiring Diagram Type 928S Model 88 page 11

CENTRAL ELECTRIC
COORDINATES
91-100


Wiring Diagram Type 928 S Model 88 page 11

CENTRAL ELECTRIC

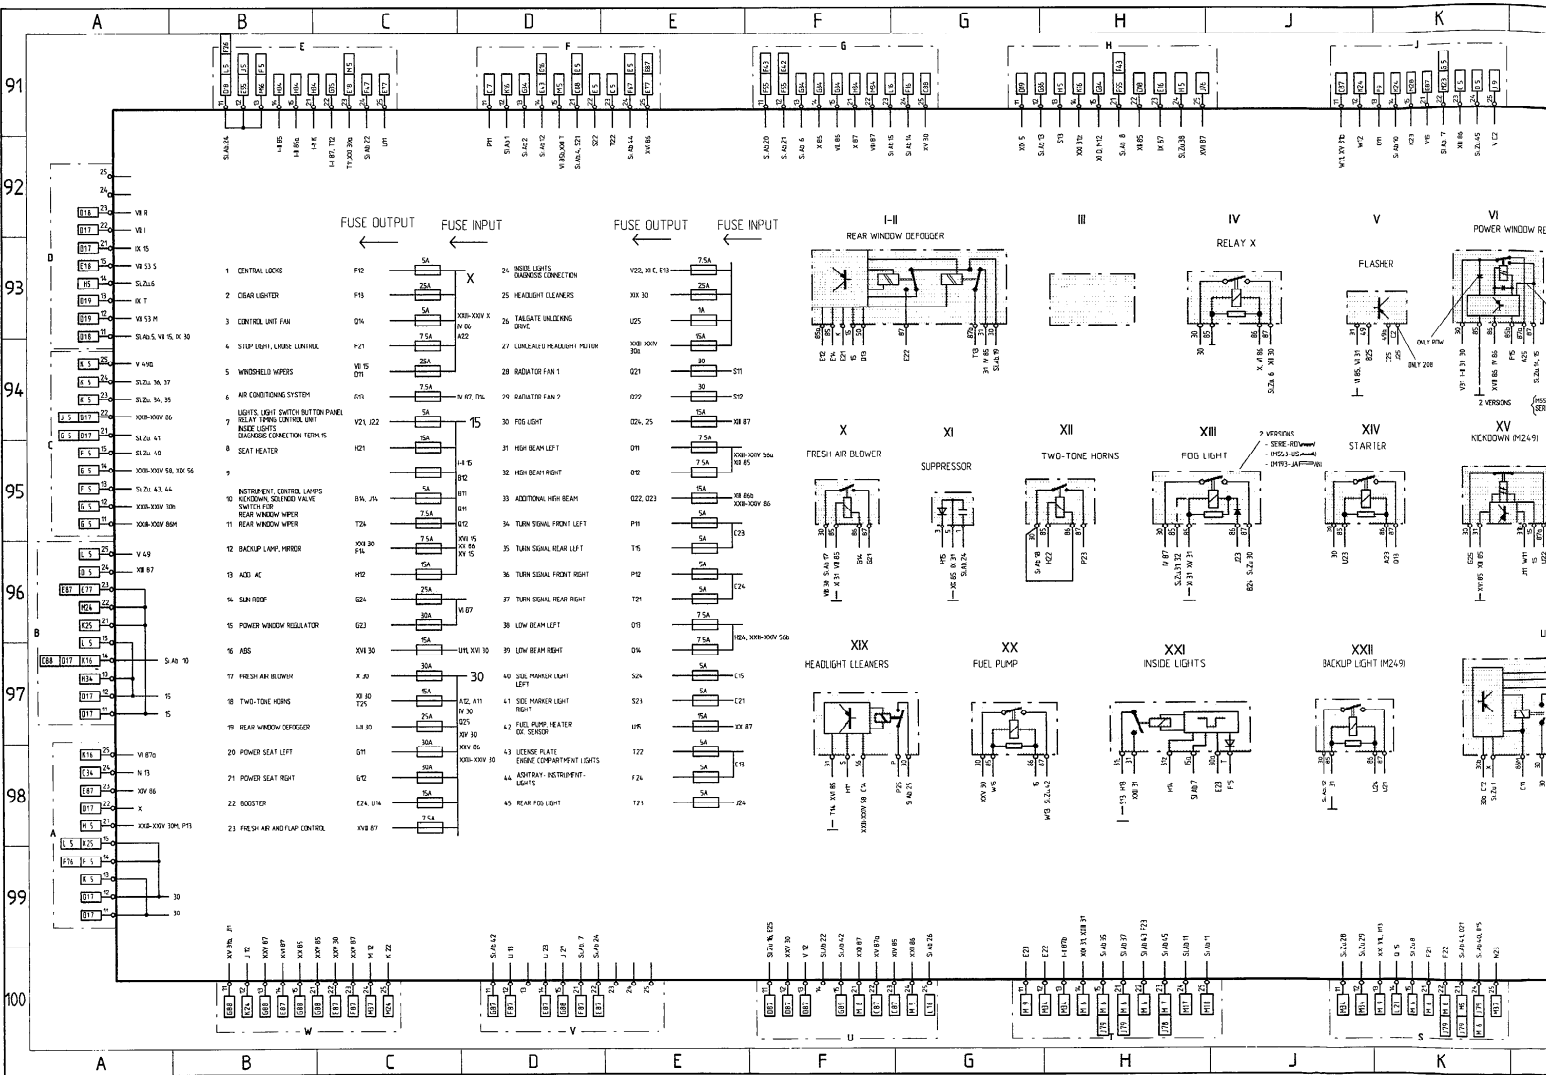

Printed in Germany - XVIII, - 1087

BK-BLACK WT-WHITE RE-RED GN-GREEN YE-YELLOW GR-GREY BR-BROWN BL-BLUE VI-VIOLET

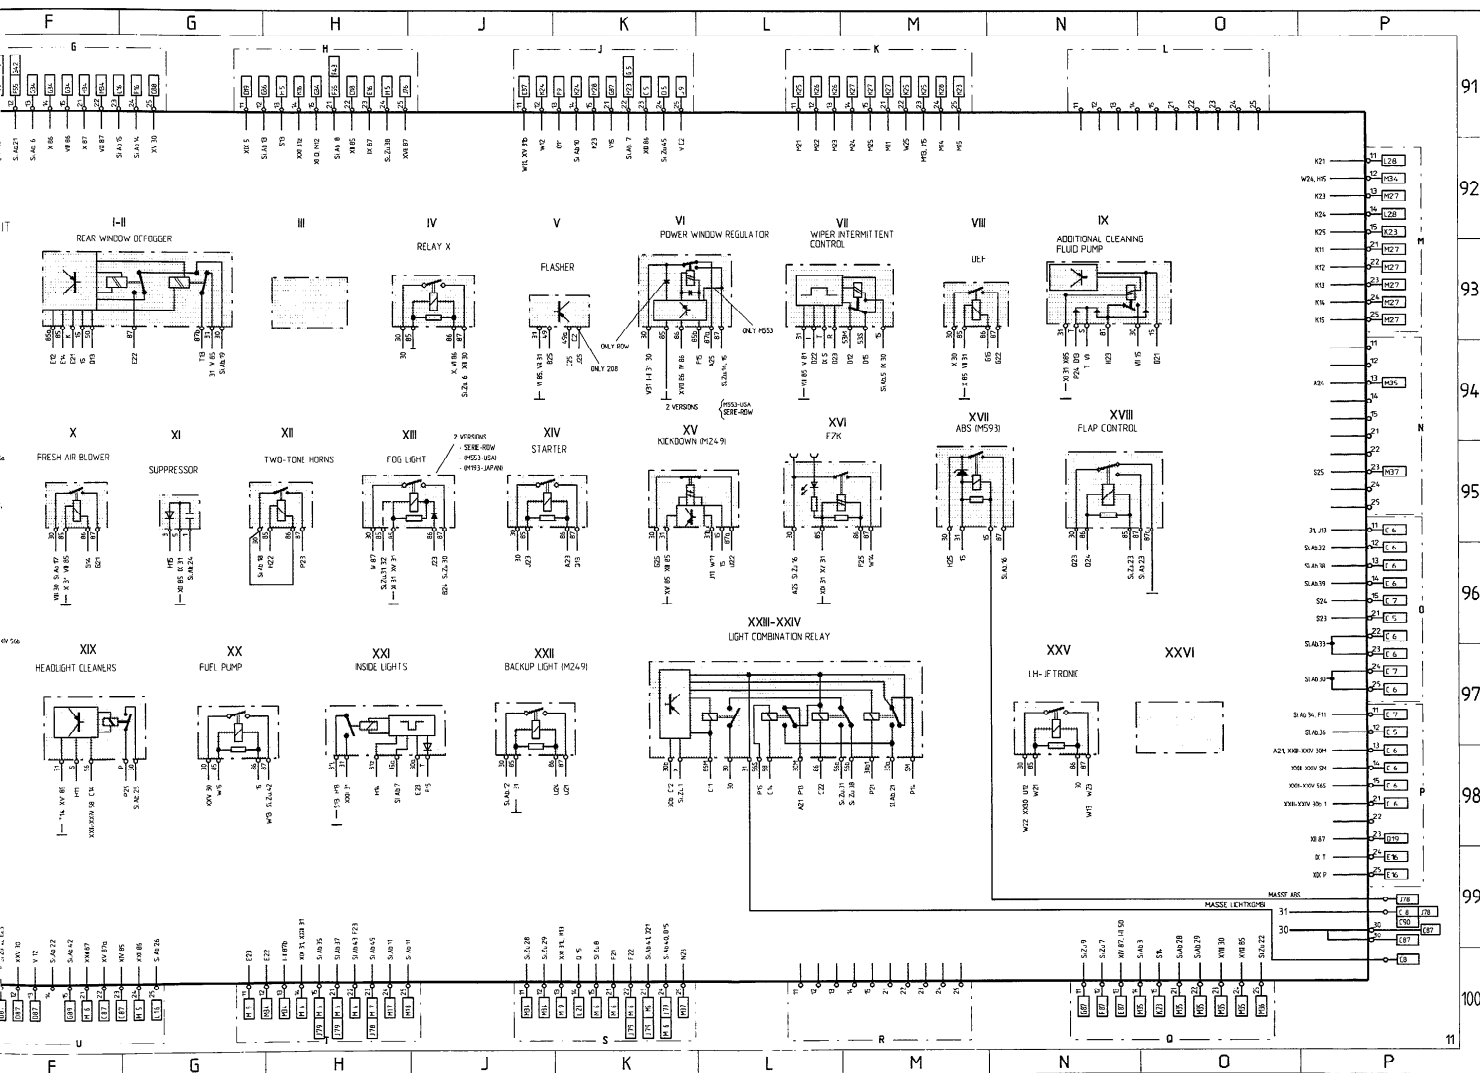

Wiring Diagram Type 928 S Model 88 page 12


CONSTR. COMPONENTS, PLUG CONNECTIONS,
GROUND POINTS


Wiring Diagram Type 928 S Model 88 page 12

CONSTR. COMPONENTS, PLUG CONNECTIONS, GROUND POINTS

CONSTRUCTION COMPONENTS				PLUG CONNECTIONS					
DESIGNATION, FUNCTION	POSITION IN VEHICLE LHD RHD	NOTE	FIELD IN WIRE DIAGRAM	CODE	NUMBER OF PINS	DESIGNATION, FUNCTION	POSITION IN VEHICLE LHD RHD	NOTE	FIELD IN WIRE DIAGRAM
ABS CONTROL UNIT	71Q	IN DRIVER'S FOOTWELL ON SIDE PANEL	MND 72	T1	2	GLOW BOX LAMP	71L	71Q	AR07H F7X 11 F
ABS CONTROL UNIT	71Q	ABOVE CENTRAL ELECTRICS	MND 72	T2	3	ENGINE COMPARTMENT LAMP, HEATED SPRAY JET RIGHT	60Q	60Q	UNDER THE WIRE
ALARM SYSTEM CONTROL UNIT	71P	BEHIND GLOVE COMPARTMENT	AB 76/77	T3	18	DOOR DRIVER'S SIDE	70Q	70L	ABOVE PARCEL S
ALARM SYSTEM RELAY	80N	IN CENTRE CONSOLE / BELOW RADIO	E73	T4	18	DOOR PASSENGER'S SIDE	70L	70Q	ABOVE EZK LH C
ANTENNA AMPLIFIER	71L	BEHIND CONTROL PANEL RIGHT	A 65, K 66, D 63	T5	3	COUNTRY CODING RHD	60L	60Q	BEHIND CONTROL UNIT CONSOLE
BUZZER, 1500 Hz	2-3QD	IN AIR DUCT TO GENERATOR	G 31	T6					
BOOSTER	11M	UNDER THE COVER ON PASSENGER'S SIDE SILL	HJ 67,68	T7	4	TRANSMISSION	16QD	16QD	UNDER THE SPARE WHEEL COVER
RECEIVER FOR RADIO BERLIN	11M	UNDER THE COVER ON PASSENGER'S SIDE SILL	MN 64,65	T8	2	LICENSE PLATE LIGHTS	18QD	18QD	UNDER THE TOOL KIT COVER
SUPPRESSOR FOR BOOSTER	11M	UNDER THE COVER ON PASSENGER'S SIDE SILL	H 64, N 62	T9	2	DOOR CONTACT SWITCH TAILGATE	18QD	18QD	UNDER CARPET IN FRONT OF TOOL KIT
SUPPRESSOR FOR RADIO	80Q	IN CENTRE CONSOLE IN FRONT OF RADIO	O 0711 64, N 62	T10	6	REAR WIRE HARNESS / B-PILLAR	13QD	13QD	UNDER THE PASSENGER SIDE REAR TRM PANEL
SWITCHING UNIT EX (M95)	80N	IN CENTRE CONSOLE BELOW RADIO	P 29-30	T11	8	B-PILLAR / TAILGATE	13QD	13QD	UNDER THE REAR HOD PANEL
EZK CONTROL UNIT	70L	IN PASSENGER'S FOOTWELL ON CONTROL UNIT CONSOLE	L 82-84	T12	2	SIDE MARKER LAMP LEFT REAR	18QD	18QD	UNDER THE TOOL KIT COVER
REAR WINDOW WIPER RELAY	18QD	UNDER THE TOOL KIT COVER	OP 17	T13	2	SIDE MARKER LIGHT RIGHT REAR	18QD	18QD	UNDER THE TOOL KIT COVER
HIGH PRESSURE AND LOW PRESSURE SWITCH	20M	IN FRONT OF AIR CONDITIONING COMPRESSOR RIGHT	P 32	T14	2+2	BRAKE PAD WEAR CONTACT, SPEED SENSOR LEFT FRONT	51P	51P	IN ENGINE COMPARTMENT AT SUSPENSION STRUT MOUNT
AIR CONDITIONING SYSTEM CONTROL UNIT	80N-Q	IN HEATER BOX	AB 34-36	T15	2+2	BRAKE PAD WEAR CONTACT, SPEED SENSOR RIGHT FRONT	50M	50M	IN ENGINE COMPARTMENT AT SUSPENSION STRUT MOUNT
COOLANT FAN FINAL STAGE	12N	IN ENGINE COMPARTMENT ON FRONT RIGHT END PANEL	U 95A,0	T16	2+2	BRAKE PAD WEAR CONTACT, SPEED SENSOR LEFT REAR	16QD	16QD	UNDER THE SPARE WHEEL COVER
COOLANT FAN CONTROL UNIT	10M	UNDER THE COVER ON PASSENGER'S SIDE SILL	MND 39,40	T17	2+2	BRAKE PAD WEAR CONTACT, SPEED SENSOR RIGHT REAR	16QD	16QD	UNDER THE SPARE WHEEL COVER
COOLING WATER PRESSURE SWITCH	50M	IN COOLANT HOSE BEFORE EXPANSION TANK	L 29,30	T18	14	FRONT END / ENGINE WIRE HARNESS	30M	30M	IN ENGINE COMPARTMENT AT RIGHT WHEEL HOUSING
COOLING WATER TEMPERATURE SWITCH	60M	ON EXPANSION TANK	L 29	T19	14	INSTRUMENT PANEL / REAR WIRE HARNESS	70L	70L	NEAR CENTRAL ELECTRICS
RADIO CONTROL UNIT	70L	ON PASSENGER'S PARCEL TRAY	NB 1	T20	14	SEAT DRIVER'S SIDE	10QD	10QD	UNDER THE SEAT, ADVANCE SEAT
IDLE SPEED CO ADJUSTMENT POTENTIOMETER	70L	IN PASSENGER'S FOOTWELL ON CONTROL UNIT CONSOLE	OP 88	T21	14	SEAT PASSENGER'S SIDE	10QD	10QD	UNDER THE SEAT, ADVANCE SEAT
LH JETRONIC CONTROL UNIT	70L	IN PASSENGER'S FOOTWELL ON CONTROL UNIT CONSOLE	J 87-89	T22	8	ALARM SYSTEM	60L	60Q	UNDER THE CENTRAL ELECTRICS
SOLENOID VALVE (ADDITIONAL AIR CONDITIONER)	10M	UNDER THE RIGHT SEAT	F 30	T23	4	ABS	60L	60Q	UNDER THE CENTRAL ELECTRICS
OL LEVEL SWITCH	30N-Q	ON OL PAN FRONT	O 26	T24	6	TRAILER HITCH	60L	60Q	UNDER THE CENTRAL ELECTRICS
OL TEMPERATURE SWITCH (W249)	19QD	ON TORQUE CONVERTER LEFT SIDE	P 35,36	T25	2	SUN ROOF	13QD	13QD	UNDER THE PASSENGER SIDE REAR TRM PANEL
SWITCHING DEVICE, REDUCED DRIVING LIGHT	70Q	IN PASSENGER'S FOOTWELL ON CONTROL UNIT CONSOLE	K 2,3	T26	2	HEATED SPRAY JET LEFT	60Q	60Q	UNDER THE WIRE, R-SYSTEM COVER
CONTROL FOR ADDITIONAL AIR CONDITIONER	12QD	ON SUPPLEMENTARY AIR CONDITIONING RIGHT	EF 39,40	T27	4	RANGE INDICATOR	80P	80M	UNDER THE INSTRUMENT CLUSTER
SEAT MEMORY CONTROL UNIT LEFT	10QD	IN SEAT	K-0 57	T28	2	PULSE SENDER	16QD	16QD	UNDER THE SPARE WHEEL COVER
SEAT MEMORY CONTROL UNIT RIGHT	10QD	IN SEAT	K-0 54	T29	4	AIR CONDITIONING SYSTEM	80N	80N	IN CENTRE CONSOLE
MIRROR MEMORY CONTROL UNIT	71Q	IN DRIVER'S FOOTWELL ON SIDE PANEL	O 54, 57	T30	6	AIR CONDITIONING SYSTEM	80N	80N	IN CENTRE CONSOLE
CRUISE CONTROL UNIT	70N-Q	IN CENTRE CONSOLE AT FRONT	AB 89,90	T31	4	INSIDE TEMP. SENSOR FOR AIR CONDITIONER	80N	80N	IN CENTRE CONSOLE
FREEZING PROTECTION SWITCH AIR CONDITIONER	70M	UNDER THE WINDSHIELD WIPER COVER	F 61	T32	3	AUTOMATIC TRANSMISSION	16QD	16QD	UNDER THE SPARE WHEEL COVER
WARNING BUZZER	80P	ON STEERING PROTECTIVE TUBE	F 71,72	T33	1	ALARM SYSTEM / ENGINE HOOD CONTACT	60L	60Q	UNDER THE CENTRAL ELECTRICS
WASHING FLUID LEVEL SWITCH	60L	ON WINDSHIELD WASHER TANK	L 28	T34	8	ADDITIONAL AIR CONDITIONER	12QD	12QD	ON SUPPLEMENTARY AIR CONDITIONING RIGHT
RESISTANCE GROUP FOR BLOWER	70L	ON BLOWER HOUSING	K 15,32	T35	1	ADDITIONAL AIR CONDITIONER	60L	60Q	UNDER THE CENTRAL ELECTRICS
RESISTANCE GROUP FOR ADD. AIR CONDITIONER	12QD	ON SUPPLEMENTARY AIR CONDITIONING LEFT	HJ 37,38	T36	14	DOOR DRIVER'S SIDE BY SEAT AND MIRROR MEMORY	70L	70L	ABOVE PARCEL S, HELP, DRIVER'S SIDE
TIME RELAY	80N	IN CENTRE CONSOLE BELOW RADIO	P 73-75	T37	12	DOOR PASSENGER'S SIDE BY SEAT AND MIRROR MEMORY	70L	70L	ABOVE EZK LH C, CONTROL UNIT
CENTRAL ELECTRIC	70M	IN PASSENGER'S FOOTWELL ON FIREWALL	FOH 26,27	T38	4+2	LOUDSPEAKER LEADS VEHICLE WITHOUT BOOSTER	11M	11M	UNDER THE BOOSTER TOP COVER ON RIGHT SILL
CENTRAL INFORMER	70Q	IN DRIVER'S FOOTREST	FOH 26,27	T39	2	PLUG BRIDGE INSIDE REAR BOOSTER (PROJILL)	70L	70Q	UNDER THE BOOSTER TOP COVER ON RIGHT SILL
CENTRAL INFORMER	70K	IN DRIVER'S FOOTWELL ON SIDE PANEL	FOH 26,27	T40	3	ALARM SYSTEM / DOOR LOCK	70L	70Q	ABOVE EZK LH C, CONTROL UNIT
				T41	3	ALARM SYSTEM / DOOR LOCK	70Q	70L	ABOVE PARCEL S, HELP, DRIVER'S SIDE
				T42					
				T43	3	ALARM SYSTEM / WIRE HARNESS B-PILLAR	13QD	13QD	UNDER THE PASSENGER SIDE REAR TRM PANEL
				T44	3	WIRE HARNESS B-PILLAR / TAILGATE LOCK	13QD	13QD	ABOVE THE REAR HOD PANEL
				T45	2	IGNITION FINAL STAGE / CONTROL UNIT	60L	60Q	UNDER THE CENTRAL ELECTRICS
				T46	12	DIAGNOSIS CONNECTION	70L	70Q	ON CONTROL UNIT CONSOLE
				T47	8	COOLING ELEMENT FOR IGNITION SYSTEM AND LH JETRONIC	70L	70Q	ON CONTROL UNIT CONSOLE
				T48	3	OX SENSOR	60L	60Q	UNDER THE CENTRAL ELECTRICS
				T49	2	FRESH AIR BLOWER	70L	70L	ON BLOWER HOUSING
				T50	6	AUTOM. TRANSM. COOLING TO GEARBOX WIRE HARNESS	16QD	16QD	UNDER THE SPARE WHEEL COVER
				T51	6	AUTOM. TRANSM. COOLING TO REAR WIRE HARNESS	16QD	16QD	UNDER THE SPARE WHEEL COVER

F					G					H					J					K					L					M					N					O					P														
PLUG CONNECTIONS																														GROUND POINTS																													
CODE	NUMBER OF PINS	DESIGNATION, FUNCTION	POSITION IN VEHICLE LHD RHD	NOTE	FIELD IN WIRE DIAGRAM	CODE	DESIGNATION, FUNCTION	POSITION IN VEHICLE LHD RHD	NOTE																																																		
T1	7	GLOVE BOX LAMP	7H	7HD	ABOVE E2K LH CONTROL UNIT	077H3	MP I	BODY FRONT LEFT	1C0	1C0	IN ENGINE COMPARTMENT AT FRONT END PANEL																																																
T2	3	ENGINE COMPARTMENT LAMP, HEATED SPRAY, JET, RIGHT	6C0	6C0	UNDER THE WIPER SYSTEM COVER	C4C11	MP II	BODY FRONT RIGHT	2C0	2C0	IN ENGINE COMPARTMENT NEAR AIR-CONDITIONING CONDENSER																																																
T3	18	DOOR DRIVER'S SIDE	7D0	7D1	ABOVE PARCEL SHELF, DRIVER'S SIDE	H1G4, C44, C55, 58, B88	MP III	WHEEL HOUSING WALL FRONT RIGHT	3C0	3C0	IN ENGINE COMPARTMENT, RIGHT SIDE ABOVE IGNITION COIL																																																
T4	18	DOOR PASSENGER'S SIDE	7E1	7E0	ABOVE E2K LH CONTROL UNIT	J4M1, C42, C51, C68	MP IV	STEERING CONSOLE	8C0	8C0	ON STEERING CONSOLE, BELOW LEFT																																																
T5	3	COUNTRY COODING RHD	6D0	6D0	BEHIND CONTROL UNIT CONSOLE	G3	MP V	FIREWALL	8D0	8D0	ABOVE CENTRAL ELECTRICS																																																
T6	4	TRANSMISSION	16D0	16D0	UNDER THE SPARE WHEEL COVER	05, 029	MP VI	BODY REAR	16D0	16D0	UNDER THE SPARE WHEEL LEFT VER																																																
T7	2	LOCK/UNLOCK PALTE LIGHTS	18C0	18C0	UNDER THE TOOL KIT COVER	P6	MP VII	GROUND STRAP BATTERY	16D0	16D0	UNDER THE TOOL KIT COVER																																																
T8	2	DOOR CONTACT SWITCH TAILGATE	18C0	18C0	UNDER CARPET IN FRONT OF TOOL KIT	M9	MP VIII	ENGINE POWER	6C0	6C0	ON UPPER CRANKCASE, REAR LEFT																																																
T9	6	BLAR WIRE HARNESS / B-PILLAR	13D0	13D0	UNDER THE PASSENGER SIDE REAR TRIM PANEL	U10, X31-32	MP IX	ENGINE ELECTRONICS	6C0	6C0	ON UPPER CRANKCASE, REAR RIGHT																																																
T10	2	B-PILLAR / TAILGATE	13D0	13D0	ABOVE THE REAR-LED PANEL	P10	MP X	WHEEL HOUSING LEFT OUTER	3C0	3C0	BEHIND ABS HYDRAULIC LINE																																																
T11	2	DOOR DRIVER'S SIDE	13D0	13D0	UNDER THE TOOL KIT COVER	070	MP XI	WHEEL HOUSING RIGHT INNER	5C0	5C0	IN ENGINE COMPARTMENT, ON RIGHT SIDE SUSPENSION STRUT MOUNT																																																
T12	2	DOOR PASSENGER'S SIDE	18C0	18C0	UNDER THE TOOL KIT COVER	070	MP XII	WHEEL HOUSING LEFT INNER	5C0	5C0	IN ENGINE COMPARTMENT, ON LEFT SIDE SUSPENSION STRUT MOUNT																																																
T13	2	DOOR DRIVER'S SIDE	18C0	18C0	UNDER THE TOOL KIT COVER	070																																																					
T14	2-2	BRAKE PAD WEAR CONTACT, SPEED SENSOR LEFT FRONT	5C0	5C0	IN ENGINE COMPARTMENT AT SUSPENSION STRUT MOUNT	H72, M75																																																					
T15	2-2	BRAKE PAD WEAR CONTACT, SPEED SENSOR RIGHT FRONT	5C0	5C0	IN ENGINE COMPARTMENT AT SUSPENSION STRUT MOUNT	J22, 075																																																					
T16	2-2	BRAKE PAD WEAR CONTACT, SPEED SENSOR LEFT REAR	16D0	16D0	UNDER THE SPARE WHEEL COVER	L22, 075																																																					
T17	2-2	BRAKE PAD WEAR CONTACT, SPEED SENSOR RIGHT REAR	16D0	16D0	UNDER THE SPARE WHEEL COVER	L22, 075																																																					
T18	14	FRONT END / ENGINE WIRE HARNESS	3C0	3C0	IN ENGINE COMPARTMENT AT RIGHT WHEEL HOUSING	N02, 012-33, J39, C083																																																					
T19	14	INSTRUMENT PANEL - / REAR WIRE HARNESS	7D0	7D0	NEAR CENTRAL ELECTRICS	E13, J28																																																					
T20	16	SEAT DRIVER'S SIDE	10D0	10D0	UNDER THE SEAT, ADVANCE SEAT	R43, J14, 0750-60																																																					
T21	16	SEAT PASSENGER'S SIDE	10D0	10D0	UNDER THE SEAT, ADVANCE SEAT	H42, 051-53																																																					
T22	8	ALARM SYSTEM	6D0	6D0	UNDER THE CENTRAL ELECTRICS	075-77, E83																																																					
T23	4	ABS	6D0	6D0	UNDER THE CENTRAL ELECTRICS	M76																																																					
T24	6	TRAILER HITCH	6D0	6D0	UNDER THE CENTRAL ELECTRICS	L79																																																					
T25	2	SUN ROOF	13D0	13D0	UNDER THE PASSENGER SIDE REAR TRIM PANEL	E12																																																					
T26	2	HEATED SPRAY, B.T. LEFT	16C0	16C0	UNDER THE WIPER SYSTEM COVER	C12																																																					
T27	4	RANGE INDICATOR	8D0	8D0	UNDER THE WIPER SYSTEM COVER	AH24																																																					
T28	2	PULSE SENDER	16D0	16D0	UNDER THE SPARE WHEEL COVER	J29																																																					
T29	4	AIR CONDITIONING SYSTEM	8C0	8C0	IN CENTRE CONSOLE	F33																																																					
T30	6	AIR CONDITIONING SYSTEM	8C0	8C0	IN CENTRE CONSOLE	F33, 34																																																					
T31	4	INSTR. TEMP. SENSOR FOR AIR CONDITIONER	8C0	8C0	IN CENTRE CONSOLE	F33																																																					
T32	4	AUTOMATIC TRANSMISSION	16D0	16D0	UNDER THE SPARE WHEEL COVER	019, 086																																																					
T33	1	ALARM SYSTEM / ENGINE HOOD CONTACT	6D0	6D0	UNDER THE CENTRAL ELECTRICS	L18																																																					
T34	8	ADDITIONAL AIR CONDITIONER	12D0	12D0	ON SUPPLEMENTARY AIR CONDITIONING, RIGHT	039																																																					
T35	1	ADDITIONAL AIR CONDITIONER	6D0	6D0	UNDER THE CENTRAL ELECTRICS	P36																																																					
T36	12	DOOR DRIVER'S SIDE BY SEAT AND MIRROR MEMORY	7D0	7D0	ABOVE PARCEL SHELF, DRIVER'S SIDE	C59-60																																																					
T37	12	DOOR PASSENGER'S SIDE BY SEAT AND MIRROR MEMORY	7E1	7E1	ABOVE E2K LH CONTROL UNIT	C51, 52																																																					
T38	4-2	LOUDSPEAKER LEADS VEHICLE WITHOUT BOOSTER	11D0	11D0	UNDER THE BOOSTER COVER ON RIGHT SILL	B67																																																					
T39	2	PLUG IN/REAR INSIDE BOOSTER THROUGH	11D0	11D0	UNDER THE BOOSTER COVER ON RIGHT SILL	186																																																					
T40	3	ALARM SYSTEM / REAR LOCK	7E1	7E1	ABOVE E2K LH CONTROL UNIT	C72																																																					
T41	3	ALARM SYSTEM / DOOR LOCK	7D0	7E1	ABOVE PARCEL SHELF, DRIVER'S SIDE	C73																																																					
T42	3	ALARM SYSTEM / WIRE HARNESS B-PILLAR	13D0	13D0	UNDER THE PASSENGER SIDE REAR TRIM PANEL	C73																																																					
T43	3	WIRE HARNESS B-PILLAR / TAILGATE LOCK	13D0	13D0	ABOVE THE REAR-LED PANEL	C73																																																					
T44	2	IGNITION FINAL STRAP / CONTROL UNIT	6D0	6D0	UNDER THE CENTRAL ELECTRICS	M83-84																																																					
T45	12	DIAGNOSIS CONNECTION	7D0	7D0	ON CONTROL UNIT CONSOLE	002-01																																																					
T46	8	CONNECTION ELEMENT FOR IGNITION SYSTEM AND LH-B TRONIC	7D0	7D0	ON CONTROL UNIT CONSOLE	084																																																					
T47	8	DIAGNOSIS CONNECTION	7D0	7D0	ON CONTROL UNIT CONSOLE	084																																																					
T48	3	DIAGNOSIS CONNECTION	7E1	7E1	ON CENTRAL ELECTRICS	089																																																					
T49	2	FRESH AIR BLOWER	7E1	7E1	ON BLOWER HOUSING	M32																																																					
T50	4	AUTOM. TRANSM. COUPLING TO GEARBOX WIRE HARNESS	16D0	16D0	UNDER THE SPARE WHEEL COVER	A71																																																					
T51	6	AUTOM. TRANSMISSION COUPLING TO REAR WIRE HARNESS	16D0	16D0	UNDER THE SPARE WHEEL COVER	B09, M2																																																					

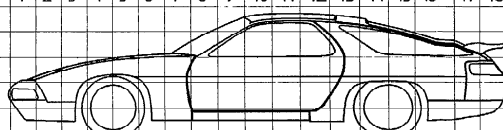	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	
a																			a
b																			b
c																			c
d																			d
e																			e

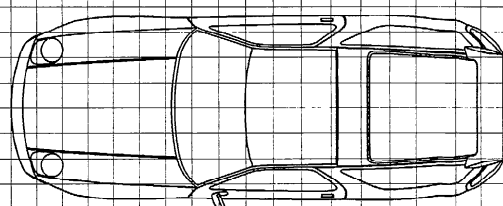	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	
K																			K
L																			L
M																			M
N																			N
O																			O
P																			P
Q																			Q
R																			R

GROUND POINTS

CODE	DESIGNATION, FUNCTION	POSITION IN VEHICLE		NOTE
		LHD	RHD	
MP I	BODY FRONT LEFT	1C0	1C0	IN ENGINE COMPARTMENT AT FRONT END PANEL
MP II	BODY FRONT RIGHT	2C0	2C0	IN ENGINE COMPARTMENT NEAR AIR CONDITIONING CONDENSER
MP III	WHEEL HOUSING WALL FRONT RIGHT	3C0	3C0	IN ENGINE COMPARTMENT, RIGHT SIDE ABOVE IGNITION COIL
MP IV	STEERING CONSOLE	8C0	8C0	ON STEERING CONSOLE, BELOW LEFT
MP V	FIREWALL	8D0	8D0	ABOVE CENTRAL ELECTRICS
MP VI	BODY REAR	16D0	16D0	UNDER THE SPARE WHEEL COVER
MP VII	GROUND STRAP BATTERY	16D0	16D0	UNDER THE TOOL KIT COVER
MP VIII	ENGINE POWER	6C0	6C0	ON UPPER CRANKCASE, REAR LEFT
MP IX	ENGINE ELECTRONICS	6C0	6C0	ON UPPER CRANKCASE, REAR RIGHT
MP X	WHEEL HOUSING LEFT OUTER	3C0	3C0	BEHIND ABS HYDRAULIC LINE
MP XI	WHEEL HOUSING RIGHT INNER	5C0	5C0	IN ENGINE COMPARTMENT, ON RIGHT SIDE SUSPENSION STRUT MOUNT
MP XII	WHEEL HOUSING LEFT INNER	5C0	5C0	IN ENGINE COMPARTMENT, ON LEFT SIDE SUSPENSION STRUT MOUNT

