


Buick Envision 2018 fuse box diagram

Engine Compartment Fuse Block

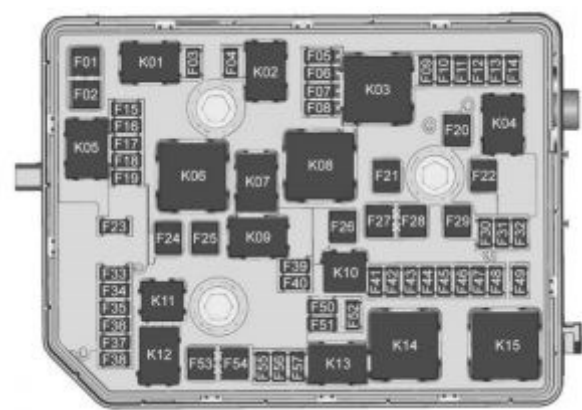

Buick Envision – fuse box – engine compartment


Fuses	Usage
F01	Starter 1
F02	Starter 1
F03	Non walk
F04	Engine control module
F05	Flex fuel
F06	–/Transmission control module
F07	—
F08	Engine control module
F09	A/C
F10	Canister vent solenoid
F11	Fuel pump
F12	Heated seats
F13	Engine coolant pump
F14	—
F15	O2 sensor
F16	Ignition coils – odd
F17	Ignition coils – even
F18	—
F19	—
F20	DC DC/Transmission
F21	Liftgate
F22	ABS
F23	Washer pump
F24	Headlamp washer
F25	—
F26	Transmission oil pump

F27	ABS
F28	—
F29	Rear window defogger
F30	Mirror defogger
F31	—
F32	Various low current functions/Circuit 39 splice
F33	—
F34	Horn
F35	—
F36	Right high-beam headlamp
F37	Left high-beam headlamp
F38	Automatic headlamp leveling
F39	Front fog lamps
F40	Transmission oil pump
F41	Passenger seat ventilation
F42	Headlamp position
F43	—
F44	Interior rearview mirror
F45	—
F46	Driver seat ventilation
F47	Electric steering column lock
F48	Rear wiper
F49	—
F50	—
F51	Right daytime running lamp
F52	Engine control module/ Transmission control module
F53	—
F54	—
F55	Front wiper
F56	—
F57	Left daytime running lamp
K01	Start/Stop
K02	A/C clutch
K03	Engine control module
K04	Wiper
K05	Start solenoid
K06	—
K07	—
K08	Transmission oil pump

K09	Wiper speed
K10	Starter
K11	Headlamp washers
K12	High-beam headlamps
K13	Daytime running lamps
K14	Run/Crank
K15	Rear window/Mirror defogger
Circuit Breaker	
Usage	
K01	Start/Stop
K02	A/C clutch
K03	Engine control module
K04	Wiper
K05	Start solenoid
K06	—
K07	—
K08	Transmission oil pump
K09	Wiper speed
K10	Starter
K11	Headlamp washers
K12	High-beam headlamps
K13	Daytime running lamps
K14	Run/Crank
K15	Rear window/Mirror defogger

Instrument Panel Fuse Block

The instrument panel fuse block is in the glove box.

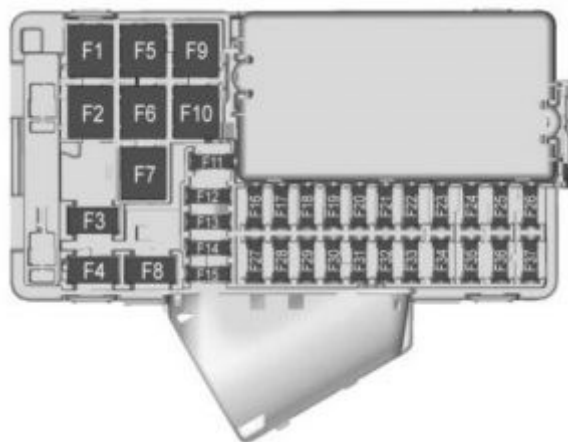


Buick Envision – fuse box – instrument panel

Fuses	Usage
F1	—
F2	Front HVAC blower

F3	Power seat
F4	Lighter (China only)
F5	—
F6	Front power windows
F7	—
F8	Accessory power outlet
F9	Body control module 8
F10	Rear power windows
F11	—
F12	Sunroof
F13	Front heated seats
F14	Exterior rearview mirror
F15	Body control module 3
F16	—
F17	Body control module 6
F18	Body control module 7
F19	Data link connector
F20	SDM
F21	HVAC
F22	Liftgate release
F23	Passive entry/ Passive start
F24	OCC sensor
F25	Steering wheel controls
F26	Ignition
F27	Body control module 4
F28	Transmission control module
F29	Body control module 2
F30	USB
F31	Rear HVAC blower
F32	Body control module 1
F33	Universal remote system
F34	Parking assist
F35	OnStar
F36	Display
F37	Radio

Rear Compartment Fuse Block

The rear compartment fuse block is behind a cover on the left side of the rear compartment.

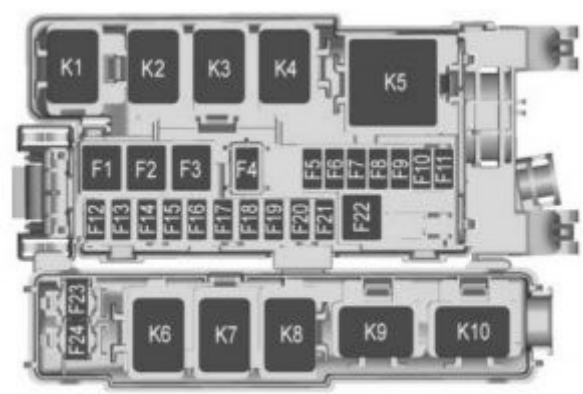

Buick Envision – fuse box – rear compartment

Fuses	Usage
F1	—
F2	DC AC
F3	—
F4	Passenger power seat
F5	Memory seat module
F6	—
F7	Amplifier
F8	Rear accessory power outlet
F9	Rear heated seat
F10	Logistics relay
F11	Rear HVAC
F12	Power liftgate HF sensor
F13	Parking/Trailer lamps
F14	Side blind zone alert
F15	Left parking lamp
F16	Right parking lamp
F17	Body control module 6
F18	Heated steering wheel
F19	AWD
F20	Lumbar seat
F21	Rear heated seat
F22	Rear drive control module
F23	Trailer left turn signal lamp
F24	Trailer right turn signal lamp
K1	Parking lamps
K2	—
K3	Ignition

K4	Logistics
K5	DC AC
K6	—
K7	Parking assist
K8	Right turn
K9	Left turn
K10	—
Circuit Breaker	Usage
K1	Parking lamps
K2	—
K3	Ignition
K4	Logistics
K5	DC AC
K6	—
K7	Parking assist
K8	Right turn
K9	Left turn
K10	—