

DAIHATSU F73,F78

Service manual

In the sections bearing "☆" marks, the model codes "F70, 75, 77" should read as "F73 and F78".

After checking the contents of the relevant sections of the F73, F78 manual, we found that the contents remained the same.

Therefore, we are using the sections as they are in this manual.

SECTION INDEX

	NAME	SECTION
	GENERAL INFORMATION	GI
	MAINTENANCE	MA
☆	ENGINE MECHANICAL	EM
☆	FUEL SYSTEM	FU
☆	COOLING SYSTEM	CO
☆	LUBRICATION SYSTEM	LU
☆	STARTING SYSTEM	ST
☆	CHARGING SYSTEM	CH
☆	CLUTCH	CL
☆	MANUAL TRANSMISSION	MT
☆	TRANSMISSION & TRANSFER	TR
☆	PROPELLER SHAFT	PR
☆	FRONT & REAR DIFFERENTIAL	DF
	FRONT AXLE & SUSPENSION	FS
	REAR AXLE & SUSPENSION	RS
	BRAKE SYSTEM	BR
	STEERING	SR
☆	BODY	BO
☆	BODY ELECTRICAL SYSTEM	BE
☆	HARNESS & WIRING DIAGRAM	HW
☆	APPENDIX	AP

WR7E93-00002