


1967-1979 VOLKSWAGEN TRANSPORTER T2 FUSE BOX DIAGRAM

Most of the fuses in the electrical system are located in a fuse box under the dashboard near the steering column.

Never patch a blown fuse with aluminum foil or replace it with wire or a fuse of greater capacity.

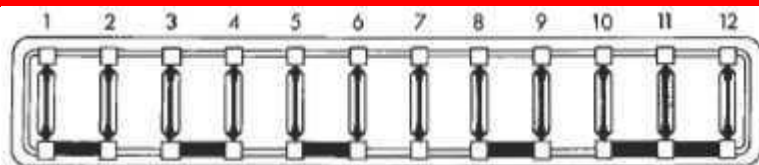

1968-1969

No	Description
1	Horn, stop lights, turn signals, warning light (brake)
2	Rear window defogger (switch current), windshield wipers
3	High beam, left and high beam indicator light
4	High beam, right
5	Low beam, left
6	Low beam, right
7	License plate lights, parking lights, right tail light
8	Tail light, left
9	Emergency flasher system, interior light
10	Unassigned (accessory)

1970

No	Description
1	Rear interior light
2	Buzzer alarm, emergency flasher system, front interior light
3	Horn, rear window defogger (switch current), stop lights, warning light (brake)

4	Fuel gauge, right high beam, turn signals, warning light (generator or alternator, oil pressure)
5	Windshield wipers
6	Unassigned (accessory)
7	High beam, left and high beam indicator light
8	High beam, right
9	Low beam, left
10	Low beam, right
11	Left rear side marker light, left tail light
12	License plate lights, parking lights, right rear side marker light, right tail light

1971

No	Description
1	License plate lights, parking lights, right rear side marker light, right tail light
2	Left rear side marker light, left tail light
3	Right low beam
4	Left low beam
5	High beam, right
6	High beam, left and high beam indicator light
7	Unassigned (accessory)
8	Emergency flasher system, front interior light
9	Auxiliary heater (switch current), buzzer alarm, rear interior light
10	Horn, rear window defogger (switch current), stop lights
11	Auxiliary heater (switch current), windshield wipers
12	Fuel gauge, turn signals, warning light (brake, oil pressure, generator or alternator)

1972

No	Description
----	-------------

1	Left rear side marker light, left tail light
2	License plate lights, parking lights, right rear side marker light, right tail light
3	Right low beam
4	Left low beam
5	High beam right
6	High beam left and high beam indicator light
7	Unassigned (accessory)
8	Emergency flasher system, front interior light
9	Auxiliary heater (switch current), buzzer alarm, rear interior light
10	Auxiliary heater (switch current), rear window defogger (switch current), windshield wipers
11	Fuel gauge, turn signals, warning light (generator or alternator, oil pressure)
12	Horn, stop lights, warning light (brake)

1973-1979

№	Description
1	Left rear side marker light, left tail light
2	License plate lights, parking lights, front side marker lights, right rear side marker light, right tail light
3	Left low beam
4	Right low beam
5	High beam left and high beam indicator light
6	High beam right
7	Unassigned (accessory)
8	Emergency flasher system, front interior light
9	Auxiliary heater (switch current), buzzer alarm, rear interior light
10	Auxiliary heater (switch current), rear window defogger (switch current), windshield wipers
11	Backup lights (automatic transmission only), fuel gauge, kickdown (automatic transmission — except 1976), turn signals, warning light (generator or alternator, oil pressure)
12	Horn, stop lights, warning light (brake)

