

## 4. Steel Wheel

### A: REMOVAL

Refer to “Aluminum Wheel” for removal procedure of steel wheels. <Ref. to WT-6, REMOVAL, Aluminum Wheel.>

### B: INSTALLATION

Refer to “Aluminum Wheel” for installation procedure of steel wheels. <Ref. to WT-6, INSTALLATION, Aluminum Wheel.>

### C: INSPECTION

Refer to “Aluminum Wheel” for inspection procedure of steel wheels. <Ref. to WT-6, INSPECTION, Aluminum Wheel.>

#### ***Rim runout***

| Axial runout limit | Radial runout limit |
|--------------------|---------------------|
| 1.5 mm (0.059 in)  |                     |