

6. “T-type” Tire

A: NOTE

“T-type” tire for temporary use is prepared as a spare tire.

CAUTION:

- Do not use tire chains for “T-type” tires. Because tire size is small, tire chains can not be installed and will damage the vehicle and tires.
- Do not drive at a speed greater than 80 km/h (50 MPH).
- Drive the vehicle as slowly as possible and avoid bumps on the road.

B: REPLACEMENT

Refer to “Removal/Installation of Steel Wheels” for removal and installation procedures of the “T-type” tire. <Ref. to WT-7, Steel Wheel.>

CAUTION:

The “T-type” tire is only for temporary use. Replace with a conventional tire as soon as possible.

C: INSPECTION

- 1) Check the tire air pressure.

Specifications:

420 kPa (4.2 kgf/cm², 60 psi)

- 2) Take stones, glass, nails etc. out of the tread groove.
- 3) Check the tires for deformation, cracks, partial wear, or wear.