

Vauxhall Insignia 2008 – 2013 fuse box diagram

Engine compartment fuse box

The fuse box is in the front left of the engine compartment. Disengage the cover, lift it upwards and remove.



Vauxhall Insignia – fuse box – engine compartment

Number	Circuit
1	Transmission control module
2	Engine control module
3	—
4	—
5	Ignition, Transmission control module, Engine control module
6	Windscreen wiper

7	—
8	Fuel injection, ignition system
9	Fuel injection, ignition system
10	Engine control module
11	Lambda probe
12	Starter
13	Sensor throttle heating
14	Lighting
15	Rear window wiper
16	Vacuum pump, mass air flow meter, water in fuel sensor, DC transformer
17	Ignition, Airbag
18	Adaptive forward lighting
19	Adaptive forward lighting
20	Fuel pump
21	Rear power windows


22	ABS
23	Variable effort steering
24	Front power windows
25	Power outlets
26	ABS
27	Electric parking brake
28	Heated rear window
29	Left power seat
30	Right power seat
31	Air conditioning system
32	Body control module
33	Heated front seats
34	Sunroof
35	Infotainment system
36	—

37	Right high beam
38	Left high beam
39	—
40	—
41	Vacuum pump
42	Radiator fan
43	Vehicle battery, DC transformer (only on vehicles with stop-start system)
44	Headlamp washer system
45	Radiator fan
46	Terminal 87, main relay
47	Lambda probe
48	Fog lights
49	Right low beam
50	Left low beam
51	Horn

52	Ignition
53	Ignition, ventilated front seats
54	Ignition
55	Power windows, mirror folding
56	Windscreen washer
57	—
58	—
59	Diesel fuel heating, emission control system
60	Mirror heating
61	Mirror heating
62	—
63	Rear window sensor
64	Adaptive forward lighting
65	Auxiliary pump (only on vehicles with stop-start system)
66	Rear window washer system

67	Fuel system control module
68	—
69	Battery sensor
70	Rain sensor
71	Battery sensor

Instrument panel fuse box

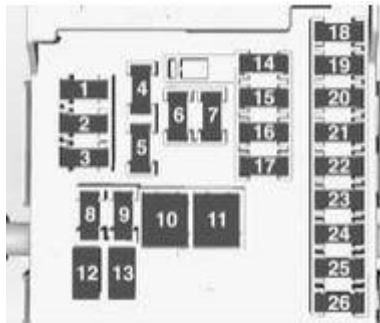

Vauxhall Insignia – fuse box – instrument panel

In left-hand drive vehicles, the fuse box is behind the storage compartment in the instrument panel. Open compartment, compress the locking tabs, fold compartment down and remove.


In right-hand drive vehicles, the fuse box is located behind a cover in the glovebox. Open the glovebox and remove the cover.

Number	Circuit
1	Infotainment system, Info display
2	Body control unit
3	Body control unit

4	Infotainment system, Info display
5	Infotainment system, Info display
6	Cigarette lighter
7	Power outlet
8	Body control unit
9	Body control unit
10	Body control unit
11	Interior fan
12	—
13	—
14	Diagnostic connector
15	Airbag
16	Central locking system, tailgate
17	Air conditioning system
18	Transportation fuse

19	Memory
20	—
21	Instrument
22	Ignition
23	Body control unit
24	Body control unit
25	—
26	Power outlet load compartment

Load compartment fuse box

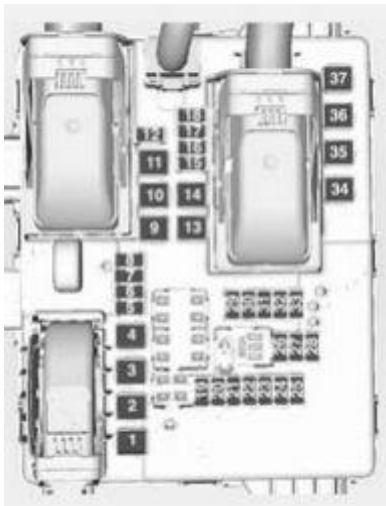

Vauxhall Insignia – fuse box – load compartment

The fuse box is on the left side of the load compartment behind a cover. Remove the cover.

Number	Circuit
--------	---------

1	Central locking system, Power tailgate
2	Trailer module
3	Trailer module
4	—
5	Trailer socket
6	Steering wheel heating
7	Rear power windows
8	Trailer socket
9	Sunroof
10	Central locking system, tailgate
11	—
12	Air conditioning system
13	—
14	—
15	Power tailgate lock

16	Air conditioning system
17	—
18	Power tailgate lock
19	Side obstacle detector
20	Side obstacle detector, venti- lated front seats
21	Active damping system, High beam assist, Cruise control, Traffic sign assistant, Lane departure warning, trailer module
22	Anti-theft alarm system
23	All-wheel drive, anti-theft alarm system
24	Sidelight left
25	Sidelight right
26	—
27	—
28	—
29	Trailer module, transportation fuse
30	Side obstacle detector

31	Active damping system, High beam assist, Cruise control, Traffic sign assistant, Lane departure warning
32	Side obstacle detector
33	All-wheel drive
34	Sunroof
35	—
36	—
37	—