




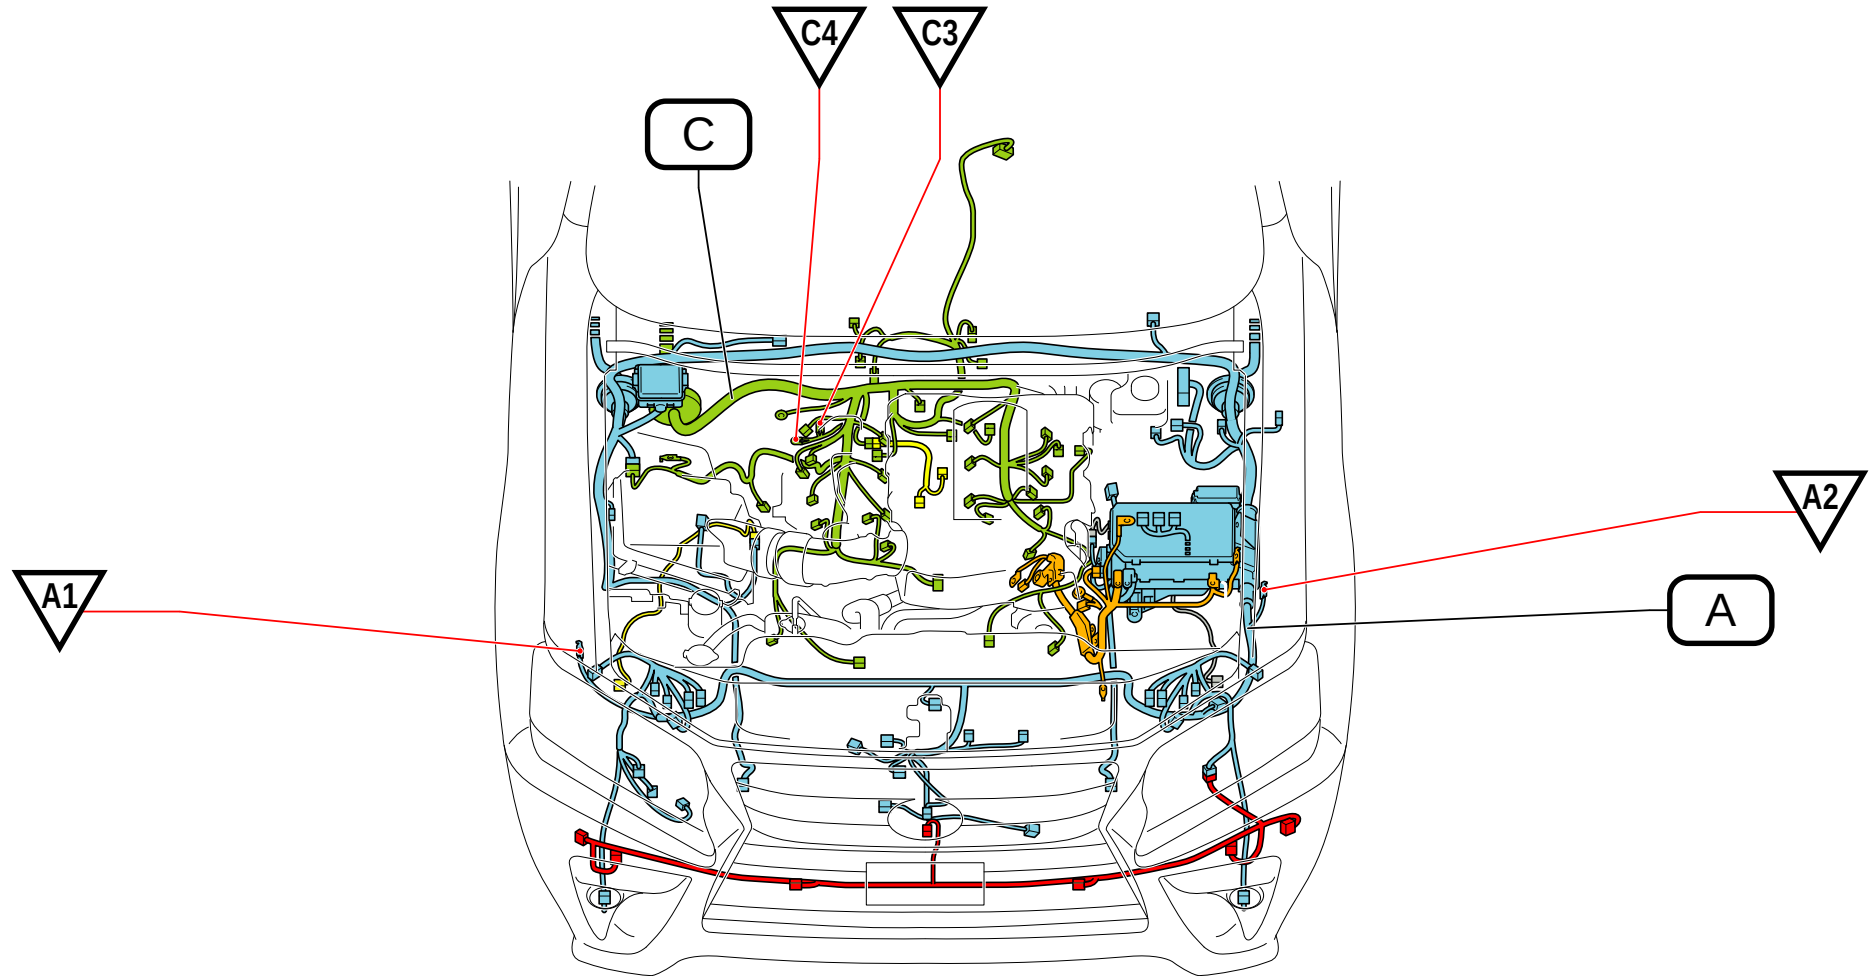

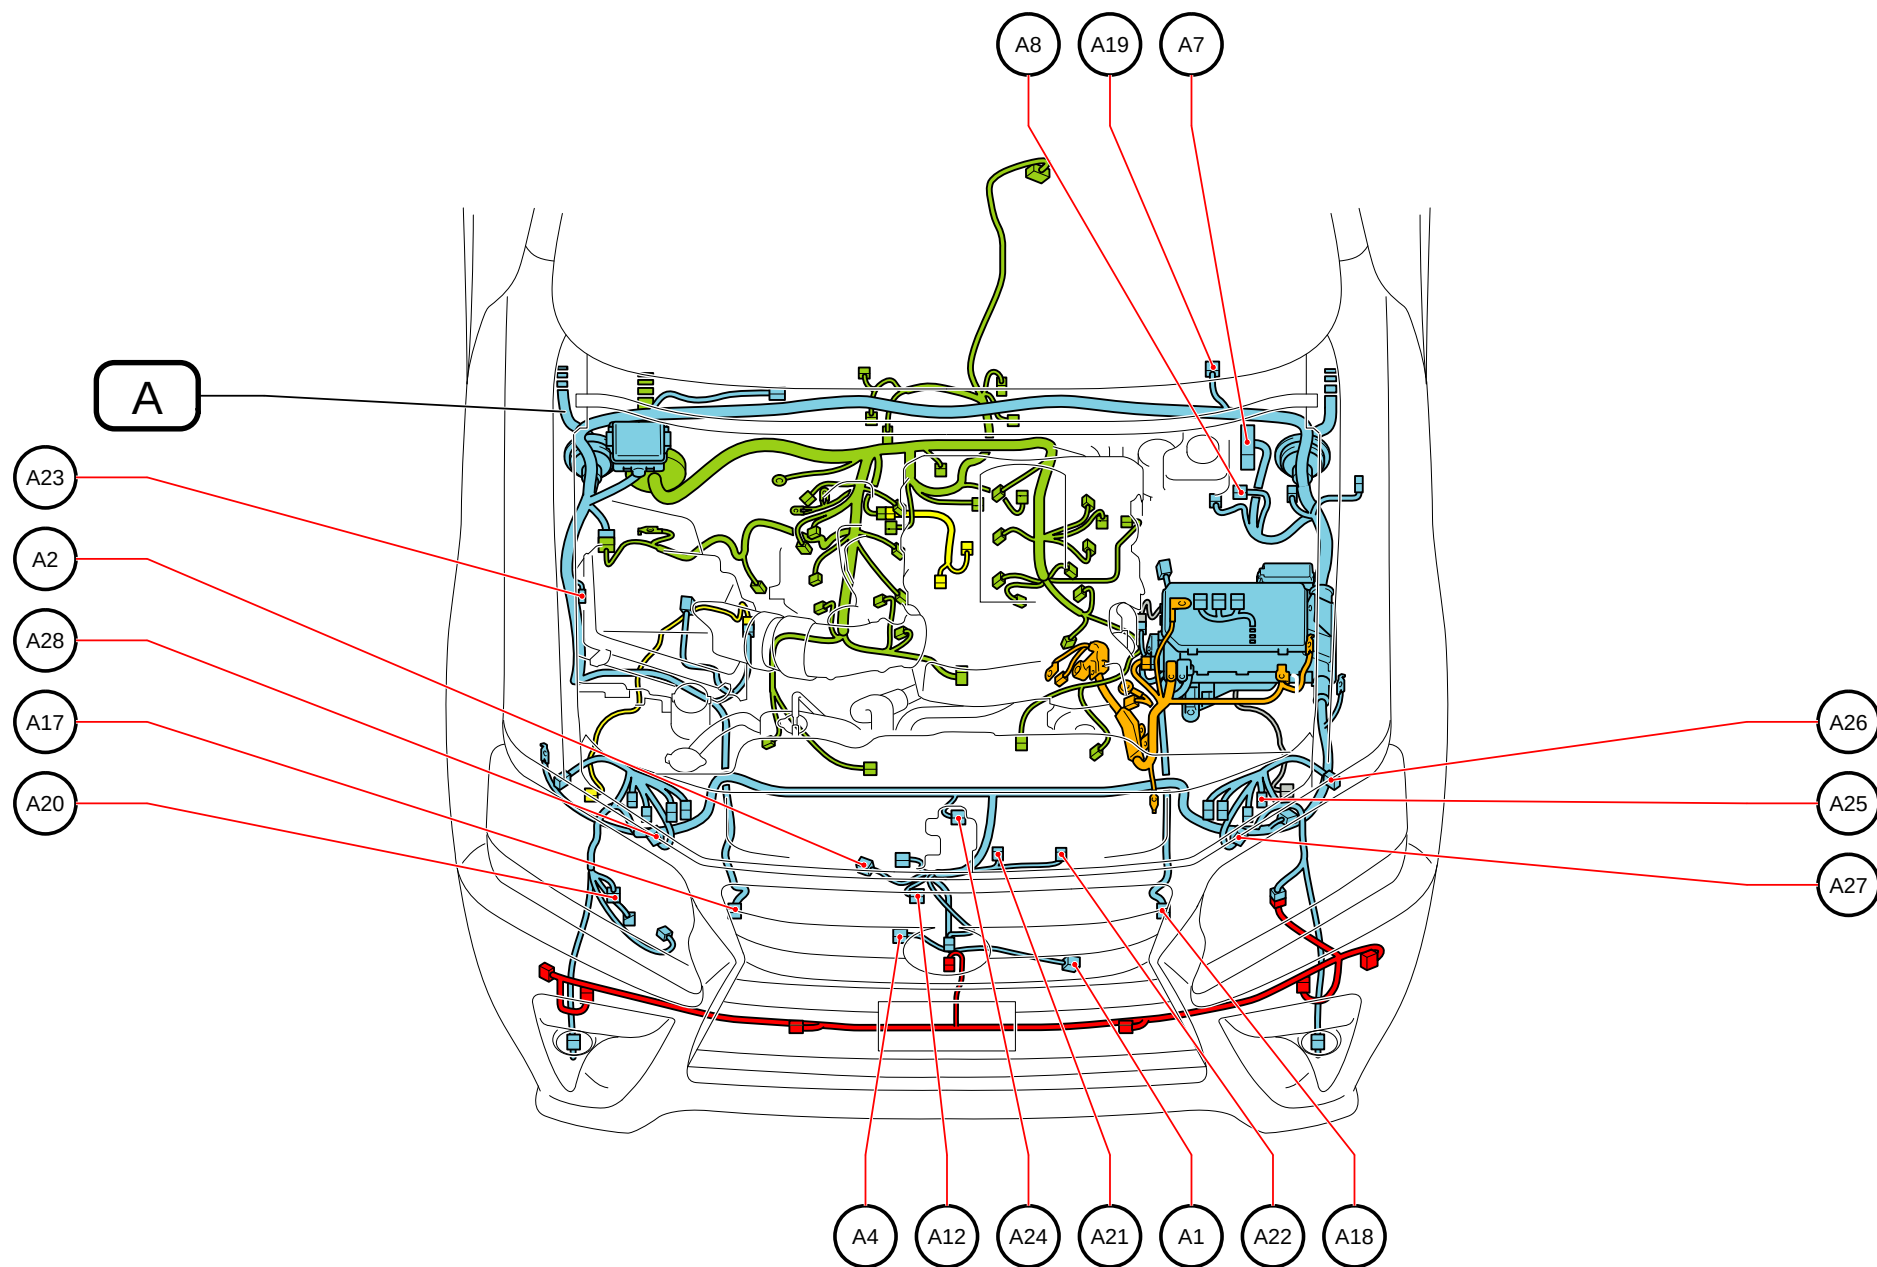


A1	Ambient Temperature Sensor
A2	A/C Pressure Sensor
A4	Condenser Fan Motor (With Shroud Blower Assembly)
A7	Brake Actuator Assembly
A8	Brake Actuator Assembly
A12	Millimeter Wave Radar Sensor Assembly
A17	Front Airbag Sensor RH
A18	Front Airbag Sensor LH
A19	Windshield Wiper Motor Assembly
A20	Windshield Washer Motor and Pump Assembly
A21	Low Pitched Horn Assembly
A22	High Pitched Horn Assembly
A23	Security Horn Assembly
A24	Engine Hood Courtesy Switch
A25	Headlight Assembly LH
A26	Headlight Assembly LH
A27	Headlight Assembly LH
A28	Headlight Assembly RH

Position of Parts in Engine Compartment (1GR-FE)

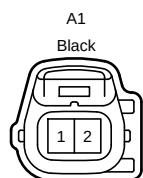


90980-11070

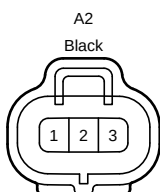


90980-10845




90980-11237

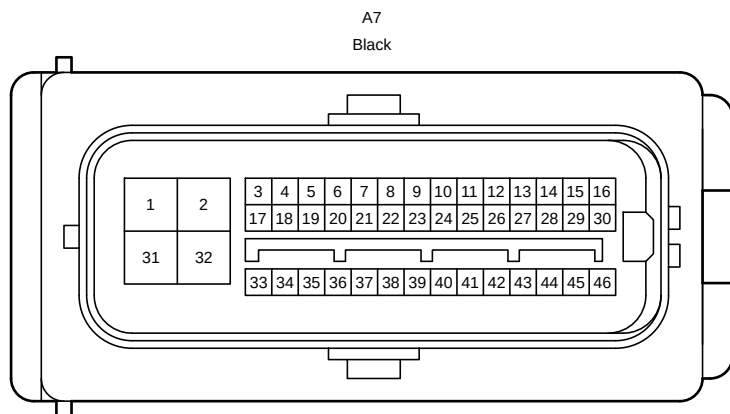


90980-12297

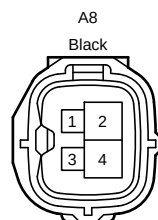


90980-12294

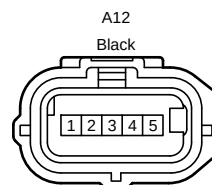


90980-12292

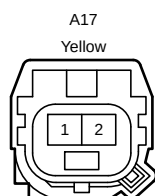

90980-12490

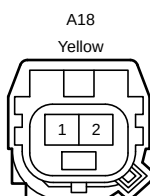

90980-12490

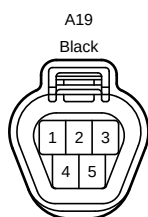

90980-11599



 
90980-11193




90980-10619




90980-10619




90980-10619

 


90980-11178

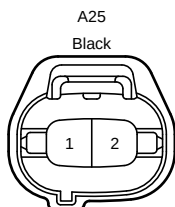


90980-11156

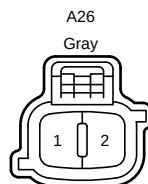


90980-11019

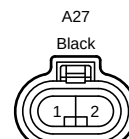

90980-11095

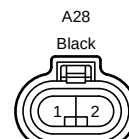


90980-11095

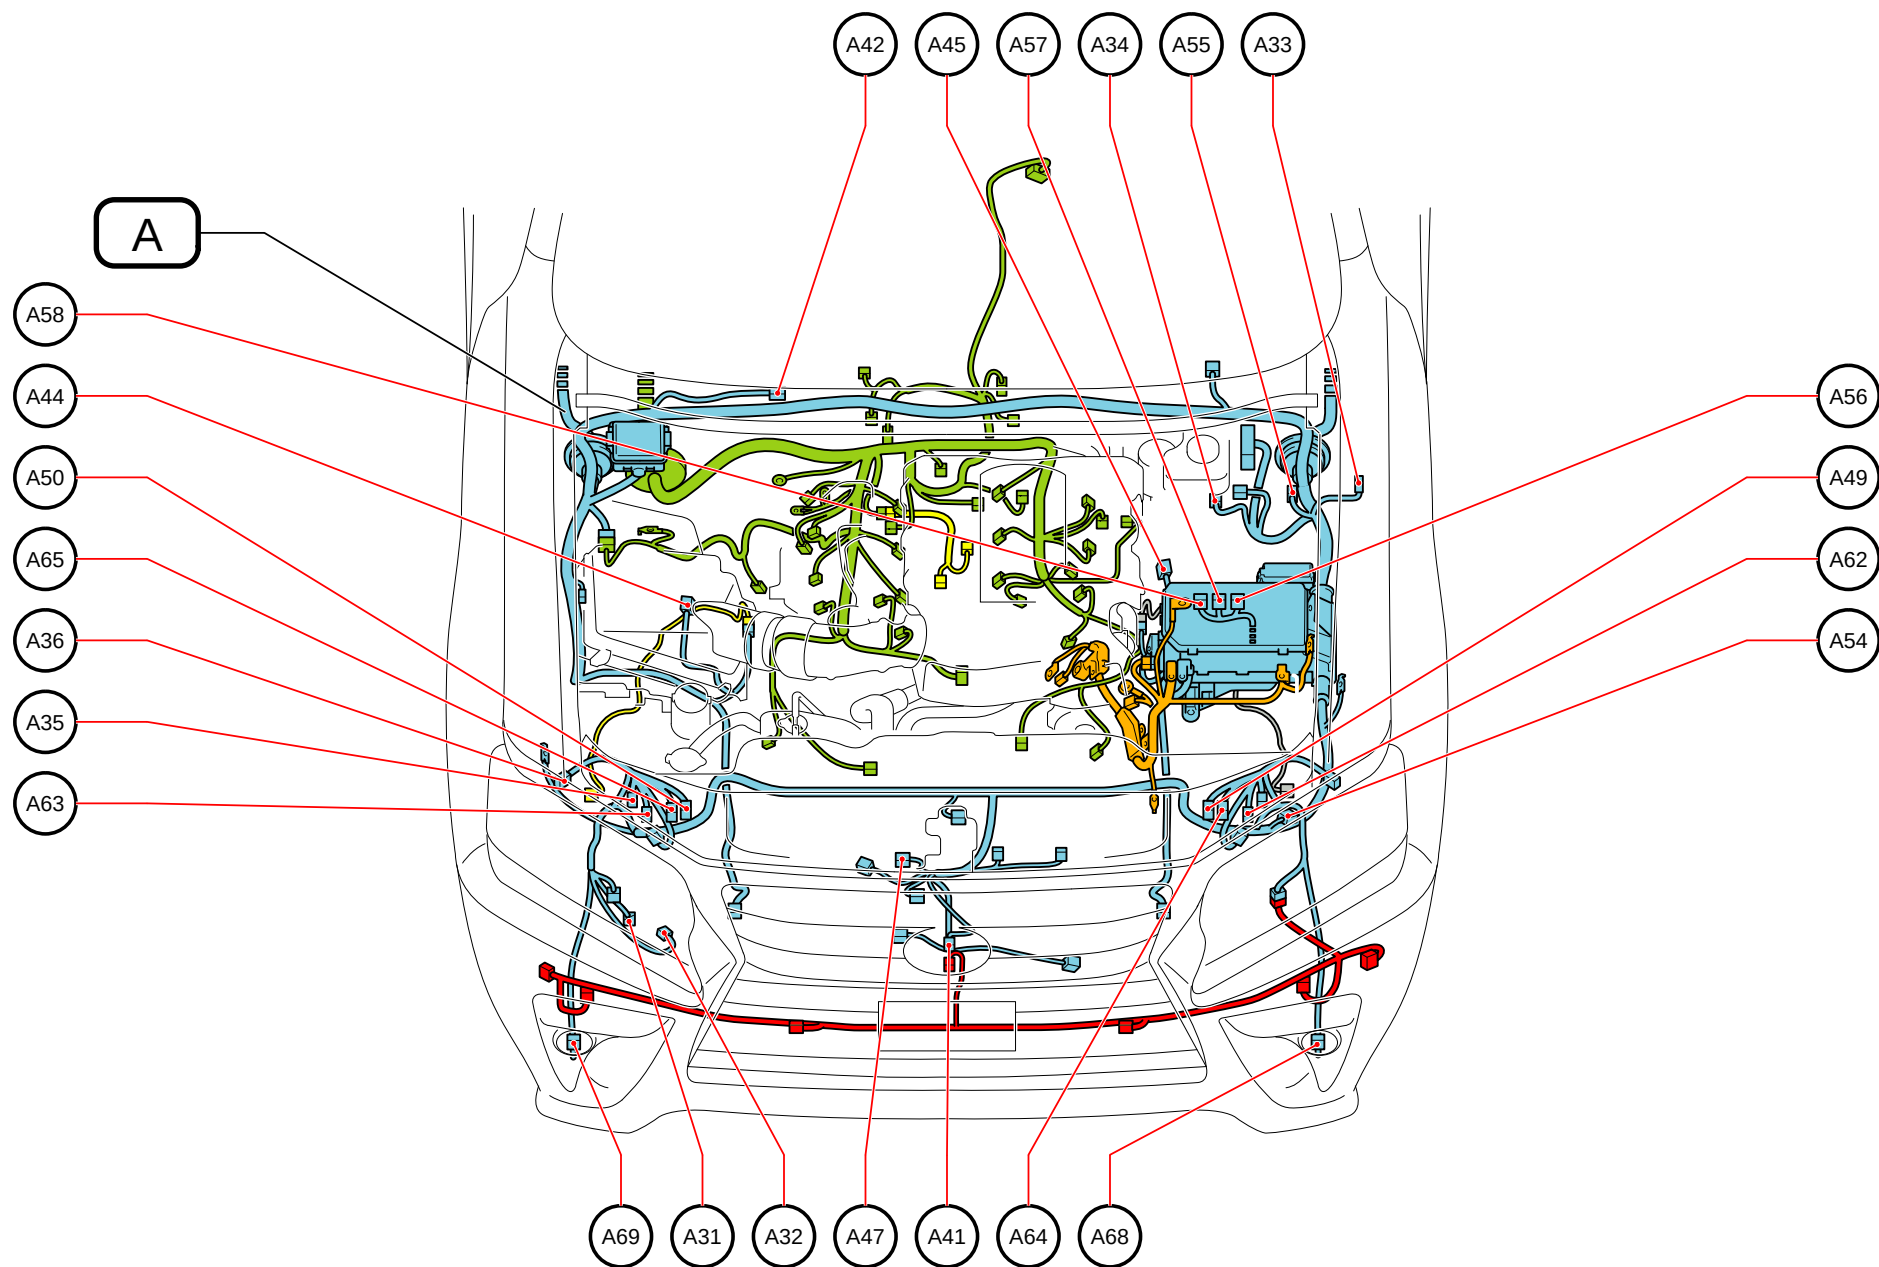

A31	Headlight Cleaner Motor and Pump Assembly
A32	Headlight Cleaner Control Relay
A33	Wireless Door Lock Buzzer
A34	Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Assembly)
A35	Headlight Assembly RH
A36	Headlight Assembly RH
A41	Front Television Camera Assembly
A42	Front Wiper Deicer (Windshield Glass)
A44	Front Absorber Control Actuator RH
A45	Front Absorber Control Actuator LH
A47	Smog Ventilation Sensor
A49	Headlight Assembly LH
A50	Headlight Assembly RH
A54	Junction Connector
A55	Junction Connector
A56	Junction Connector
A57	Junction Connector
A58	Junction Connector
A62	Headlight Assembly LH
A63	Headlight Assembly RH
A64	Headlight Assembly LH
A65	Headlight Assembly RH
A68	Fog Light Assembly LH
A69	Fog Light Assembly RH


Position of Parts in Engine Compartment (1GR-FE)

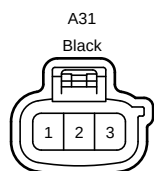


90980-10981




90980-11194

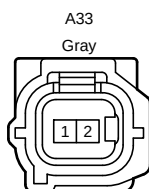


90980-12572

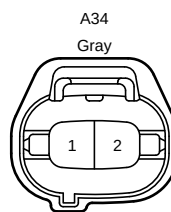


90980-11156

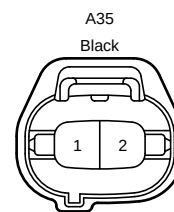


90980-11156

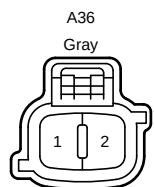


90980-11019

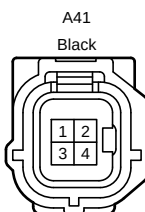


90980-12495

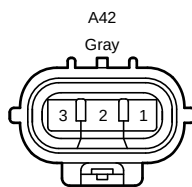


90980-11348

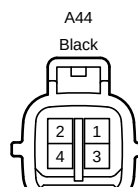


90980-11929

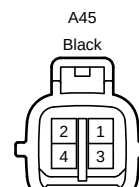


90980-11929

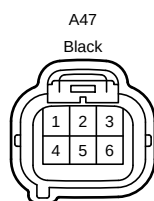


90980-11034

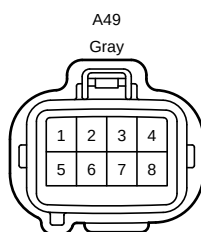


90980-10897

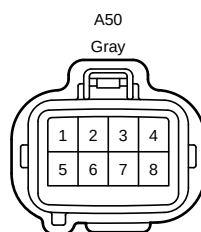


90980-10897

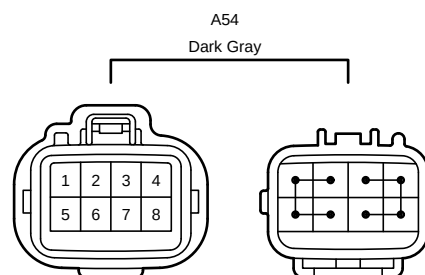


90980-10891

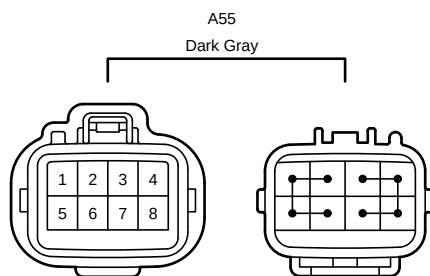


90980-10891

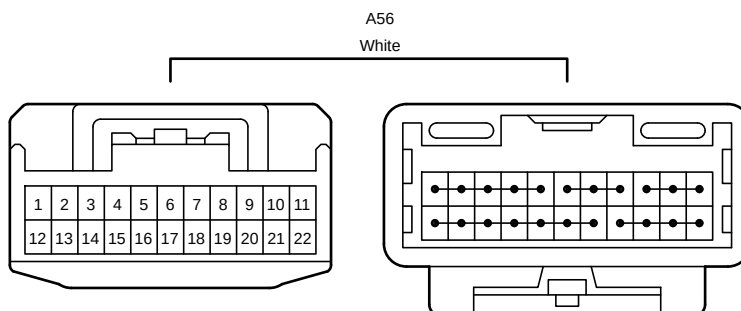

90980-12372




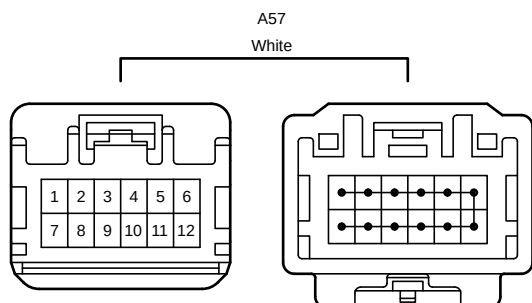


90980-12737

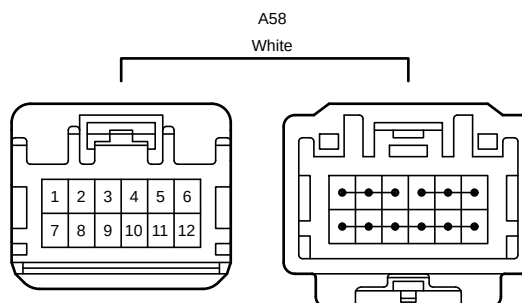


90980-12737

Position of Parts in Engine Compartment (1GR-FE)



















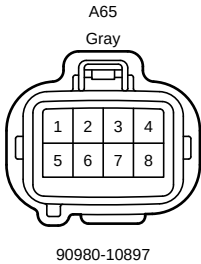
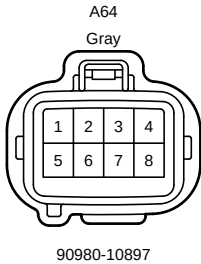
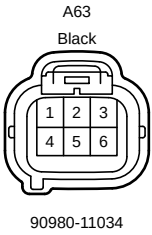
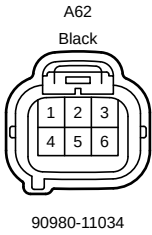


Position of Parts in Engine Compartment (1GR-FE)







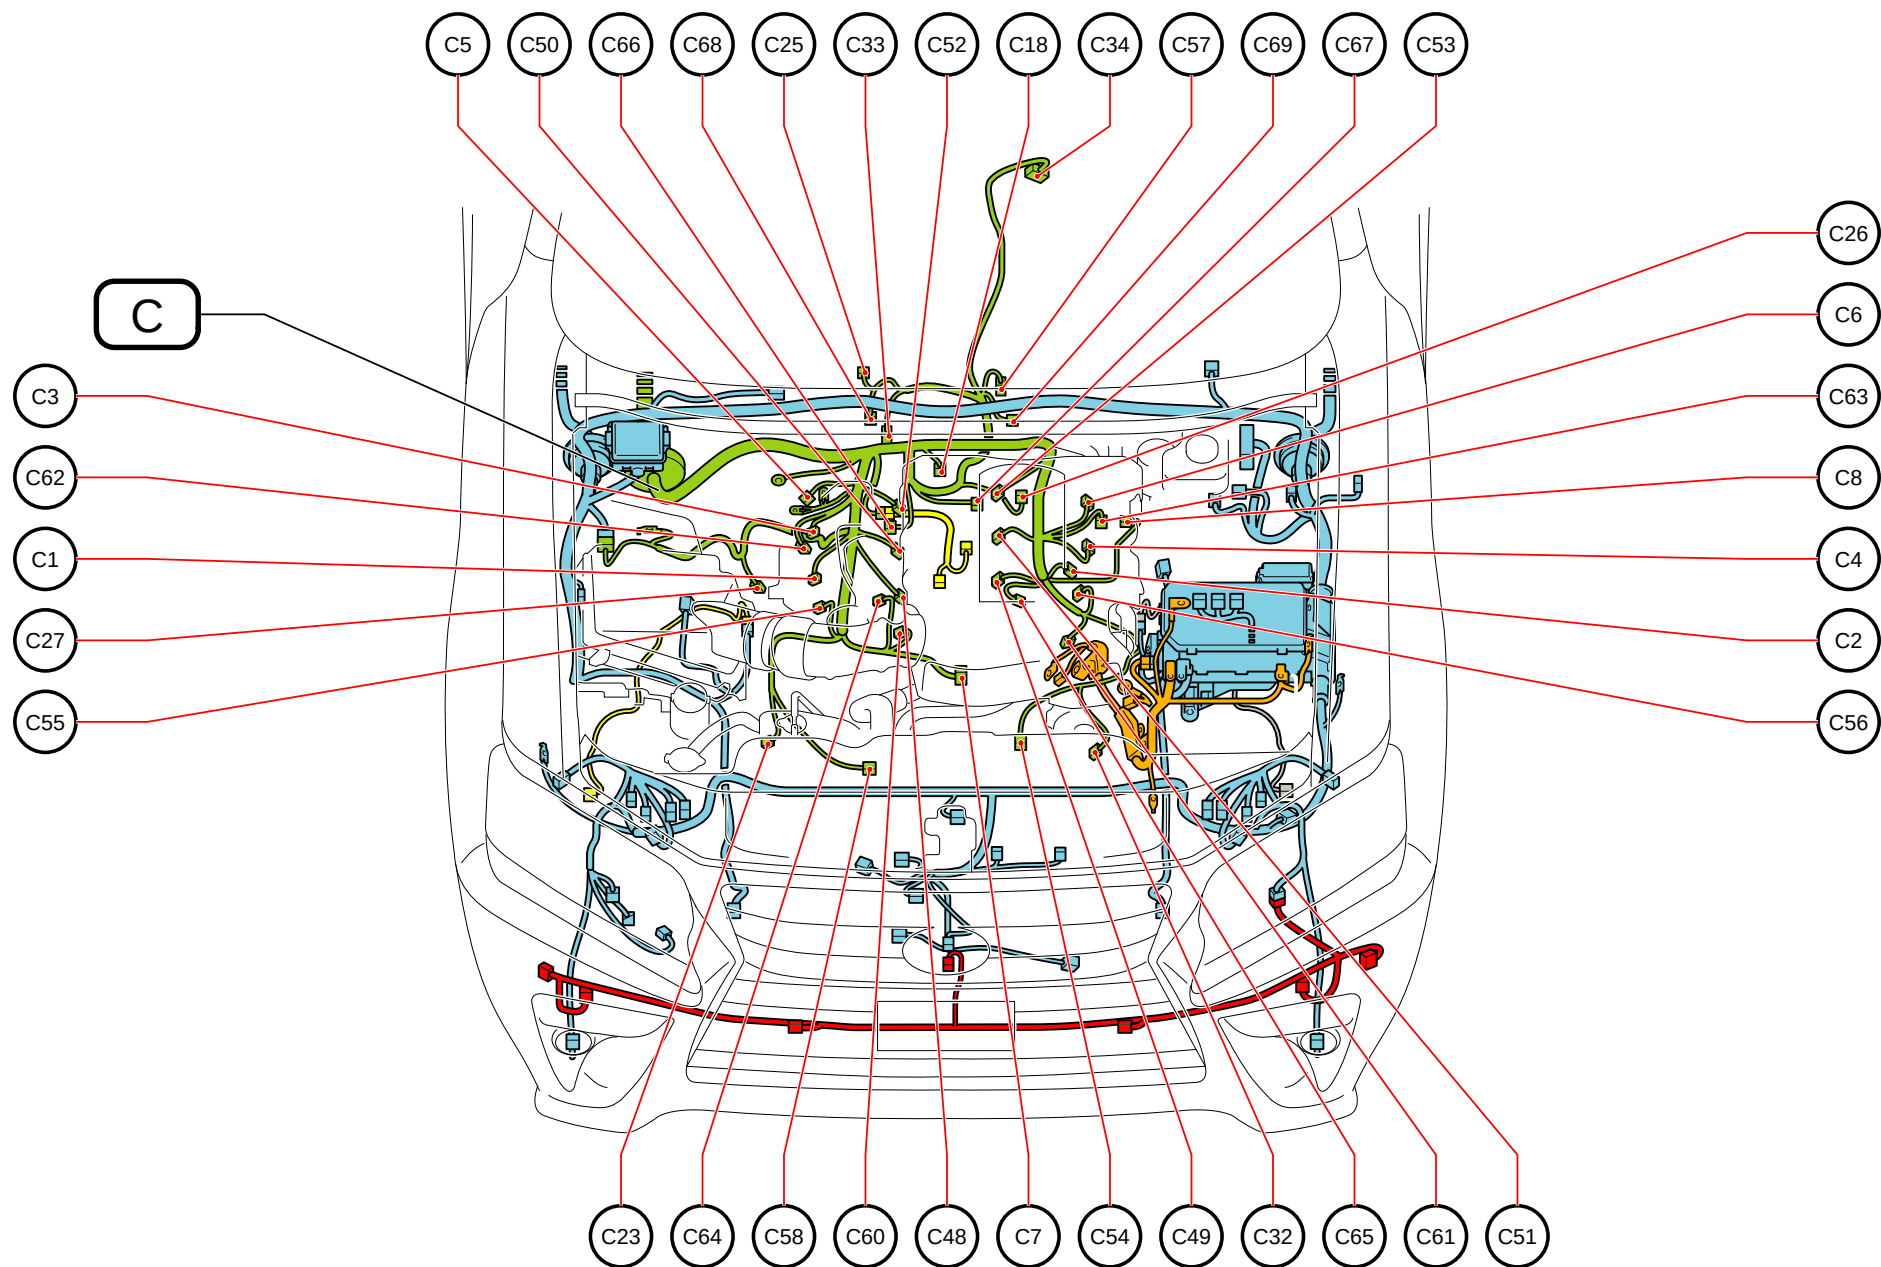



C1	Ignition Coil Assembly No. 1
C2	Ignition Coil Assembly No. 2
C3	Ignition Coil Assembly No. 3
C4	Ignition Coil Assembly No. 4
C5	Ignition Coil Assembly No. 5
C6	Ignition Coil Assembly No. 6
C7	Throttle Body Assembly
C8	Purge VSV
C18	E.F.I. Engine Coolant Temperature Sensor
C23	Power Steering Oil Pressure Switch
C25	Transmission Revolution Sensor (Counter Gear)
C26	Transmission Revolution Sensor (Turbine)
C27	Intake Air Flow Meter Assembly
C32	Cooler Compressor Assembly
C33	Park/Neutral Position Switch
C34	Transfer Shift Actuator Assembly
C48	Fuel Injector Assembly No. 1
C49	Fuel Injector Assembly No. 2
C50	Fuel Injector Assembly No. 3
C51	Fuel Injector Assembly No. 4
C52	Fuel Injector Assembly No. 5
C53	Fuel Injector Assembly No. 6
C54	Crank Position Sensor
C55	Camshaft Timing Oil Control Valve (Bank 1 Exhaust Side)
C56	Camshaft Timing Oil Control Valve (Bank 2 Exhaust Side)
C57	ECT Solenoid
C58	Engine Oil Pressure Switch Assembly
C60	VVT Sensor (Bank 1 Intake Side)
C61	VVT Sensor (Bank 2 Intake Side)
C62	VVT Sensor (Bank 1 Exhaust Side)
C63	VVT Sensor (Bank 2 Exhaust Side)
C64	Camshaft Timing Oil Control Valve (Bank 1 Intake Side)
C65	Camshaft Timing Oil Control Valve (Bank 2 Intake Side)
C66	Air Fuel Ratio Sensor (Bank 1 Sensor 1)
C67	Air Fuel Ratio Sensor (Bank 2 Sensor 1)
C68	Oxygen Sensor (Bank 1 Sensor 2)
C69	Oxygen Sensor (Bank 2 Sensor 2)

Position of Parts in Engine Compartment (1GR-FE)

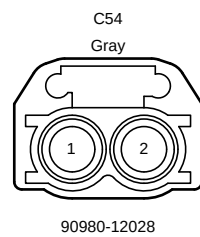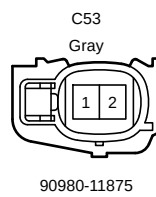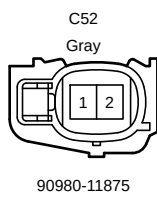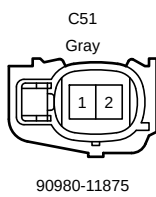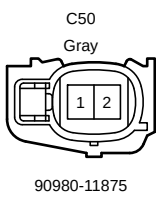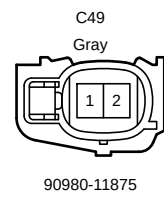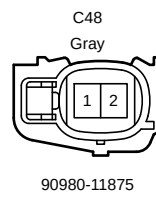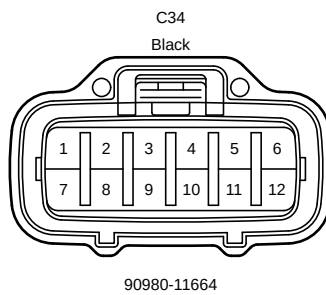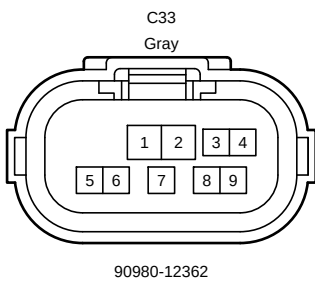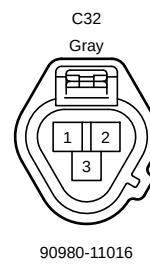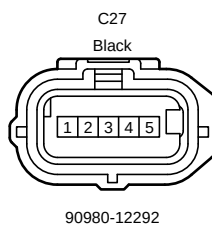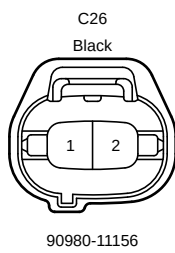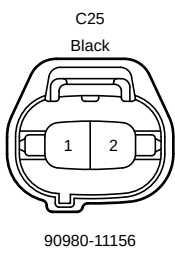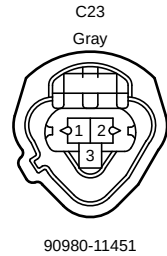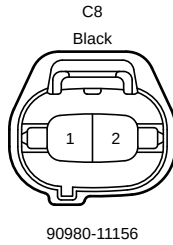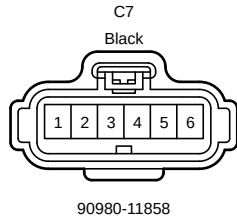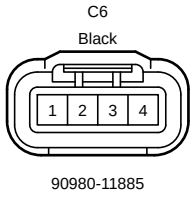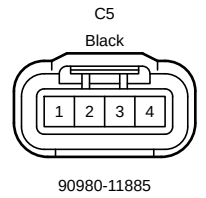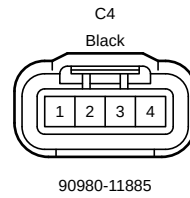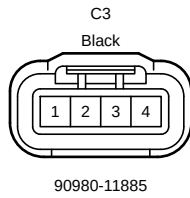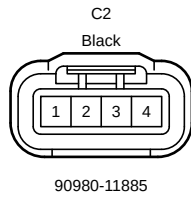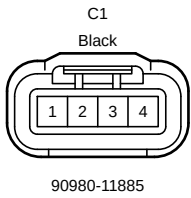

Position of Parts in Engine Compartment (1GR-FE)

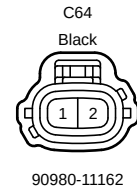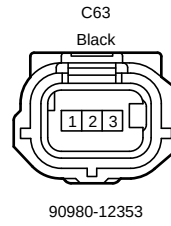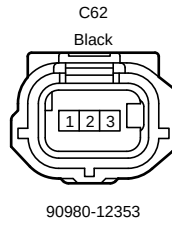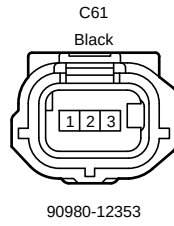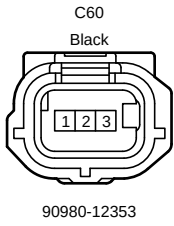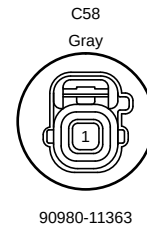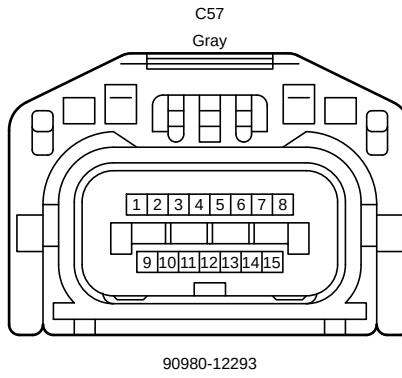

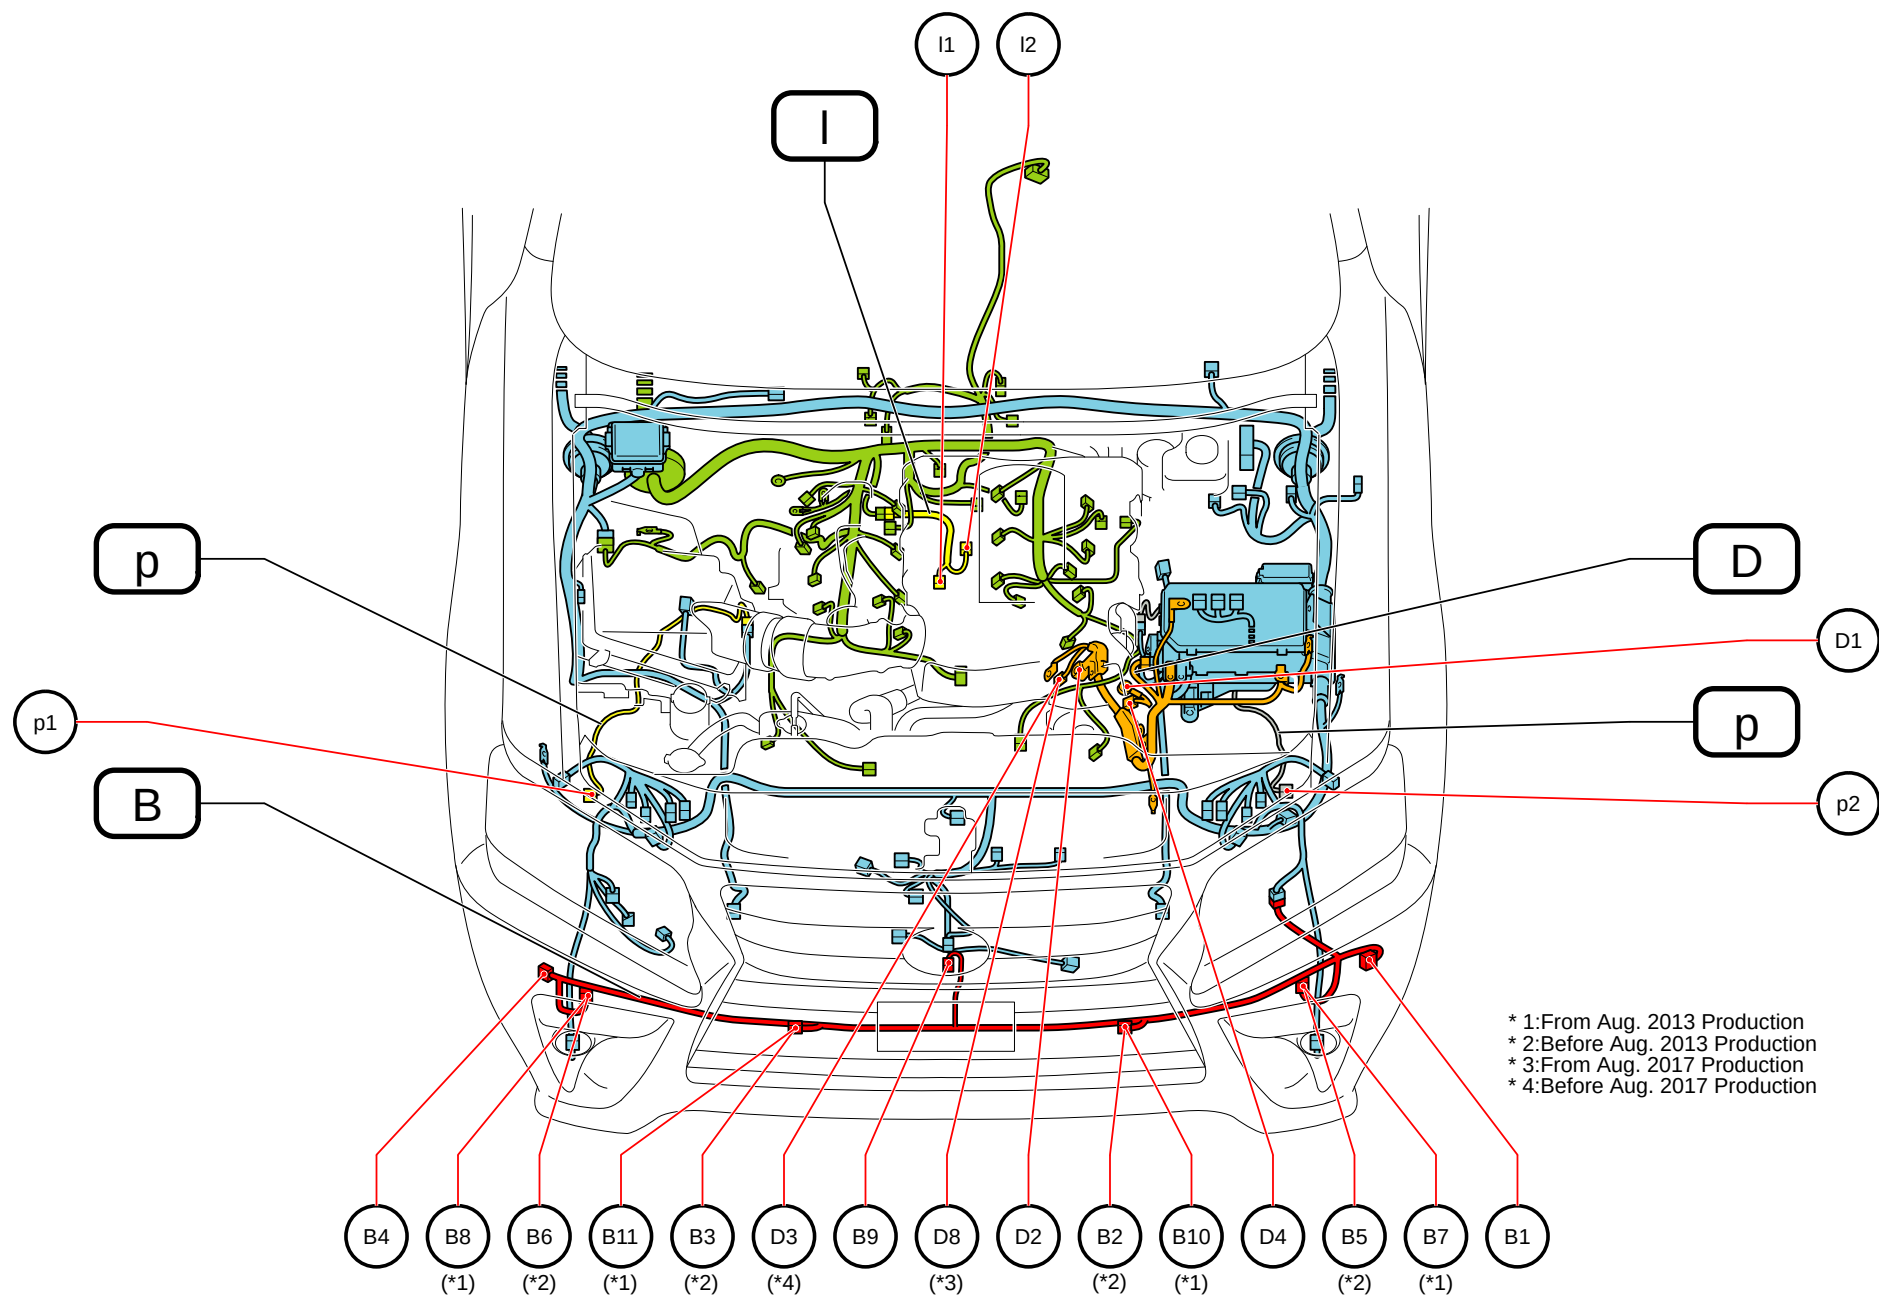




















B1 Front No. 1 Ultrasonic Sensor LH
B2 Front No. 1 Ultrasonic Sensor Center LH
B3 Front No. 1 Ultrasonic Sensor Center RH
B4 Front No. 1 Ultrasonic Sensor RH
B5 Fog Light Assembly LH
B6 Fog Light Assembly RH
B7 Front Turn Signal Light Assembly LH
B8 Front Turn Signal Light Assembly RH
B9 Front Television Camera Assembly
B10 Front No. 1 Ultrasonic Sensor Center LH
B11 Front No. 1 Ultrasonic Sensor Center RH


D1 Generator Assembly
D2 Starter Assembly
D3 Starter Assembly
D4 Generator Assembly
D8 Starter Assembly


I1 Knock Control Sensor (Bank 1 Sensor 1)
I2 Knock Control Sensor (Bank 2 Sensor 1)


p1 Front Speed Sensor RH
p2 Front Speed Sensor LH

 
Position of Parts in Engine Compartment (1GR-FE)

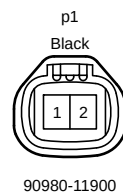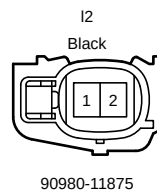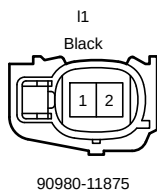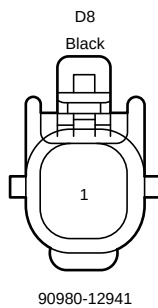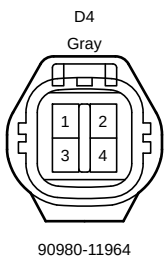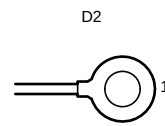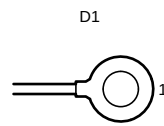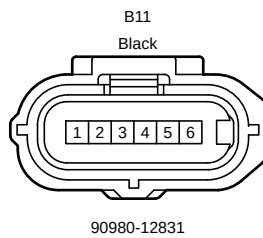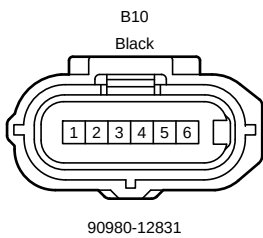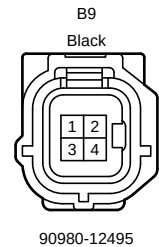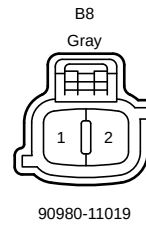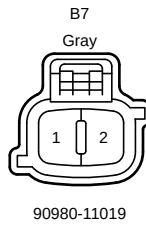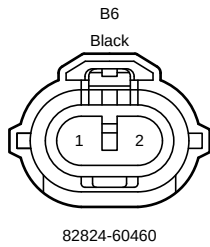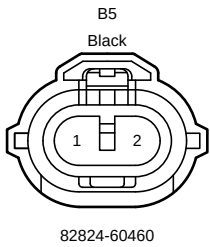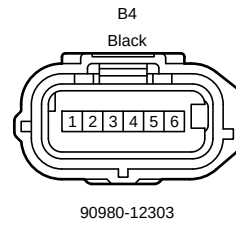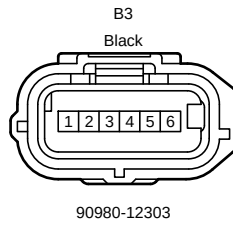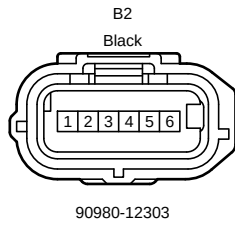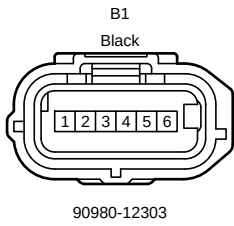

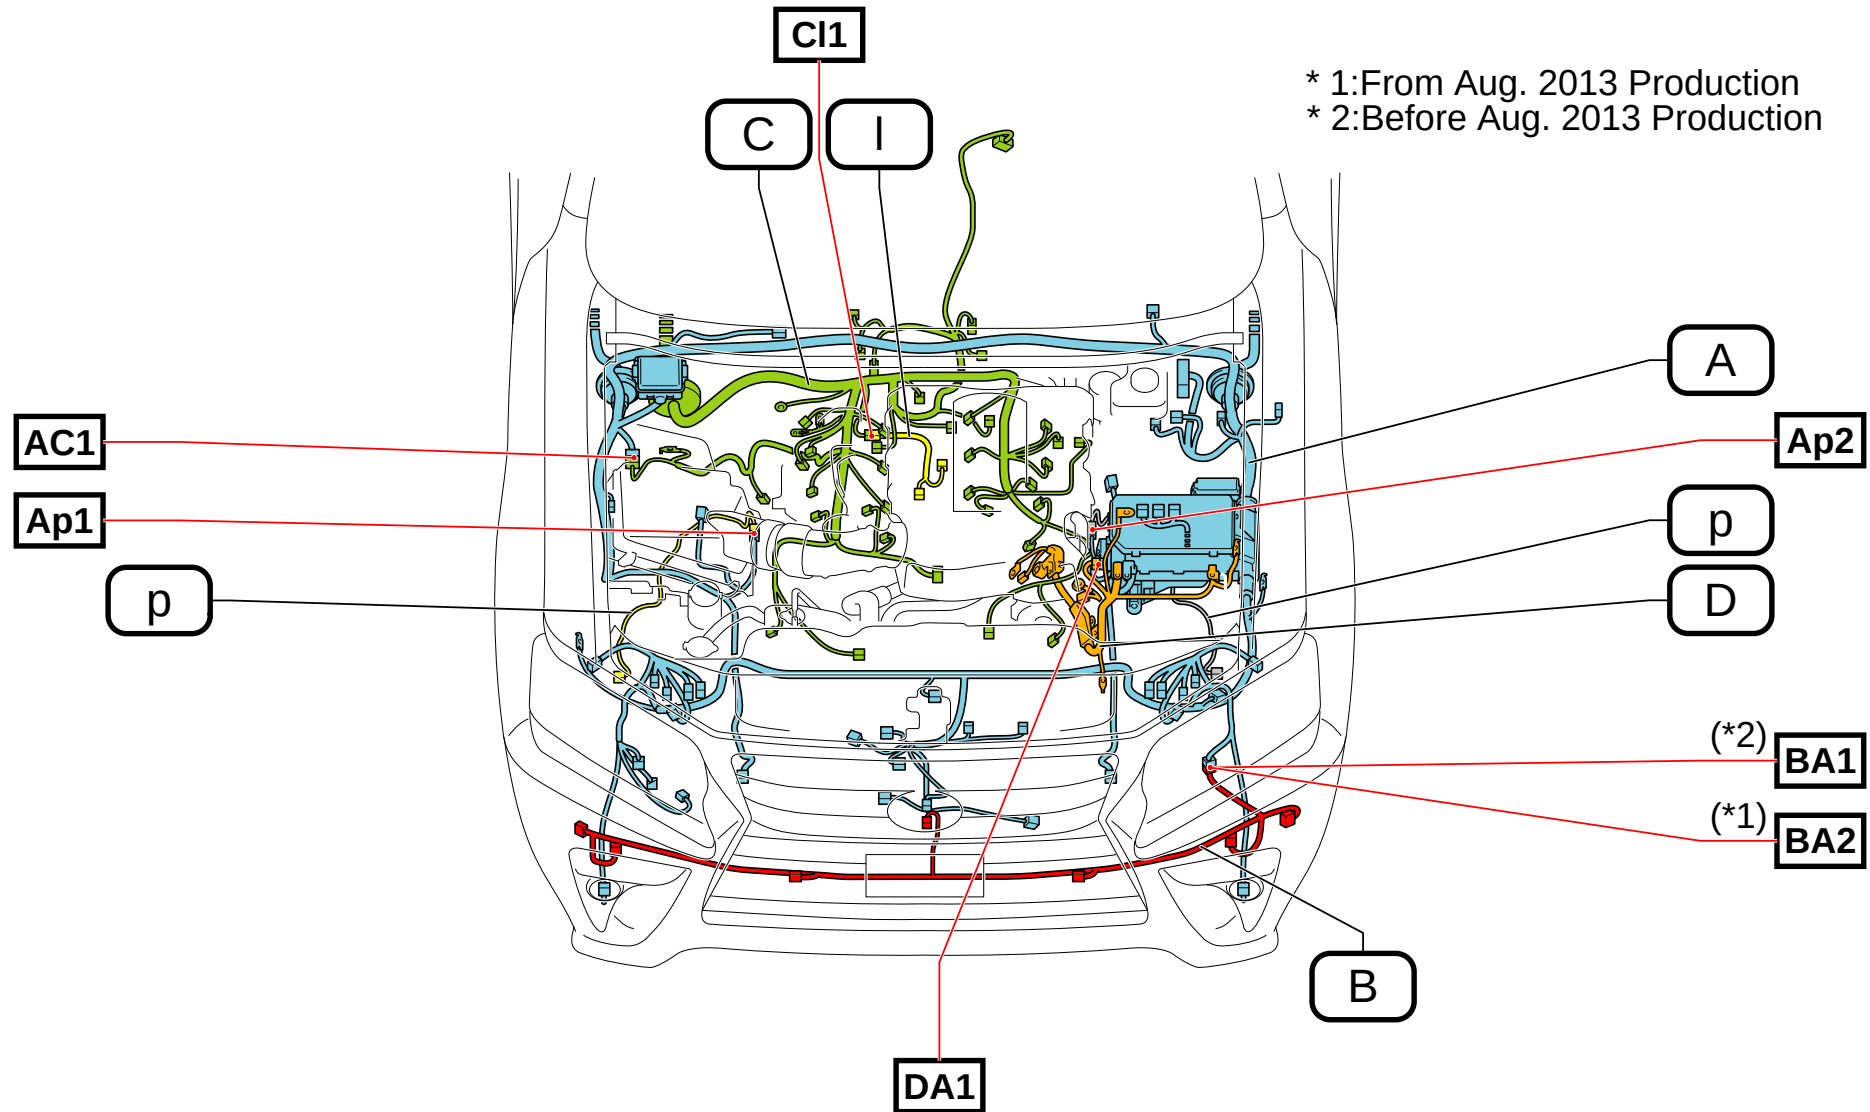

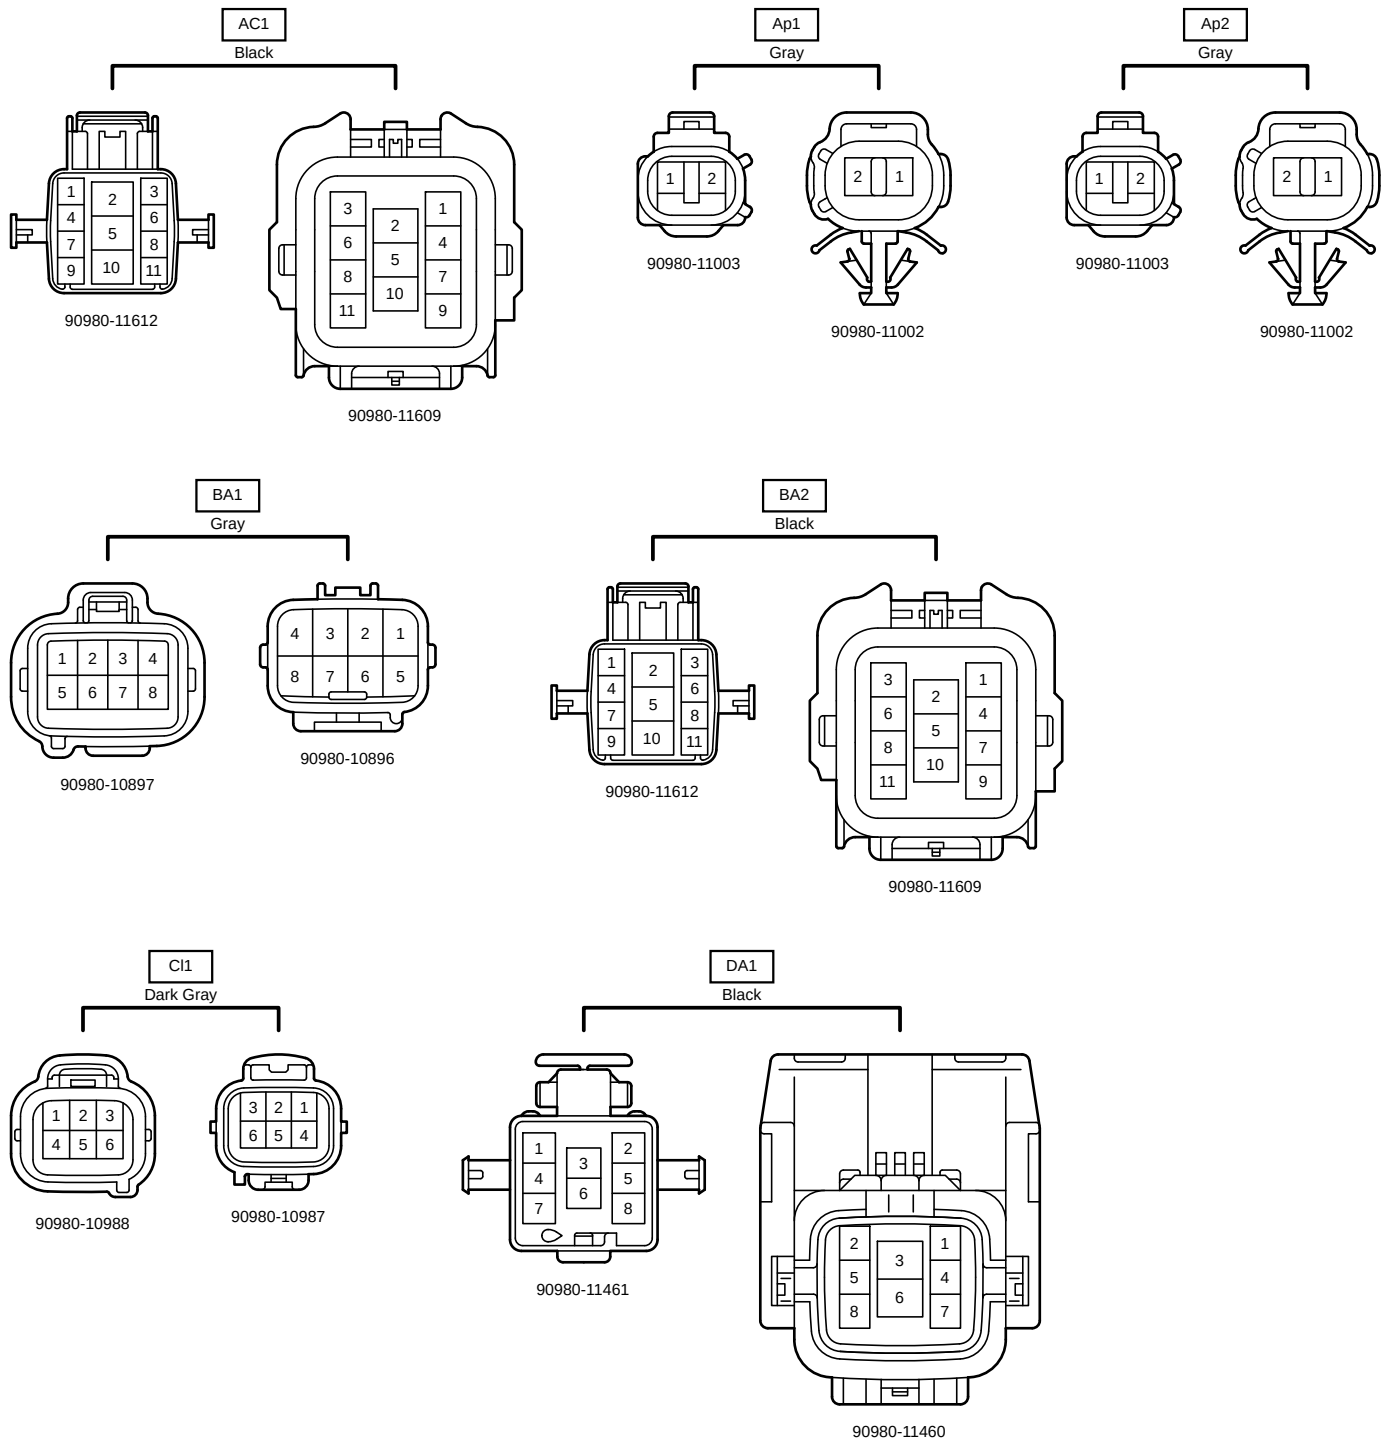

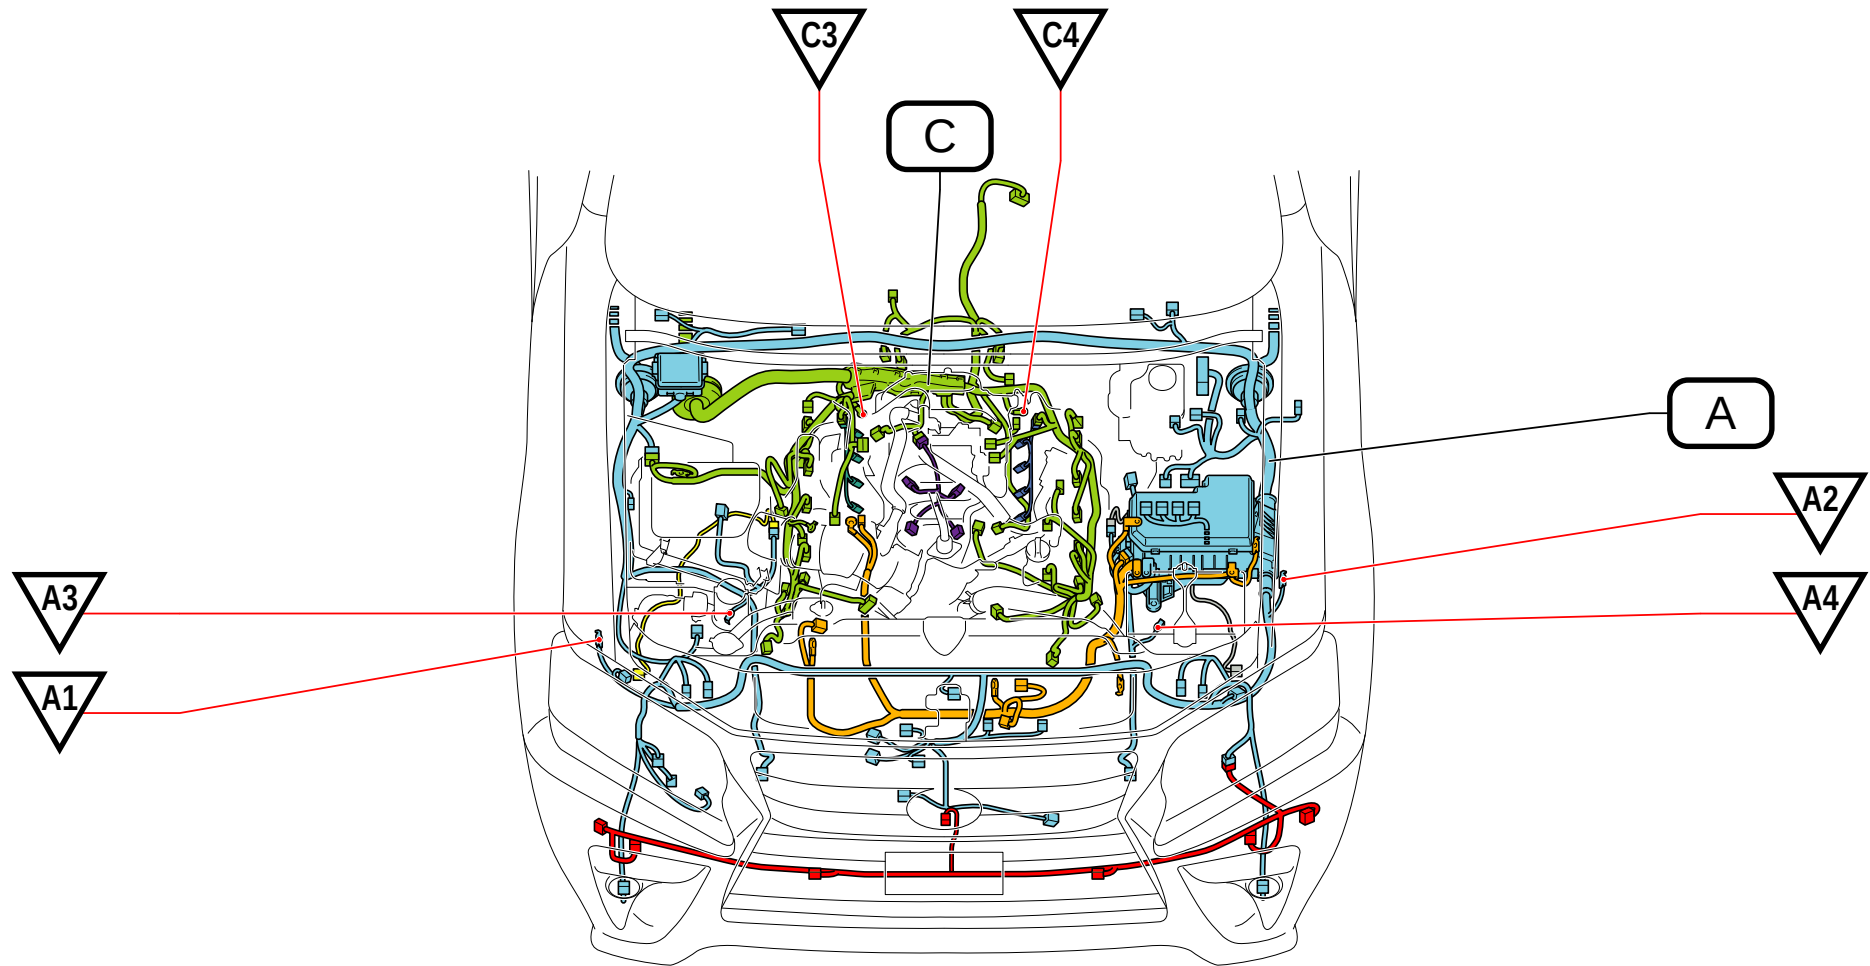

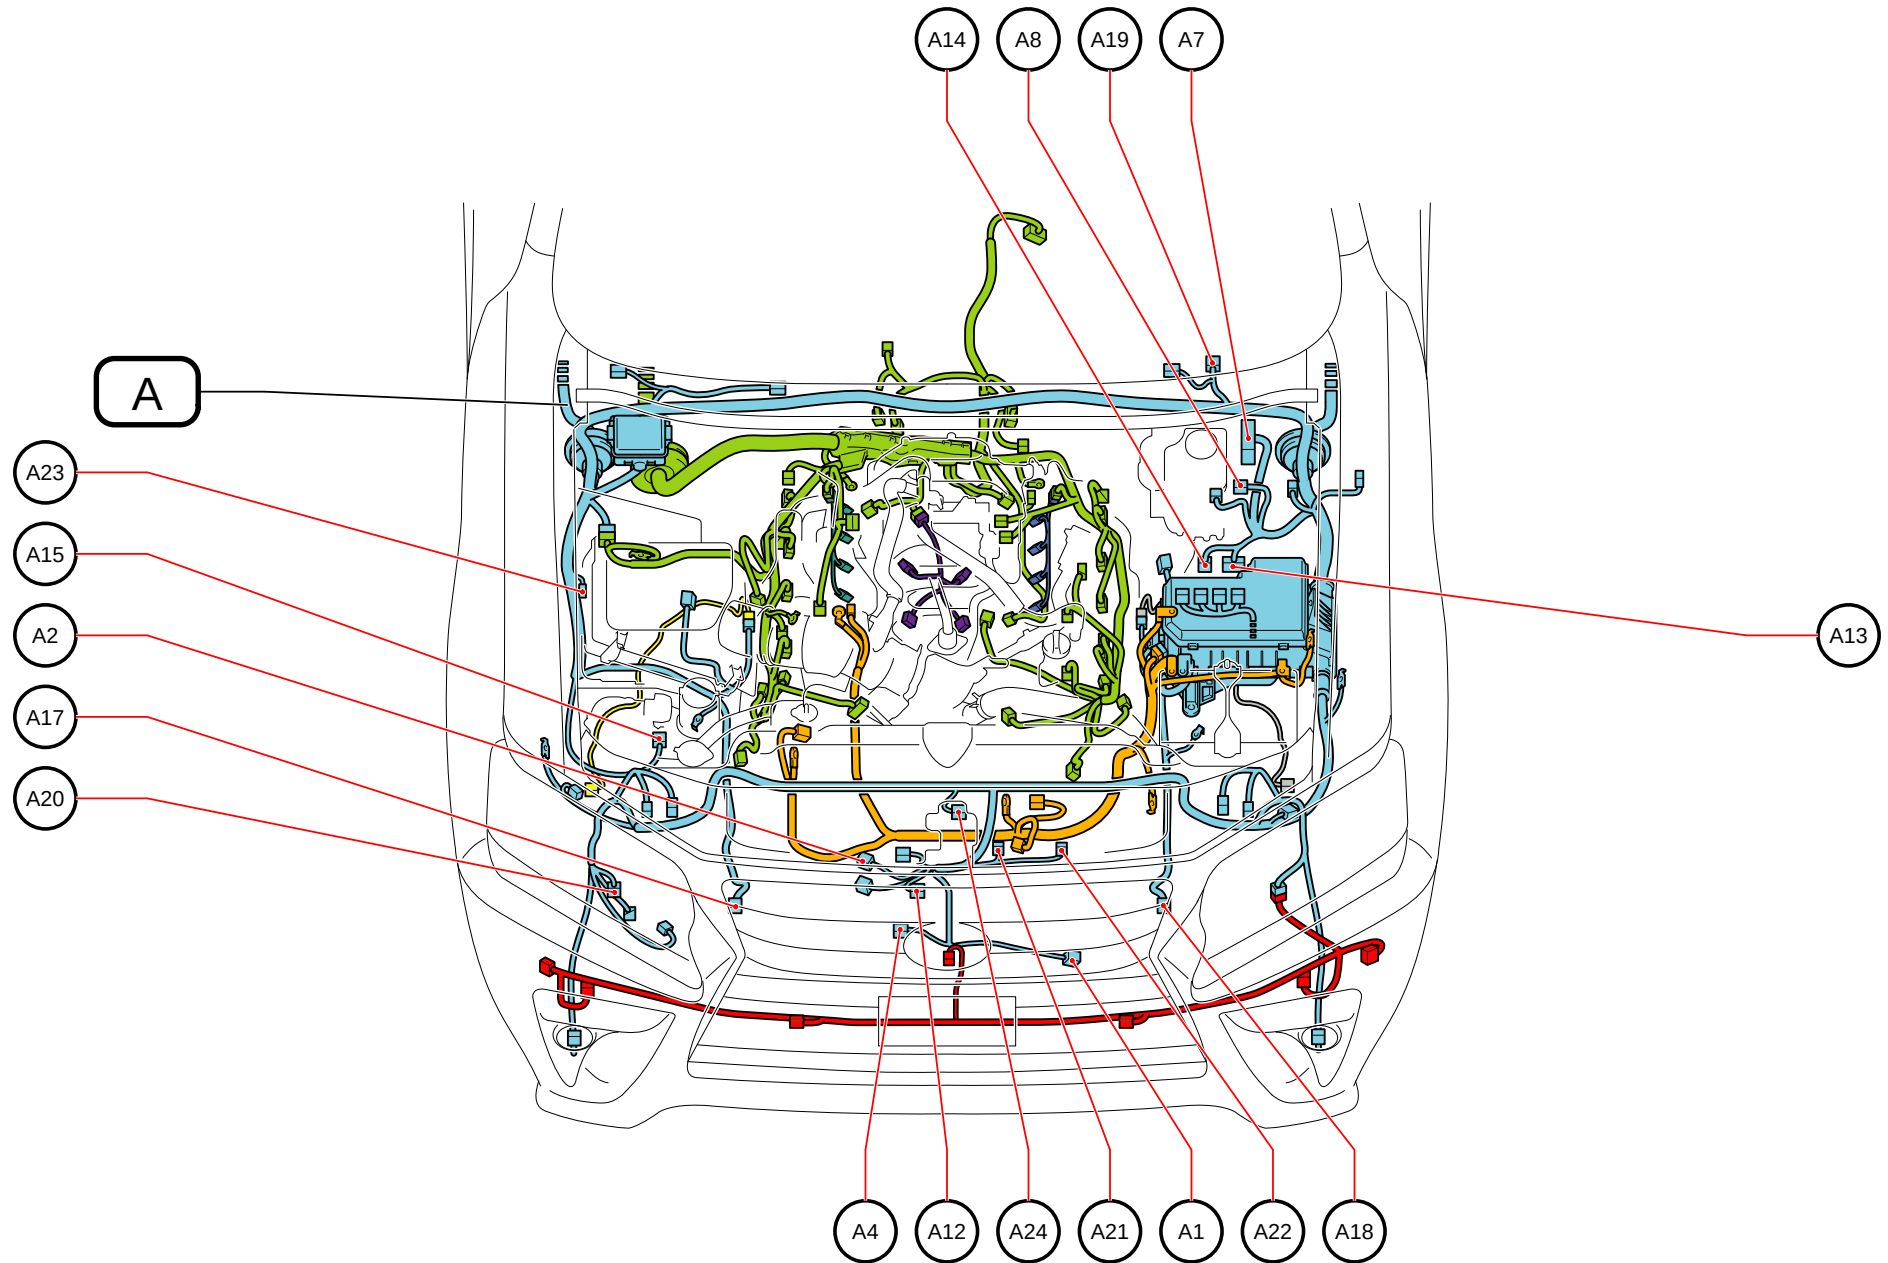


A1	Ambient Temperature Sensor
A2	A/C Pressure Sensor
A4	Condenser Fan Motor (With Shroud Blower Assembly)
A7	Brake Actuator Assembly
A8	Brake Actuator Assembly
A12	Millimeter Wave Radar Sensor Assembly
A13	Air Injection Control Driver
A14	Air Injection Control Driver
A15	Inlet Air Pump
A17	Front Airbag Sensor RH
A18	Front Airbag Sensor LH
A19	Windshield Wiper Motor Assembly
A20	Windshield Washer Motor and Pump Assembly
A21	Low Pitched Horn Assembly
A22	High Pitched Horn Assembly
A23	Security Horn Assembly
A24	Engine Hood Courtesy Switch


Position of Parts in Engine Compartment (1UR-FE w/ Heated Windshield Defroster)




90980-11070

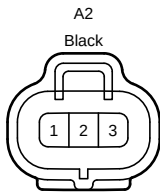


90980-10845

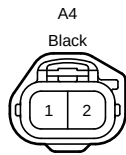


90980-11237

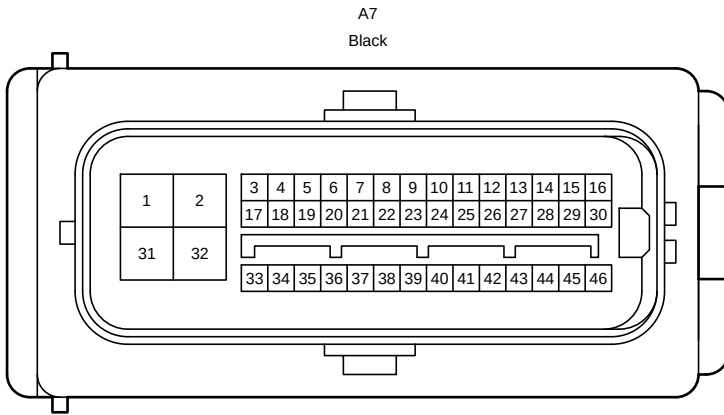


90980-12297

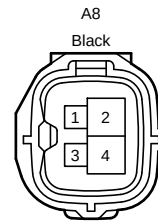


90980-12294

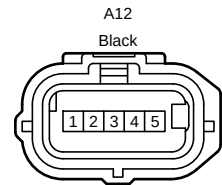


90980-12292

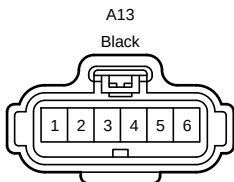


90980-11858

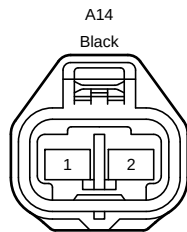


90980-12068

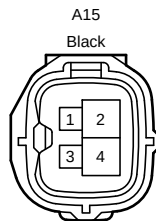


90980-12294

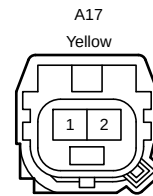

90980-12490

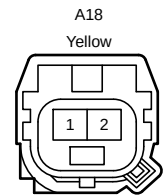

90980-12490

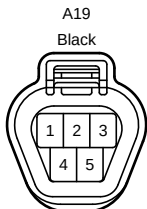


90980-11599




90980-11193



 90980-10619




90980-10619

 

90980-10619




90980-11178

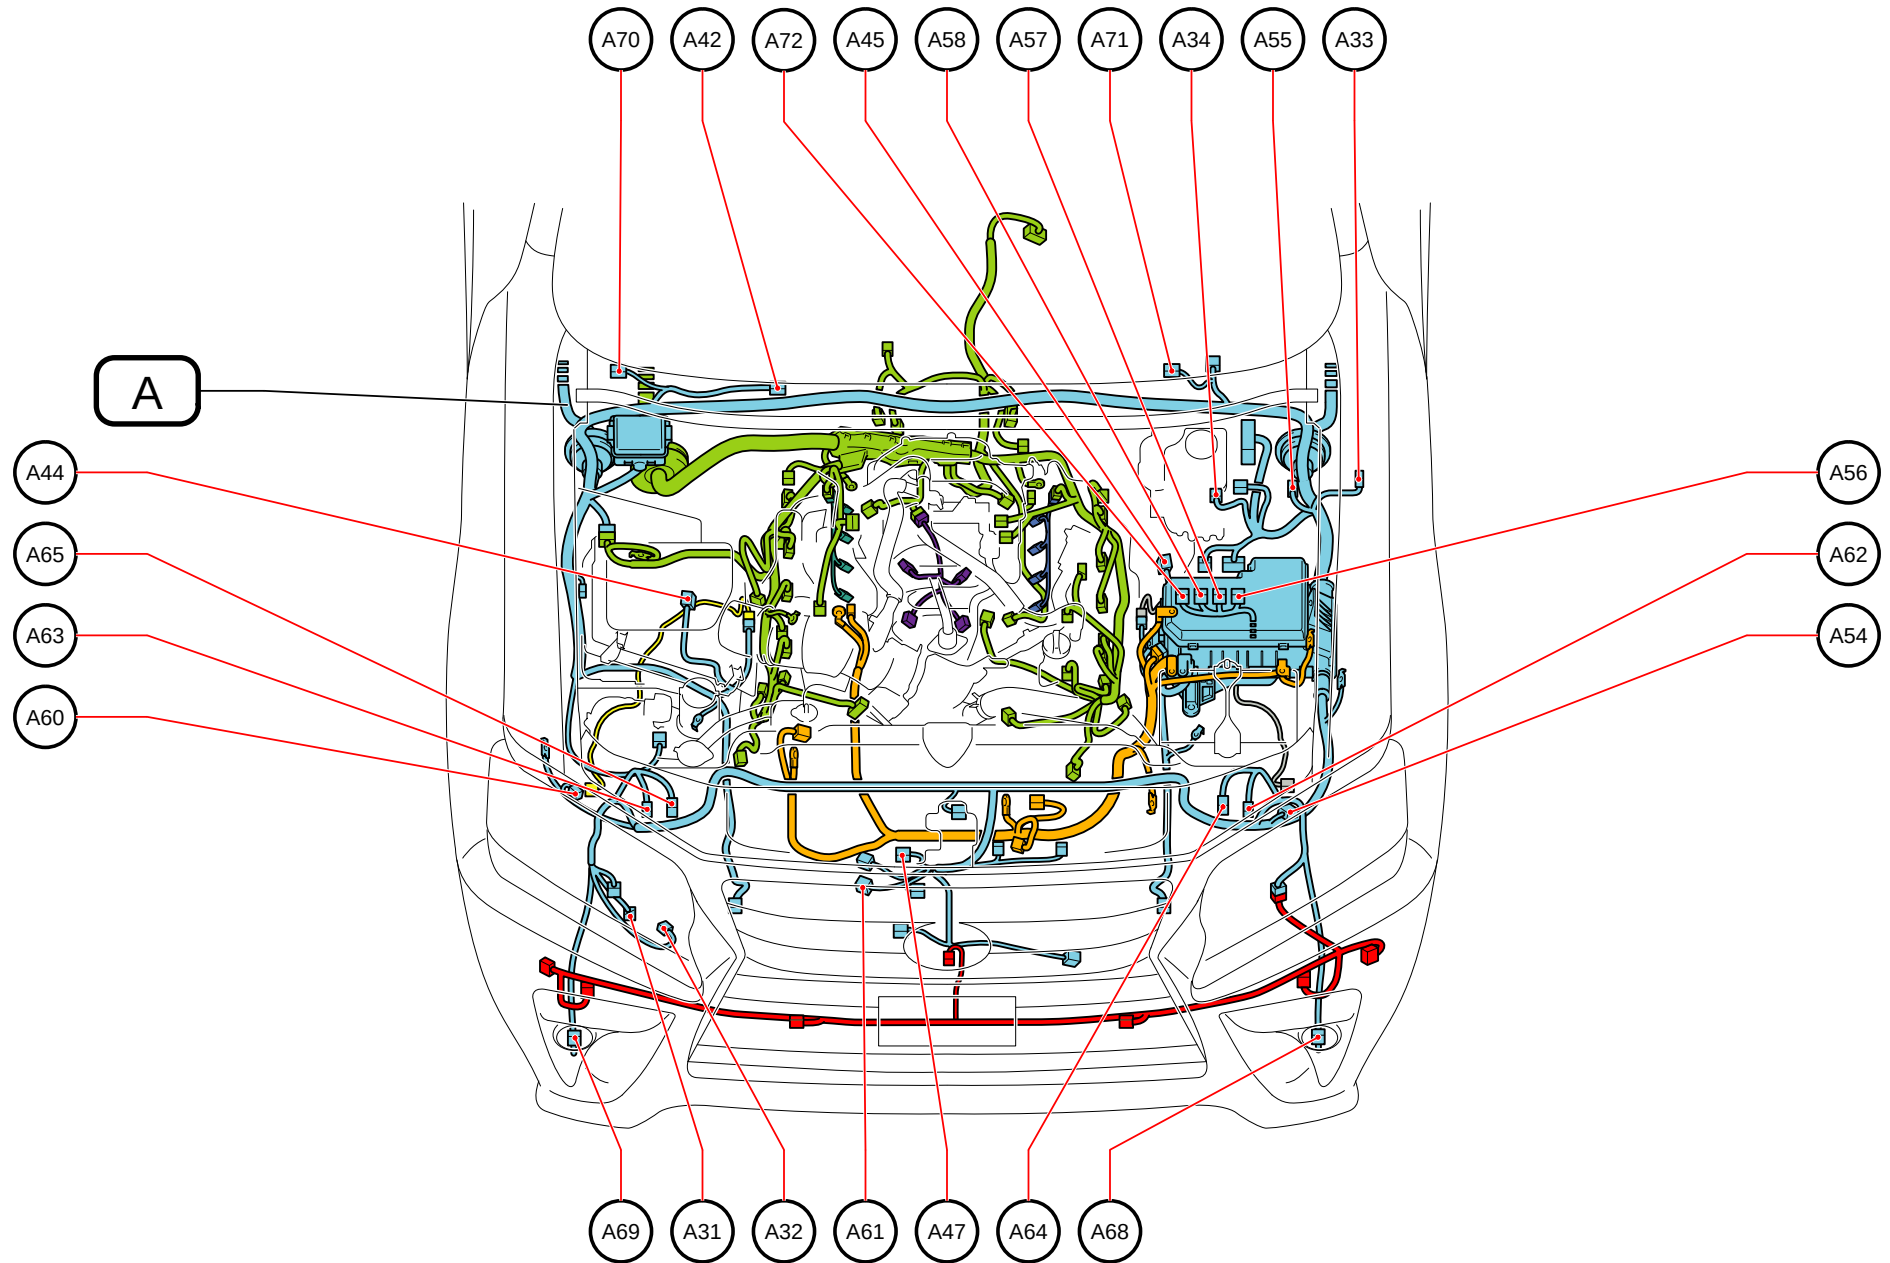


A31	Headlight Cleaner Motor and Pump Assembly
A32	Headlight Cleaner Control Relay
A33	Wireless Door Lock Buzzer
A34	Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Assembly)
A42	Front Wiper Deicer (Windshield Glass)
A44	Front Absorber Control Actuator RH
A45	Front Absorber Control Actuator LH
A47	Smog Ventilation Sensor
A54	Junction Connector
A55	Junction Connector
A56	Junction Connector
A57	Junction Connector
A58	Junction Connector
A60	Noise Filter (Condenser Fan)
A61	No. 1 Pressure Switch
A62	Headlight Assembly LH
A63	Headlight Assembly RH
A64	Headlight Assembly LH
A65	Headlight Assembly RH
A68	Fog Light Assembly LH
A69	Fog Light Assembly RH
A70	Windshield Defroster RH (Windshield Glass)
A71	Windshield Defroster LH (Windshield Glass)
A72	Junction Connector


Position of Parts in Engine Compartment (1UR-FE w/ Heated Windshield Defroster)

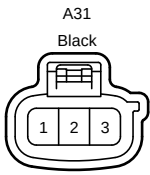


90980-10981

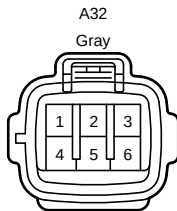


90980-11194

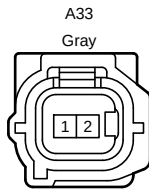


90980-12572

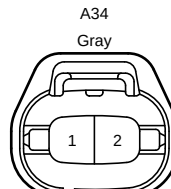


90980-11156

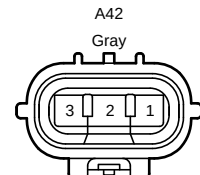


90980-11348

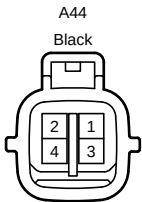


90980-11929

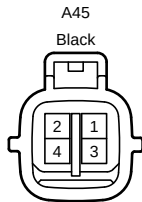


90980-11929

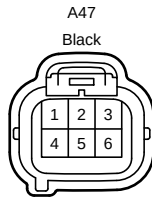


90980-11034

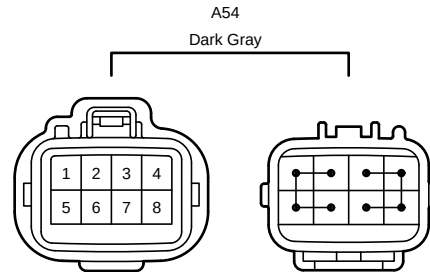


90980-10891

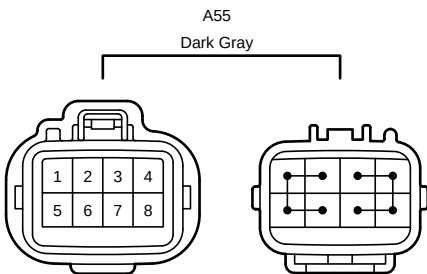


90980-10891

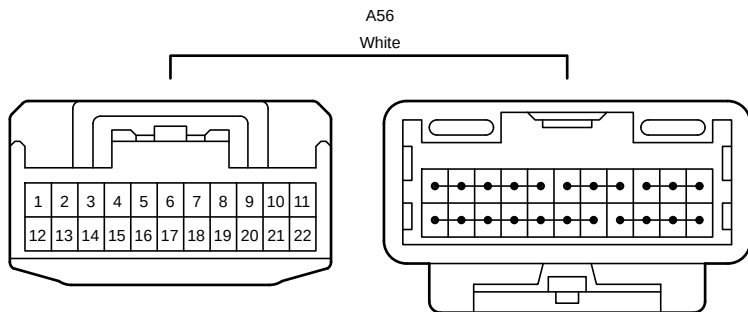


90980-12372

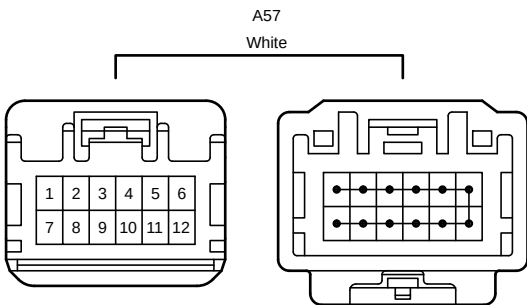


90980-12737

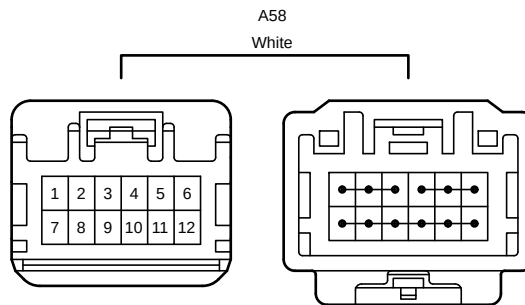


90980-12737

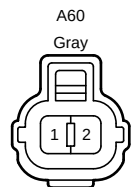


90980-10843

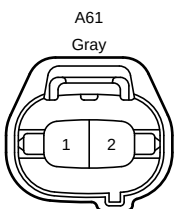


90980-11149

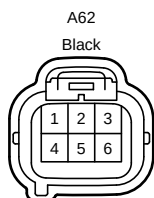


90980-11034

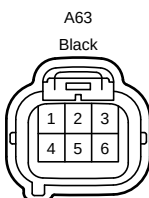

90980-11034

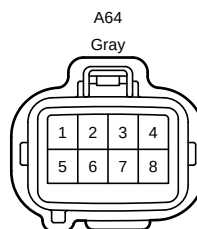


90980-10897

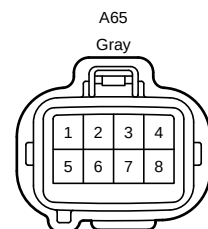


90980-10897


Position of Parts in Engine Compartment (1UR-FE w/ Heated Windshield Defroster)

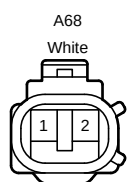


90980-11003

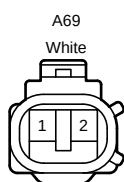


90980-11003

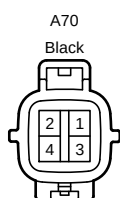


90980-10941

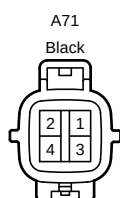

90980-10941



















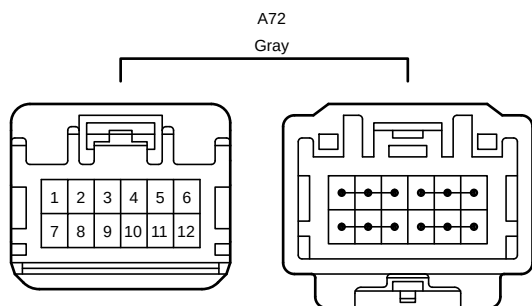


90980-12737

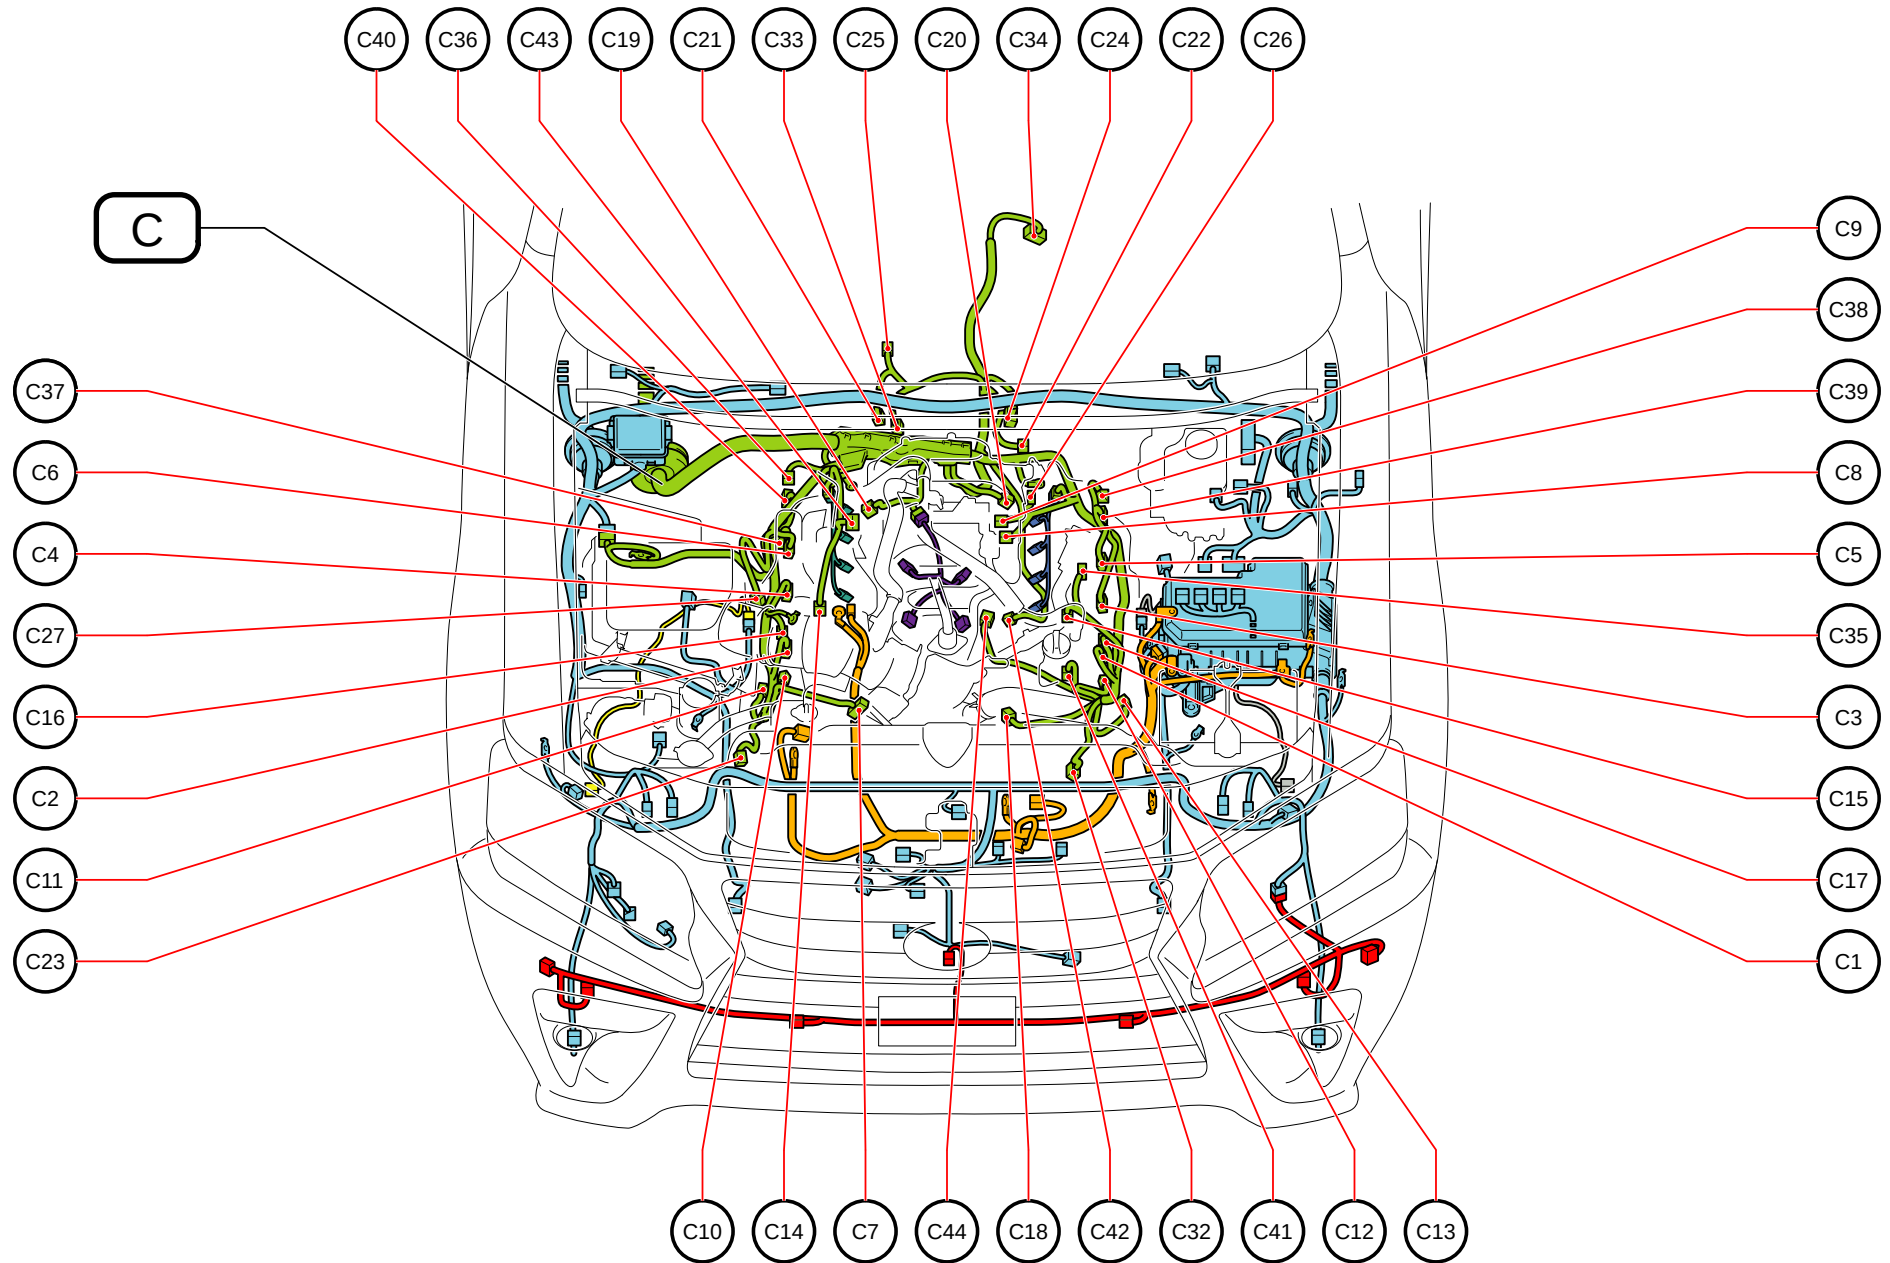


C1	Ignition Coil Assembly No. 1
C2	Ignition Coil Assembly No. 2
C3	Ignition Coil Assembly No. 3
C4	Ignition Coil Assembly No. 4
C5	Ignition Coil Assembly No. 5
C6	Ignition Coil Assembly No. 6
C7	Throttle Body Assembly
C8	Purge VSV
C9	VSV (ACIS)
C10	Camshaft Timing Oil Control Valve (Bank 2 Intake Side)
C11	Camshaft Timing Oil Control Valve (Bank 2 Exhaust Side)
C12	Camshaft Timing Oil Control Valve (Bank 1 Intake Side)
C13	Camshaft Timing Oil Control Valve (Bank 1 Exhaust Side)
C14	VVT Sensor (Bank 2 Intake Side)
C15	VVT Sensor (Bank 1 Intake Side)
C16	VVT Sensor (Bank 2 Exhaust Side)
C17	VVT Sensor (Bank 1 Exhaust Side)
C18	E.F.I. Engine Coolant Temperature Sensor
C19	Air Fuel Ratio Sensor (Bank 2 Sensor 1)
C20	Air Fuel Ratio Sensor (Bank 1 Sensor 1)
C21	Oxygen Sensor (Bank 2 Sensor 2)
C22	Oxygen Sensor (Bank 1 Sensor 2)
C23	Power Steering Oil Pressure Switch
C24	ECT Solenoid
C25	Transmission Revolution Sensor (Counter Gear)
C26	Transmission Revolution Sensor (Turbine)
C27	Intake Air Flow Meter Assembly
C32	Cooler Compressor Assembly
C33	Park/Neutral Position Switch
C34	Transfer Shift Actuator Assembly
C35	Air Pump Assembly (Bank 1)
C36	Air Pump Assembly (Bank 2)
C37	Noise Filter (Ignition RH)
C38	Noise Filter (Ignition LH)
C39	Ignition Coil Assembly No. 7
C40	Ignition Coil Assembly No. 8
C41	Camshaft Position Sensor
C42	Crank Position Sensor
C43	EGR Valve Assembly
C44	Intake Manifold Vacuum Sensor


Position of Parts in Engine Compartment (1UR-FE w/ Heated Windshield Defroster)

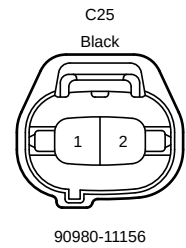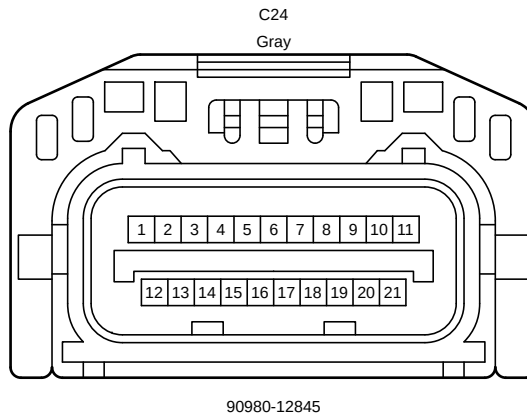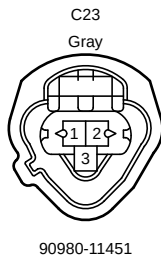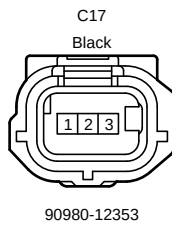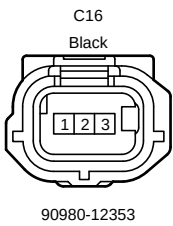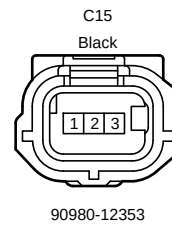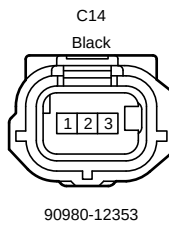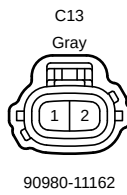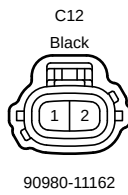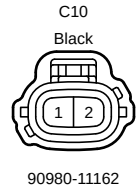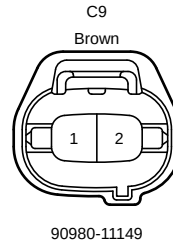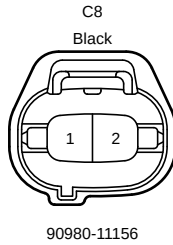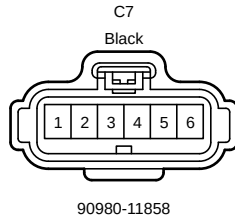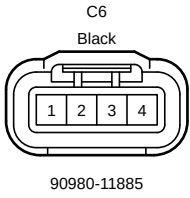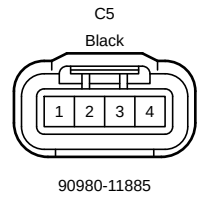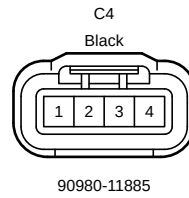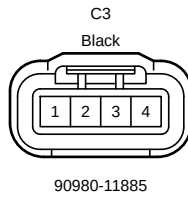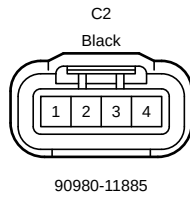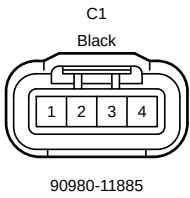


Position of Parts in Engine Compartment (1UR-FE w/ Heated Windshield Defroster)

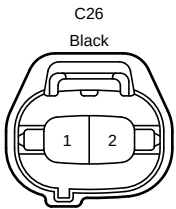


90980-11156

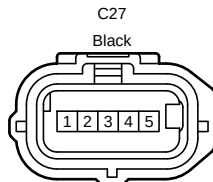


90980-12292

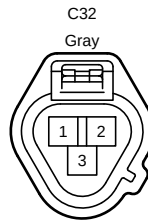


90980-11016

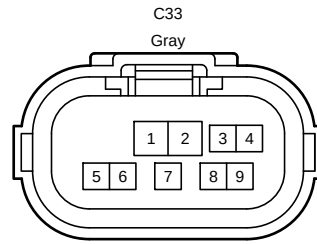


90980-12362

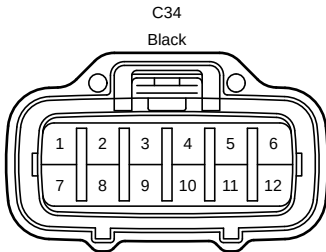


90980-11664

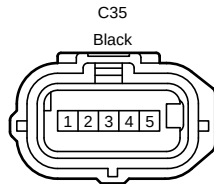


90980-12292

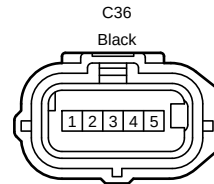


90980-12292

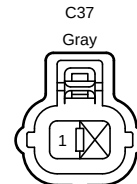


90980-12792

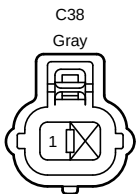


90980-12792

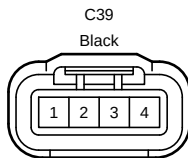


90980-11885

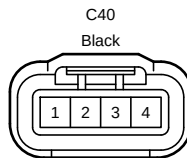


90980-11885

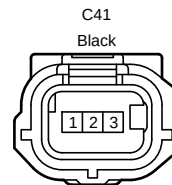


90980-12353

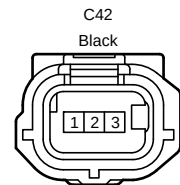


90980-12353

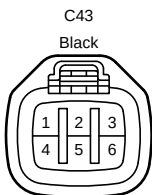

90980-11144

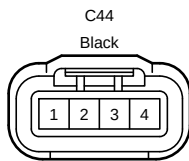

90980-11885

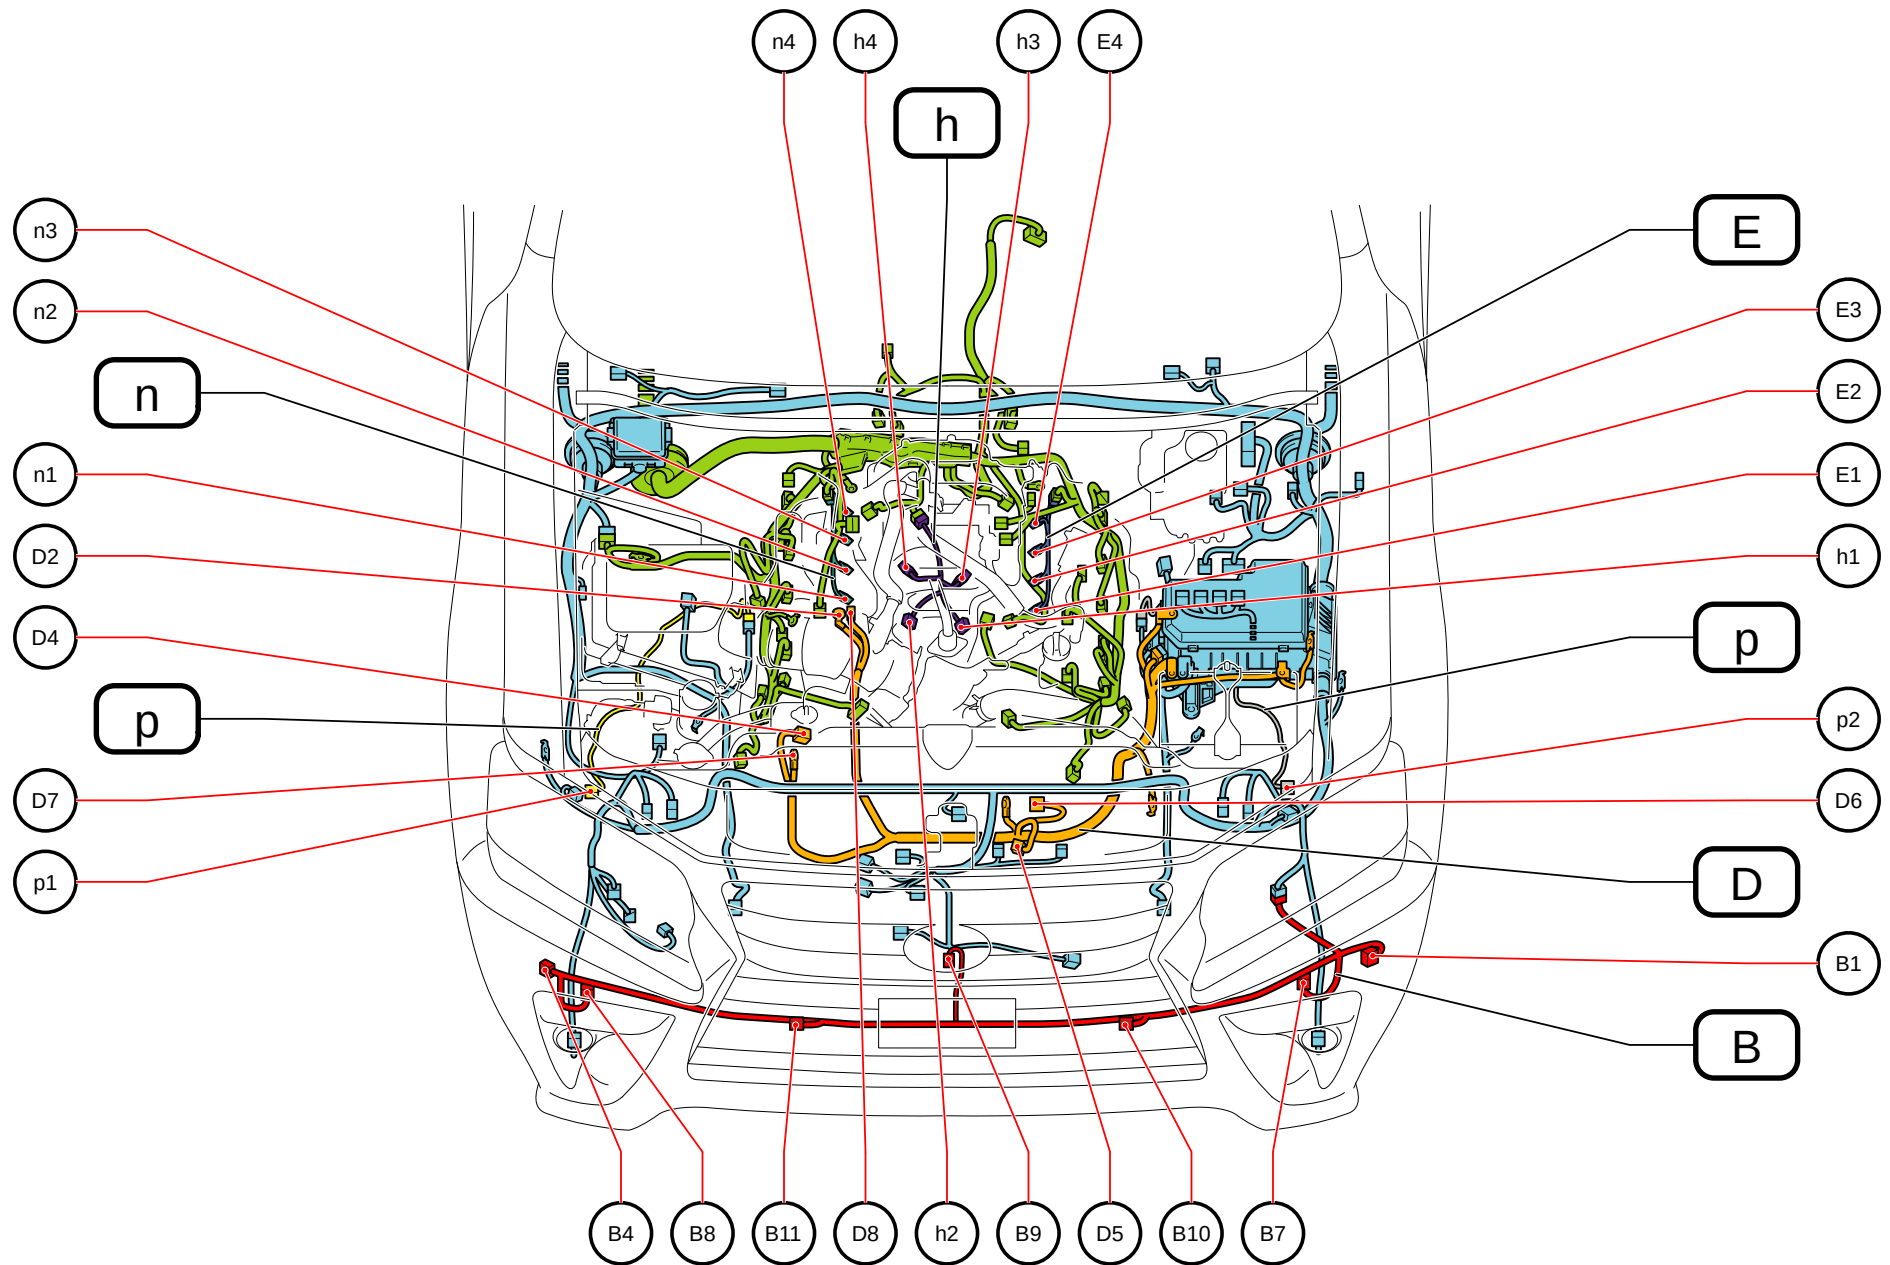

B1 Front No. 1 Ultrasonic Sensor LH
B4 Front No. 1 Ultrasonic Sensor RH
B7 Front Turn Signal Light Assembly LH
B8 Front Turn Signal Light Assembly RH
B9 Front Television Camera Assembly
B10 Front No. 1 Ultrasonic Sensor Center LH
B11 Front No. 1 Ultrasonic Sensor Center RH

D2 Starter Assembly
D4 Generator Assembly
D5 Engine Oil Pressure Switch Assembly
D6 Engine Oil Level Sensor
D7 Generator Assembly
D8 Starter Assembly


E1 Fuel Injector Assembly No. 1
E2 Fuel Injector Assembly No. 3
E3 Fuel Injector Assembly No. 5
E4 Fuel Injector Assembly No. 7


h1 Knock Control Sensor (Bank 1 Sensor 1)
h2 Knock Control Sensor (Bank 2 Sensor 1)
h3 Knock Control Sensor (Bank 1 Sensor 2)
h4 Knock Control Sensor (Bank 2 Sensor 2)

n1 Fuel Injector Assembly No. 2
n2 Fuel Injector Assembly No. 4
n3 Fuel Injector Assembly No. 6
n4 Fuel Injector Assembly No. 8


p1 Front Speed Sensor RH
p2 Front Speed Sensor LH


Position of Parts in Engine Compartment (1UR-FE w/ Heated Windshield Defroster)

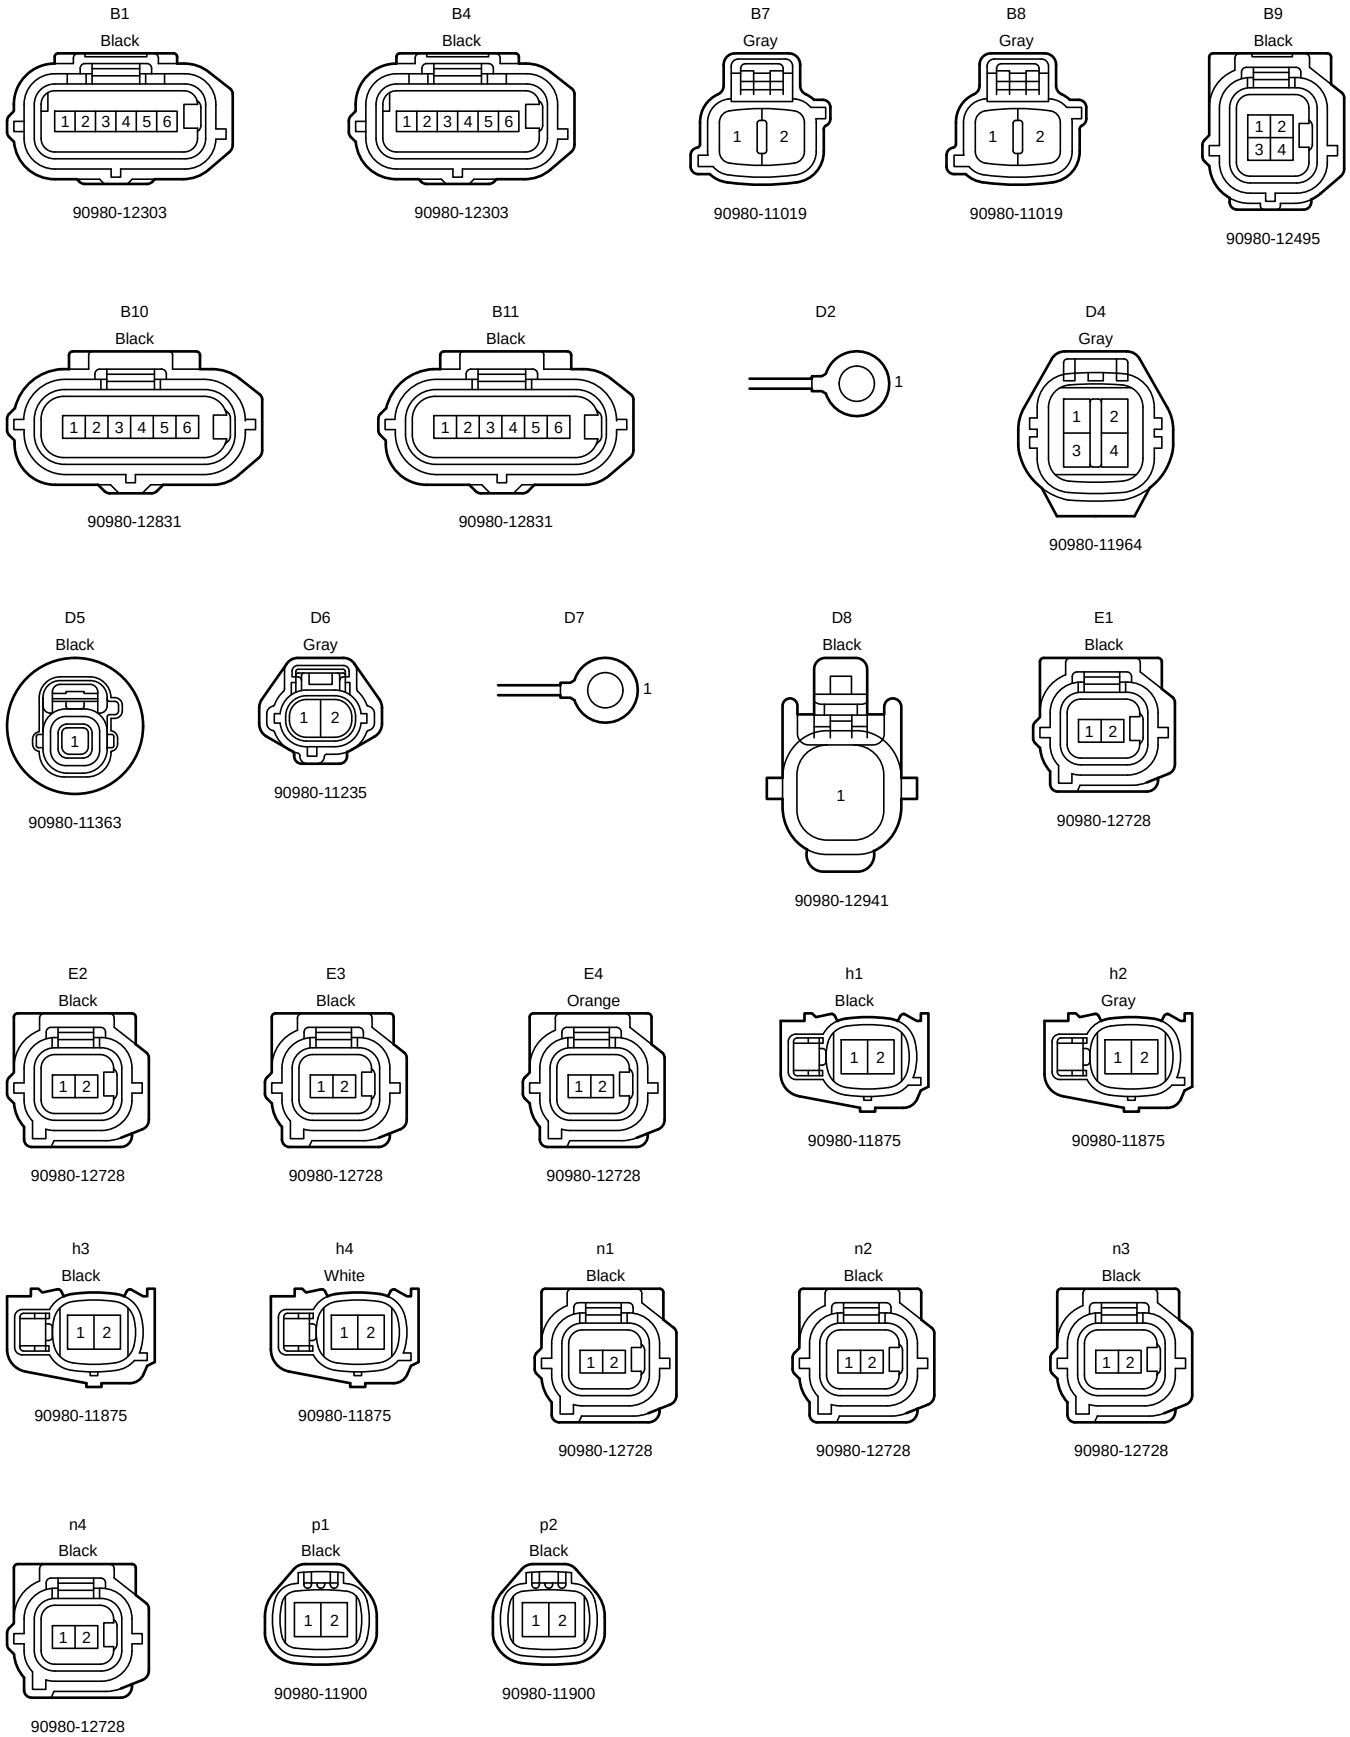


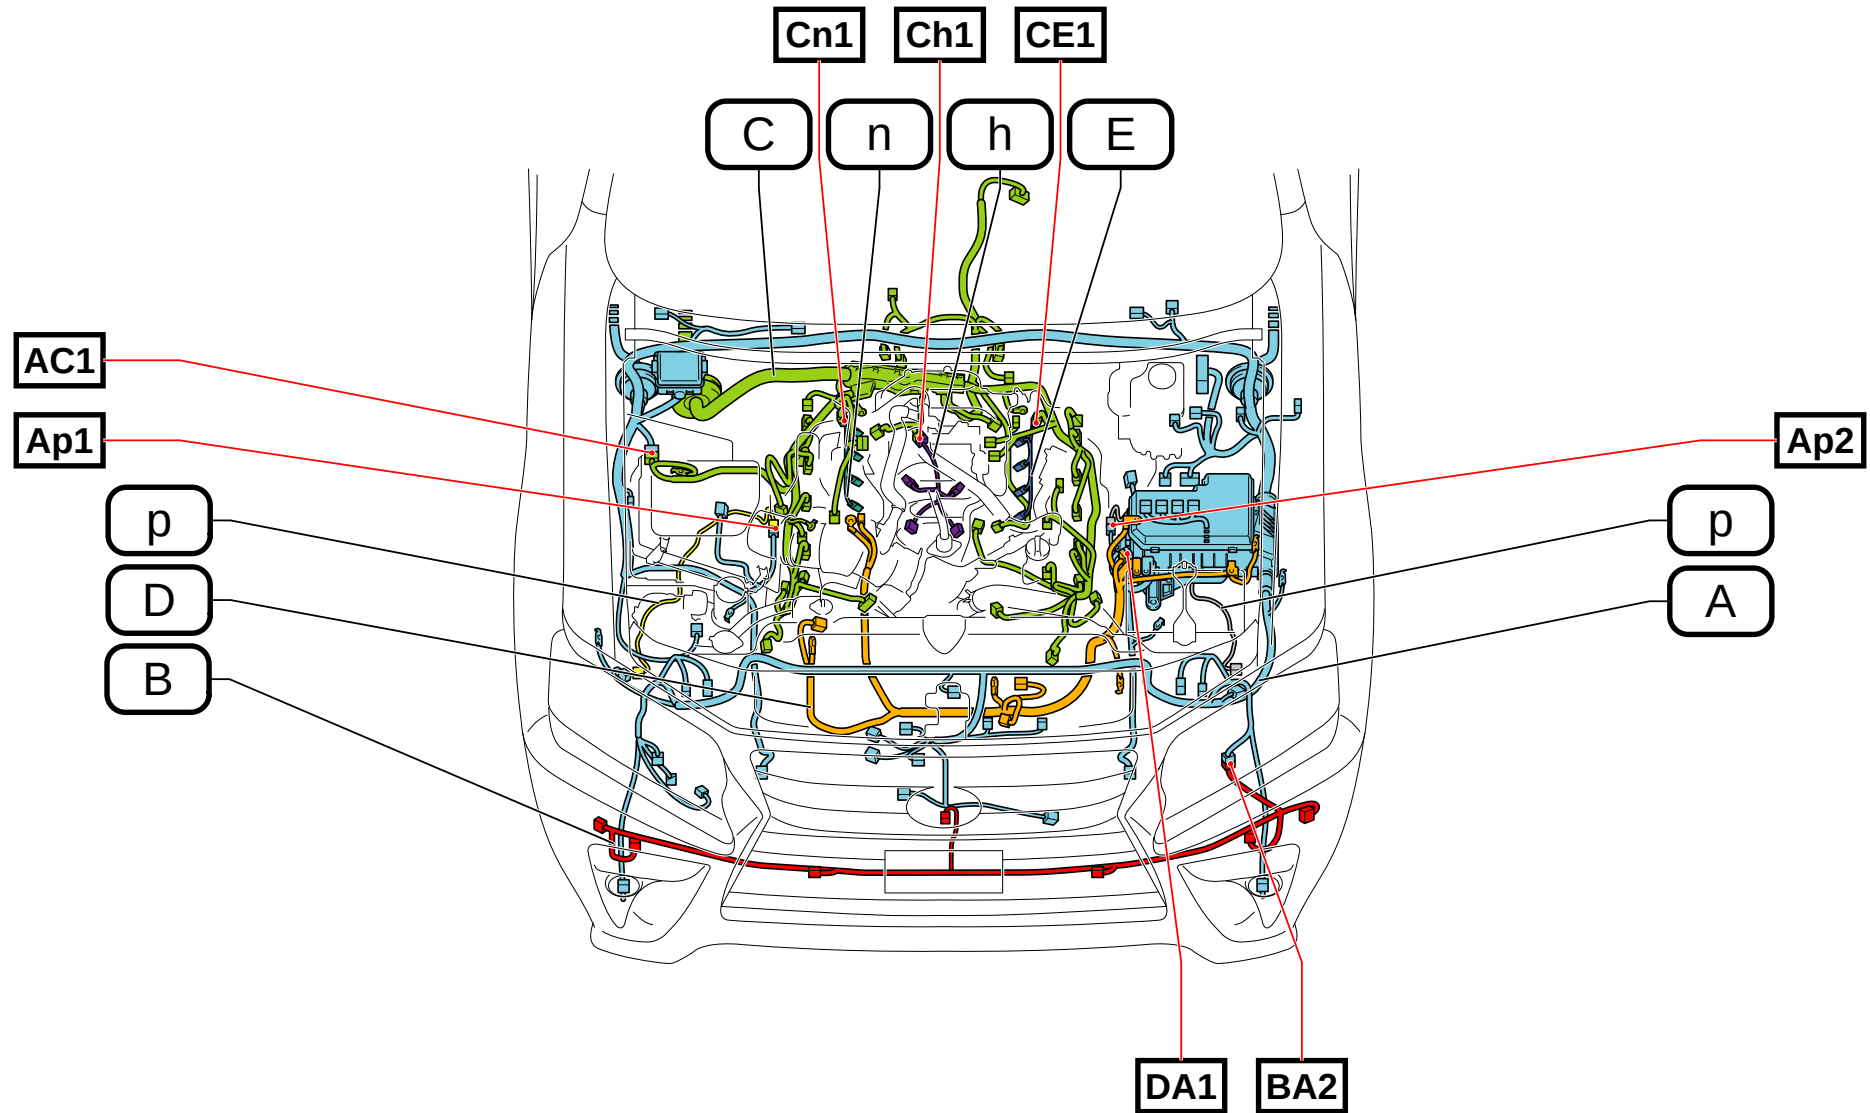

Wire and Wire in Engine Compartment (1UR-FE w/ Heated Windshield Defroster)

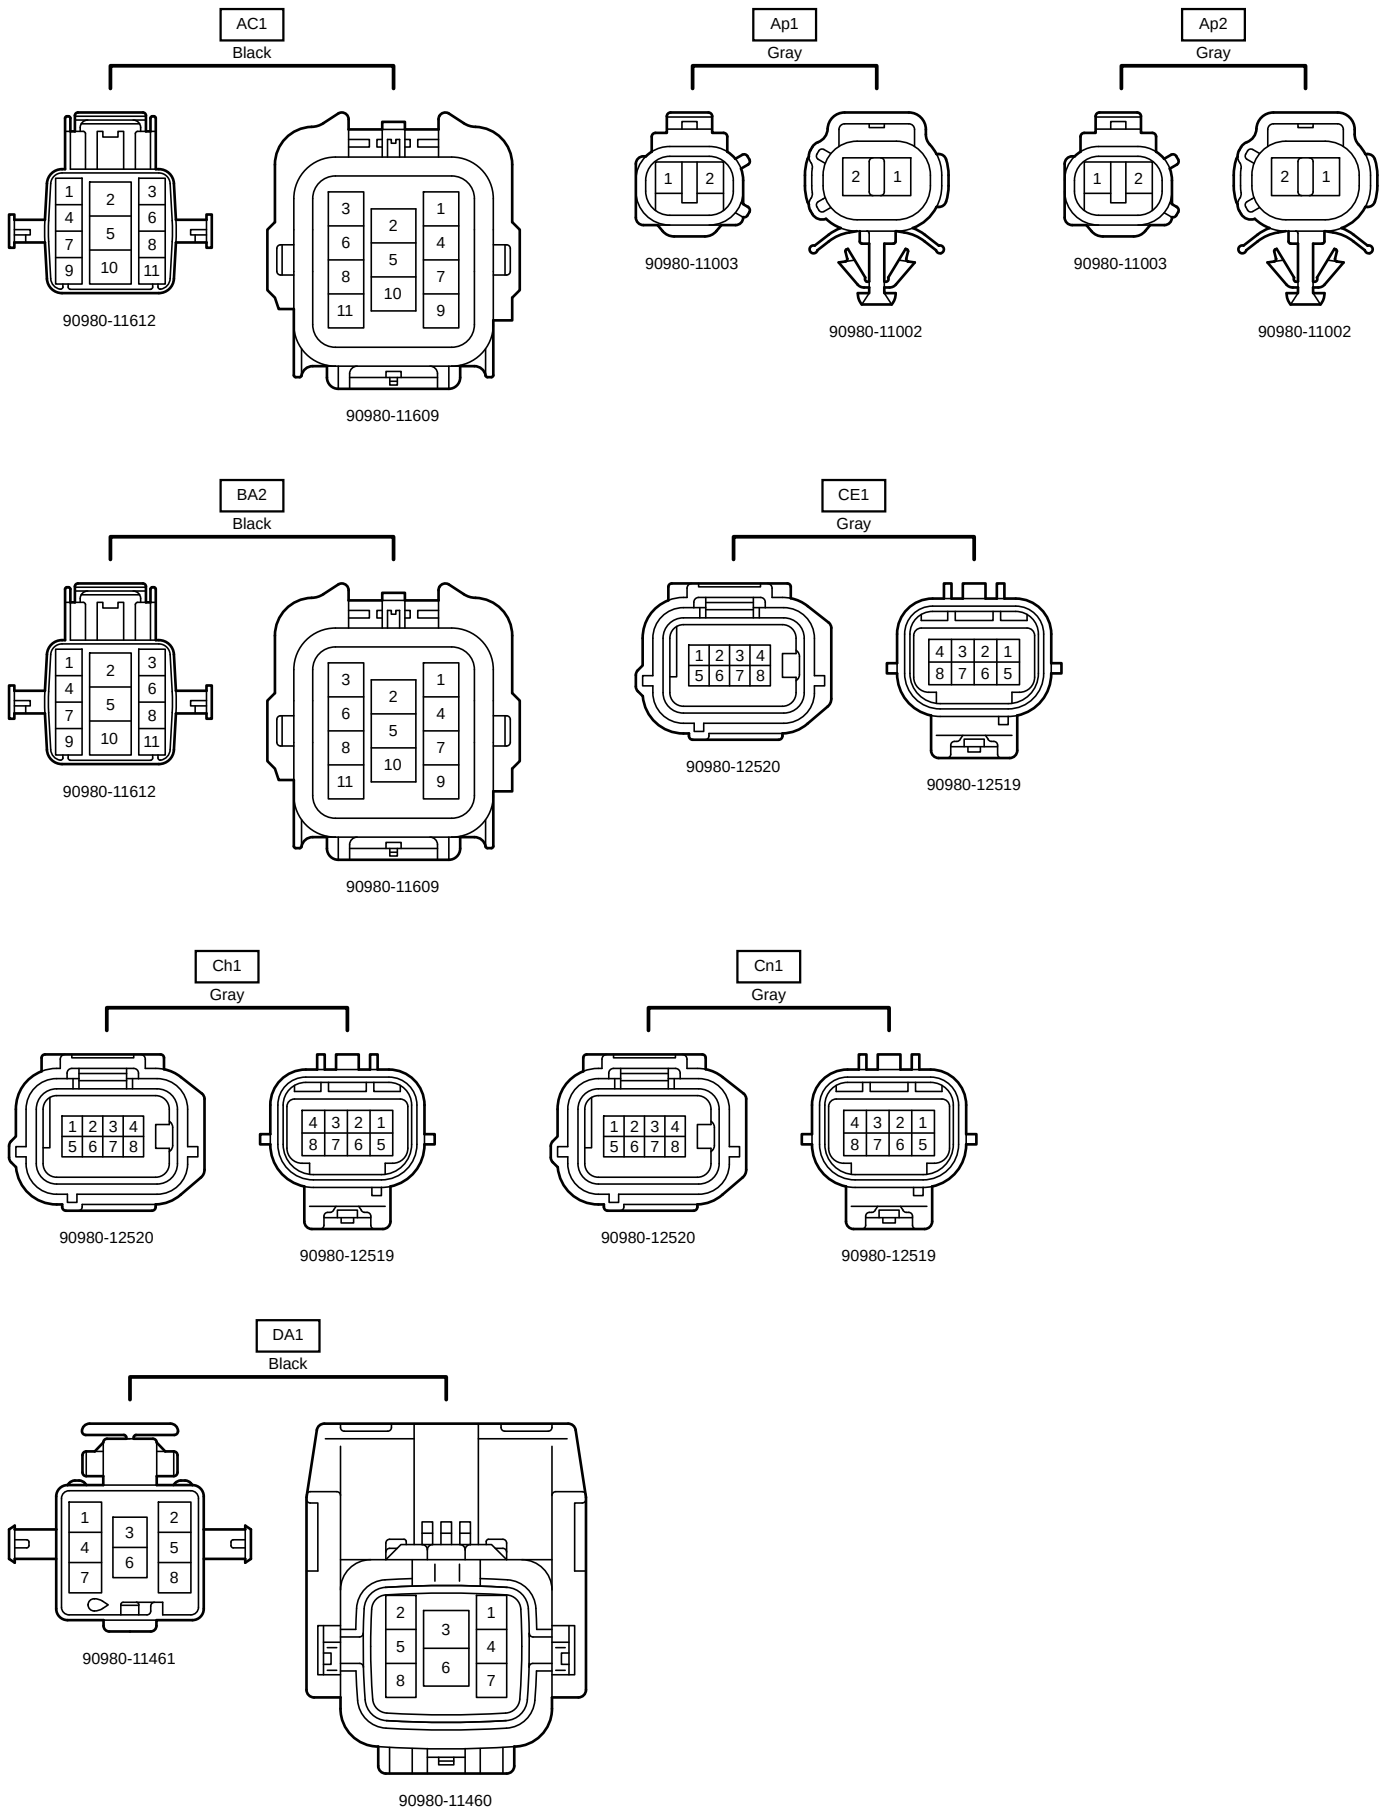


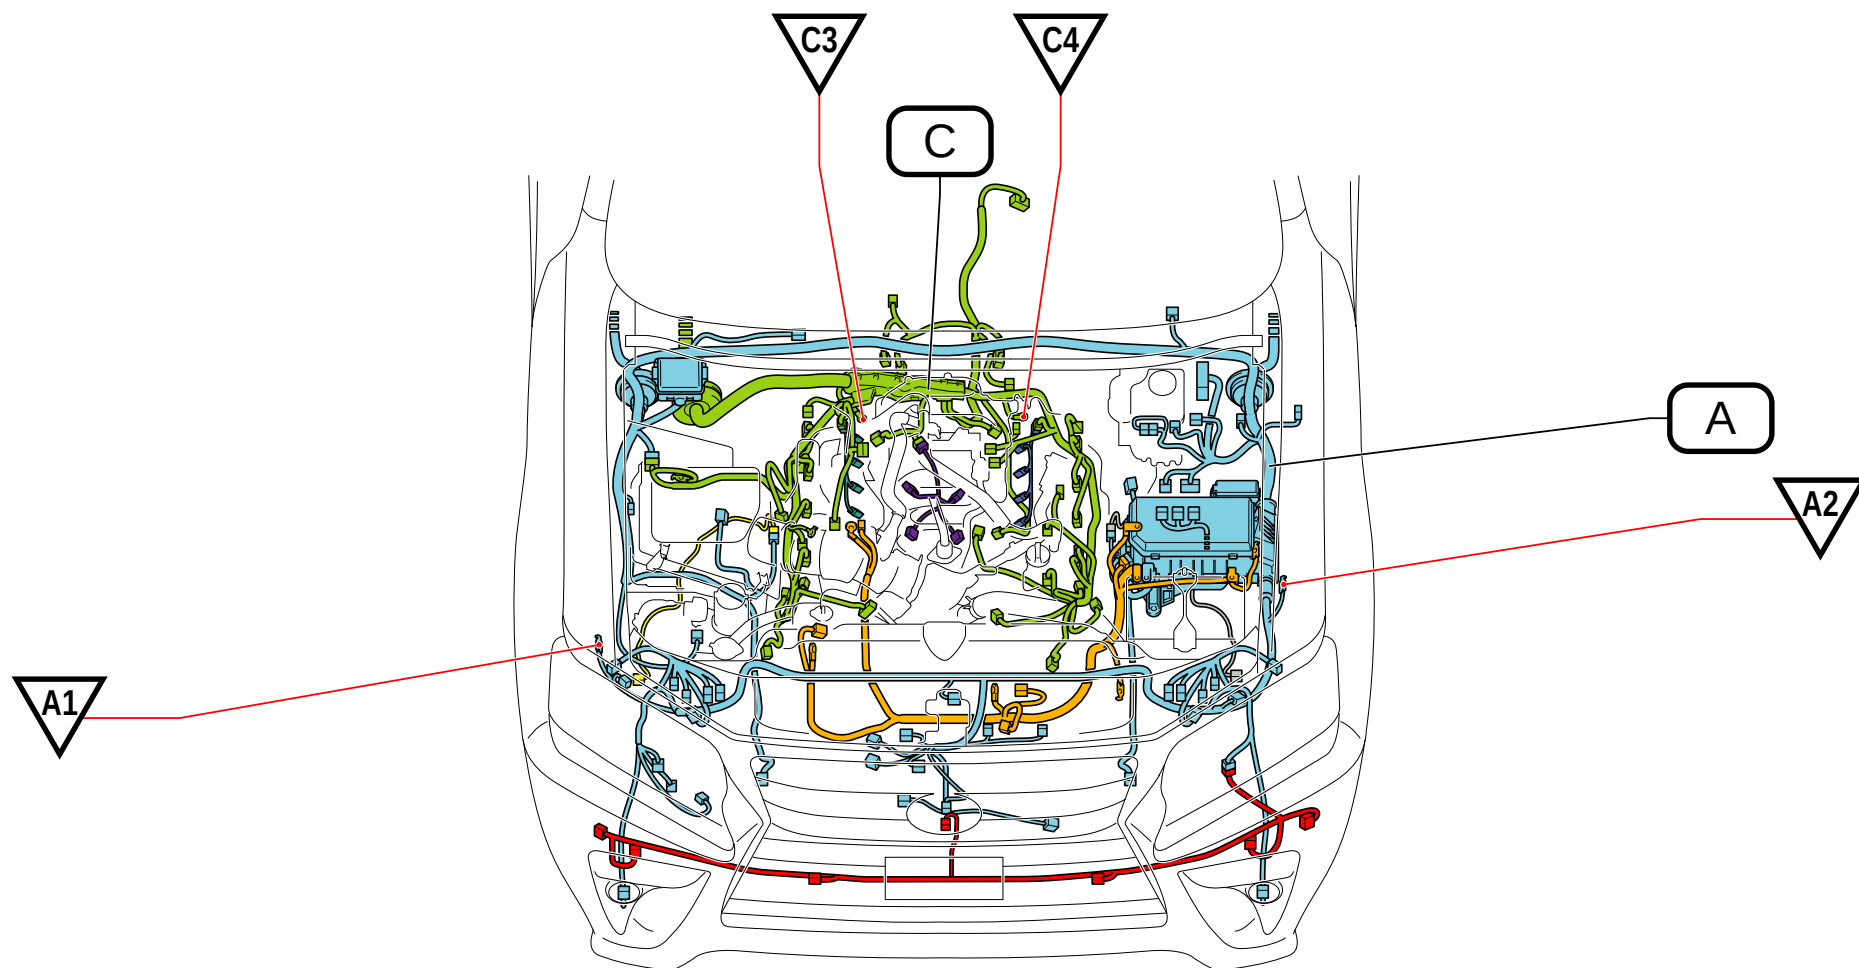

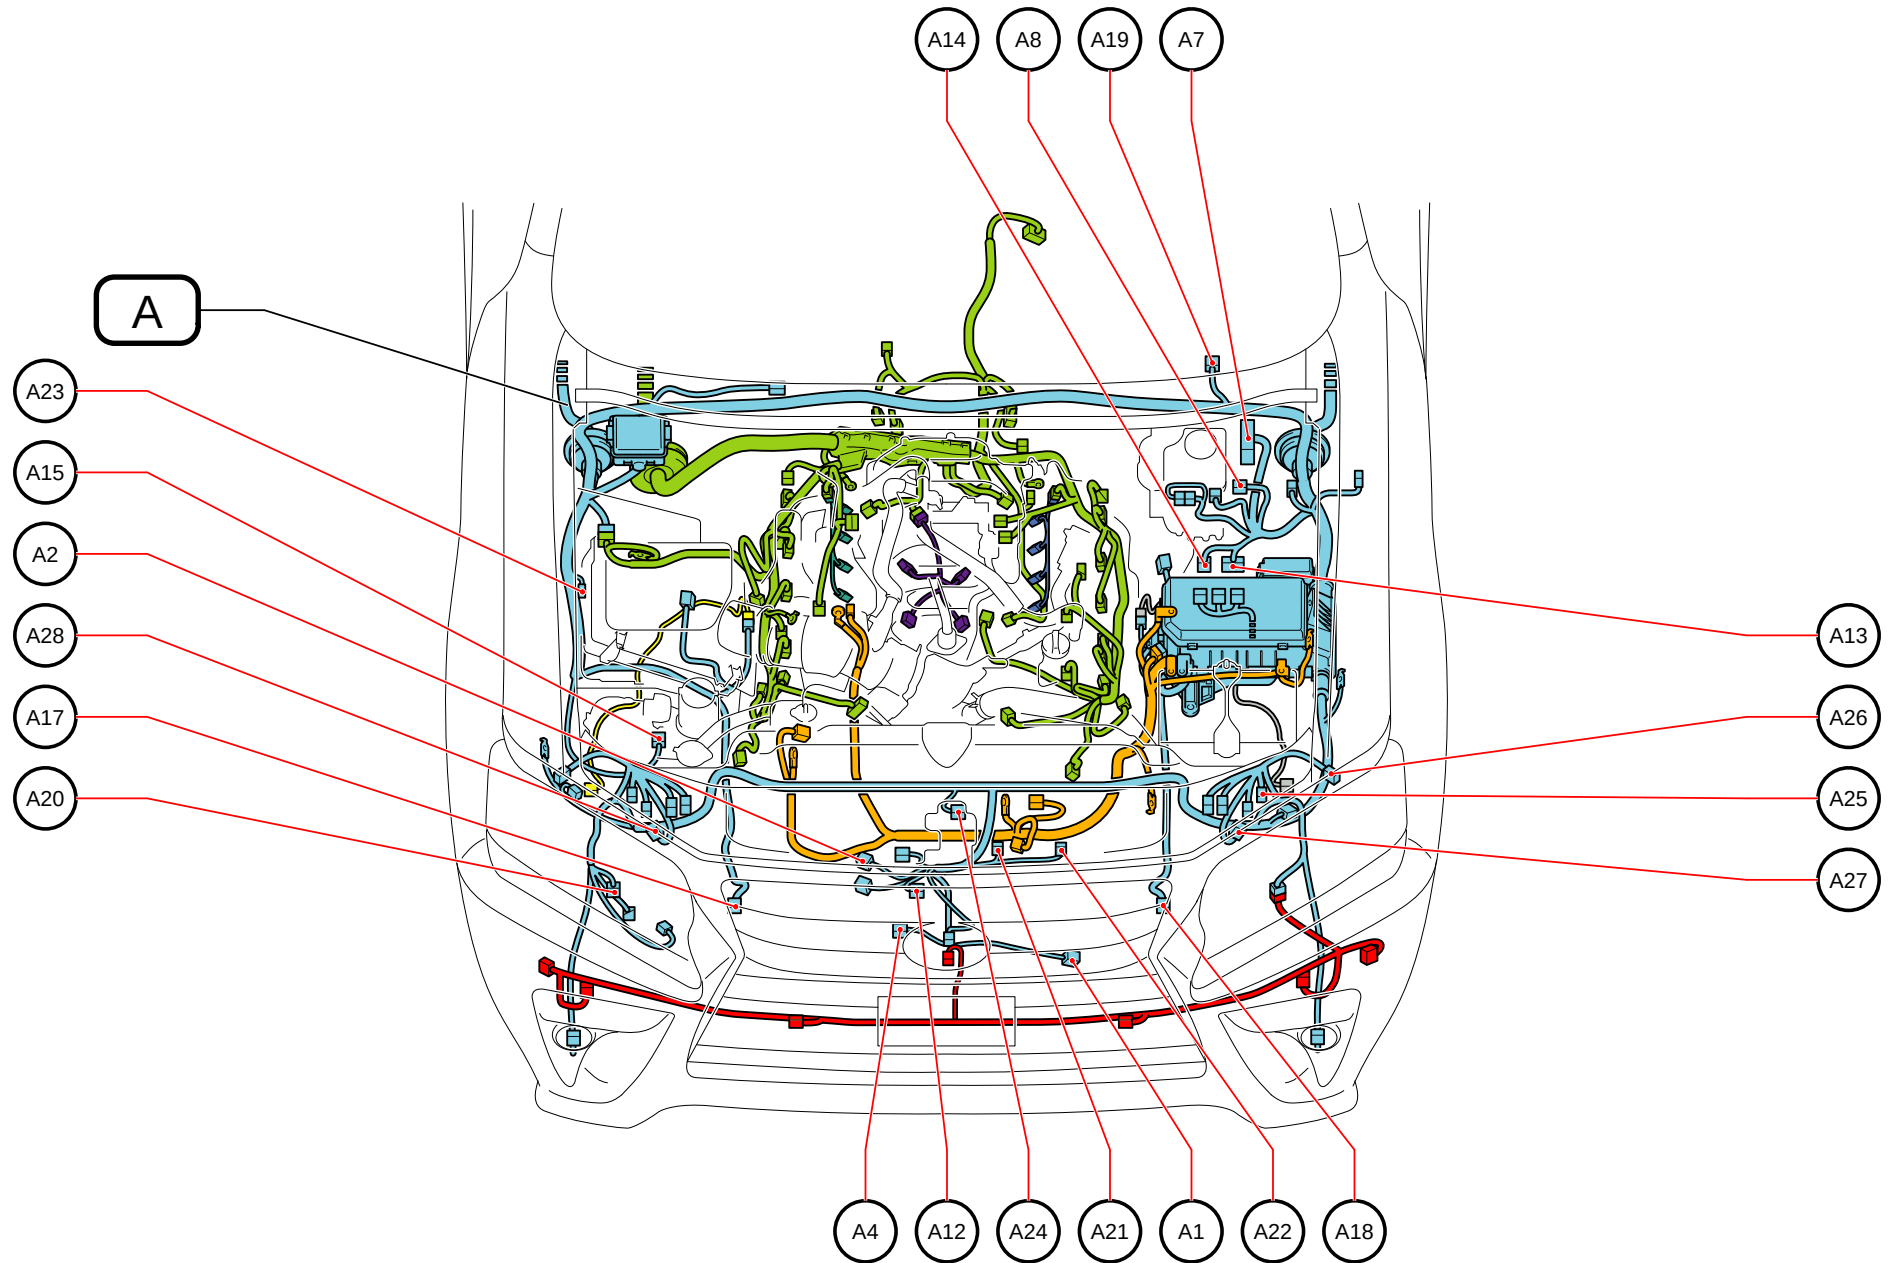


A1	Ambient Temperature Sensor
A2	A/C Pressure Sensor
A4	Condenser Fan Motor (With Shroud Blower Assembly)
A7	Brake Actuator Assembly
A8	Brake Actuator Assembly
A12	Millimeter Wave Radar Sensor Assembly
A13	Air Injection Control Driver
A14	Air Injection Control Driver
A15	Inlet Air Pump
A17	Front Airbag Sensor RH
A18	Front Airbag Sensor LH
A19	Windshield Wiper Motor Assembly
A20	Windshield Washer Motor and Pump Assembly
A21	Low Pitched Horn Assembly
A22	High Pitched Horn Assembly
A23	Security Horn Assembly
A24	Engine Hood Courtesy Switch
A25	Headlight Assembly LH
A26	Headlight Assembly LH
A27	Headlight Assembly LH
A28	Headlight Assembly RH

Position of Parts in Engine Compartment (1UR-FE w/o Heated Windshield Defroster)

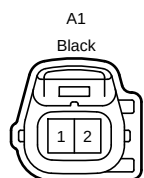


90980-11070

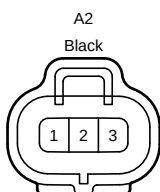


90980-10845




90980-11237

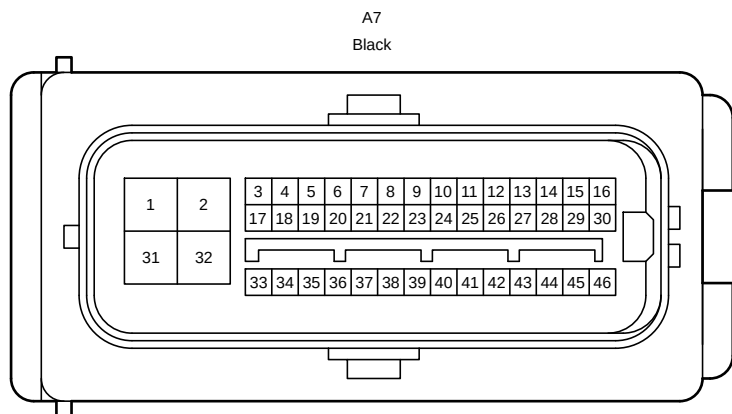


90980-12297

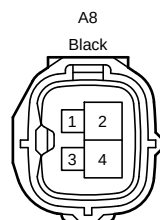


90980-12294

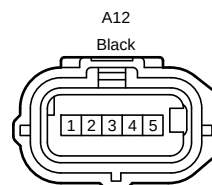


90980-12292

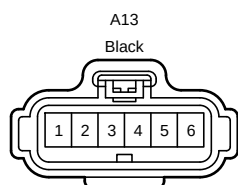


90980-11858

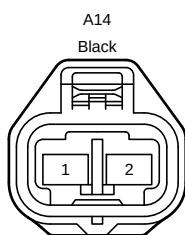


90980-12068

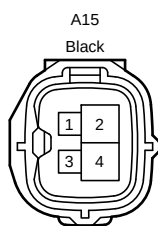


90980-12294

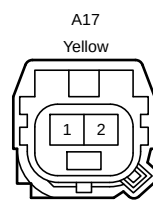


90980-12490

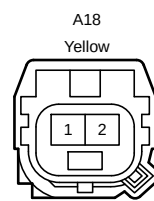

90980-12490

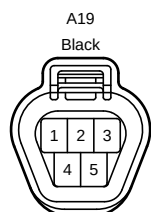

90980-11599

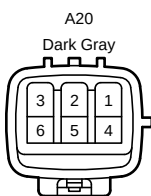


90980-11193




90980-10619



 
90980-10619




90980-10619

 


90980-11178

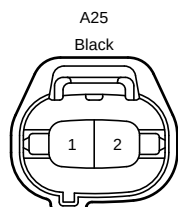


90980-11156

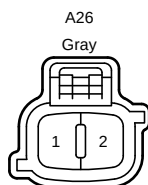


90980-11019

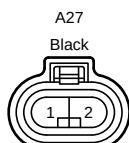

90980-11095

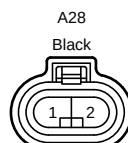


90980-11095

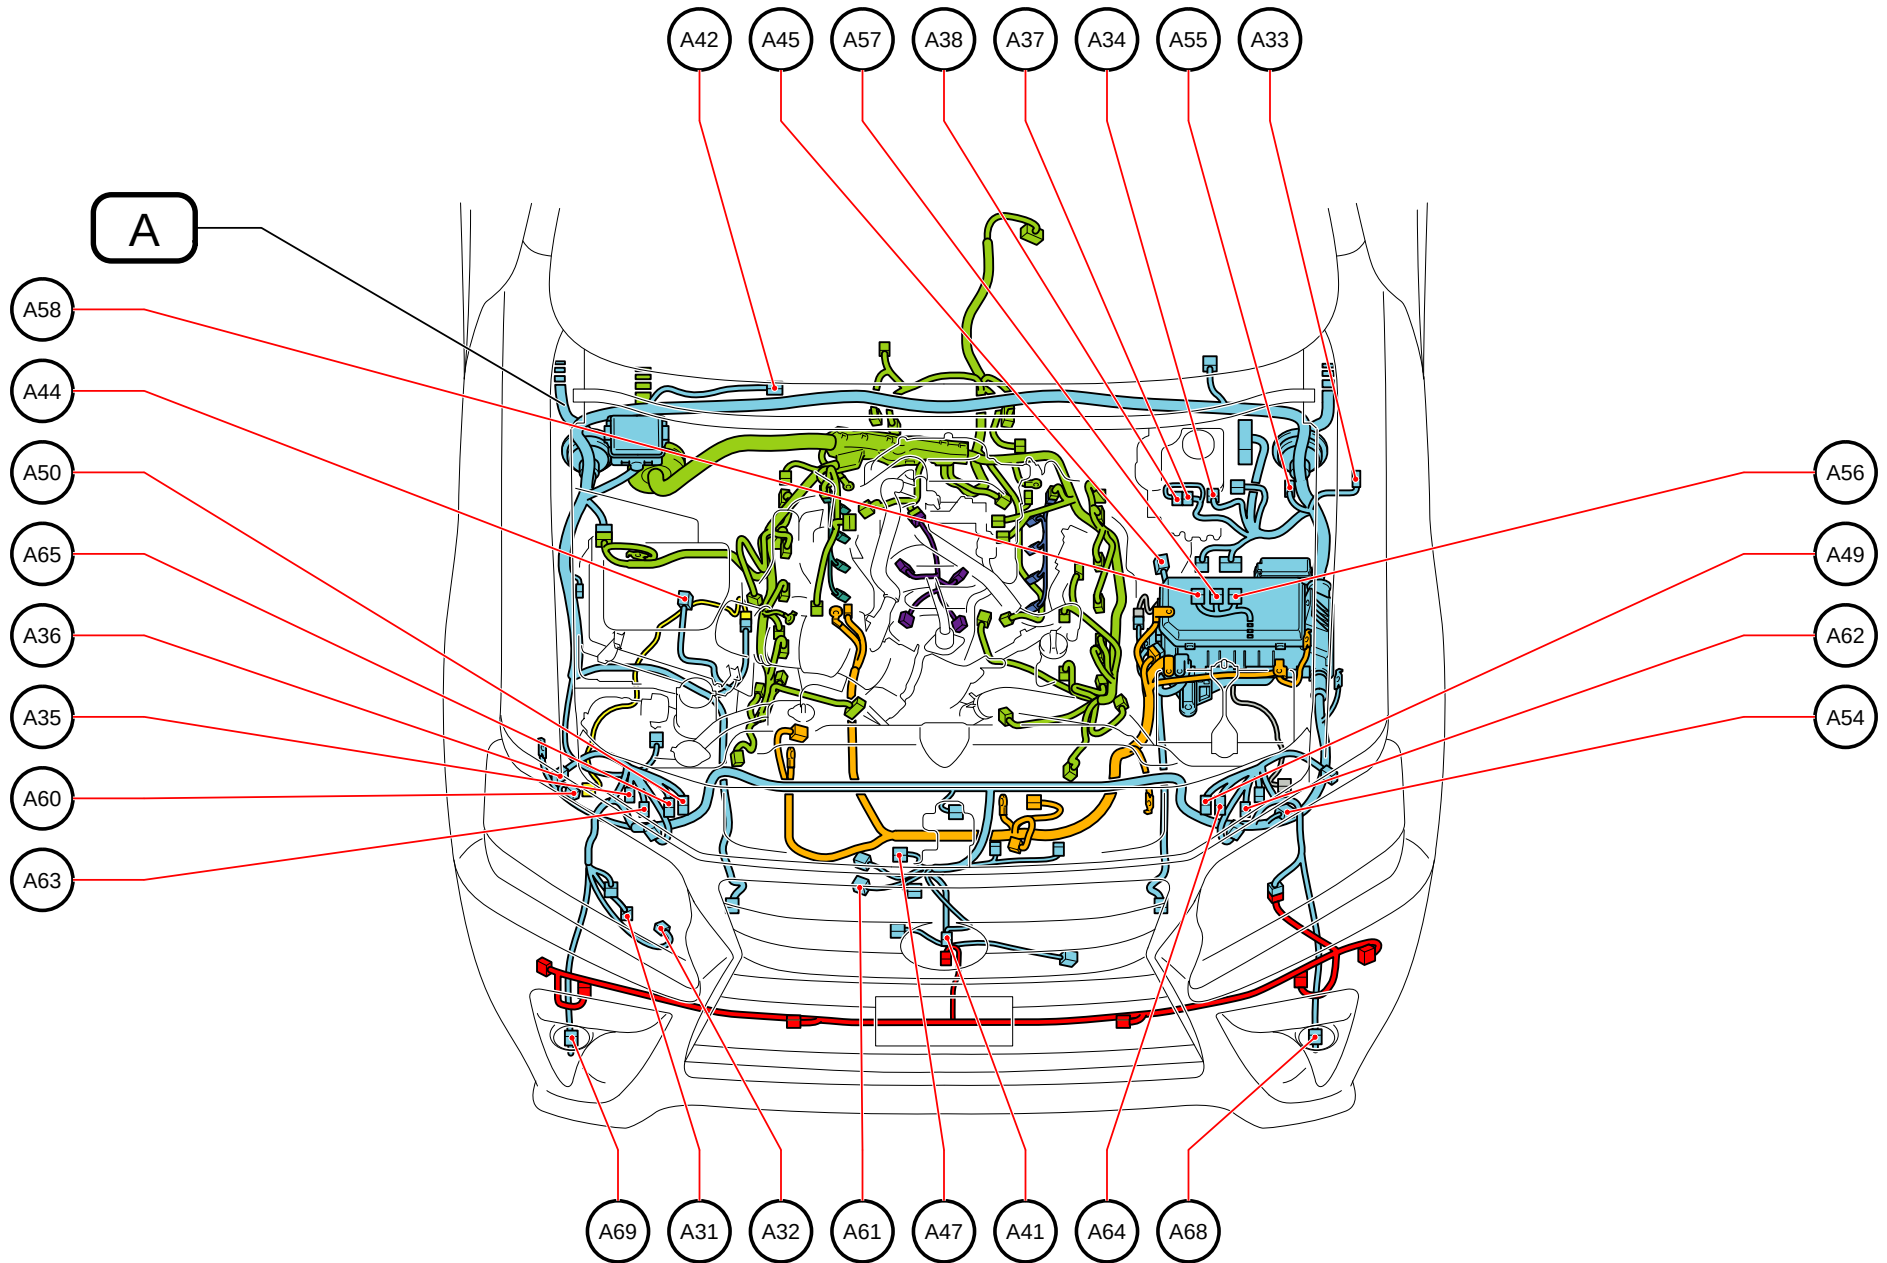


A31	Headlight Cleaner Motor and Pump Assembly
A32	Headlight Cleaner Control Relay
A33	Wireless Door Lock Buzzer
A34	Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Assembly)
A35	Headlight Assembly RH
A36	Headlight Assembly RH
A37	Short Connector
A38	Short Connector
A41	Front Television Camera Assembly
A42	Front Wiper Deicer (Windshield Glass)
A44	Front Absorber Control Actuator RH
A45	Front Absorber Control Actuator LH
A47	Smog Ventilation Sensor
A49	Headlight Assembly LH
A50	Headlight Assembly RH
A54	Junction Connector
A55	Junction Connector
A56	Junction Connector
A57	Junction Connector
A58	Junction Connector
A60	Noise Filter (Condenser Fan)
A61	No. 1 Pressure Switch
A62	Headlight Assembly LH
A63	Headlight Assembly RH
A64	Headlight Assembly LH
A65	Headlight Assembly RH
A68	Fog Light Assembly LH
A69	Fog Light Assembly RH


Position of Parts in Engine Compartment (1UR-FE w/o Heated Windshield Defroster)

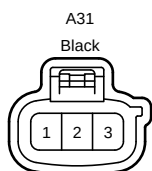


90980-10981

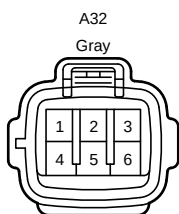


90980-11194

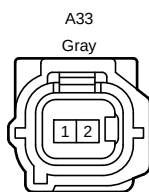


90980-12572

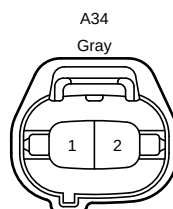

90980-11156

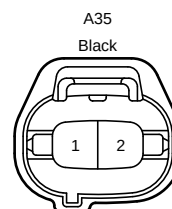


90980-11156

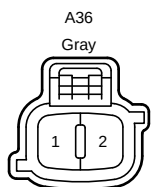


90980-11019




90980-10945

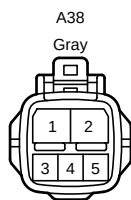


90980-10946

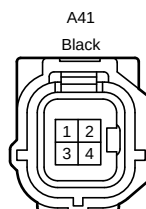


90980-12495

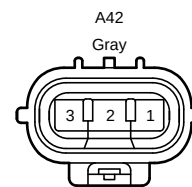


90980-11348

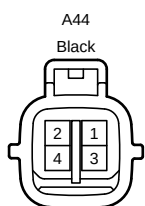


90980-11929

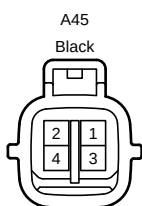


90980-11929

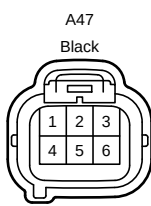


90980-11034

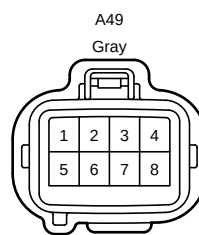


90980-10897

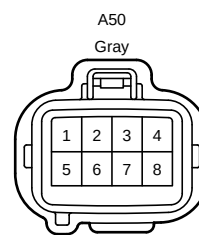


90980-10897

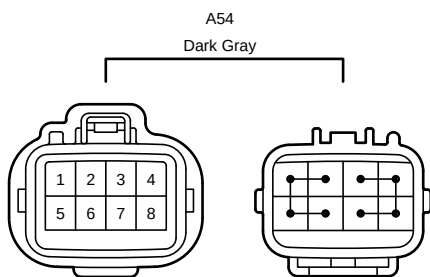


90980-10891

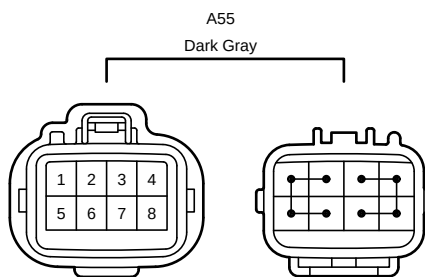

90980-10891








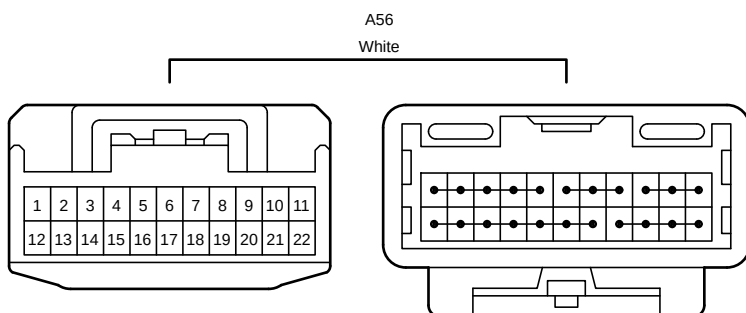



90980-12372

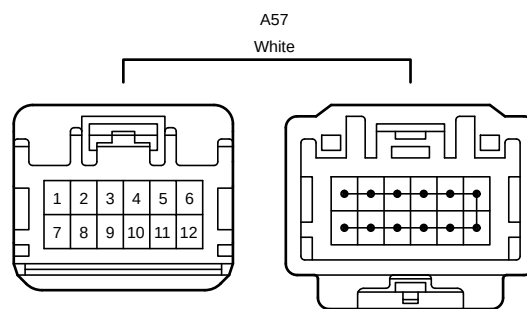

90980-12737


Position of Parts in Engine Compartment (1UR-FE w/o Heated Windshield Defroster)

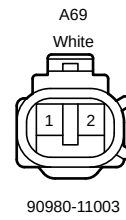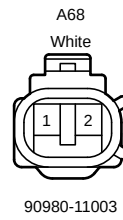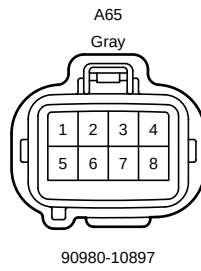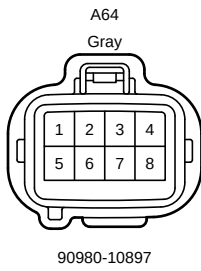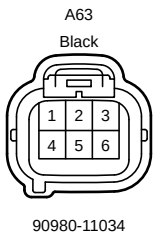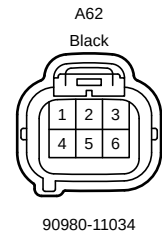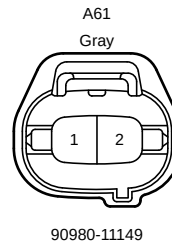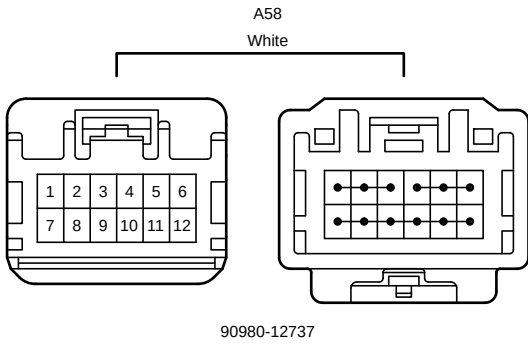

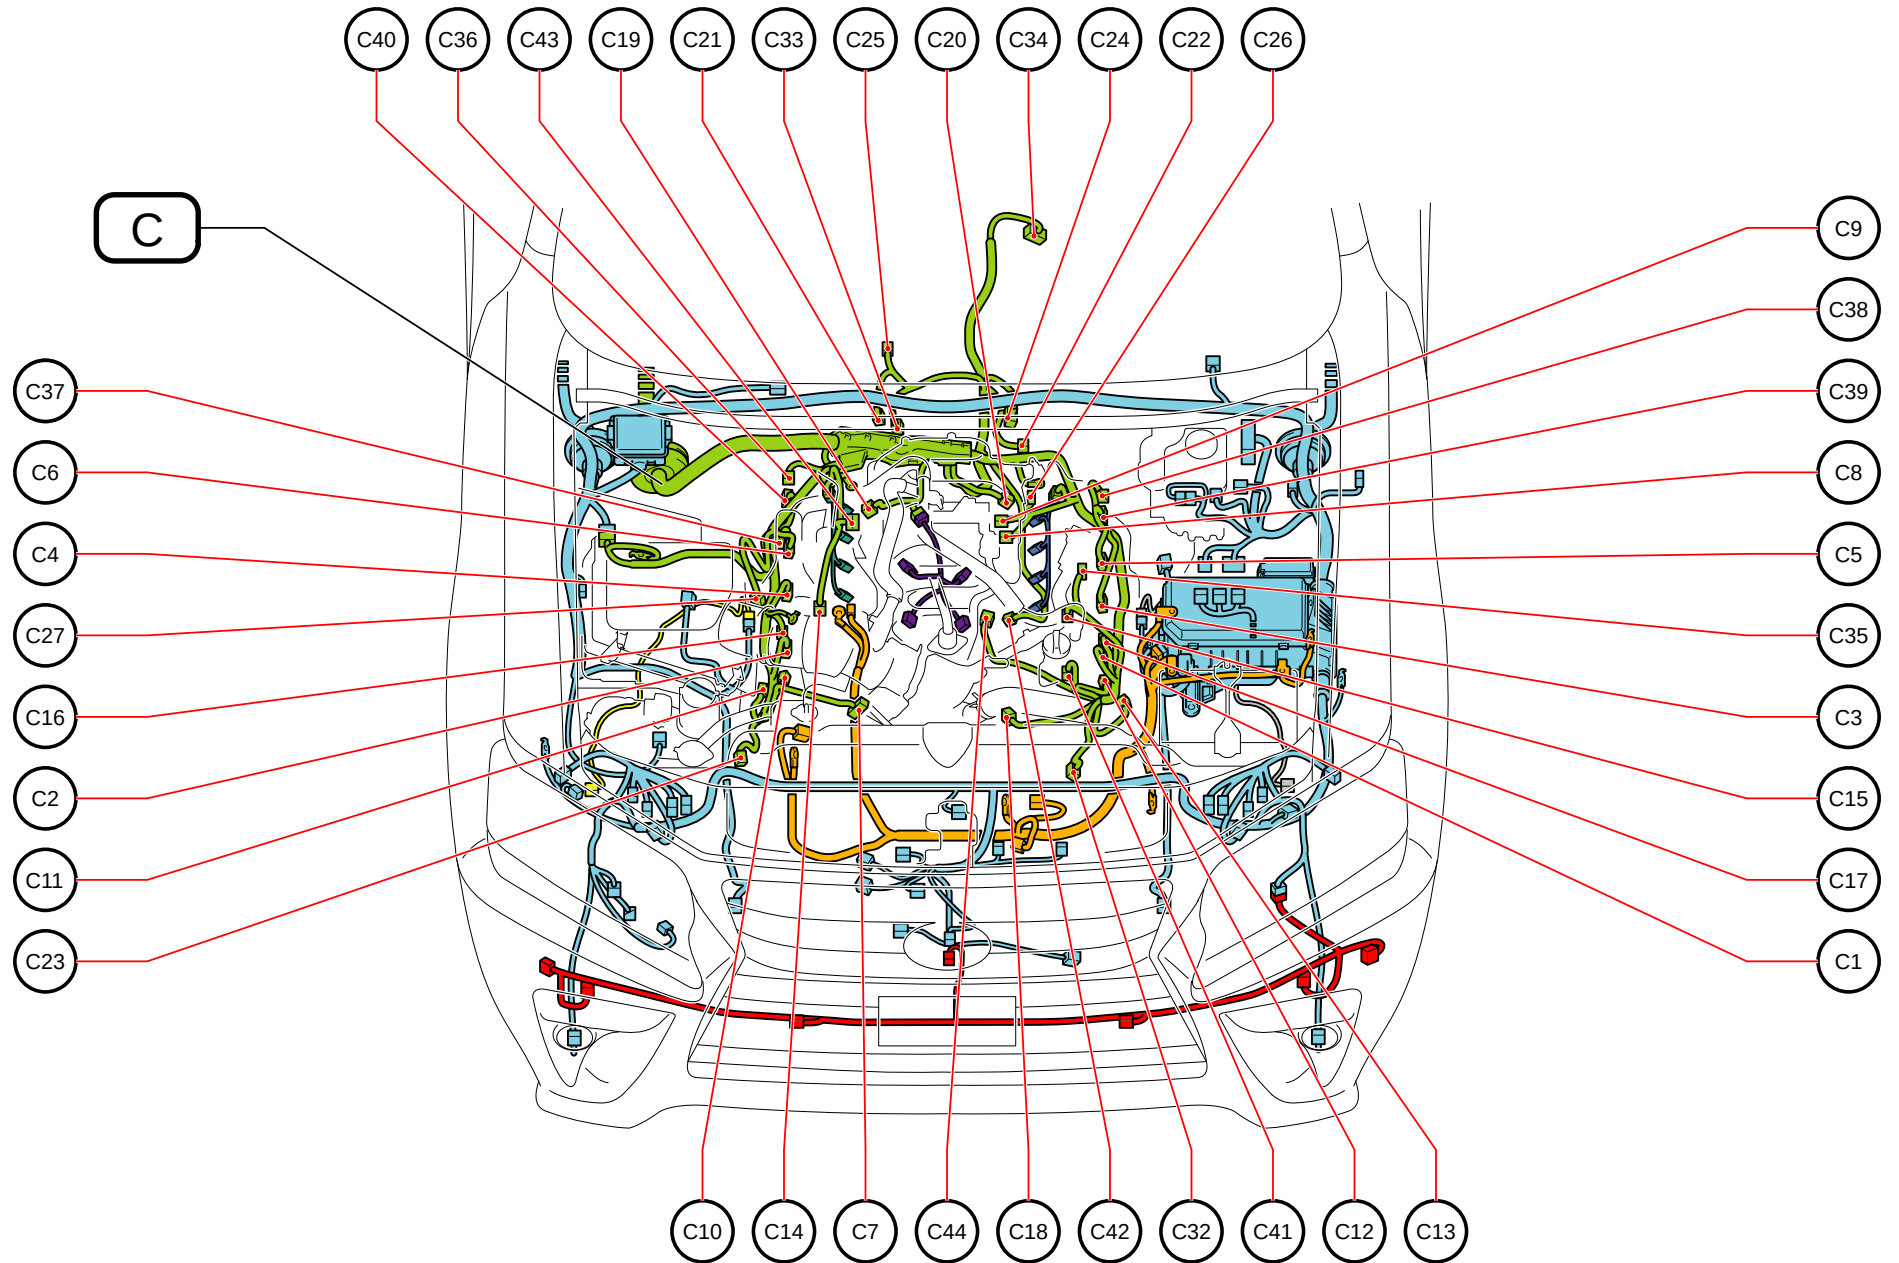


C1	Ignition Coil Assembly No. 1
C2	Ignition Coil Assembly No. 2
C3	Ignition Coil Assembly No. 3
C4	Ignition Coil Assembly No. 4
C5	Ignition Coil Assembly No. 5
C6	Ignition Coil Assembly No. 6
C7	Throttle Body Assembly
C8	Purge VSV
C9	VSV (ACIS)
C10	Camshaft Timing Oil Control Valve (Bank 2 Intake Side)
C11	Camshaft Timing Oil Control Valve (Bank 2 Exhaust Side)
C12	Camshaft Timing Oil Control Valve (Bank 1 Intake Side)
C13	Camshaft Timing Oil Control Valve (Bank 1 Exhaust Side)
C14	VVT Sensor (Bank 2 Intake Side)
C15	VVT Sensor (Bank 1 Intake Side)
C16	VVT Sensor (Bank 2 Exhaust Side)
C17	VVT Sensor (Bank 1 Exhaust Side)
C18	E.F.I. Engine Coolant Temperature Sensor
C19	Air Fuel Ratio Sensor (Bank 2 Sensor 1)
C20	Air Fuel Ratio Sensor (Bank 1 Sensor 1)
C21	Oxygen Sensor (Bank 2 Sensor 2)
C22	Oxygen Sensor (Bank 1 Sensor 2)
C23	Power Steering Oil Pressure Switch
C24	ECT Solenoid
C25	Transmission Revolution Sensor (Counter Gear)
C26	Transmission Revolution Sensor (Turbine)
C27	Intake Air Flow Meter Assembly
C32	Cooler Compressor Assembly
C33	Park/Neutral Position Switch
C34	Transfer Shift Actuator Assembly
C35	Air Pump Assembly (Bank 1)
C36	Air Pump Assembly (Bank 2)
C37	Noise Filter (Ignition RH)
C38	Noise Filter (Ignition LH)
C39	Ignition Coil Assembly No. 7
C40	Ignition Coil Assembly No. 8
C41	Camshaft Position Sensor
C42	Crank Position Sensor
C43	EGR Valve Assembly
C44	Intake Manifold Vacuum Sensor


Position of Parts in Engine Compartment (1UR-FE w/o Heated Windshield Defroster)

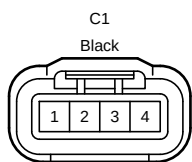


90980-11885

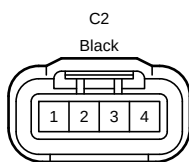


90980-11885

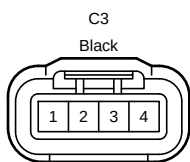


90980-11885

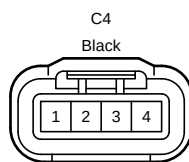


90980-11885

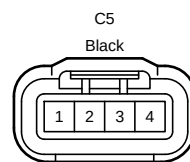


90980-11885

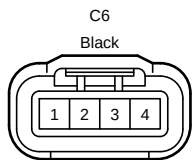


90980-11885

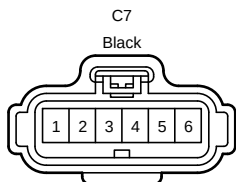


90980-11858

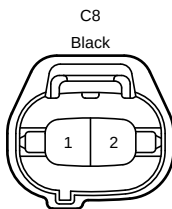

90980-11156

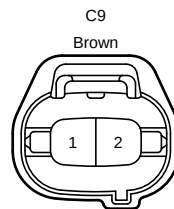

90980-11149

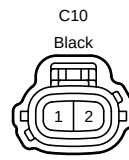

90980-11162




90980-11162




90980-11162




90980-11162

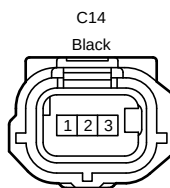


90980-12353

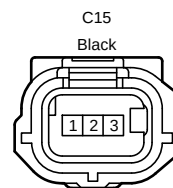

90980-12353

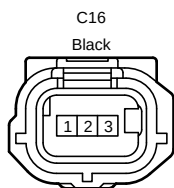

90980-12353

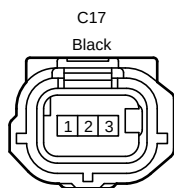

90980-12353



90980-10735



90980-10869




90980-10869




90980-10869




90980-11028

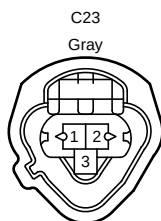

90980-11451

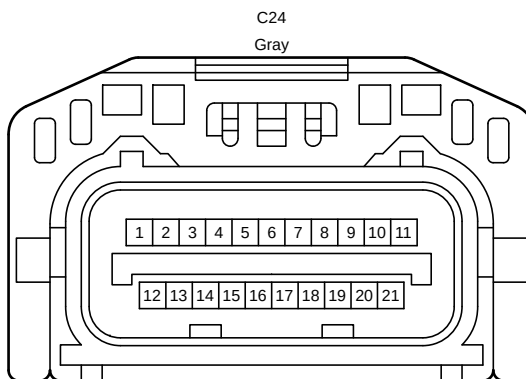


90980-12845

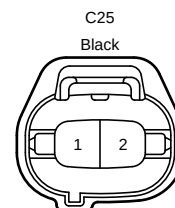


90980-11156


Position of Parts in Engine Compartment (1UR-FE w/o Heated Windshield Defroster)

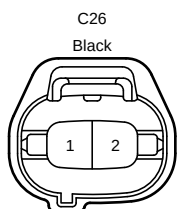


90980-11156

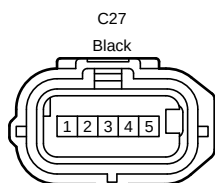


90980-12292

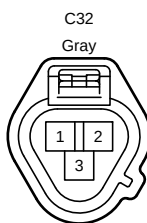


90980-11016

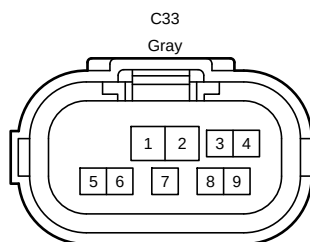


90980-12362

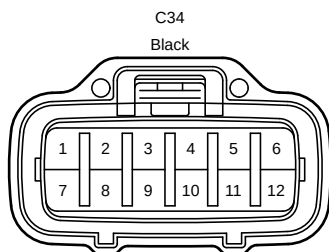


90980-11664

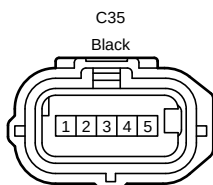


90980-12292

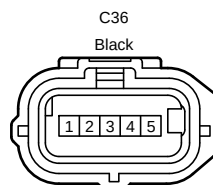


90980-12292

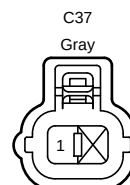


90980-12792

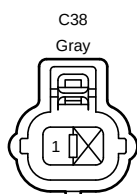


90980-12792

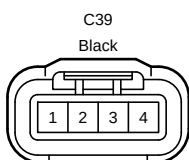


90980-11885

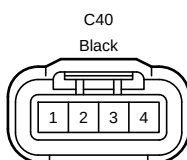


90980-11885

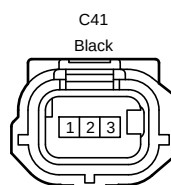


90980-12353

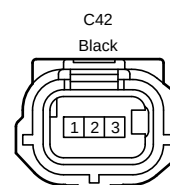


90980-12353

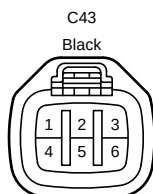

90980-11144

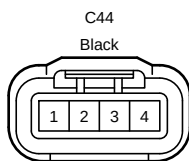

90980-11885

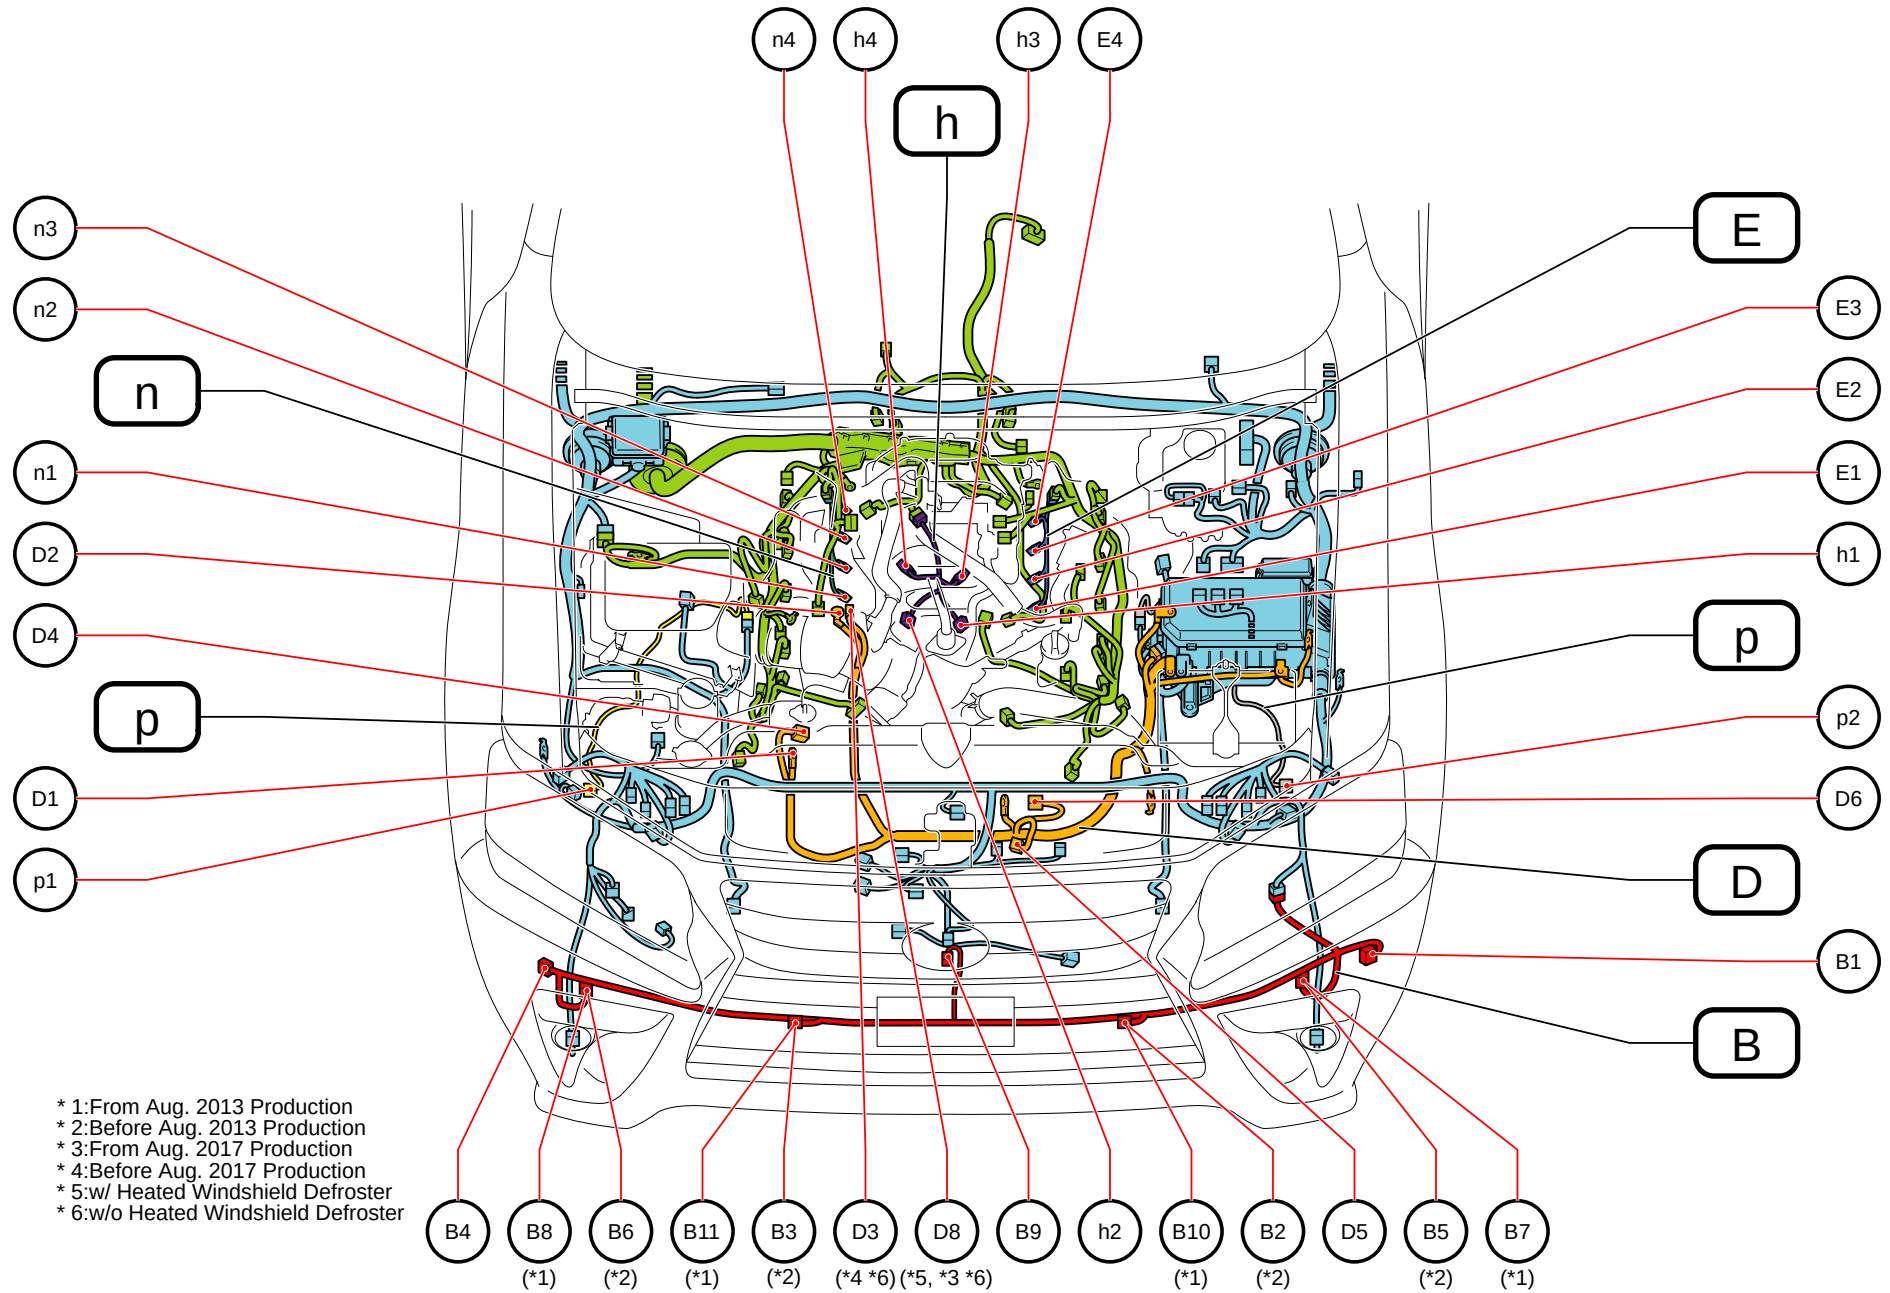

B1 Front No. 1 Ultrasonic Sensor LH
B2 Front No. 1 Ultrasonic Sensor Center LH
B3 Front No. 1 Ultrasonic Sensor Center RH
B4 Front No. 1 Ultrasonic Sensor RH
B5 Fog Light Assembly LH
B6 Fog Light Assembly RH
B7 Front Turn Signal Light Assembly LH
B8 Front Turn Signal Light Assembly RH
B9 Front Television Camera Assembly
B10 Front No. 1 Ultrasonic Sensor Center LH
B11 Front No. 1 Ultrasonic Sensor Center RH

D1 Generator Assembly
D2 Starter Assembly
D3 Starter Assembly
D4 Generator Assembly
D5 Engine Oil Pressure Switch Assembly
D6 Engine Oil Level Sensor
D8 Starter Assembly


E1 Fuel Injector Assembly No. 1
E2 Fuel Injector Assembly No. 3
E3 Fuel Injector Assembly No. 5
E4 Fuel Injector Assembly No. 7

h1 Knock Control Sensor (Bank 1 Sensor 1)
h2 Knock Control Sensor (Bank 2 Sensor 1)
h3 Knock Control Sensor (Bank 1 Sensor 2)
h4 Knock Control Sensor (Bank 2 Sensor 2)


n1 Fuel Injector Assembly No. 2
n2 Fuel Injector Assembly No. 4
n3 Fuel Injector Assembly No. 6
n4 Fuel Injector Assembly No. 8

p1 Front Speed Sensor RH
p2 Front Speed Sensor LH


Position of Parts in Engine Compartment (1UR-FE w/o Heated Windshield Defroster)

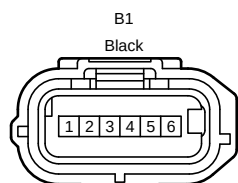


90980-12303

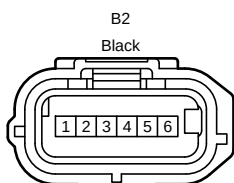


90980-12303

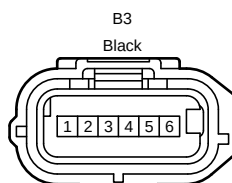


90980-12303

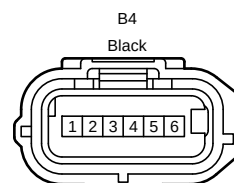


90980-12303

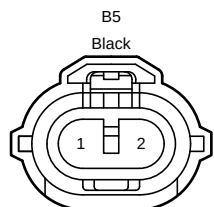


82824-60460

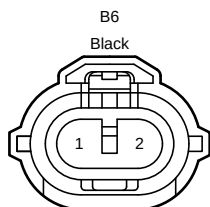


82824-60460

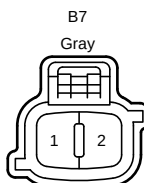


90980-11019

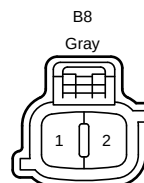


90980-11019

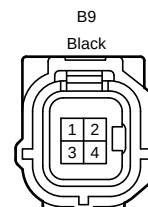




90980-12495

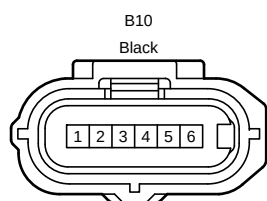


90980-12831

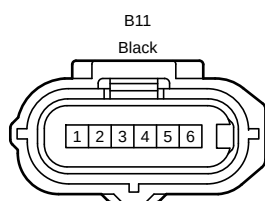


90980-12831

 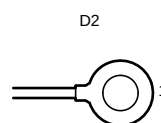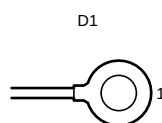


90980-11400

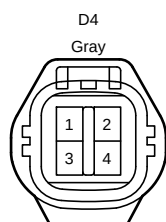


90980-11964

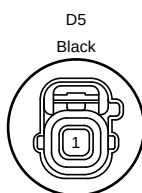


90980-11363

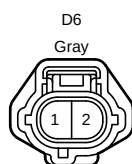


90980-11235

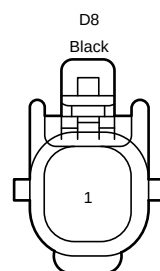


90980-12941

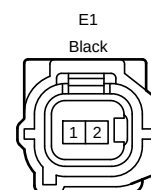


90980-12728

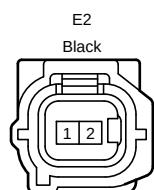


90980-12728

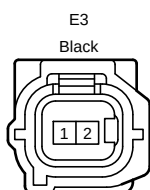


90980-12728

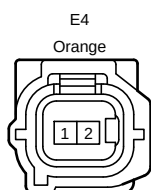


90980-12728

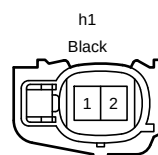


90980-11875

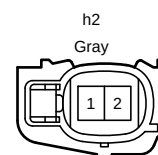


90980-11875

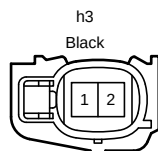


90980-11875

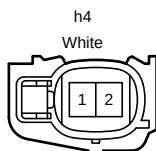


90980-11875

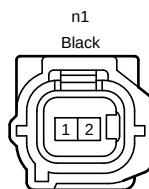

90980-12728



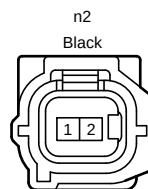



90980-12728

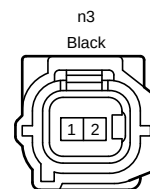


90980-12728


Position of Parts in Engine Compartment (1UR-FE w/o Heated Windshield Defroster)

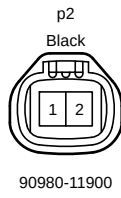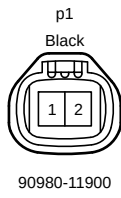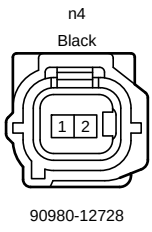

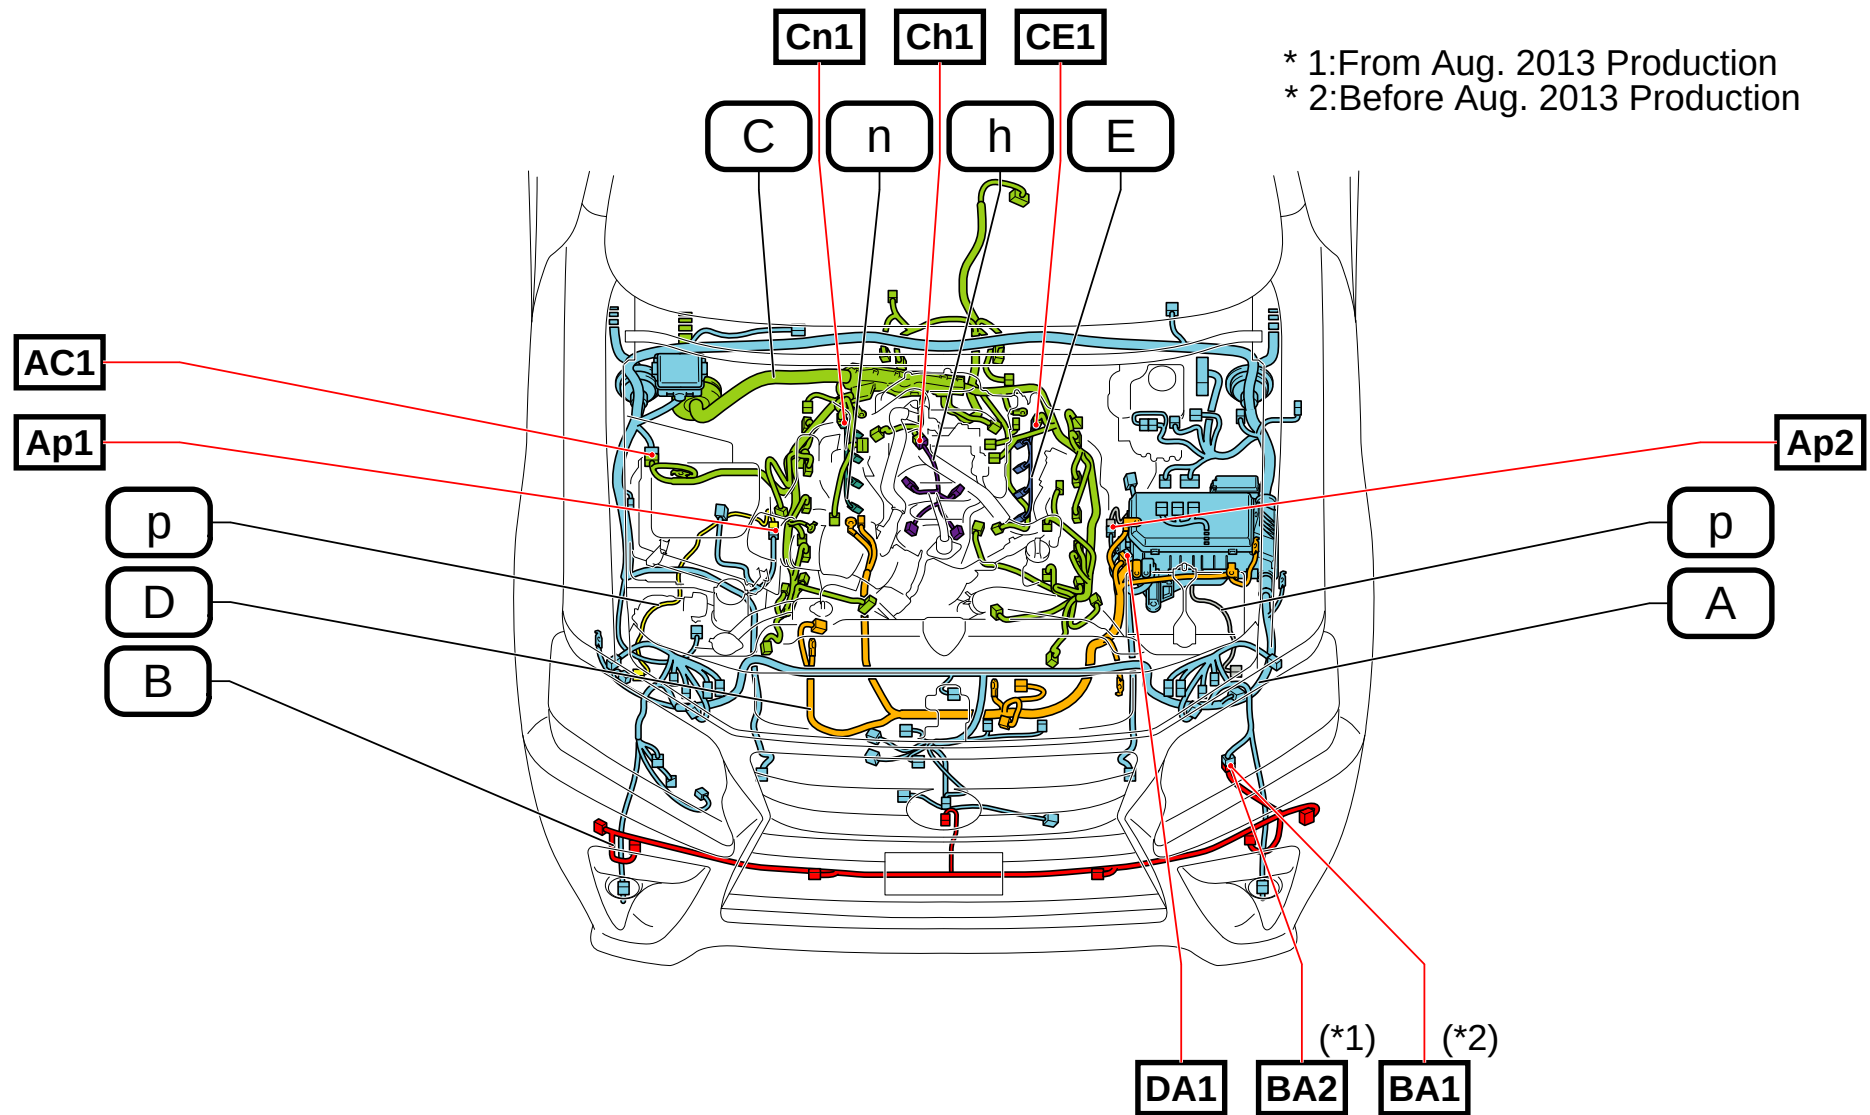


Wire and Wire in Engine Compartment (1UR-FE w/o Heated Windshield Defroster)

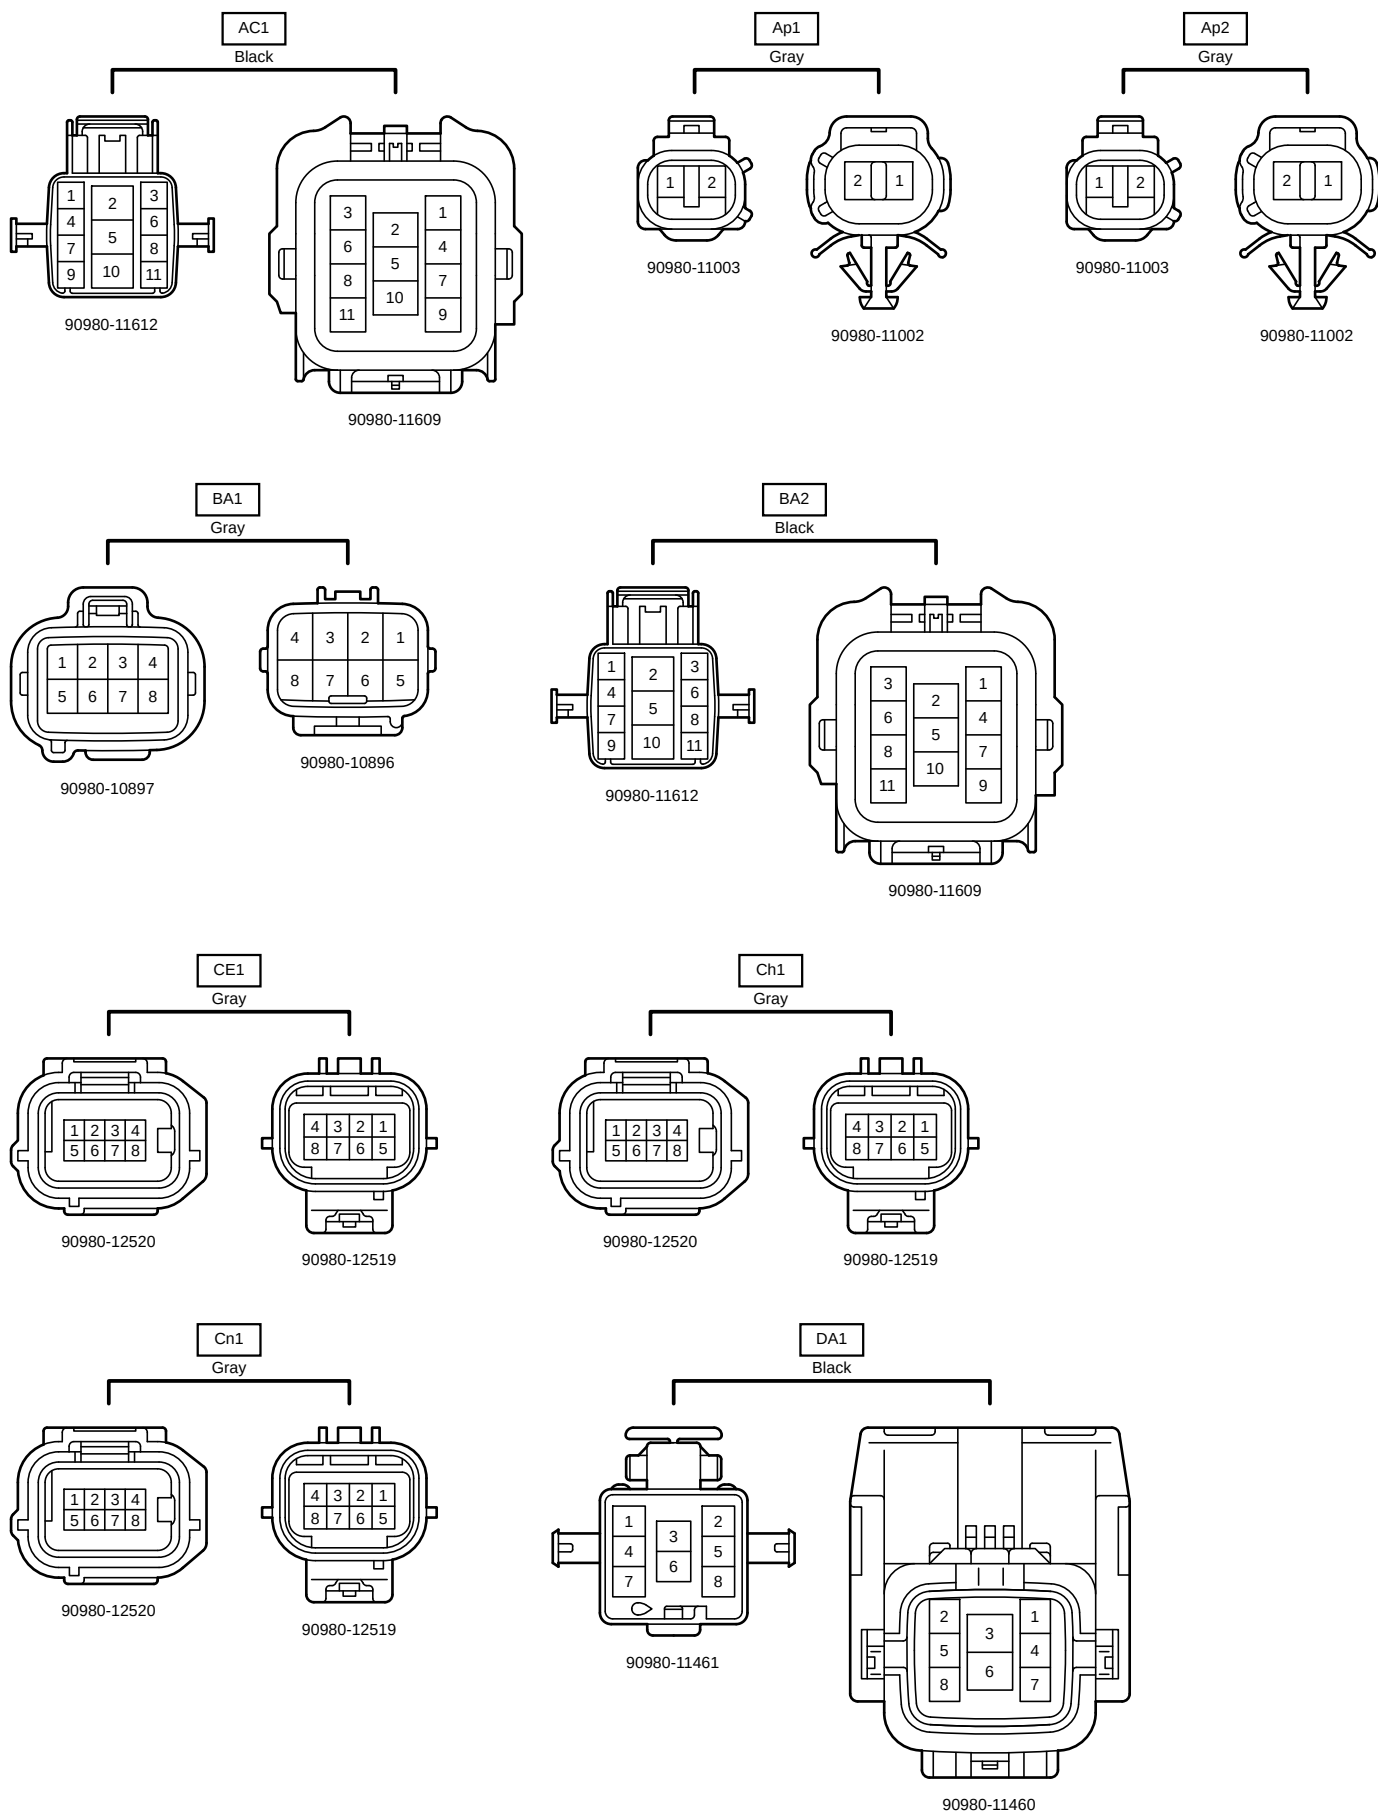

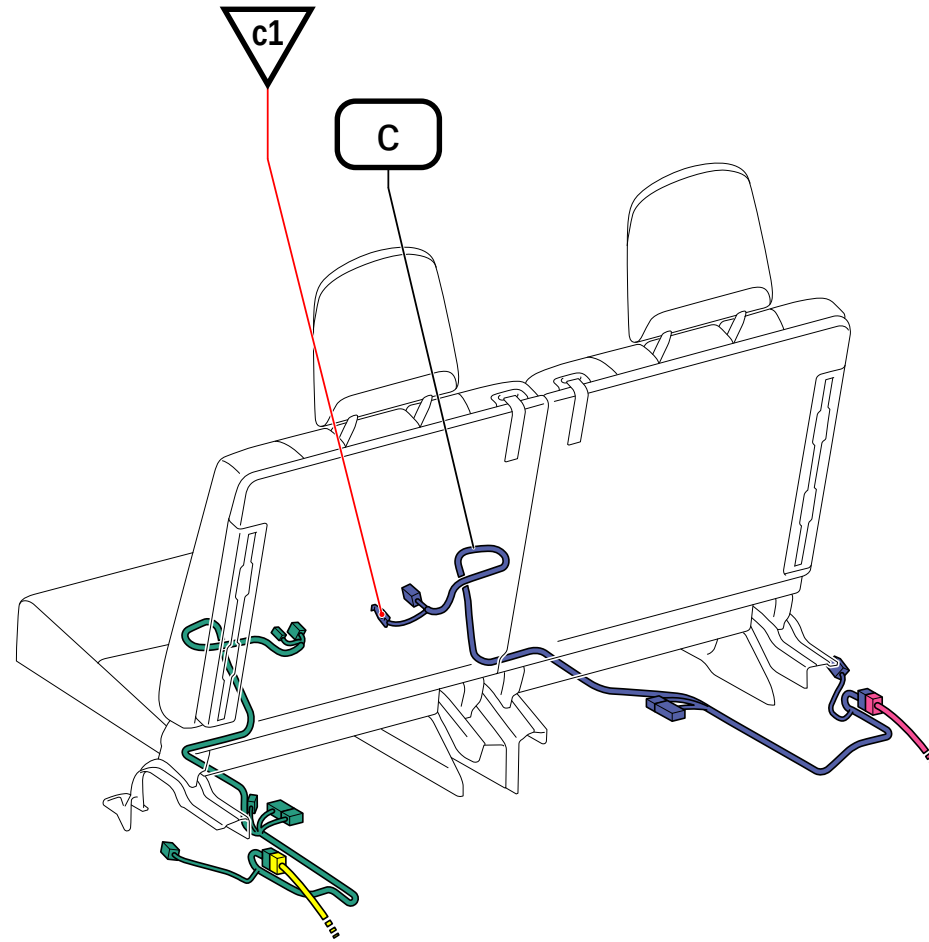










Position of Parts in Seat (Rear No. 2 Seat)

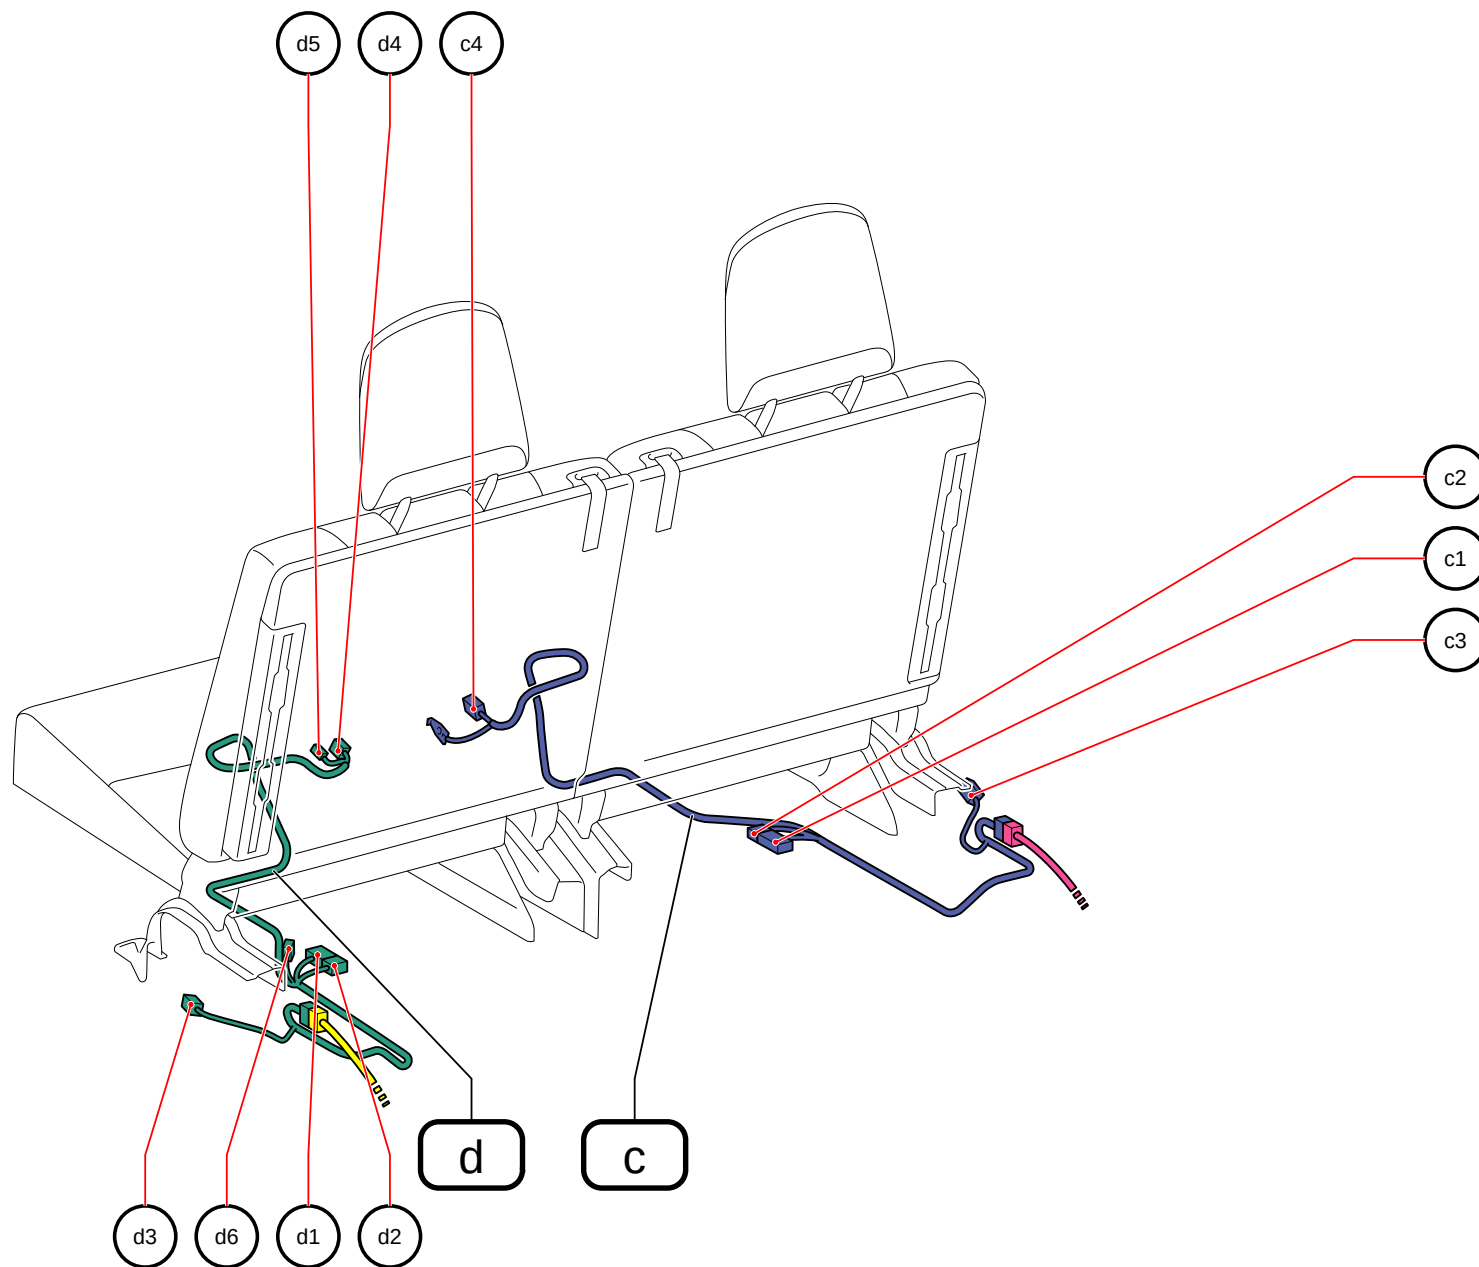




Position of Parts in Seat (Rear No. 2 Seat)


c1	Fold Seat Control ECU RH
c2	Fold Seat Control ECU RH
c3	No. 3 Seat Back Frame Sub-Assembly RH
c4	No. 2 Seat Cushion Frame Sub-Assembly RH
d1	Fold Seat Control ECU LH
d2	Fold Seat Control ECU LH
d3	No. 3 Seat Back Frame Sub-Assembly LH
d4	No. 2 Seat Cushion Frame Sub-Assembly LH
d5	No. 2 Seat Cushion Frame Sub-Assembly LH
d6	Junction Connector


Position of Parts in Seat (Rear No. 2 Seat)

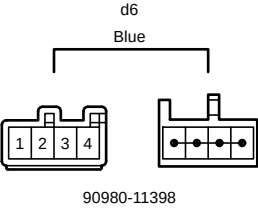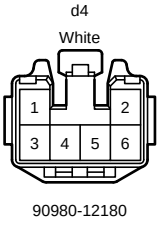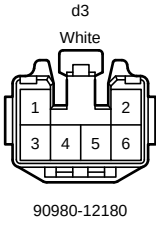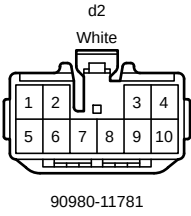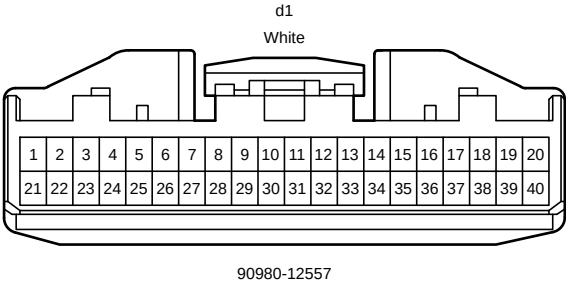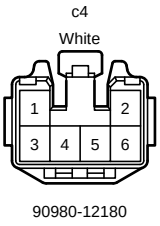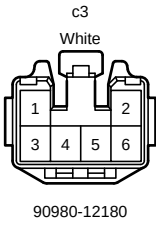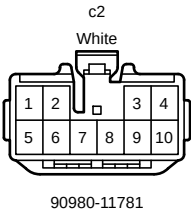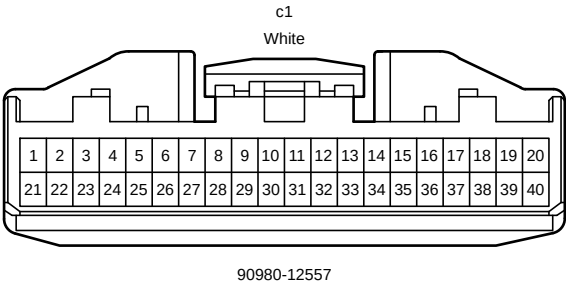


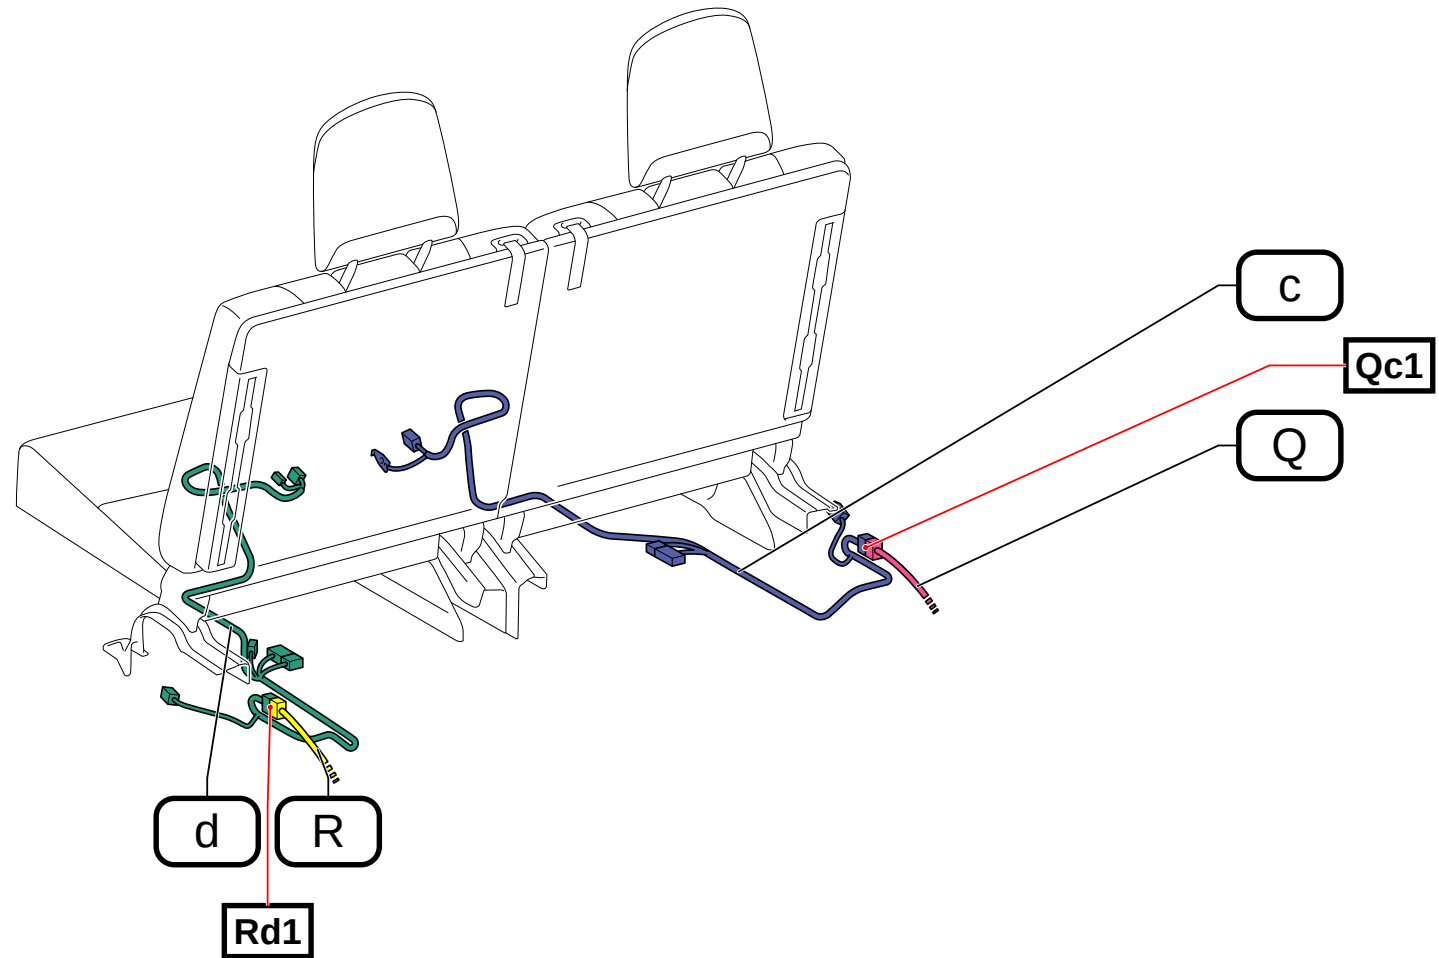

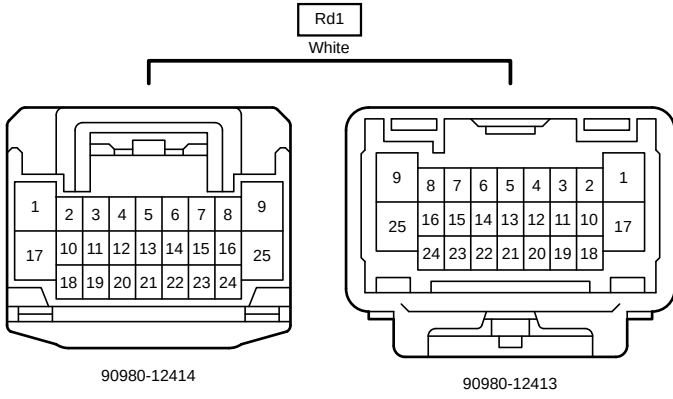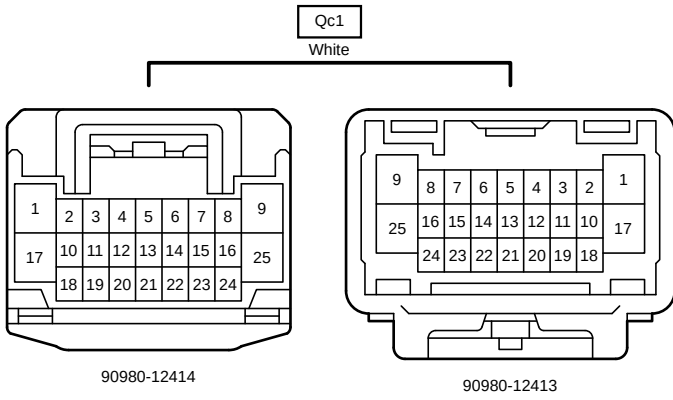

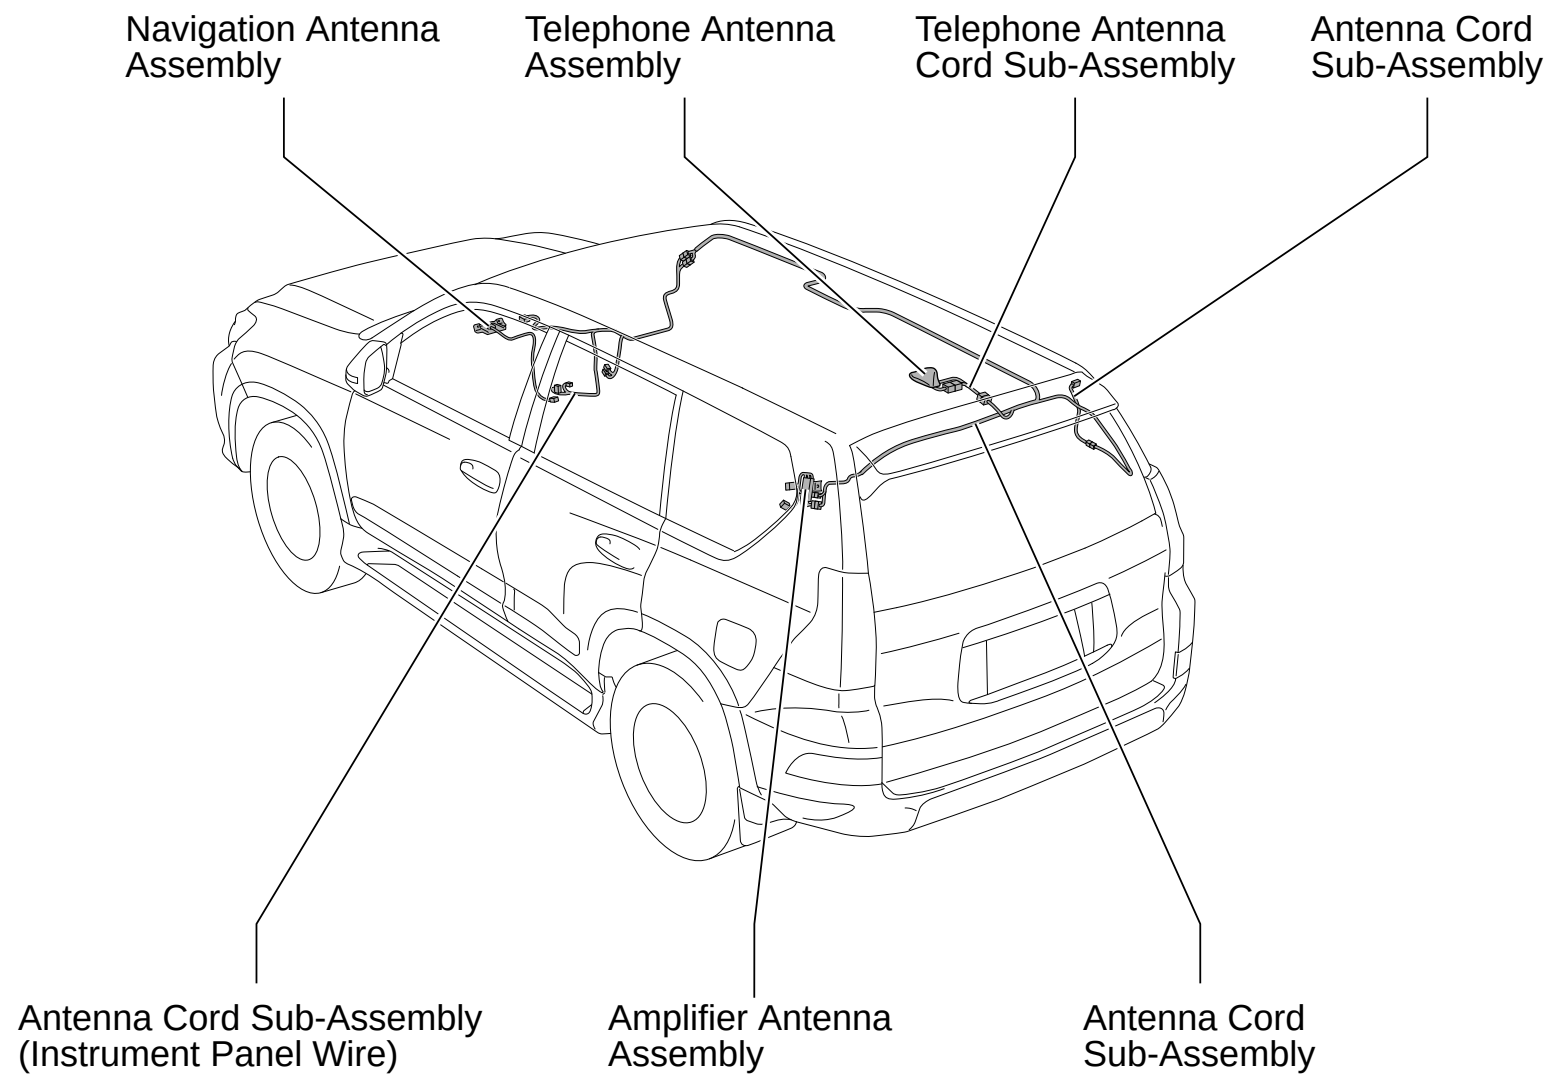





















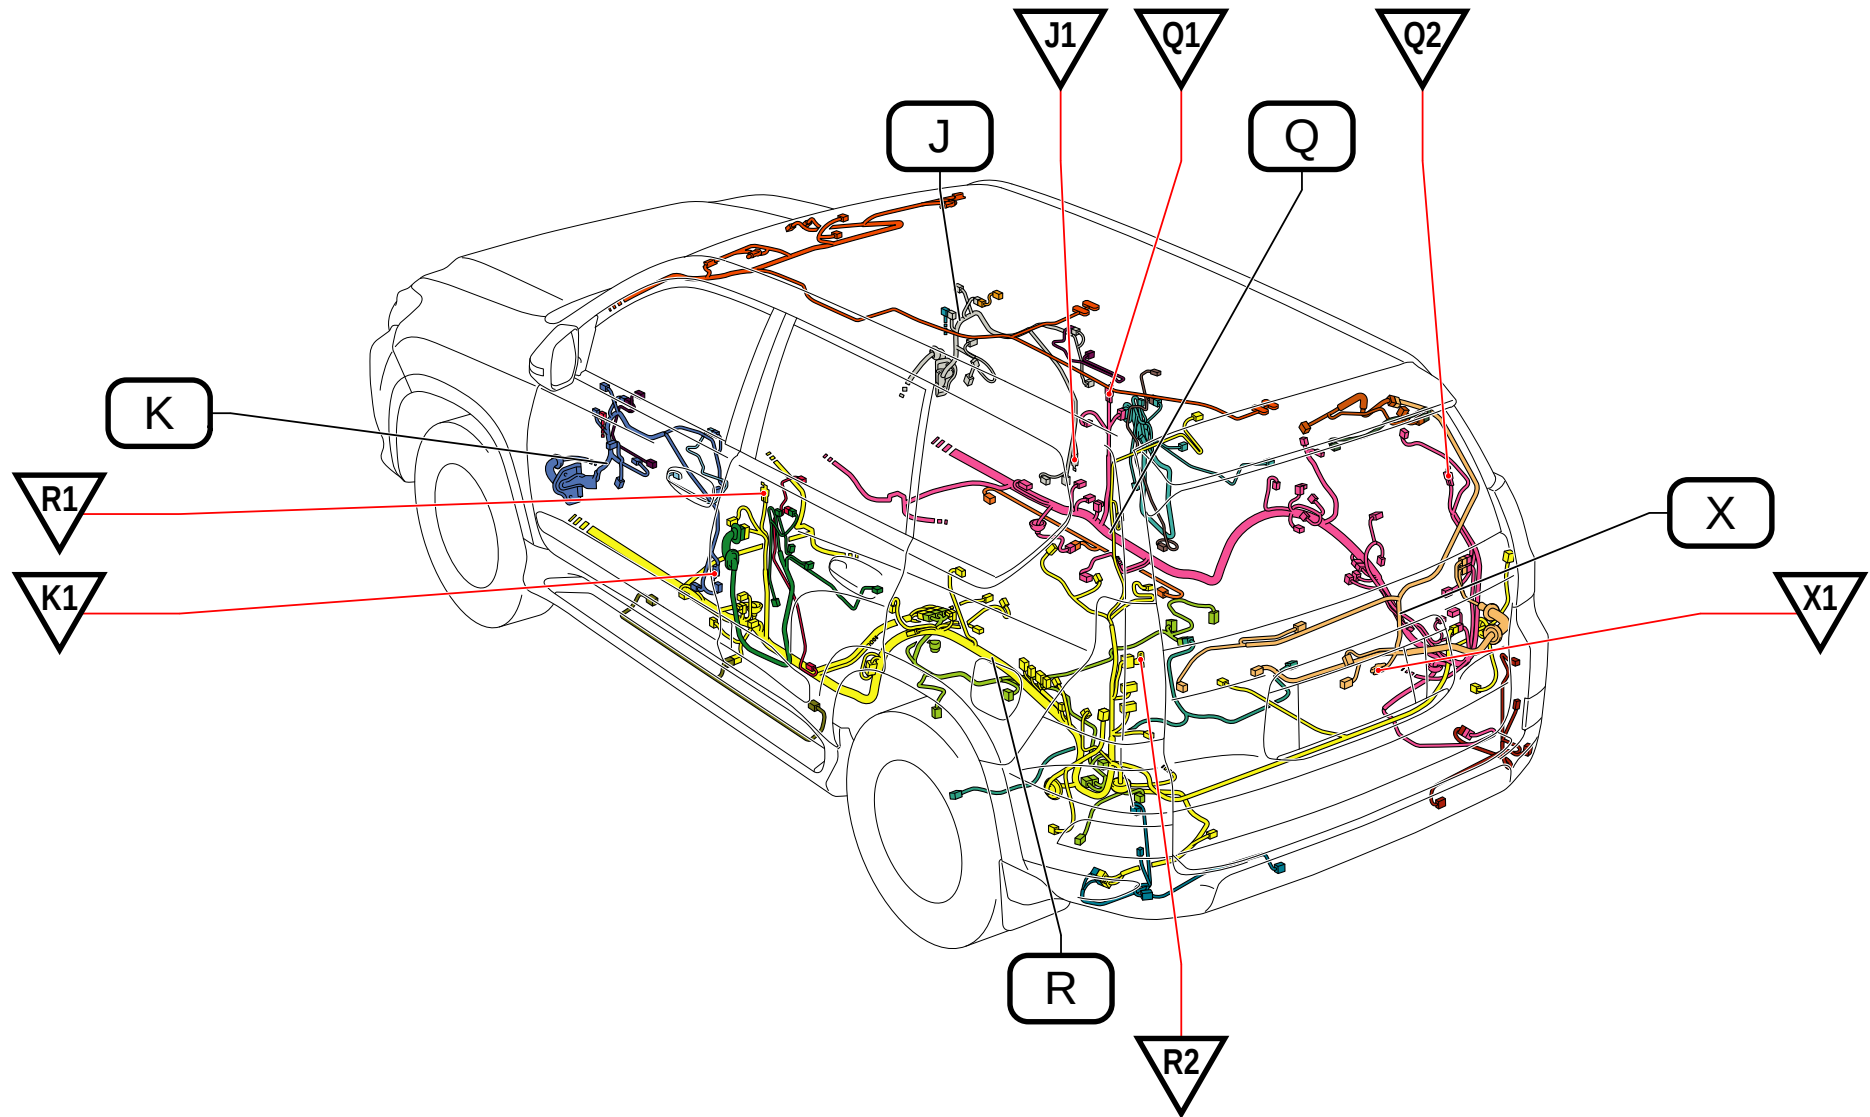


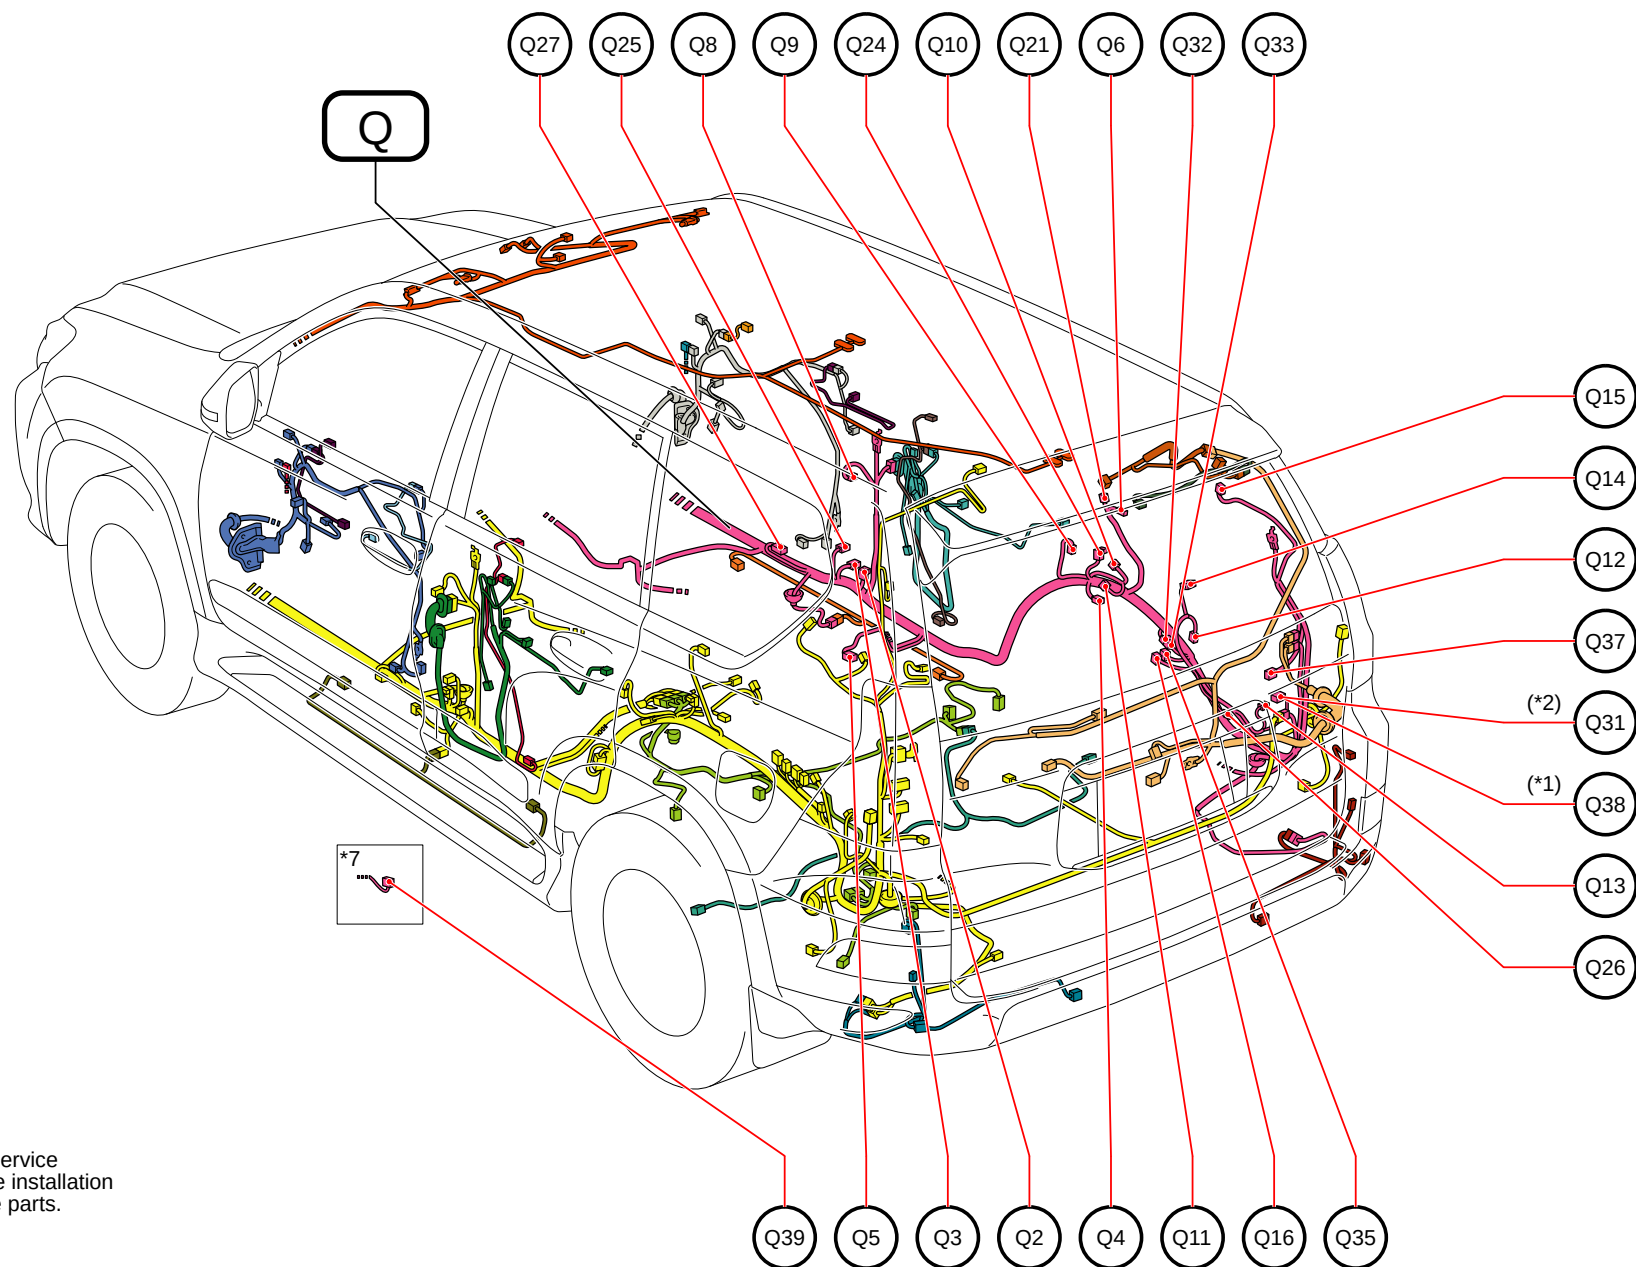


- * 1:China
- * 2:Except *1
- * 7:Refer to the Service Bulletin for the installation position of the parts.


Q2	Front Seat Outer Belt Assembly RH
Q3	Front Seat Outer Belt Assembly RH
Q4	Rear Side Airbag Sensor Assembly RH
Q5	Rear Floor Side Airbag Sensor
Q6	Curtain Shield Airbag Assembly RH
Q8	Front Door Courtesy Light Switch Assembly RH
Q9	Rear Door Courtesy Light Switch Assembly RH
Q10	Rear Power Seat Switch RH
Q11	No. 1 Fold Seat Switch Assembly
Q12	Rear Blower with Fan Motor Sub-Assembly
Q13	Rear A/C Blower Assembly
Q14	Rear Blower with Fan Motor Sub-Assembly
Q15	Rear Header Speaker Assembly RH
Q16	Voltage Inverter Assembly
Q21	Rear No. 1 Cooler Thermistor
Q24	Rear Seat Outer Belt Assembly RH
Q25	Front Tension Reducer RH
Q26	Rear Cooling Unit Expansion Valve
Q27	Scuff Plate Light RH (No. 1 Interior Illumination Light Assembly)
Q31	Power Outlet Socket
Q32	Junction Connector
Q33	Junction Connector
Q35	Voltage Inverter Assembly
Q37	Power Outlet Socket
Q38	Power Outlet Socket
Q39	Theft Warning Siren Assembly

       Position of Parts in Body

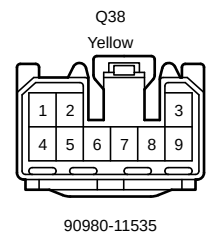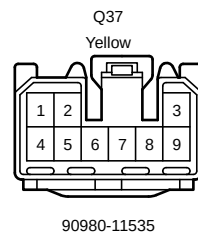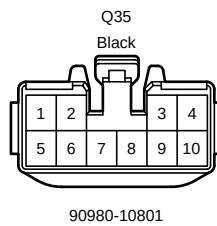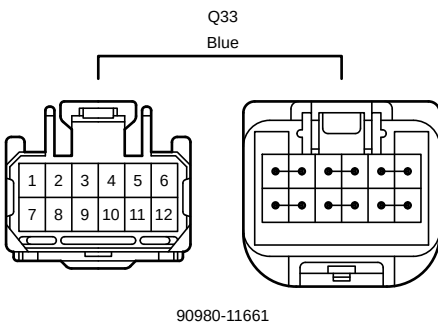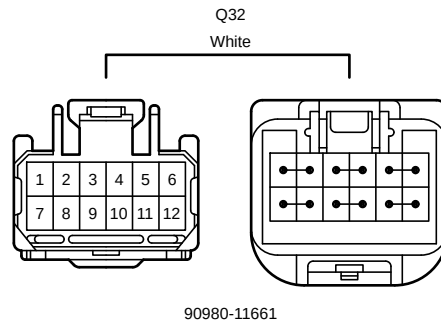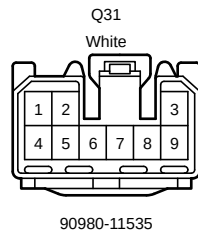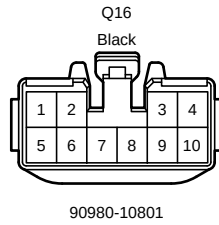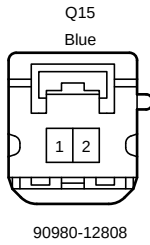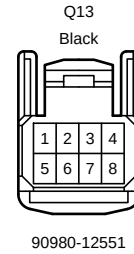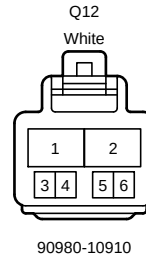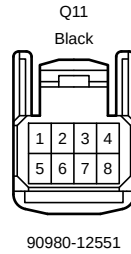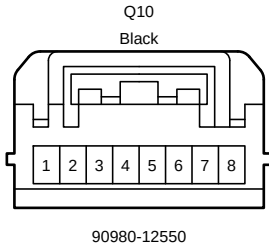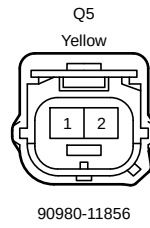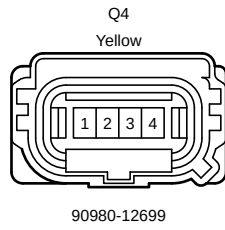

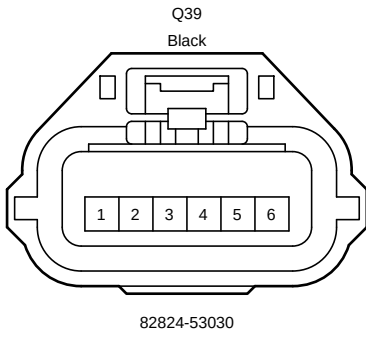


Position of Parts in Body

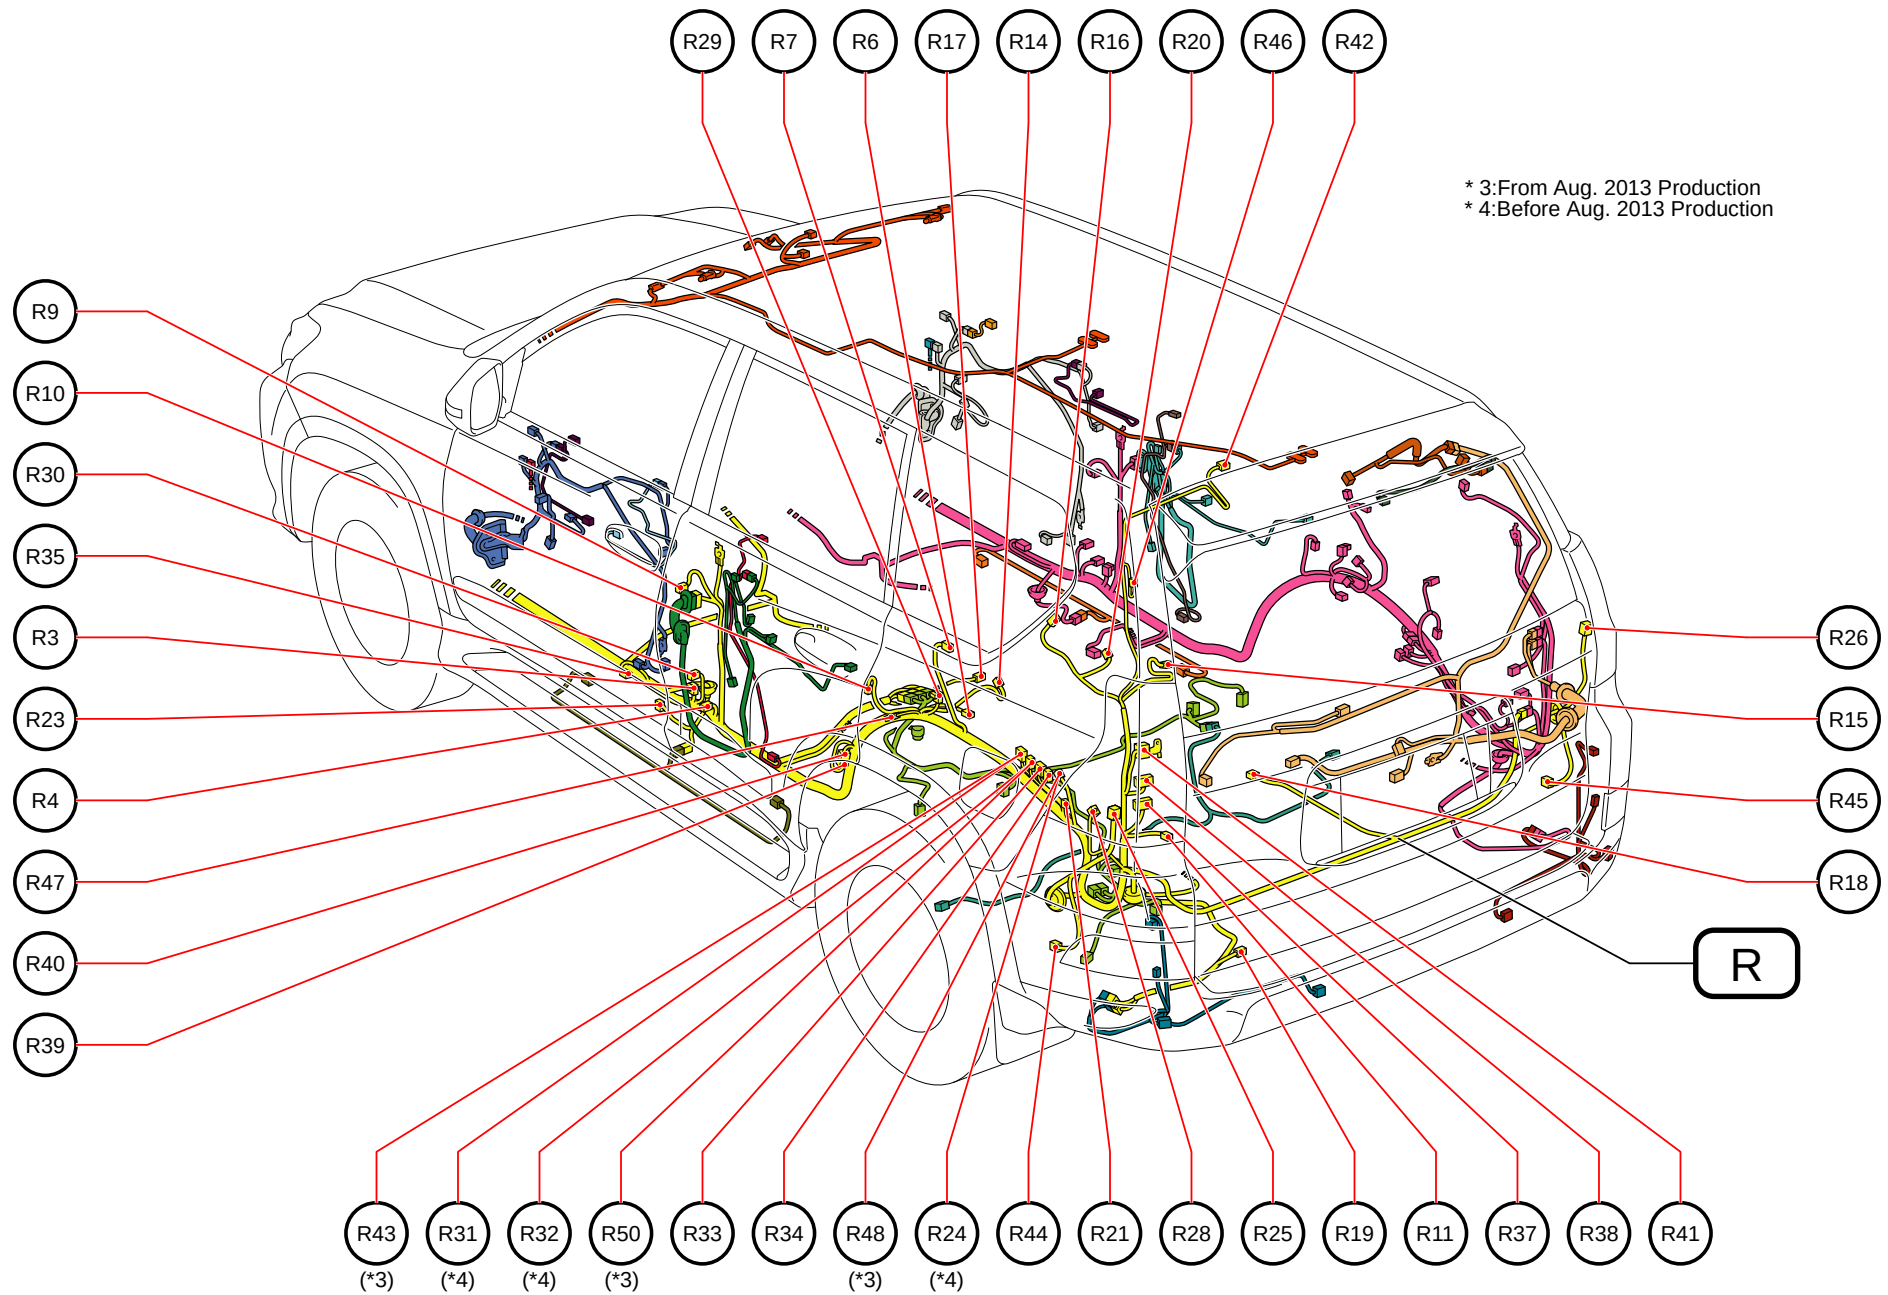


R3	Front Seat Outer Belt Assembly LH
R4	Front Seat Outer Belt Assembly LH
R6	Rear Side Airbag Sensor Assembly LH
R7	Curtain Shield Airbag Assembly LH
R9	Front Door Courtesy Light Switch Assembly LH
R10	Rear Door Courtesy Light Switch Assembly LH
R11	Back Door Courtesy Light Switch Assembly
R14	Rear Power Seat Switch LH
R15	No. 2 Fold Seat Switch Assembly
R16	Rear Header Speaker Assembly LH
R17	No. 2 Indoor Electrical Key Antenna Assembly
R18	No. 3 Indoor Electrical Key Antenna Assembly
R19	Outside Luggage Electrical Key Antenna
R20	Door Control Receiver
R21	Rear Acceleration Sensor Assembly
R23	Stabilizer Control with Accumulator Housing Assembly
R24	No. 1 Speaker with Box Assembly
R25	Rear Combination Light Assembly LH
R26	Rear Combination Light Assembly RH
R28	Fuel Lid Motor Assembly
R29	Rear Seat Outer Belt Assembly LH
R30	Front Tension Reducer LH
R31	Stereo Component Amplifier Assembly
R32	Stereo Component Amplifier Assembly
R33	Stereo Component Amplifier Assembly
R34	Stereo Component Amplifier Assembly
R35	Scuff Plate Light LH (No. 1 Interior Illumination Light Assembly)
R37	Junction Connector
R38	Junction Connector
R39	Junction Connector
R40	Junction Connector
R41	Junction Connector
R42	Tire Pressure Warning ECU and Receiver (Tire Pressure Monitor Receiver Assembly)
R43	Stereo Component Amplifier Assembly
R44	Blind Spot Monitor Sensor LH
R45	Blind Spot Monitor Sensor RH
R46	Rear Cross Traffic Alert Buzzer (Blind Spot Monitor Buzzer)
R47	Junction Connector
R48	No. 1 Speaker with Box Assembly
R50	Stereo Component Amplifier Assembly

 
Position of Parts in Body



90980-12452

 

90980-10860

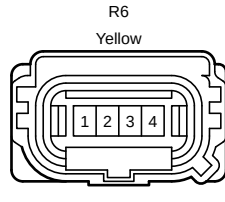

90980-12699



 
90980-11864




90980-10871




90980-10871




90980-10871

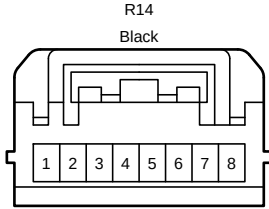


90980-12550

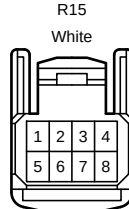


90980-12551

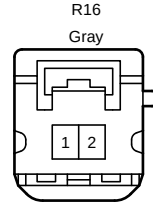

90980-12808

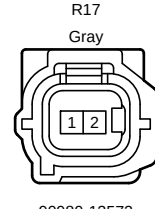


90980-12572

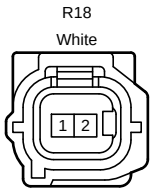


90980-12572




90980-12381

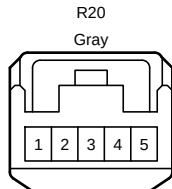


90980-12366

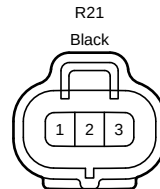

90980-10845

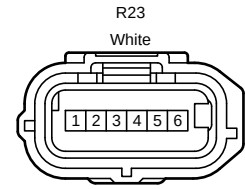


90980-12303

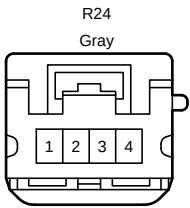


90980-12733




90980-10942

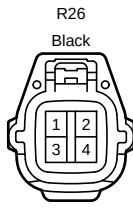


90980-10942

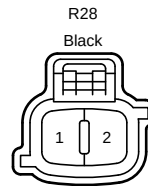


90980-11019

 


90980-12452

 


90980-12063

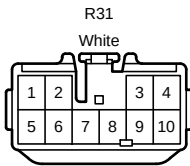


90980-10997

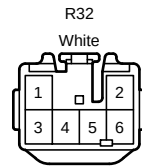

90980-10996

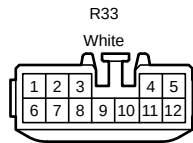

90980-10803

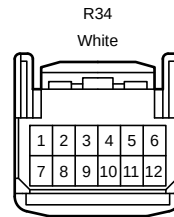


90980-12552



90980-11003


Position of Parts in Body

R37
White

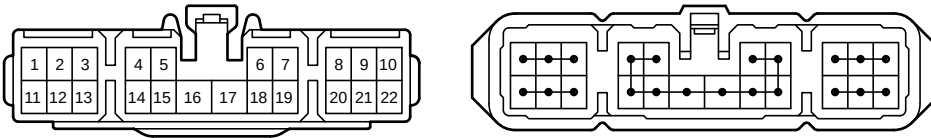


90980-11238

R38
Blue

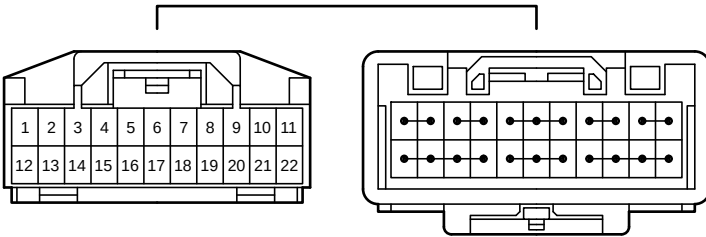


90980-10875

R39
Blue

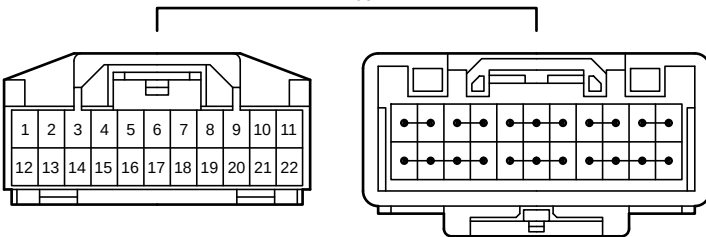


90980-11915

R40
Blue

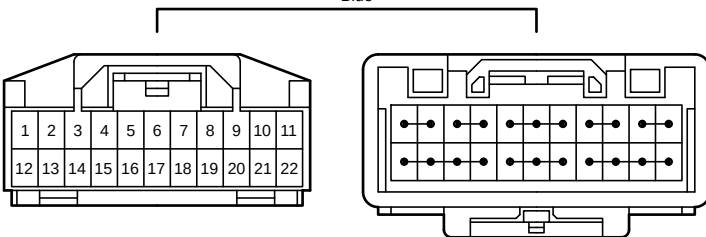


90980-11915

R41
White

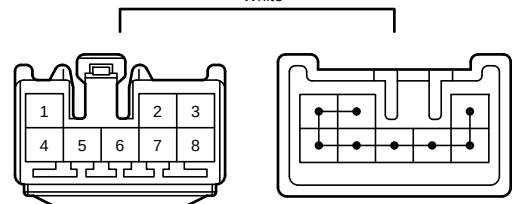


90980-11686

R42
Black

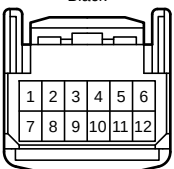


90980-12552

R43
White

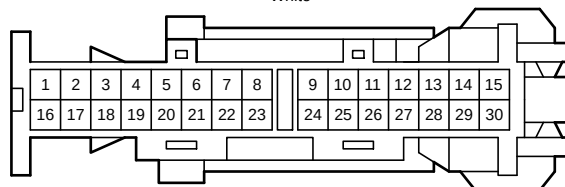






90980-12979


R44
Black

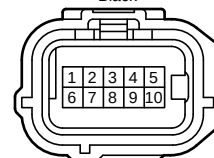

90980-12380

 
Position of Parts in Body

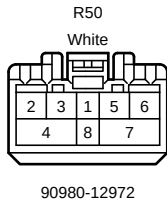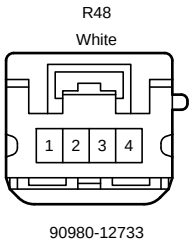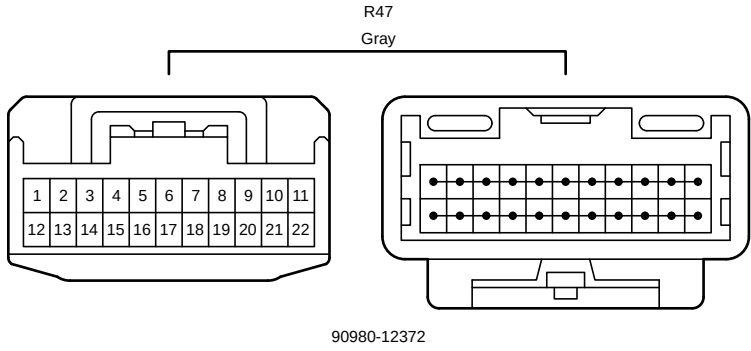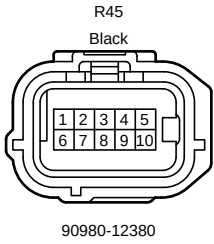

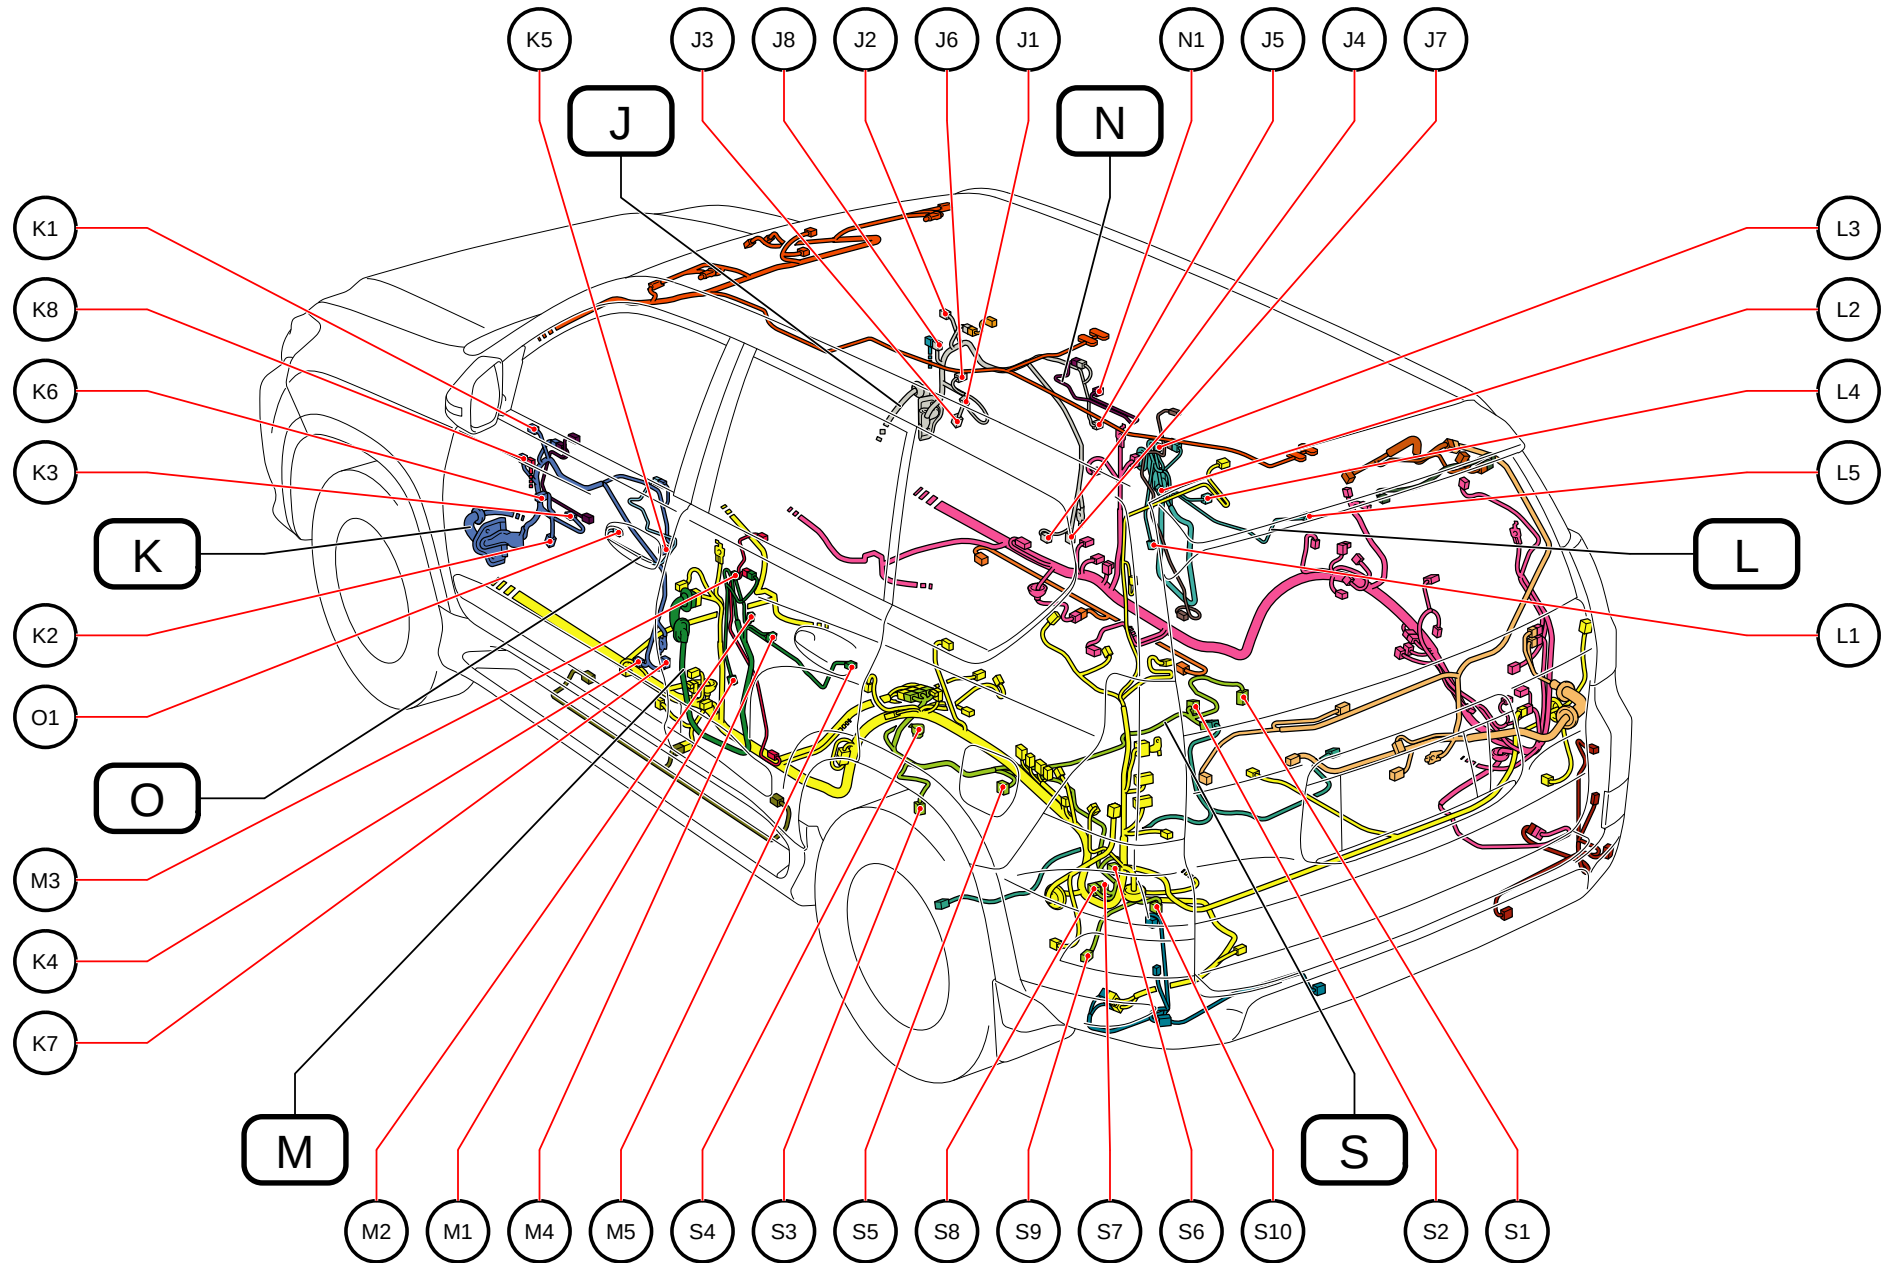


J1	Front Power Window Regulator Switch Assembly RH
J2	Side Television Camera Assembly RH
J3	Front No. 2 Speaker Assembly RH
J4	Front Door Courtesy Light Assembly RH
J5	Front Door with Motor Lock Assembly RH
J6	Front Power Window Regulator Motor Assembly RH
J7	Side Airbag Sensor Assembly RH
J8	Outer Mirror Control ECU Assembly RH
K1	Side Television Camera Assembly LH
K2	Front No. 2 Speaker Assembly LH
K3	Multiplex Network Master Switch Assembly
K4	Front Door Courtesy Light Assembly LH
K5	Front Door with Motor Lock Assembly LH
K6	Front Power Window Regulator Motor Assembly LH
K7	Side Airbag Sensor Assembly LH
K8	Outer Mirror Control ECU Assembly LH
L1	Rear Speaker Set RH
L2	Rear Power Window Regulator Switch Assembly RH
L3	Rear No. 2 Speaker Assembly RH
L4	Rear Power Window Regulator Motor Assembly RH
L5	Rear Door Lock Assembly RH
M1	Rear Speaker Set LH
M2	Rear Power Window Regulator Switch Assembly LH
M3	Rear No. 2 Speaker Assembly LH
M4	Rear Power Window Regulator Motor Assembly LH
M5	Rear Door Lock Assembly LH
N1	Electrical Key Antenna RH
O1	Electrical Key Antenna LH
S1	Rear Shock Absorber Assembly RH
S2	Rear Height Control Sensor Sub-Assembly RH
S3	Rear Shock Absorber Assembly LH
S4	Fuel Sender Gauge Assembly
S5	Rear Height Control Sensor Sub-Assembly LH
S6	Height Control Valve
S7	Fuel Pump Control ECU Assembly
S8	Fuel Pump Control ECU Assembly
S9	Height Control Exhaust Valve (Height Control Compressor)
S10	Height Control Compressor Motor (Height Control Compressor Assembly)


Position of Parts in Body

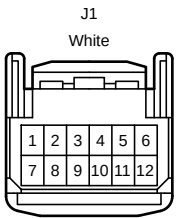


90980-12552

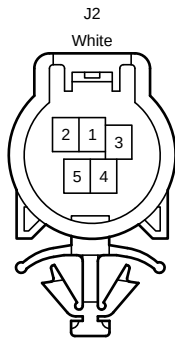


90980-12189

 


90980-10935

 


90980-11148

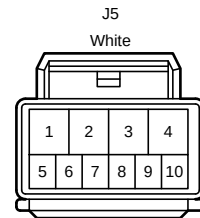


90980-12226

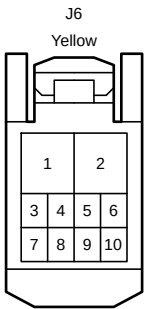


90980-12328

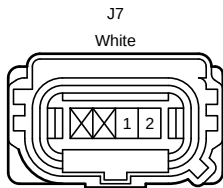


90980-12717

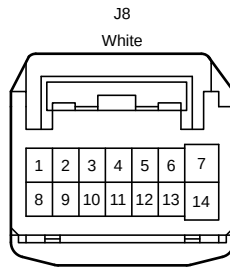


90980-12804

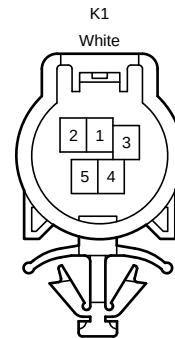


90980-12189

 


90980-10935

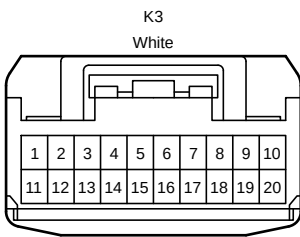


90980-12460

 


90980-11148

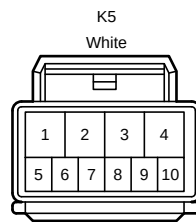


90980-12226

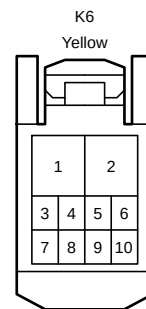


90980-12328

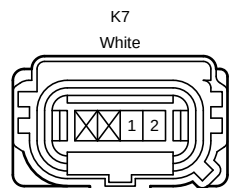


90980-12717

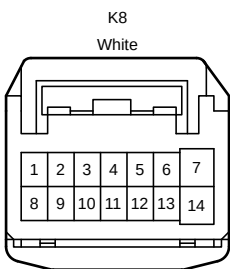


90980-12804

 


90980-10935

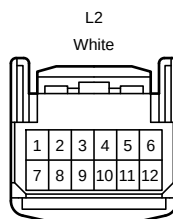

90980-12552

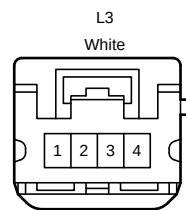


90980-12733

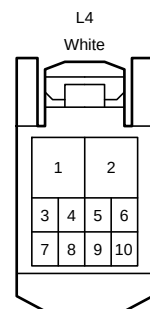


90980-12328


Position of Parts in Body

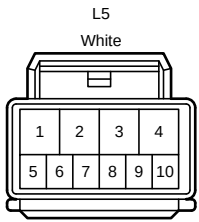


90980-12226

 


90980-10935

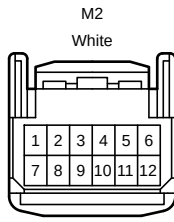


90980-12552

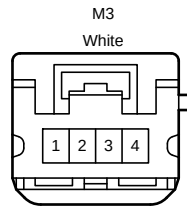


90980-12733

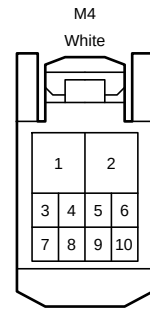


90980-12328

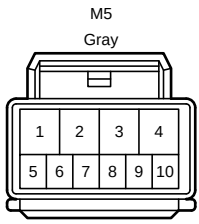

90980-12226

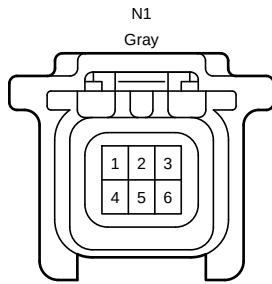


90980-12790

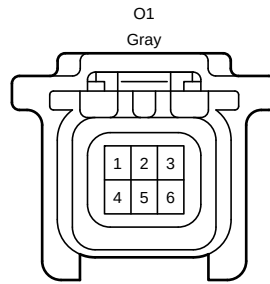

90980-12790




90980-11930

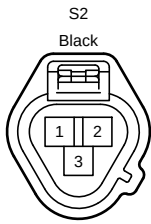


90980-11016




90980-11930

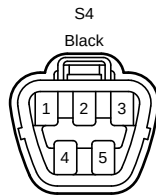


90980-11077

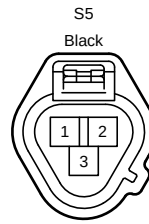


90980-11016

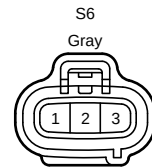


90980-11143

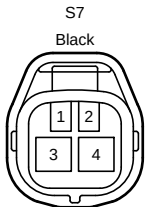

90980-10844

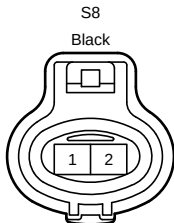

90980-10928

 


90980-11859




90980-10990

Position of Parts in Body

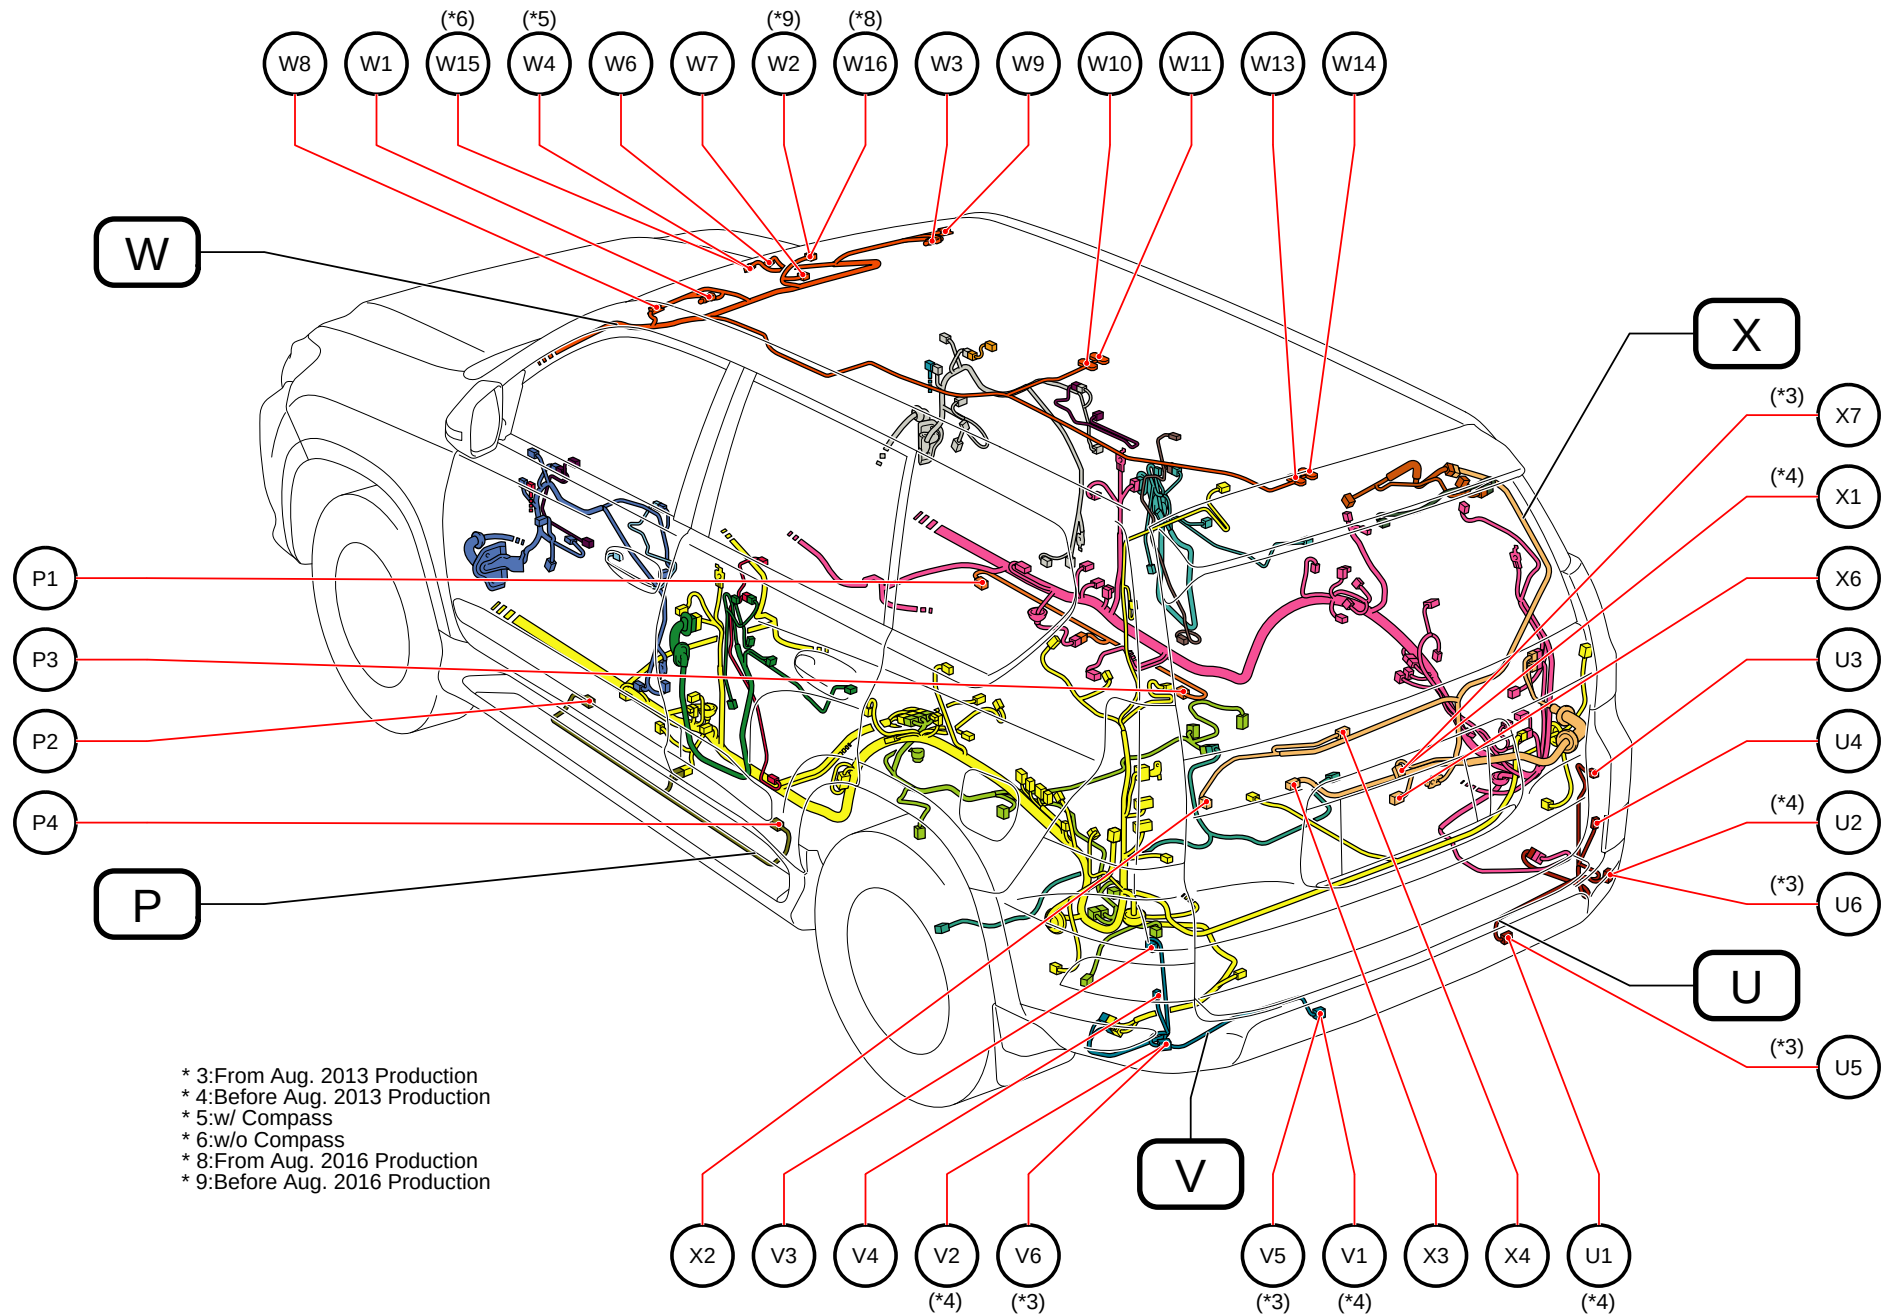

P1	Front Side Step Light RH
P2	Front Side Step Light LH
P3	Rear Side Step Light RH
P4	Rear Side Step Light LH
U1	Rear No. 1 Ultrasonic Sensor Center RH
U2	Rear No. 1 Ultrasonic Sensor RH
U3	Back-Up Light Assembly RH
U4	Back-Up Light Assembly RH
U5	Rear No. 1 Ultrasonic Sensor Center RH
U6	Rear No. 1 Ultrasonic Sensor RH
V1	Rear No. 1 Ultrasonic Sensor Center LH
V2	Rear No. 1 Ultrasonic Sensor LH
V3	Back-Up Light Assembly LH
V4	Back-Up Light Assembly LH
V5	Rear No. 1 Ultrasonic Sensor Center LH
V6	Rear No. 1 Ultrasonic Sensor LH
W1	Vanity Light Assembly LH
W2	Sliding Roof Control ECU
W3	Vanity Light Assembly RH
W4	Inner Rear View Mirror Assembly
W6	Rain Sensor
W7	Map Light Assembly
W8	Visor Assembly LH
W9	Visor Assembly RH
W10	No. 1 Room Light Assembly LH
W11	No. 1 Room Light Assembly RH
W13	No. 2 Room Light Assembly LH
W14	No. 2 Room Light Assembly RH
W15	Inner Rear View Mirror Assembly
W16	Sliding Roof Control ECU
X1	Rear Television Camera Assembly
X2	Back Door Lock Assembly
X3	Glass Hatch Opener Switch Assembly
X4	Back Window Lock Assembly
X6	Luggage Electrical Key Switch
X7	Rear Television Camera Assembly

Position of Parts in Body

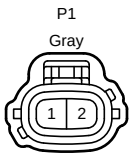


90980-11162




90980-11162




90980-11162

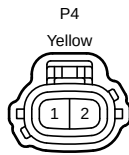

90980-11162

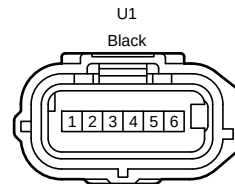

90980-12303

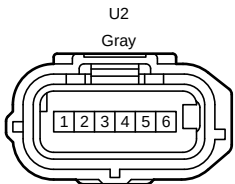


90980-12303




90980-11162




90980-11140

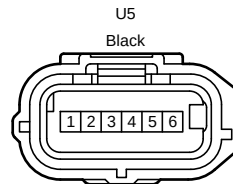


90980-12303

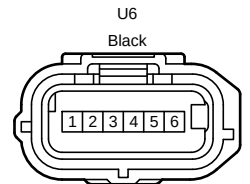

90980-12303

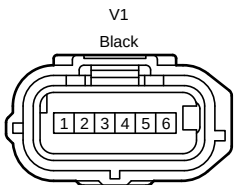

90980-12303

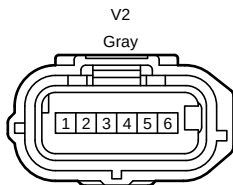


90980-12303




90980-11162





90980-11140

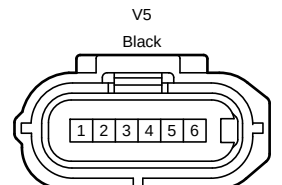



90980-12831

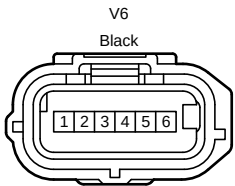


90980-12303

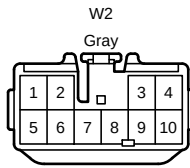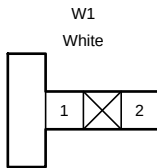


90980-10997

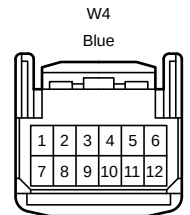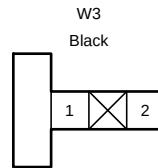


90980-12552

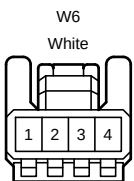

82824-50130

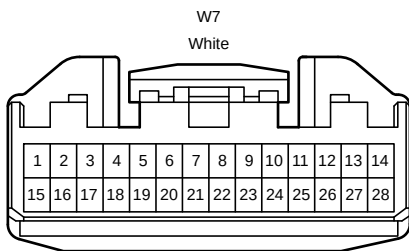


90980-12555





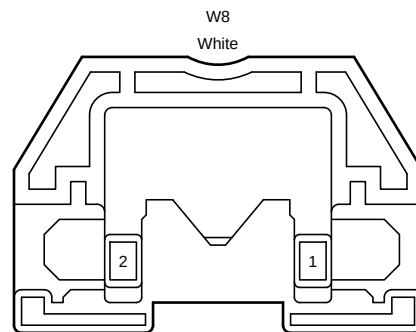


90980-12322


Position of Parts in Body

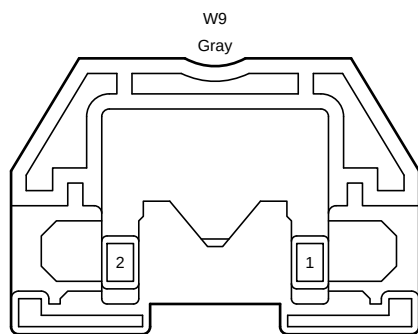


90980-12322

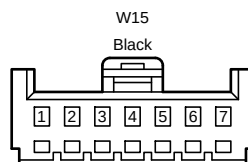    


90980-11794

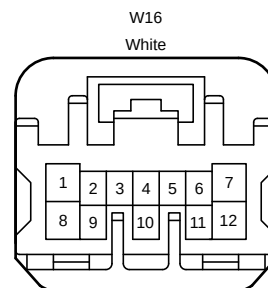


90980-12812

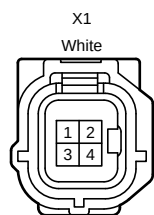


90980-12495

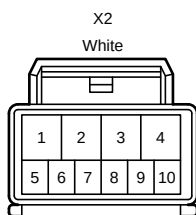


90980-12226

 


90980-11155

 


90980-10795

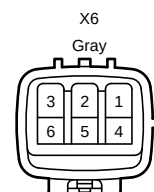

90980-11193

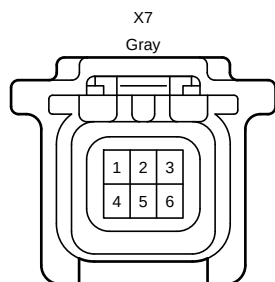


90980-12790

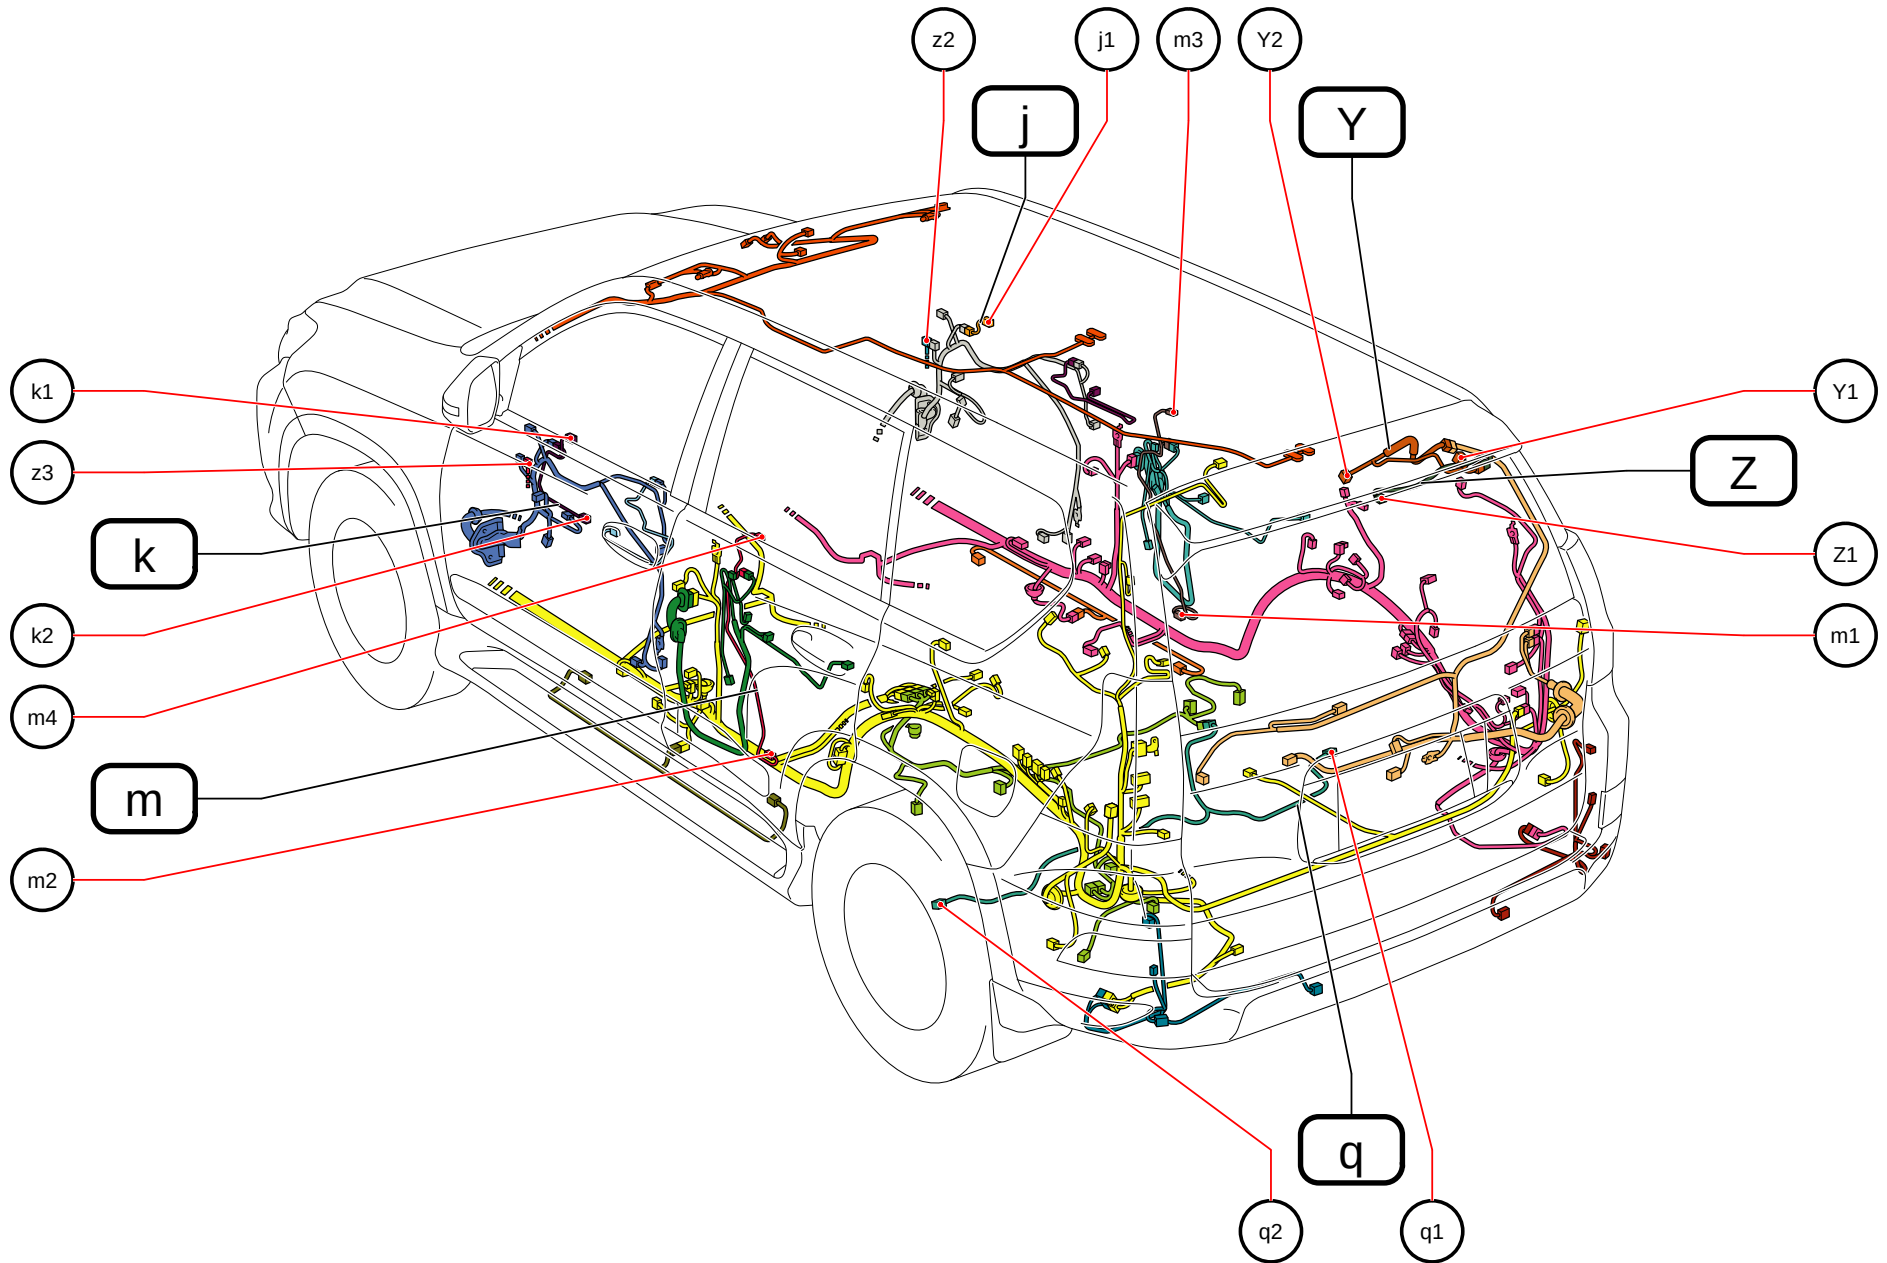


Y1	Rear Wiper Motor Assembly
Y2	Rear Window Defogger (Back Door Glass)
Z1	Center Stop Light Assembly
j1	Front Door Inside Handle Illumination Light Assembly RH
k1	Front Door Inside Handle Illumination Light Assembly LH
k2	Seat Memory Switch
m1	Rear Door Courtesy Light Assembly RH
m2	Rear Door Courtesy Light Assembly LH
m3	Rear Door Inside Handle Illumination Light Assembly RH
m4	Rear Door Inside Handle Illumination Light Assembly LH
q1	Rear Speed Sensor RH
q2	Rear Speed Sensor LH
z2	Outer Mirror Control ECU Assembly RH , Outer Rear View Mirror Assembly RH
z3	Outer Mirror Control ECU Assembly LH , Outer Rear View Mirror Assembly LH


Position of Parts in Body

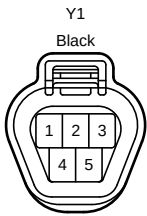

90980-11599

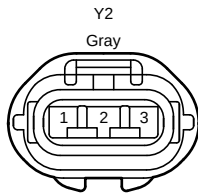


90980-11349

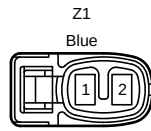


90980-11246



 
90980-11918




90980-11918

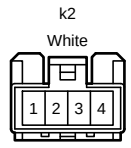

90980-11950

 


90980-11148

 


90980-11148



 
90980-11918




90980-11918

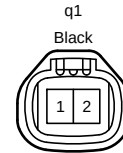


90980-11900

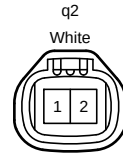


90980-11900




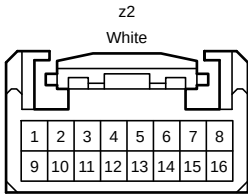


90980-12156

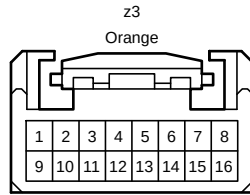



90980-12156

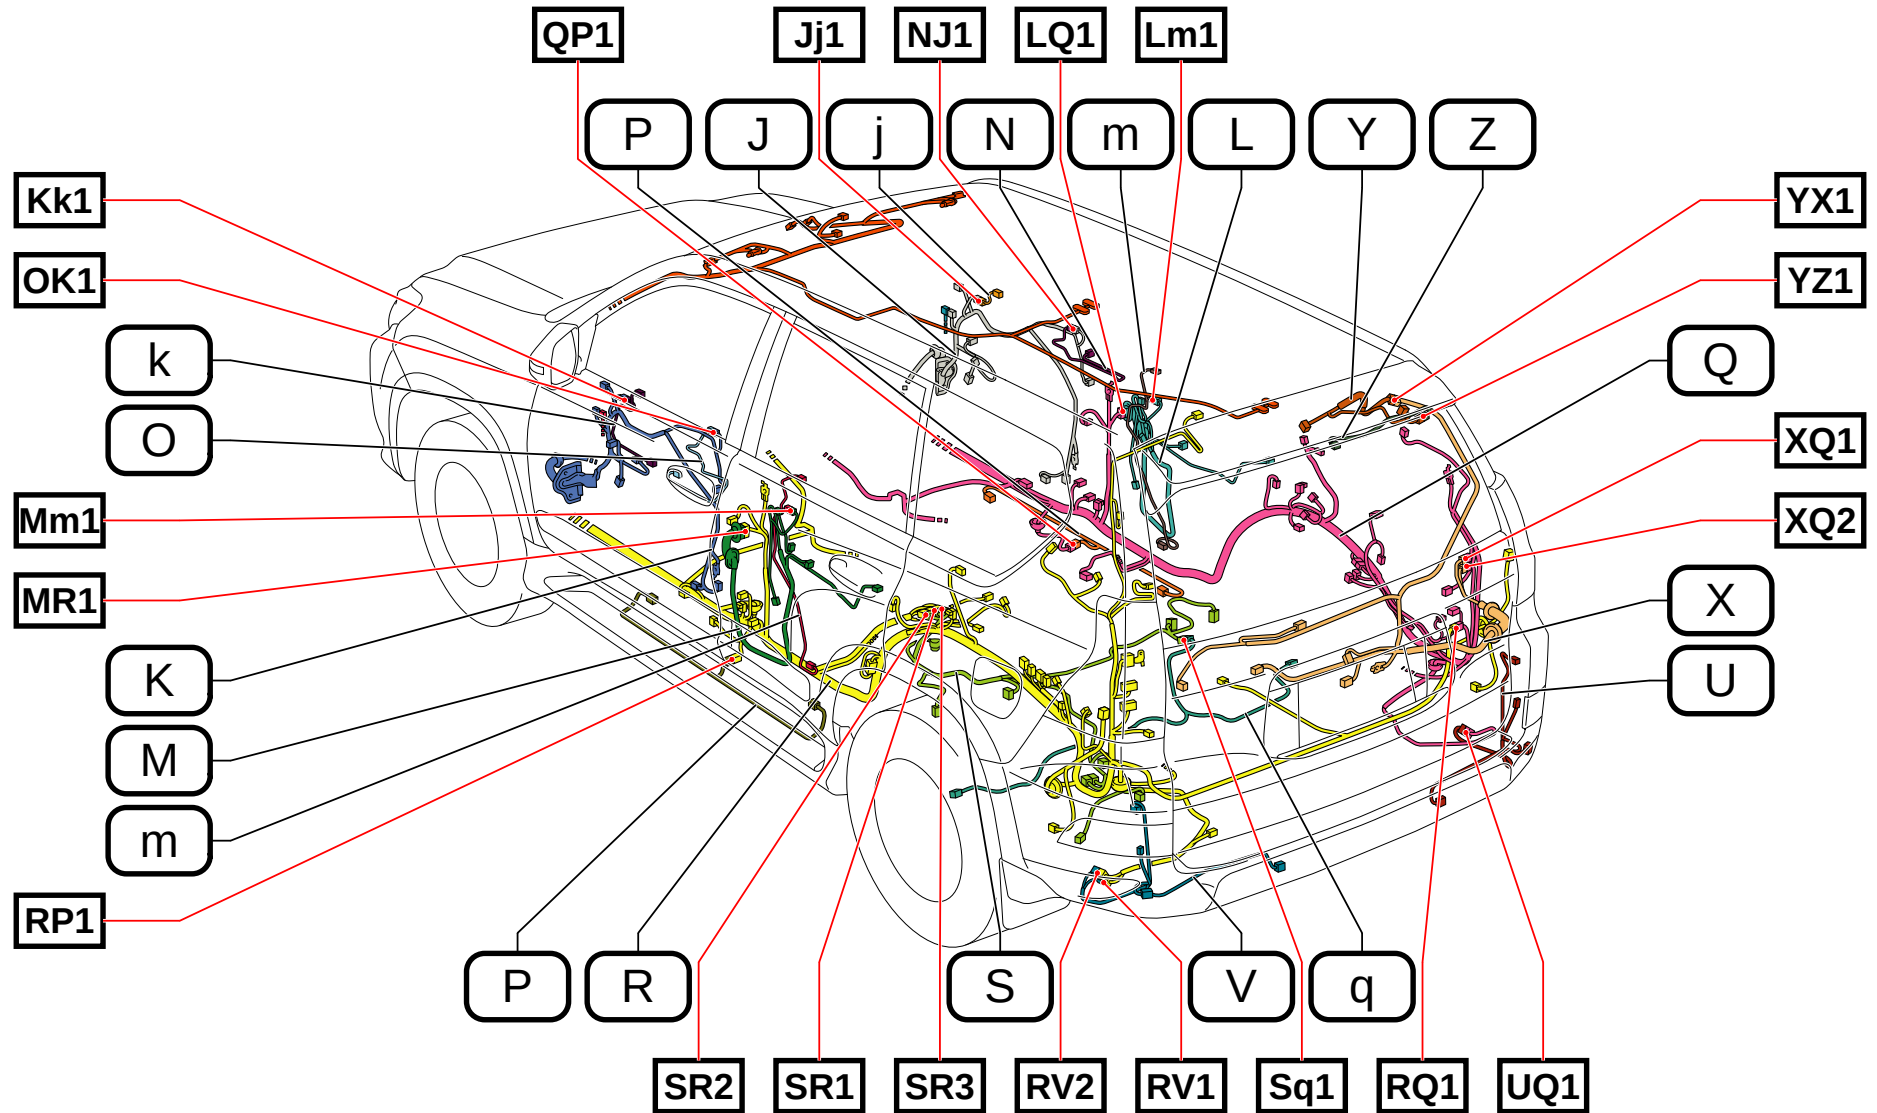

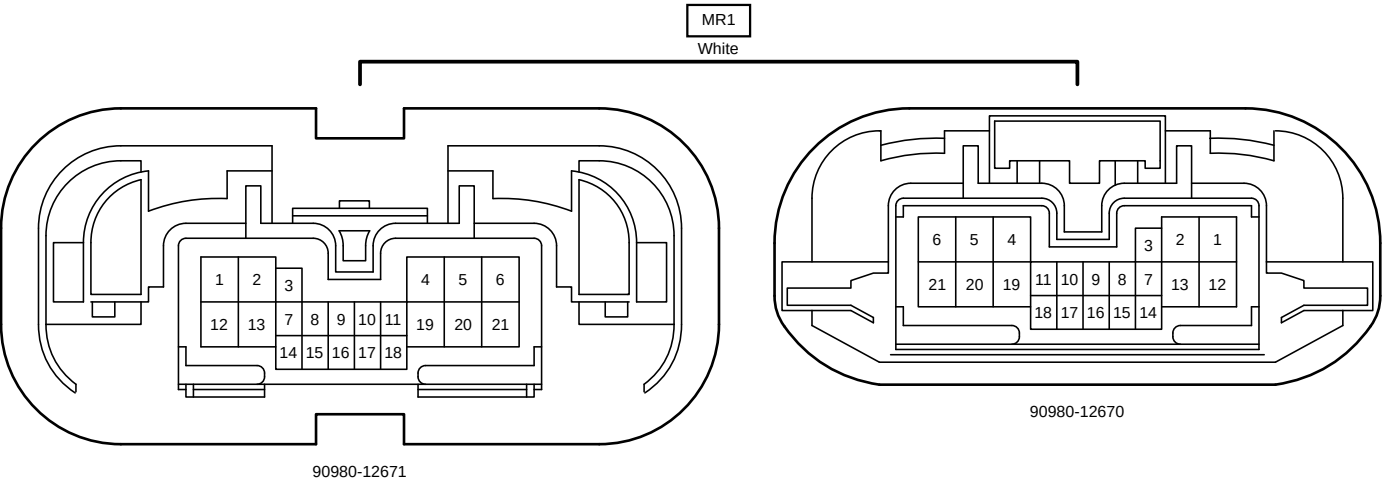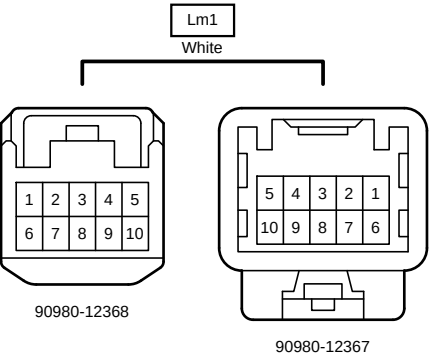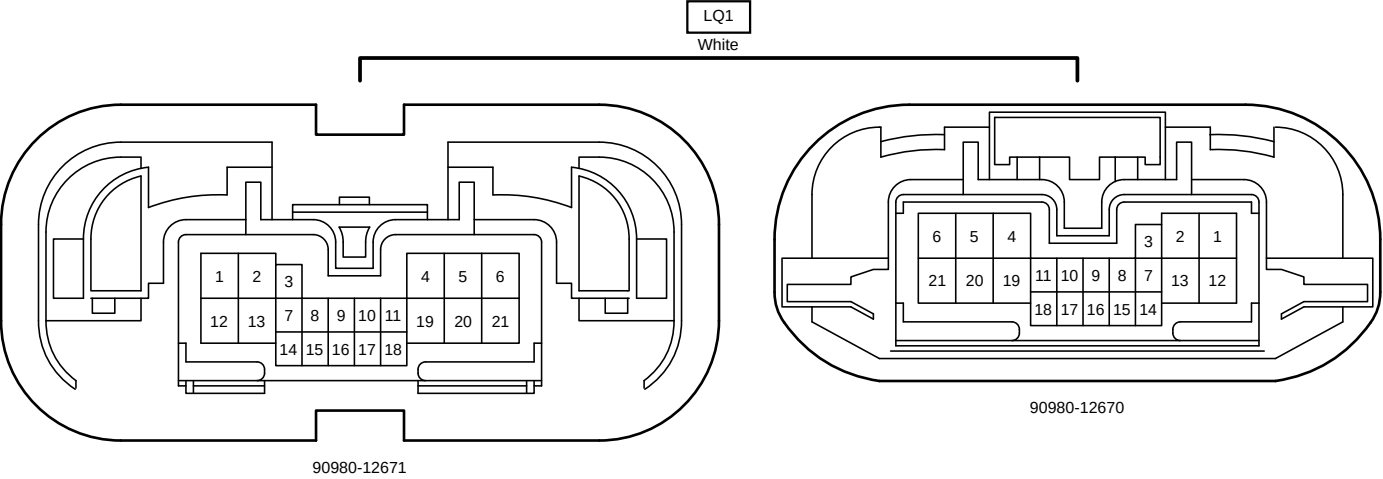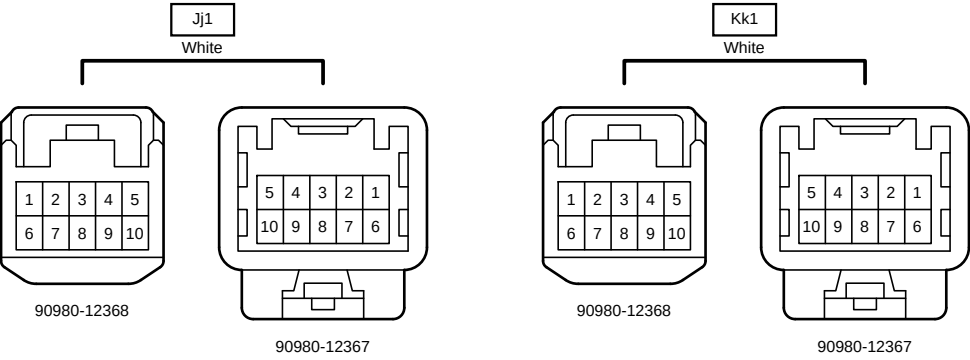


Wire and Wire in Body

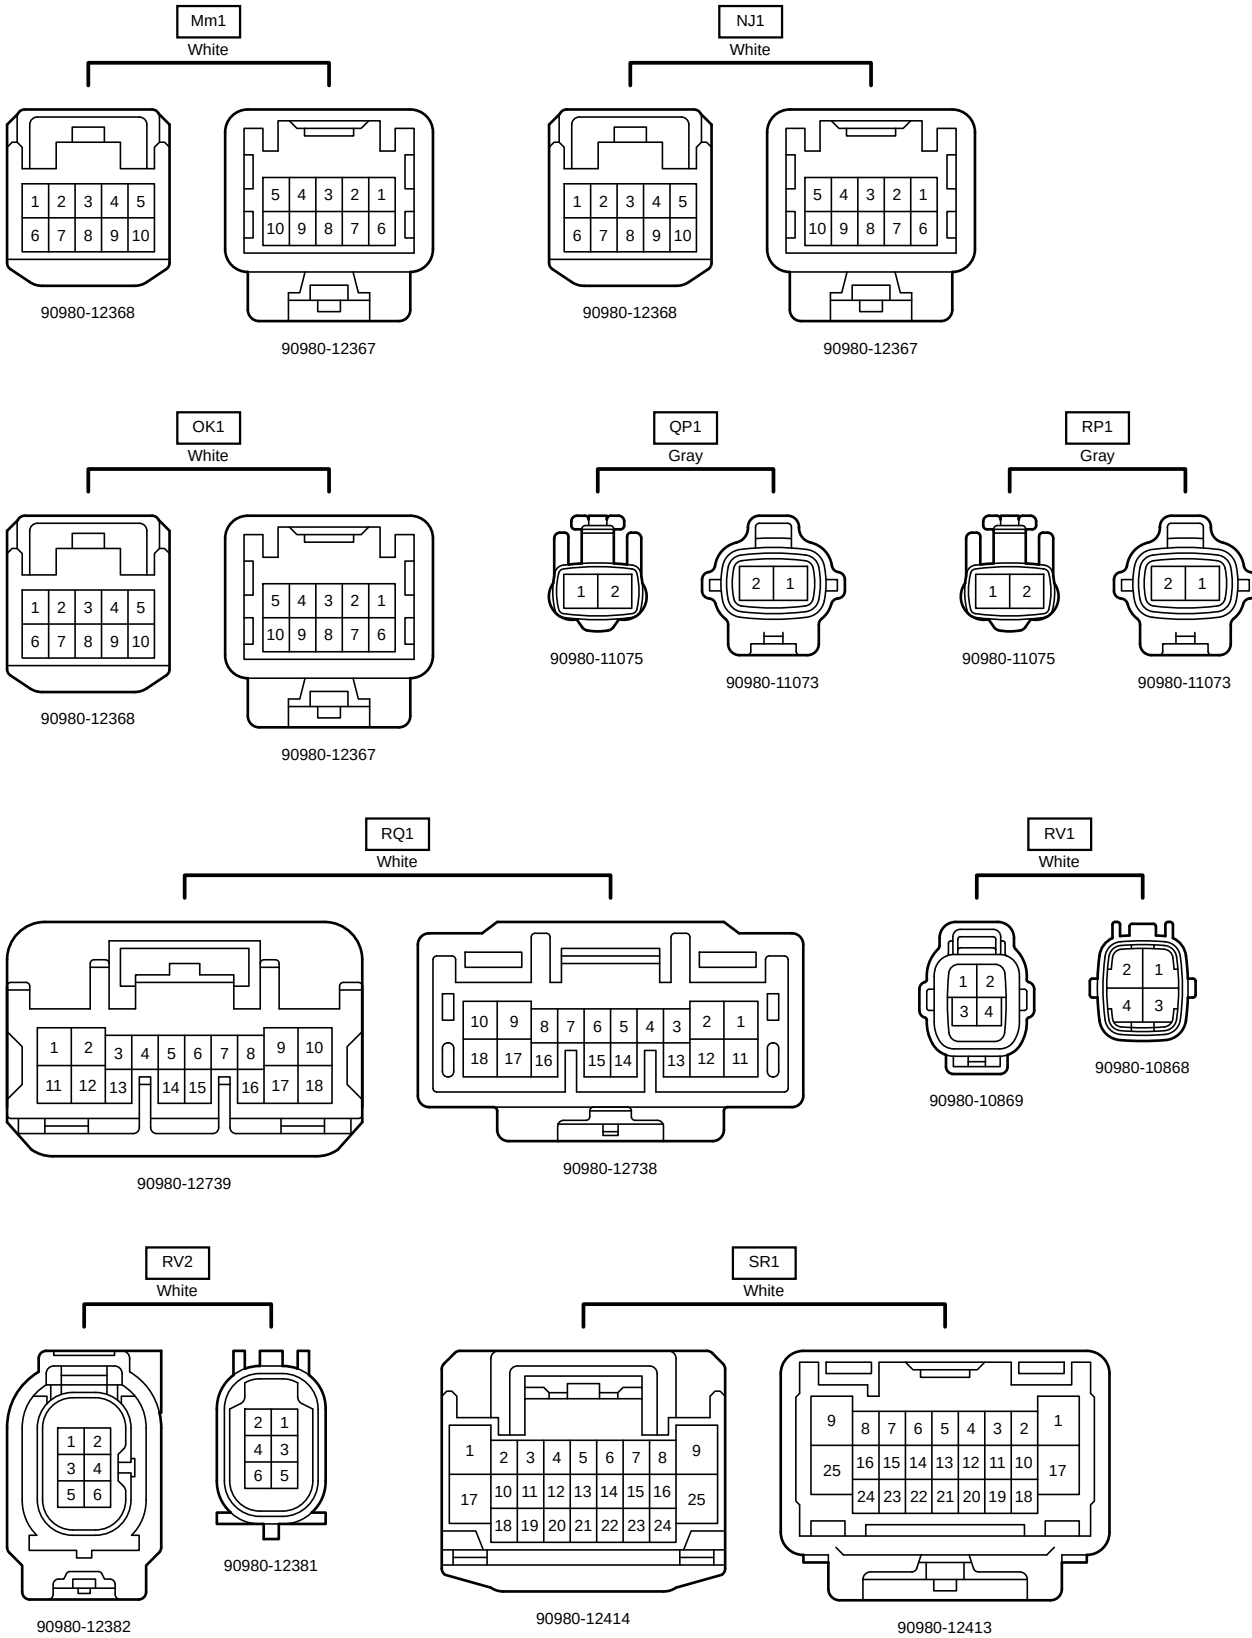

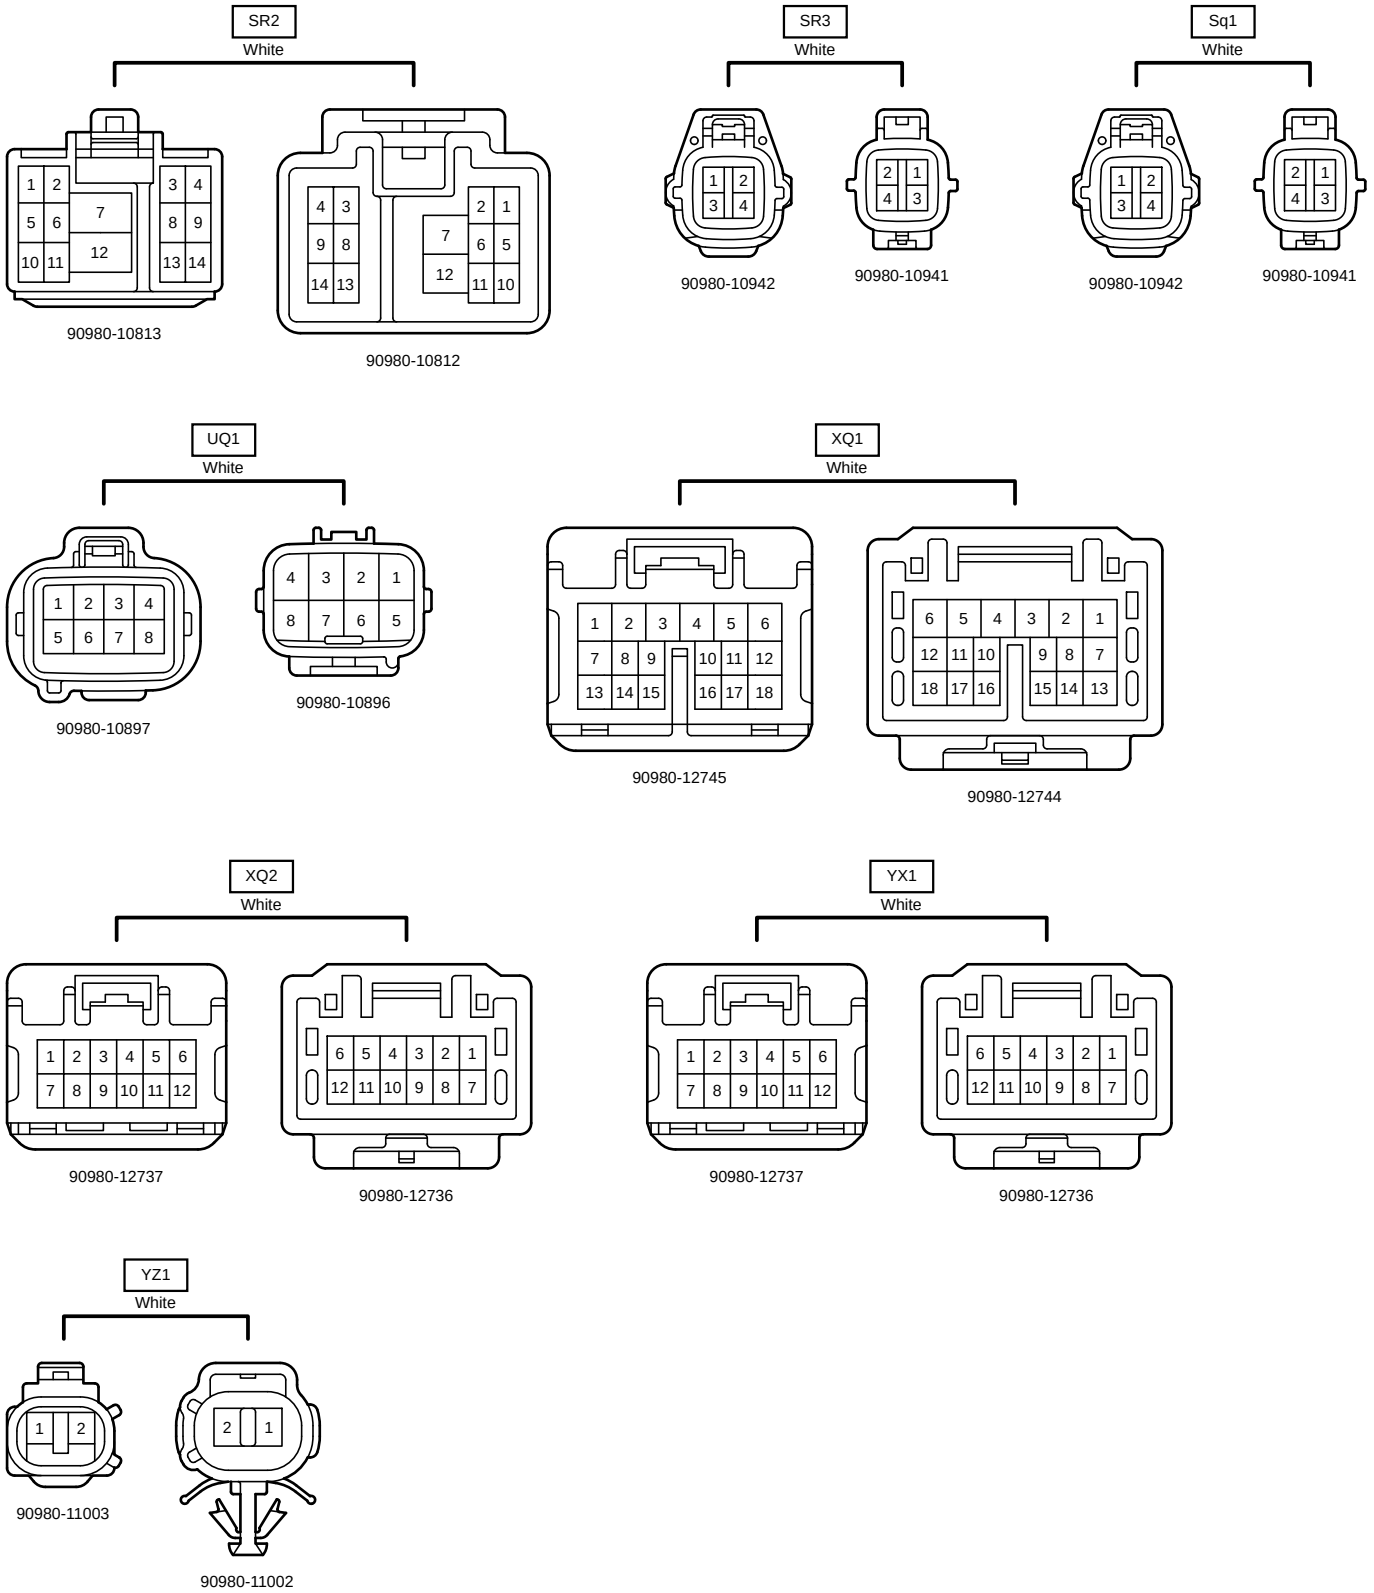


Position of Parts in Seat (Front Seat)

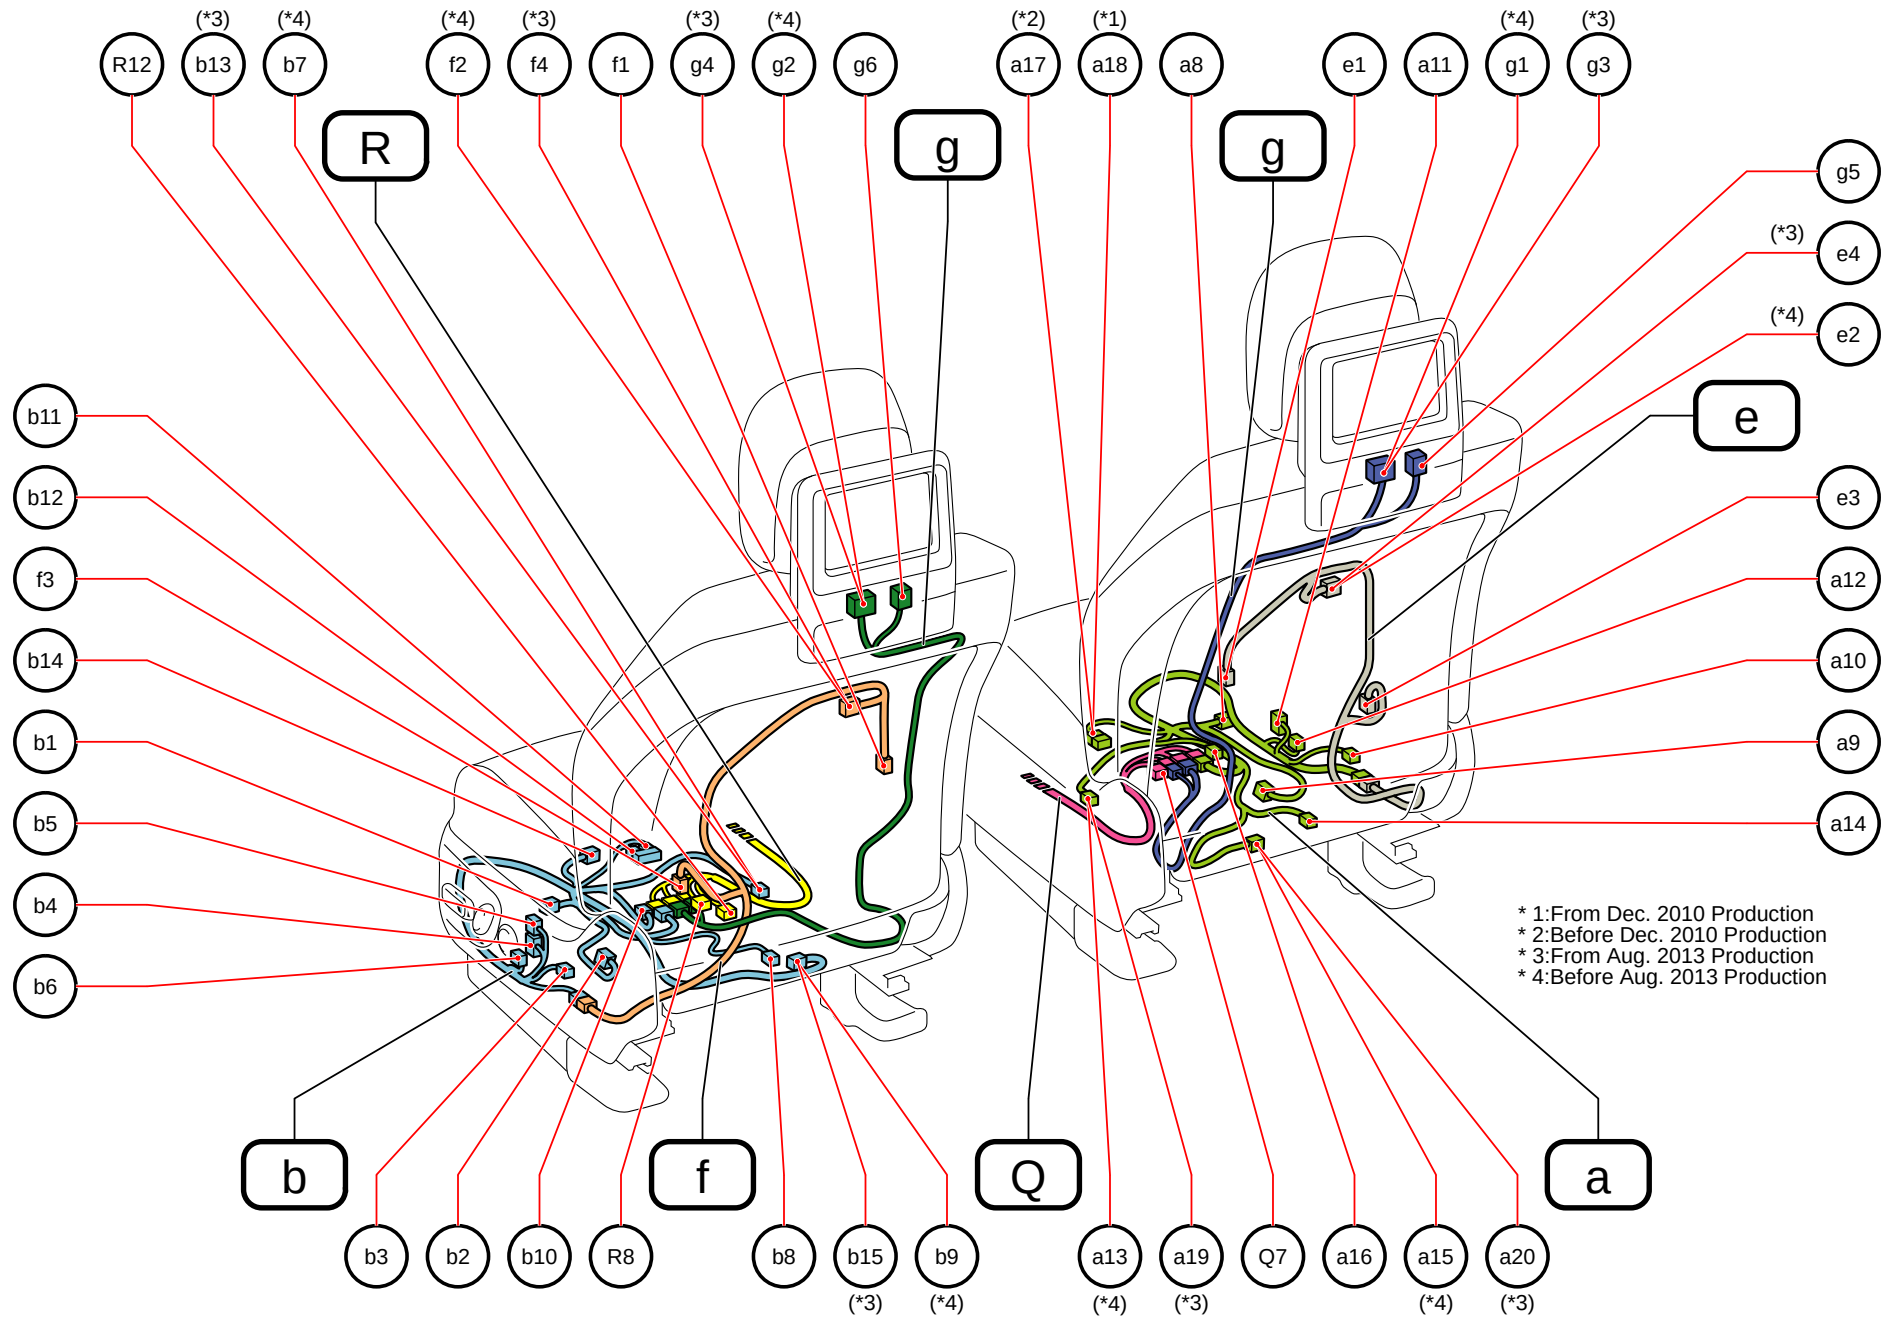

Q7	Front Side Airbag Squib Circuit RH
R8	Front Side Airbag Squib Circuit LH
R12	Front Seat Inner Belt Assembly LH
a8	Separate Type Front Seat Cushion Spring Assembly RH
a9	Separate Type Front Seat Cushion Spring Assembly RH
a10	Separate Type Front Seat Cushion Spring Assembly RH
a11	Front Power Seat Switch RH
a12	Front Power Seat Switch Assembly RH
a13	Front Seat Heater Assembly RH
a14	Separate Type Front Seat Cushion Spring Assembly RH
a15	Seat Cushion Climate Control Blower Assembly RH
a16	Front Seat Inner Belt Assembly RH
a17	Junction Connector
a18	Junction Connector
a19	Front Seat Heater Assembly RH
a20	Seat Cushion Climate Control Blower Assembly RH
b1	Separate Type Front Seat Cushion Spring Assembly LH
b2	Separate Type Front Seat Cushion Spring Assembly LH
b3	Separate Type Front Seat Cushion Spring Assembly LH
b4	Front Position Control ECU and Switch Assembly LH (Front Power Seat Switch LH)
b5	Front Position Control ECU and Switch Assembly LH (Front Power Seat Switch LH)
b6	Front Power Seat Switch Assembly LH
b7	Front Seat Heater Assembly LH
b8	Separate Type Front Seat Cushion Spring Assembly LH
b9	Seat Cushion Climate Control Blower Assembly LH
b10	Front Seat Inner Belt Assembly LH
b11	Junction Connector
b12	Junction Connector
b13	Front Seat Heater Assembly LH
b14	Junction Connector
b15	Seat Cushion Climate Control Blower Assembly LH
e1	Separate Type Front Seat Back Assembly RH
e2	Seat Back Climate Control Blower RH
e3	Separate Type Front Seat Back Assembly RH
e4	Seat Back Climate Control Blower RH
f1	Separate Type Front Seat Back Assembly LH
f2	Seat Back Climate Control Blower LH
f3	Separate Type Front Seat Back Assembly LH
f4	Seat Back Climate Control Blower LH
g1	Multi-Media Module Display Assembly RH
g2	Multi-Media Module Display Assembly LH
g3	Multi-Media Module Display Assembly RH
g4	Multi-Media Module Display Assembly LH
g5	Multi-Media Module Display Assembly RH
g6	Multi-Media Module Display Assembly LH

 
Position of Parts in Seat (Front Seat)




90980-11864




90980-11864

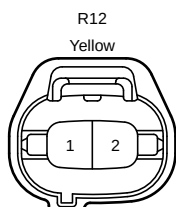


90980-11156

 


90980-12341

 


90980-12341

 


90980-12341

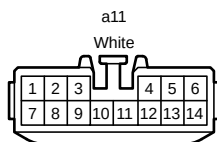


90980-10807

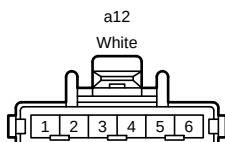


90980-10933

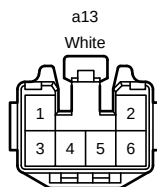


90980-12180

 


90980-11918

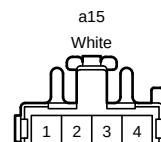


90980-12335

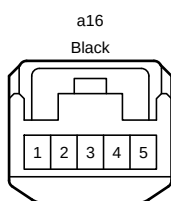


90980-12366

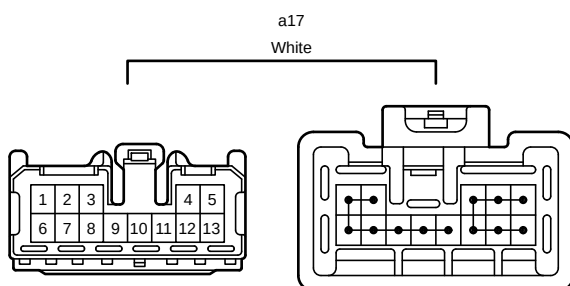


90980-11782

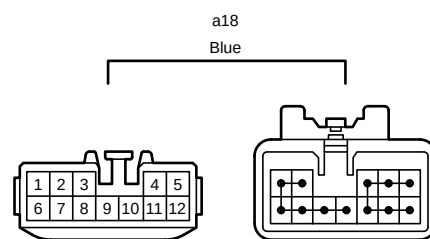


90980-12346

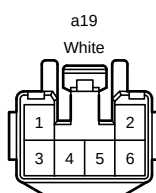


90980-12344

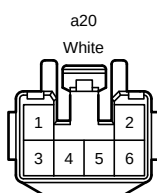


90980-12344

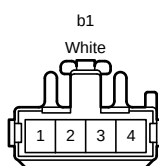


90980-12335

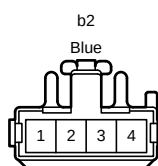


90980-12335

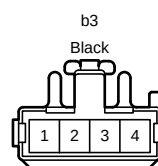


90980-12335

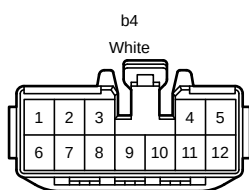


90980-11782

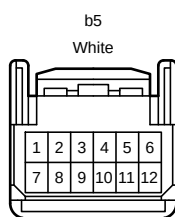


90980-12552

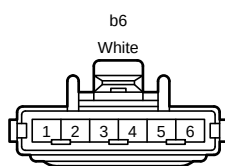


90980-10933

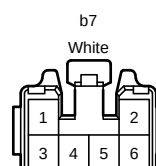


90980-12180

 


90980-11918

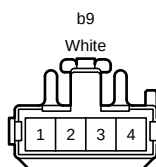

90980-12335

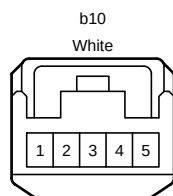


90980-12366

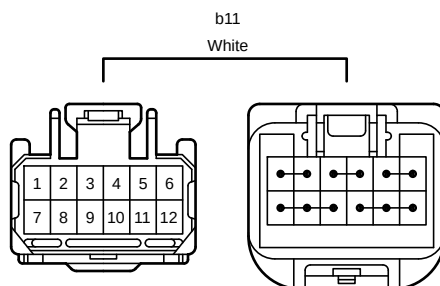


90980-11661


Position of Parts in Seat (Front Seat)

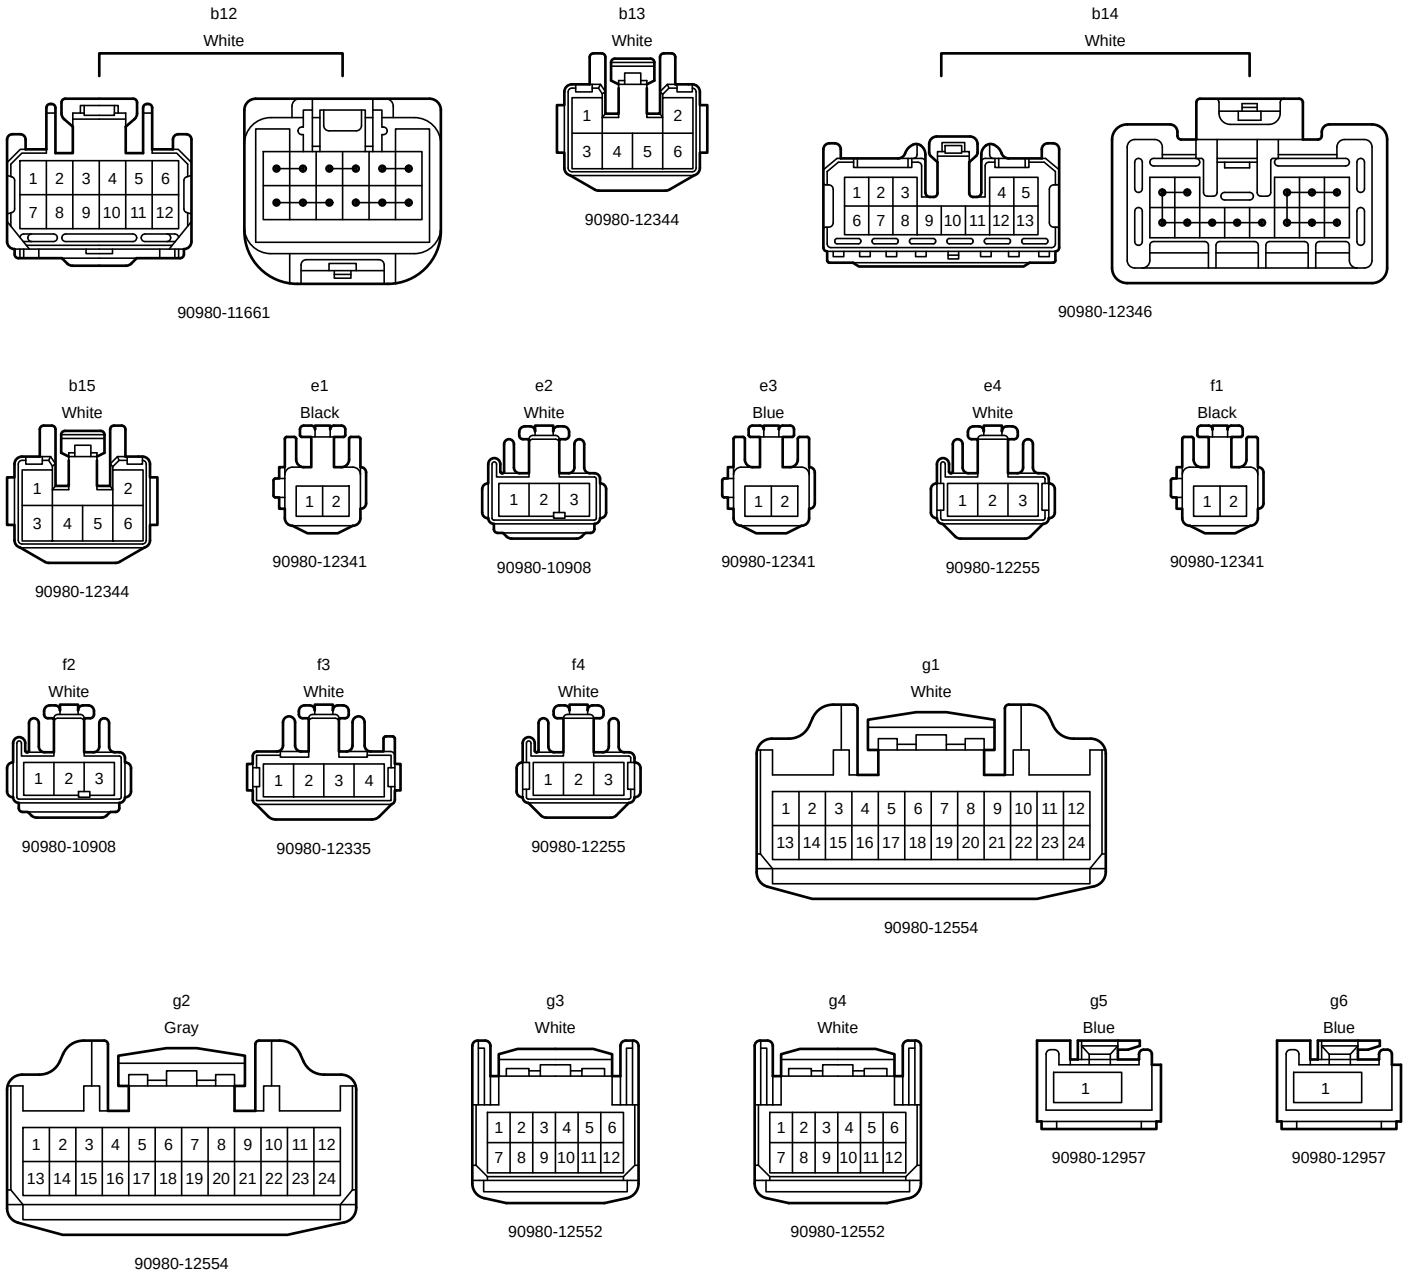


- * 1: From Aug. 2013 Production
- * 2: Before Aug. 2013 Production
- * 3: w/ Climate Control Seat
- * 4: w/o Climate Control Seat
- * 5: w/ Climate Control Seat *1
- * 6: w/o Climate Control Seat *1

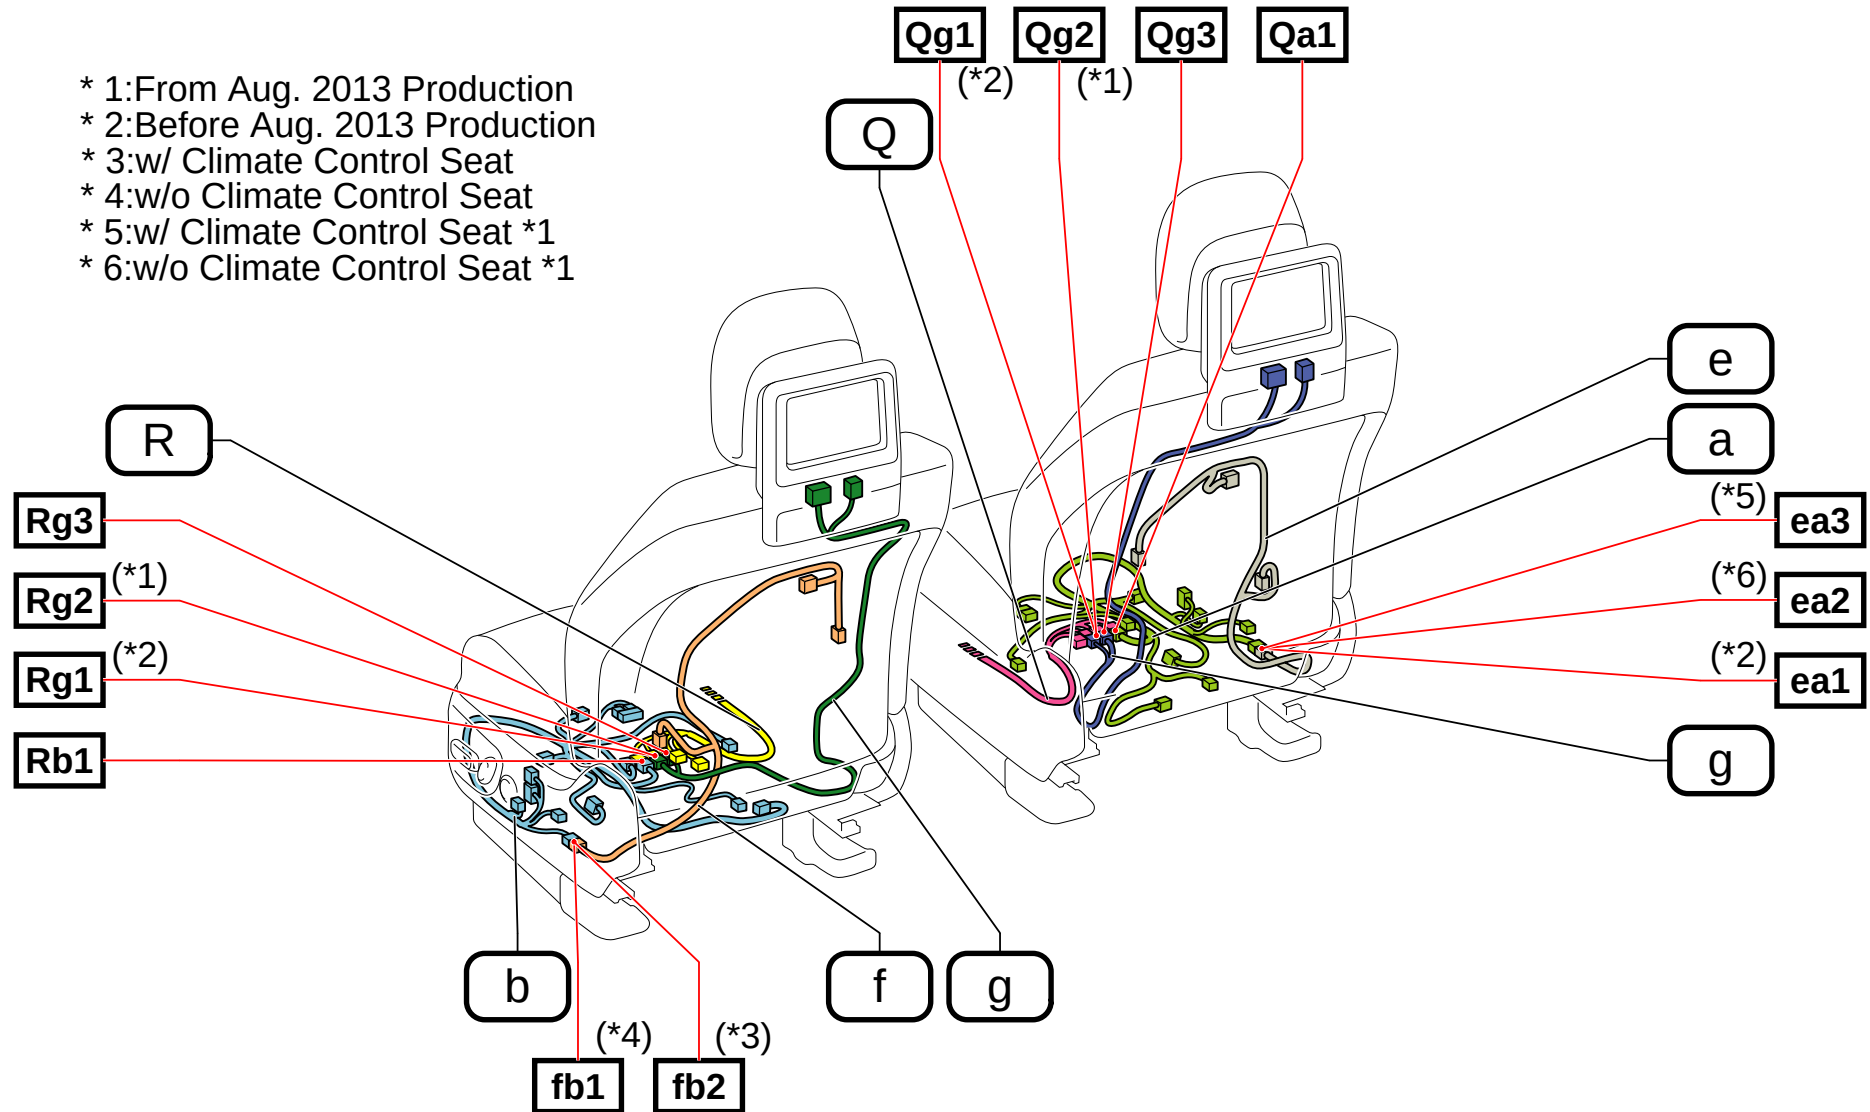



Wire and Wire in Seat (Front Seat)

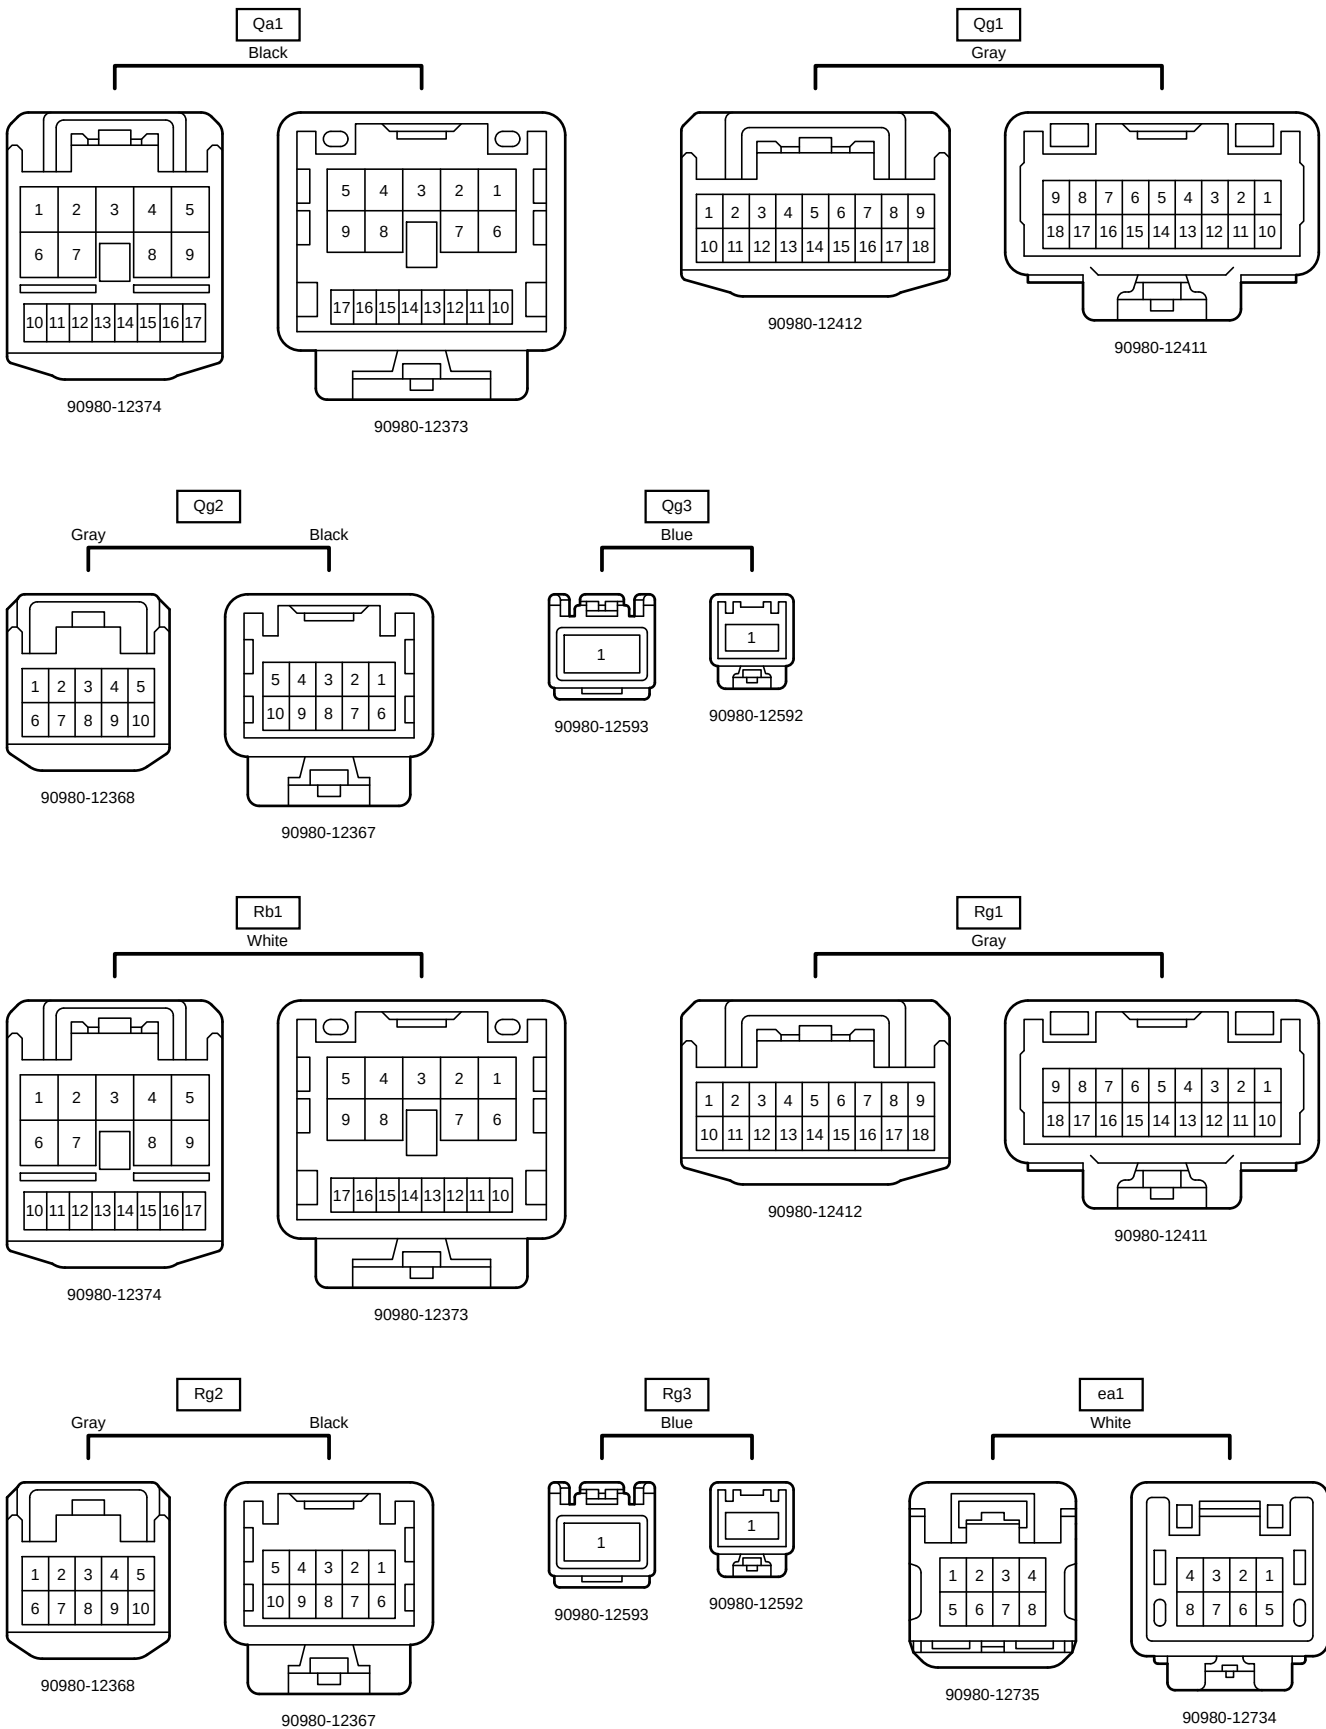

Wire and Wire in Seat (Front Seat)

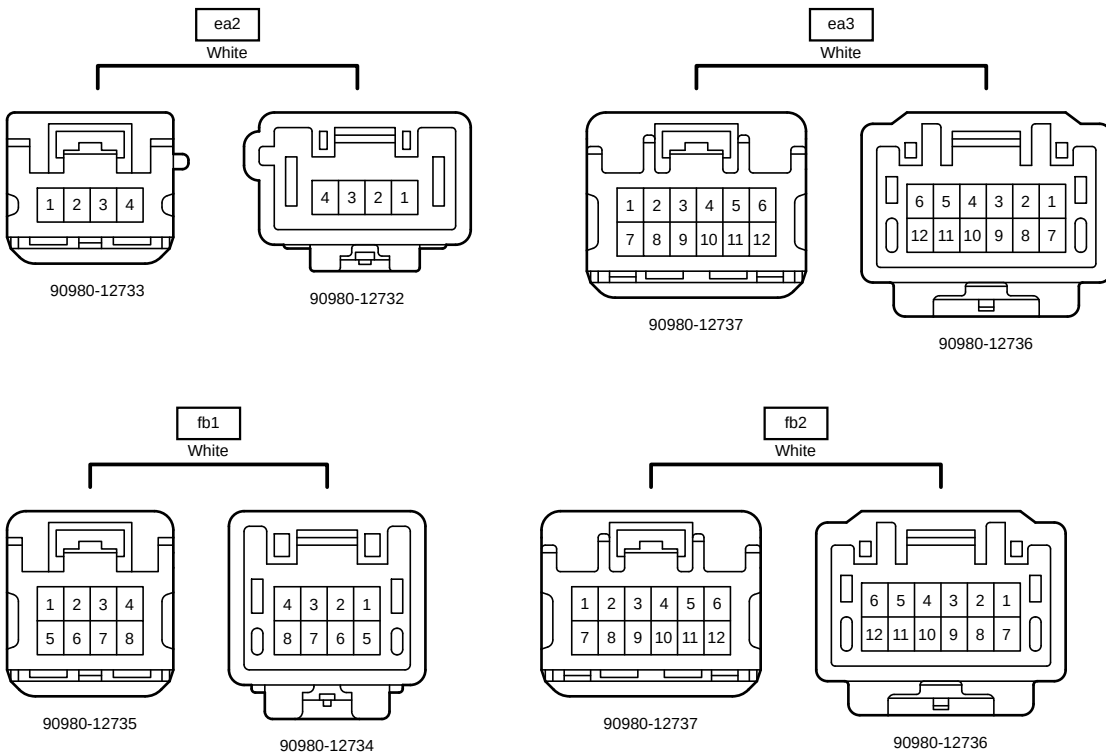


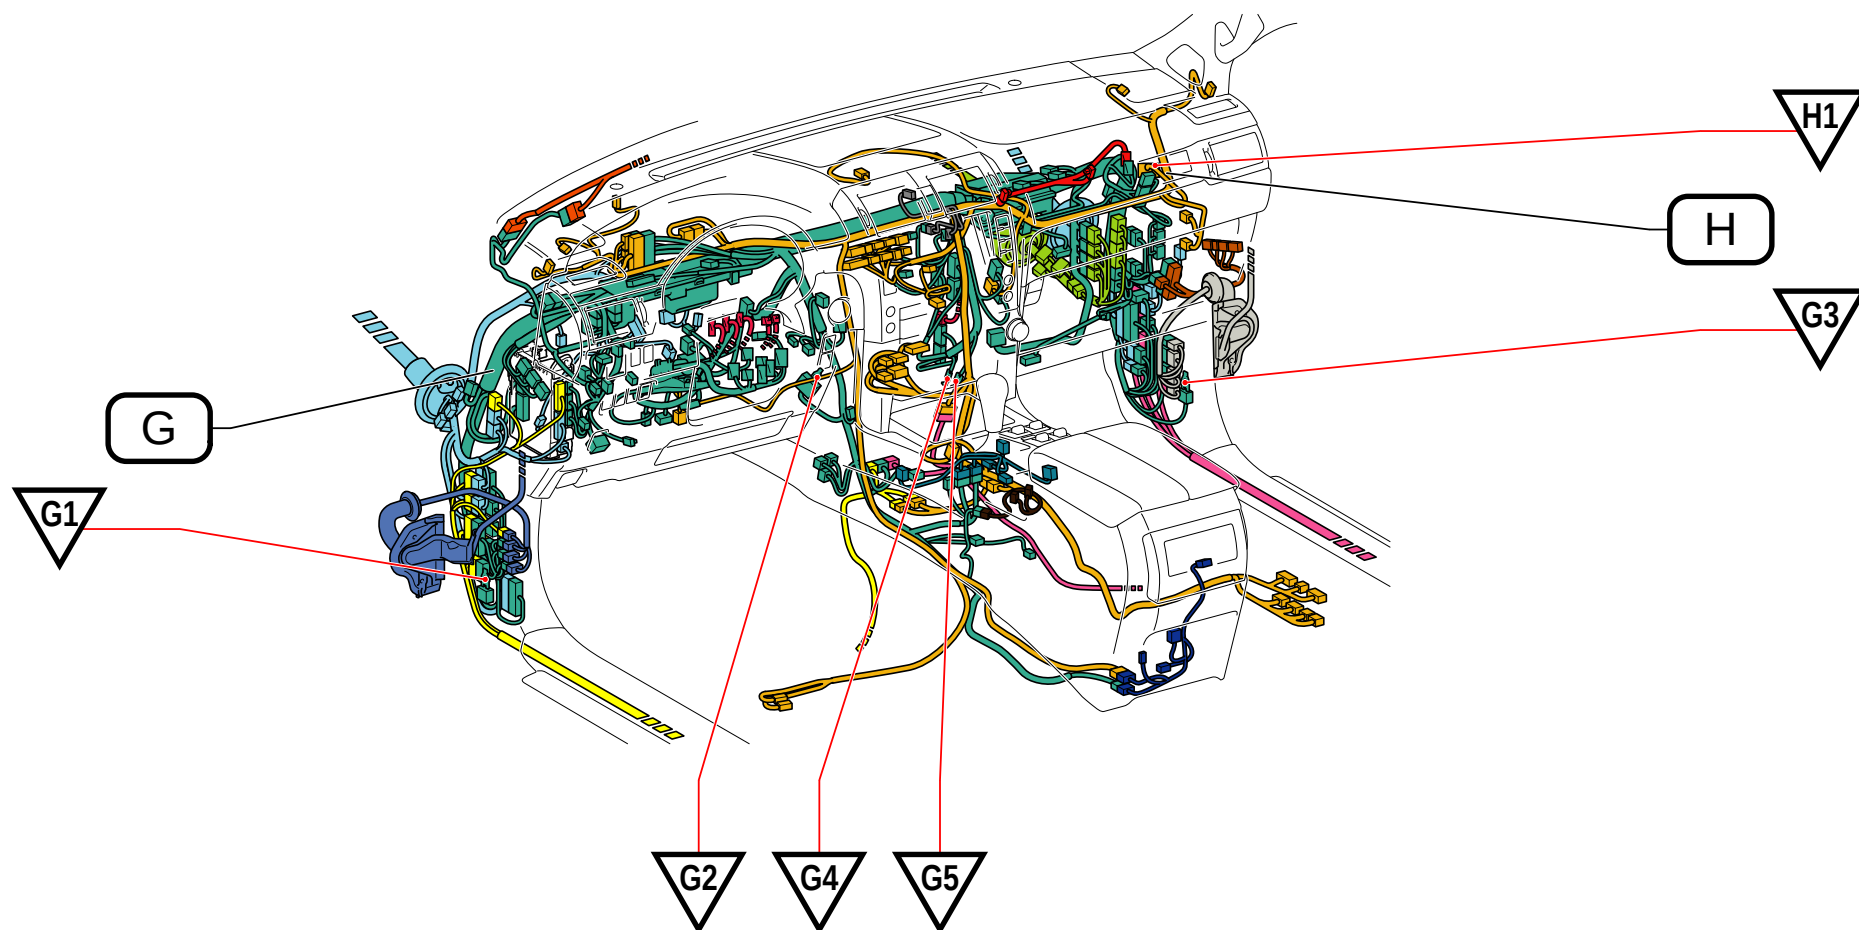

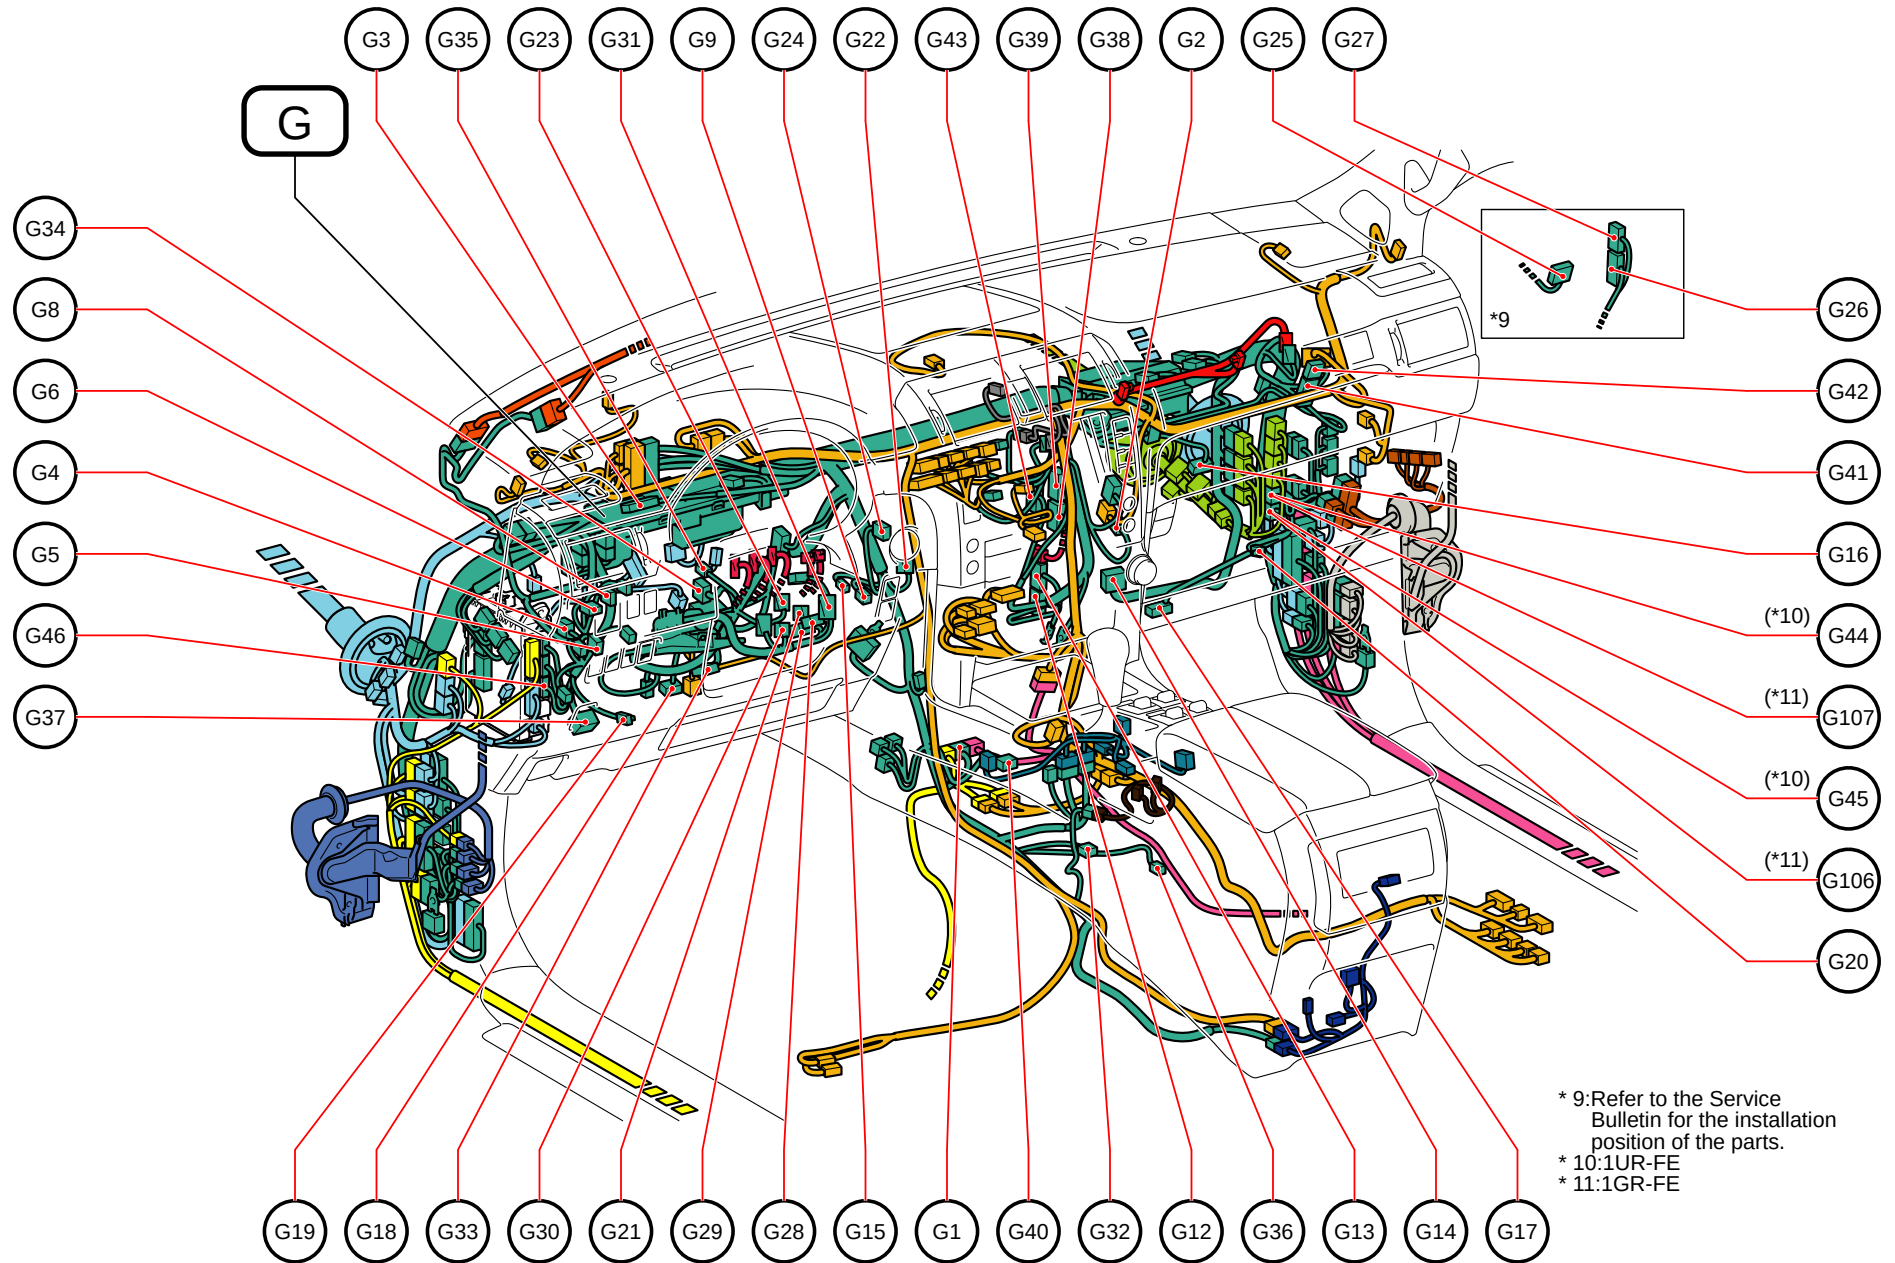


G1	Airbag Sensor Assembly
G2	Mayday Battery
G3	Combination Meter Assembly
G4	Turn Signal Flasher Assembly
G5	VSC Off Switch
G6	Outer Mirror Switch Assembly
G8	Light Control Rheostat
G9	Center Differential Lock Switch
G12	A/C Amplifier Assembly
G13	A/C Amplifier Assembly
G14	Front Blower with Fan Motor Sub-Assembly
G15	Intake Air Temperature Sensor
G16	Glove Box Light
G17	Interior Foot Light RH
G18	Interior Foot Light LH
G19	Lower No. 1 Instrument Panel Airbag Assembly
G20	Lower No. 2 Instrument Panel Airbag Assembly
G21	Steering Sensor
G22	No. 1 Clearance Warning Buzzer
G23	Steering Lock Actuator Assembly
G24	Engine Switch
G25	ID Code Box
G26	Certification ECU Assembly
G27	Certification ECU Assembly
G28	Spiral Cable Sub-Assembly
G29	Spiral Cable Sub-Assembly
G30	Spiral Cable Sub-Assembly , Steering Wheel Heater Control Assembly
G31	Headlight Dimmer Switch Assembly
G32	Shift Lock Control ECU Sub-Assembly
G33	Multiplex Tilt & Telescopic ECU
G34	Seat Belt Control ECU
G35	Seat Belt Control ECU
G36	Transmission Control Switch
G37	DLC3
G38	Power Management Control ECU
G39	Power Management Control ECU
G40	Yaw Rate Sensor Assembly
G41	Four Wheel Drive Control ECU
G42	Four Wheel Drive Control ECU
G43	Driving Support ECU Assembly
G44	ECM
G45	ECM
G46	Main Body ECU
G106	ECM
G107	ECM


Position of Parts in Instrument Panel (Before Aug. 2013 Production)

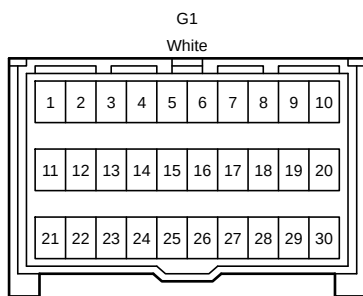


90980-12391

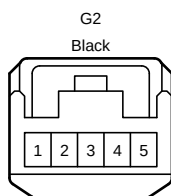


90980-12366

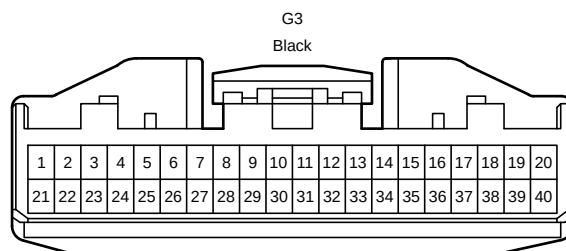


90980-12557

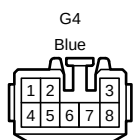


90980-10799

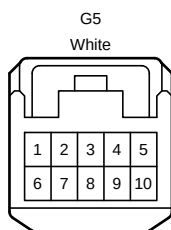


90980-12368

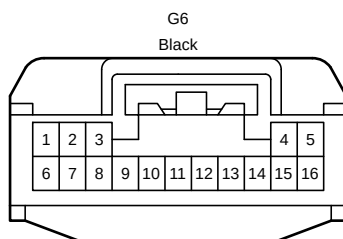


90980-12423

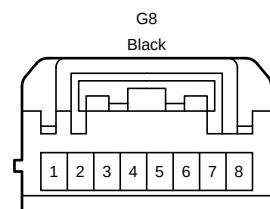


90980-12550

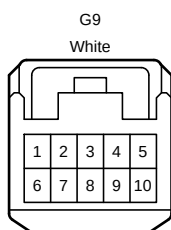


90980-12368

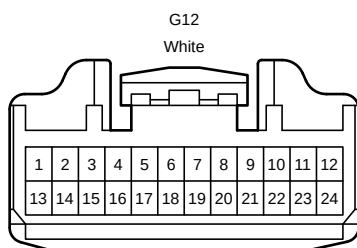


90980-12554

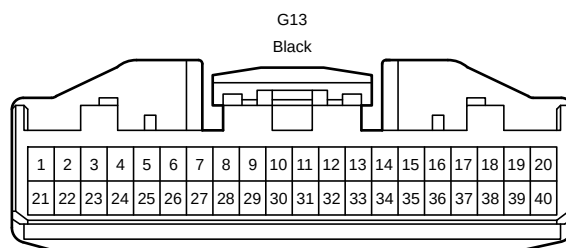





90980-12557

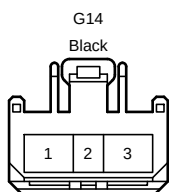


90980-11667

 


90980-11918

    


90980-12452

 


90980-12452

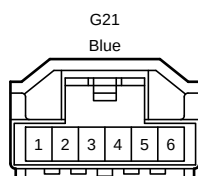


90980-11986

 

90980-10825

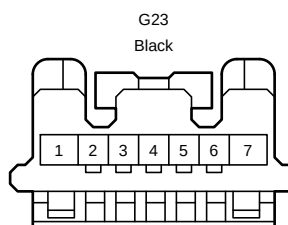


90980-12092

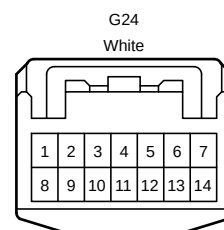


90980-12370


Position of Parts in Instrument Panel (Before Aug. 2013 Production)

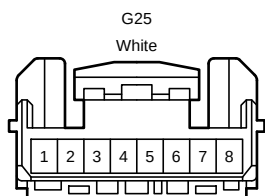


90980-12558

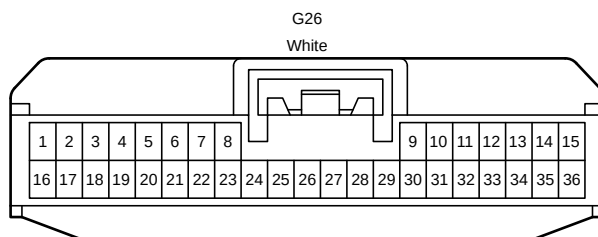


90980-12564

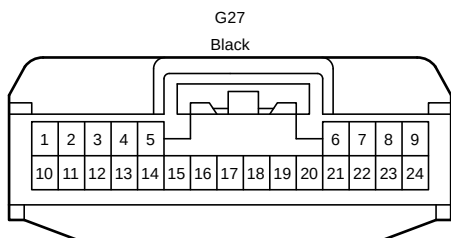


90980-12404

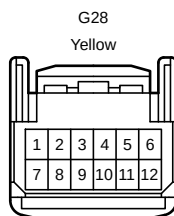


90980-12552

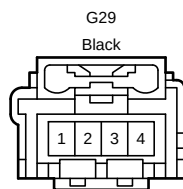


90980-12160

 


90980-10795

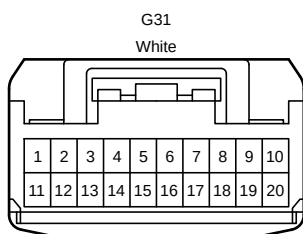


90980-12460

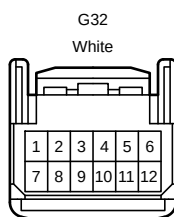


90980-12552

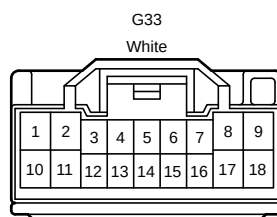


90980-11973

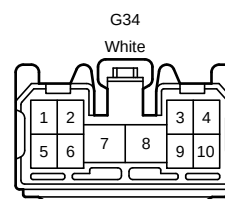


90980-11527

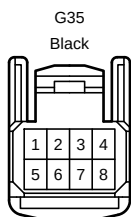


90980-12551

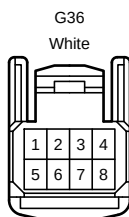


90980-12551

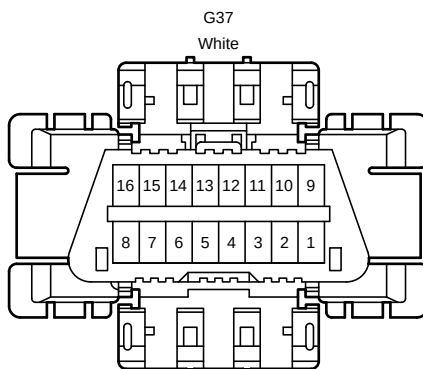

90980-11978

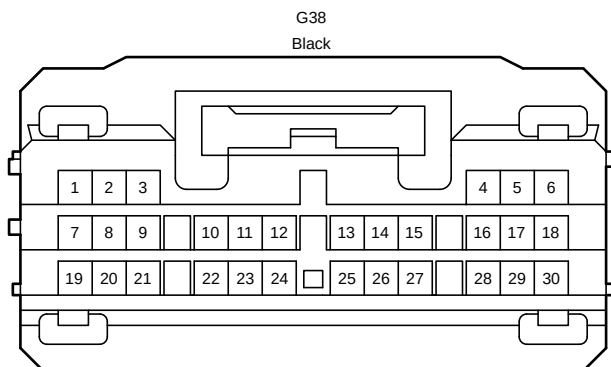


90980-12843

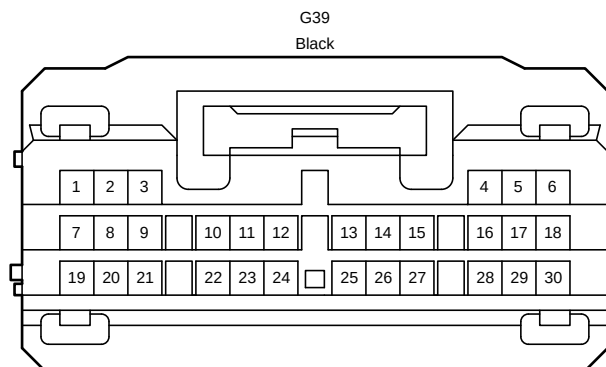


90980-12844


Position of Parts in Instrument Panel (Before Aug. 2013 Production)

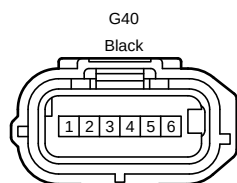


90980-12303

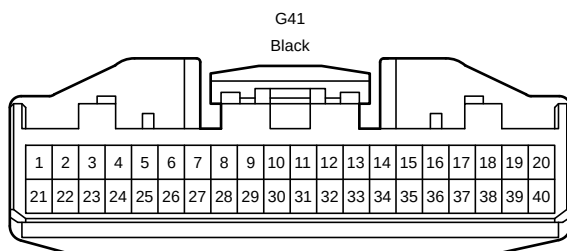


90980-12557

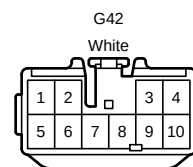


90980-10997

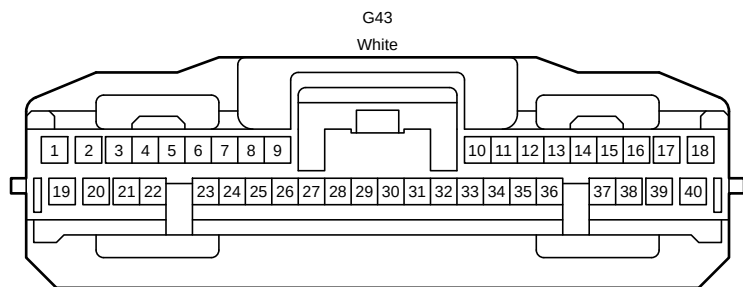


90980-12708

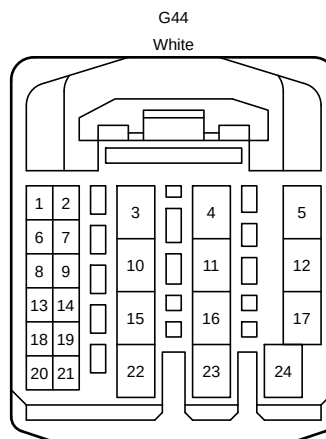


82824-26110

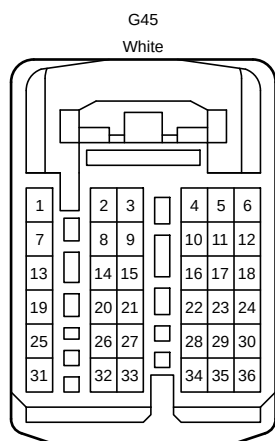


82824-26120

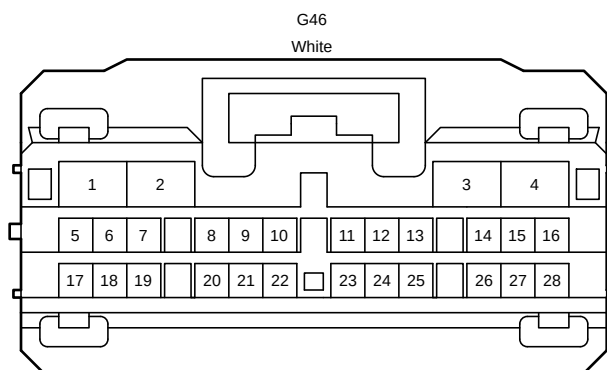


90980-12793

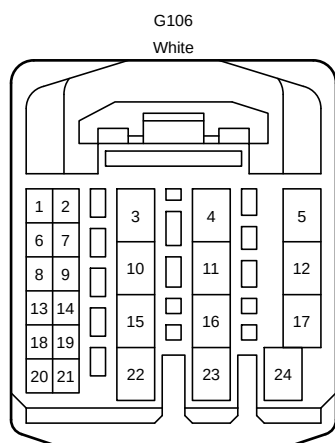

82824-26110

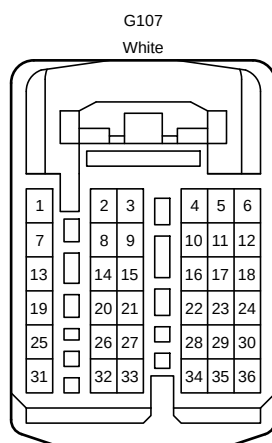


82824-26120

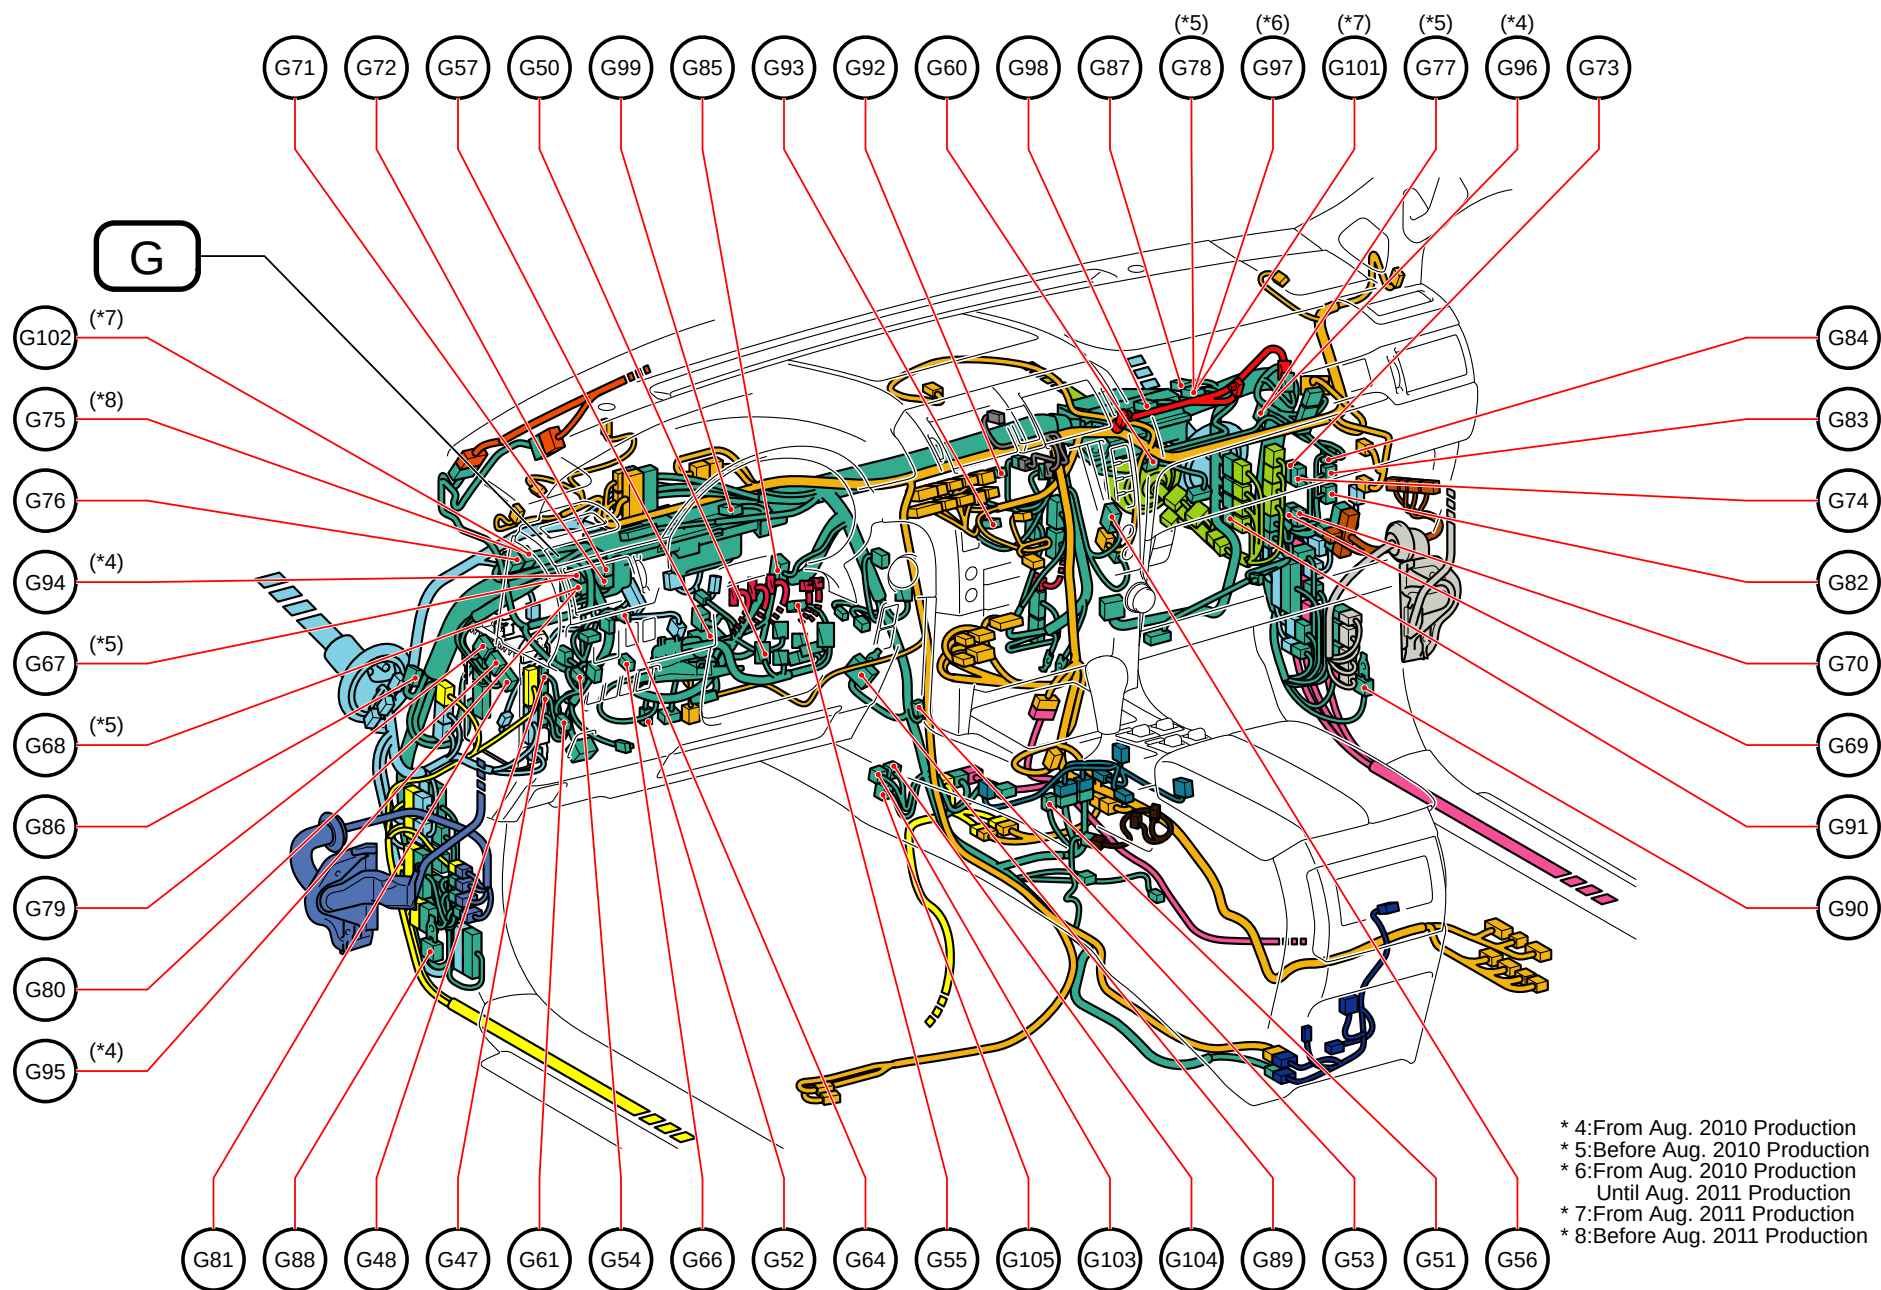

G47	Main Body ECU
G48	Main Body ECU
G50	Windshield Wiper Switch Assembly
G51	Shift Position Indicator (Console Box Assembly)
G52	Pre-Crash System Cancel Switch Assembly
G53	Diode (Shift Position)
G54	Headlight Cleaner Switch Assembly
G55	Power Tilt Motor
G56	Telematics Transceiver
G57	Stabilizer Control ECU
G60	Driving Support Switch Control ECU
G61	Fuel Lid Opener Switch
G64	Trip Switch
G66	Steering Heater Switch
G67	Junction Connector
G68	Junction Connector
G69	Junction Connector
G70	Junction Connector
G71	Junction Connector
G72	Junction Connector
G73	Junction Connector
G74	Junction Connector
G75	Junction Connector
G76	Junction Connector
G77	Junction Connector
G78	Junction Connector
G79	Junction Connector
G80	Junction Connector
G81	Junction Connector
G82	Junction Connector
G83	Junction Connector
G84	Junction Connector
G85	Junction Connector
G86	Junction Terminal
G87	Junction Terminal
G88	Junction Connector
G89	Junction Connector
G90	Junction Connector
G91	Junction Connector
G92	Display & Navigation Module Display
G93	Accessory Meter Assembly
G94	Junction Connector
G95	Junction Connector
G96	Junction Connector
G97	Junction Connector
G98	Diode (Shift Position No. 1)
G99	Diode (Shift Position No. 2)
G101	Junction Connector
G102	Junction Connector
G103	Quick Heater Assembly
G104	Quick Heater Assembly
G105	Quick Heater Assembly


Position of Parts in Instrument Panel (Before Aug. 2013 Production)

G47
White

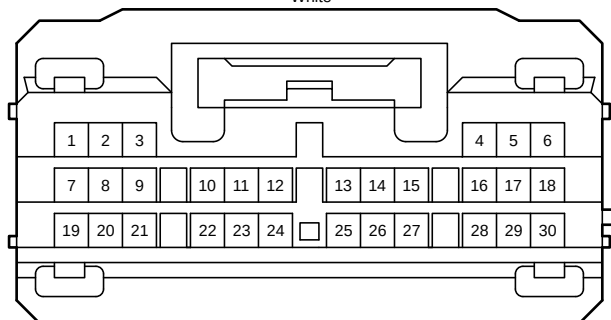


90980-12753

G48
White

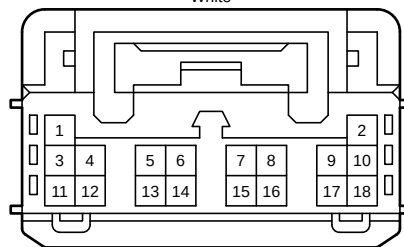


90980-12750

G50
White

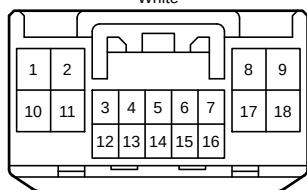


90980-12376

G51
Gray

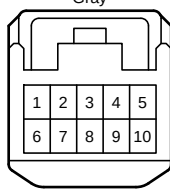

90980-12368

 G52
Gray




90980-10860

G53
White




90980-11071

G54
White

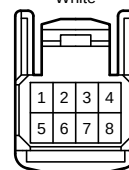


90980-12551

G55
White

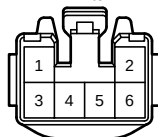


90980-10797

G56
White

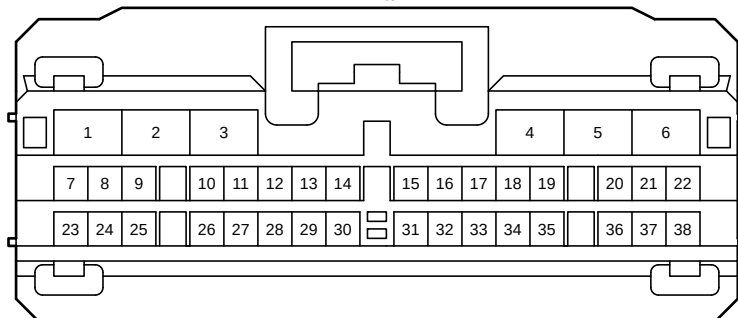


90980-12817

G57
Black

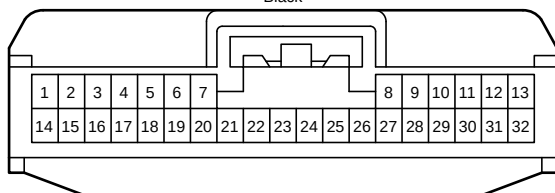


90980-12422

G60
Black

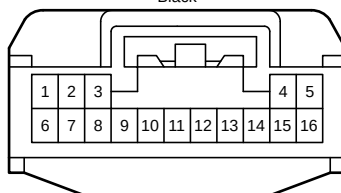


90980-12423

G61
White

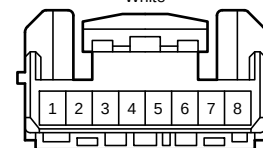


90980-12558


Position of Parts in Instrument Panel (Before Aug. 2013 Production)

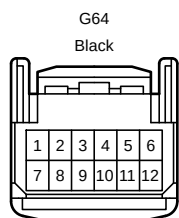


90980-12552

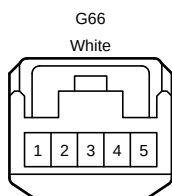


90980-12366

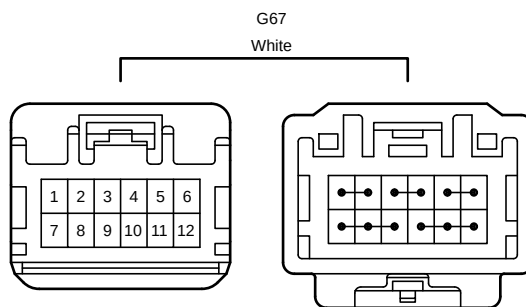


90980-12737

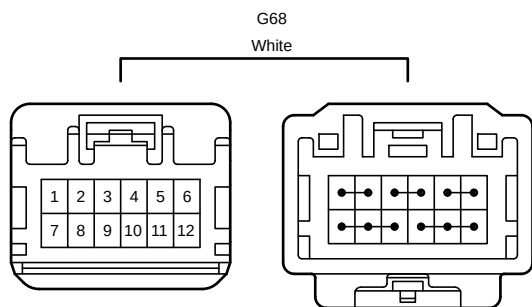


90980-12737

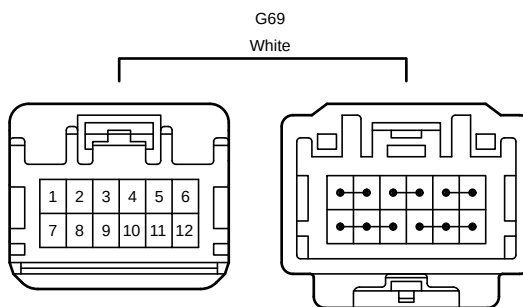


90980-12737

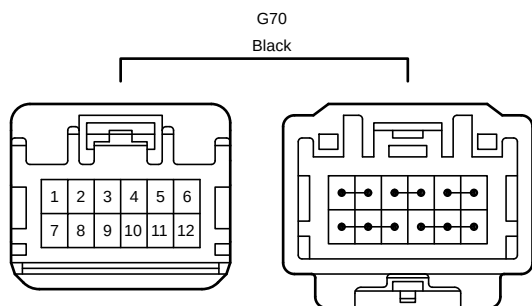


90980-12737

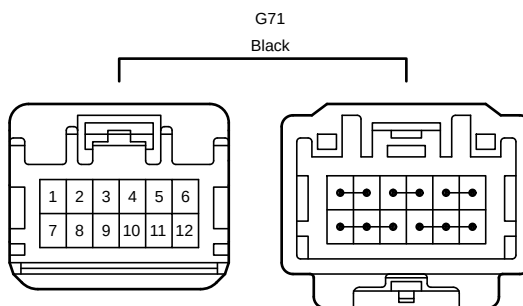

90980-12737

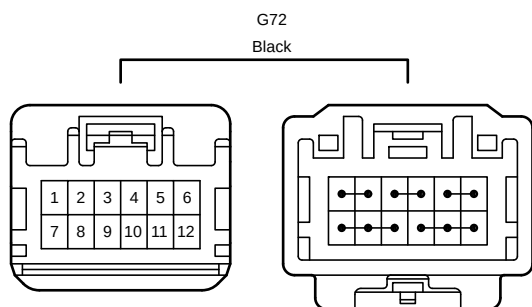


90980-12737

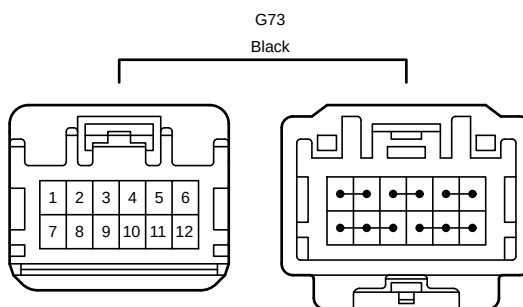


90980-12737


Position of Parts in Instrument Panel (Before Aug. 2013 Production)

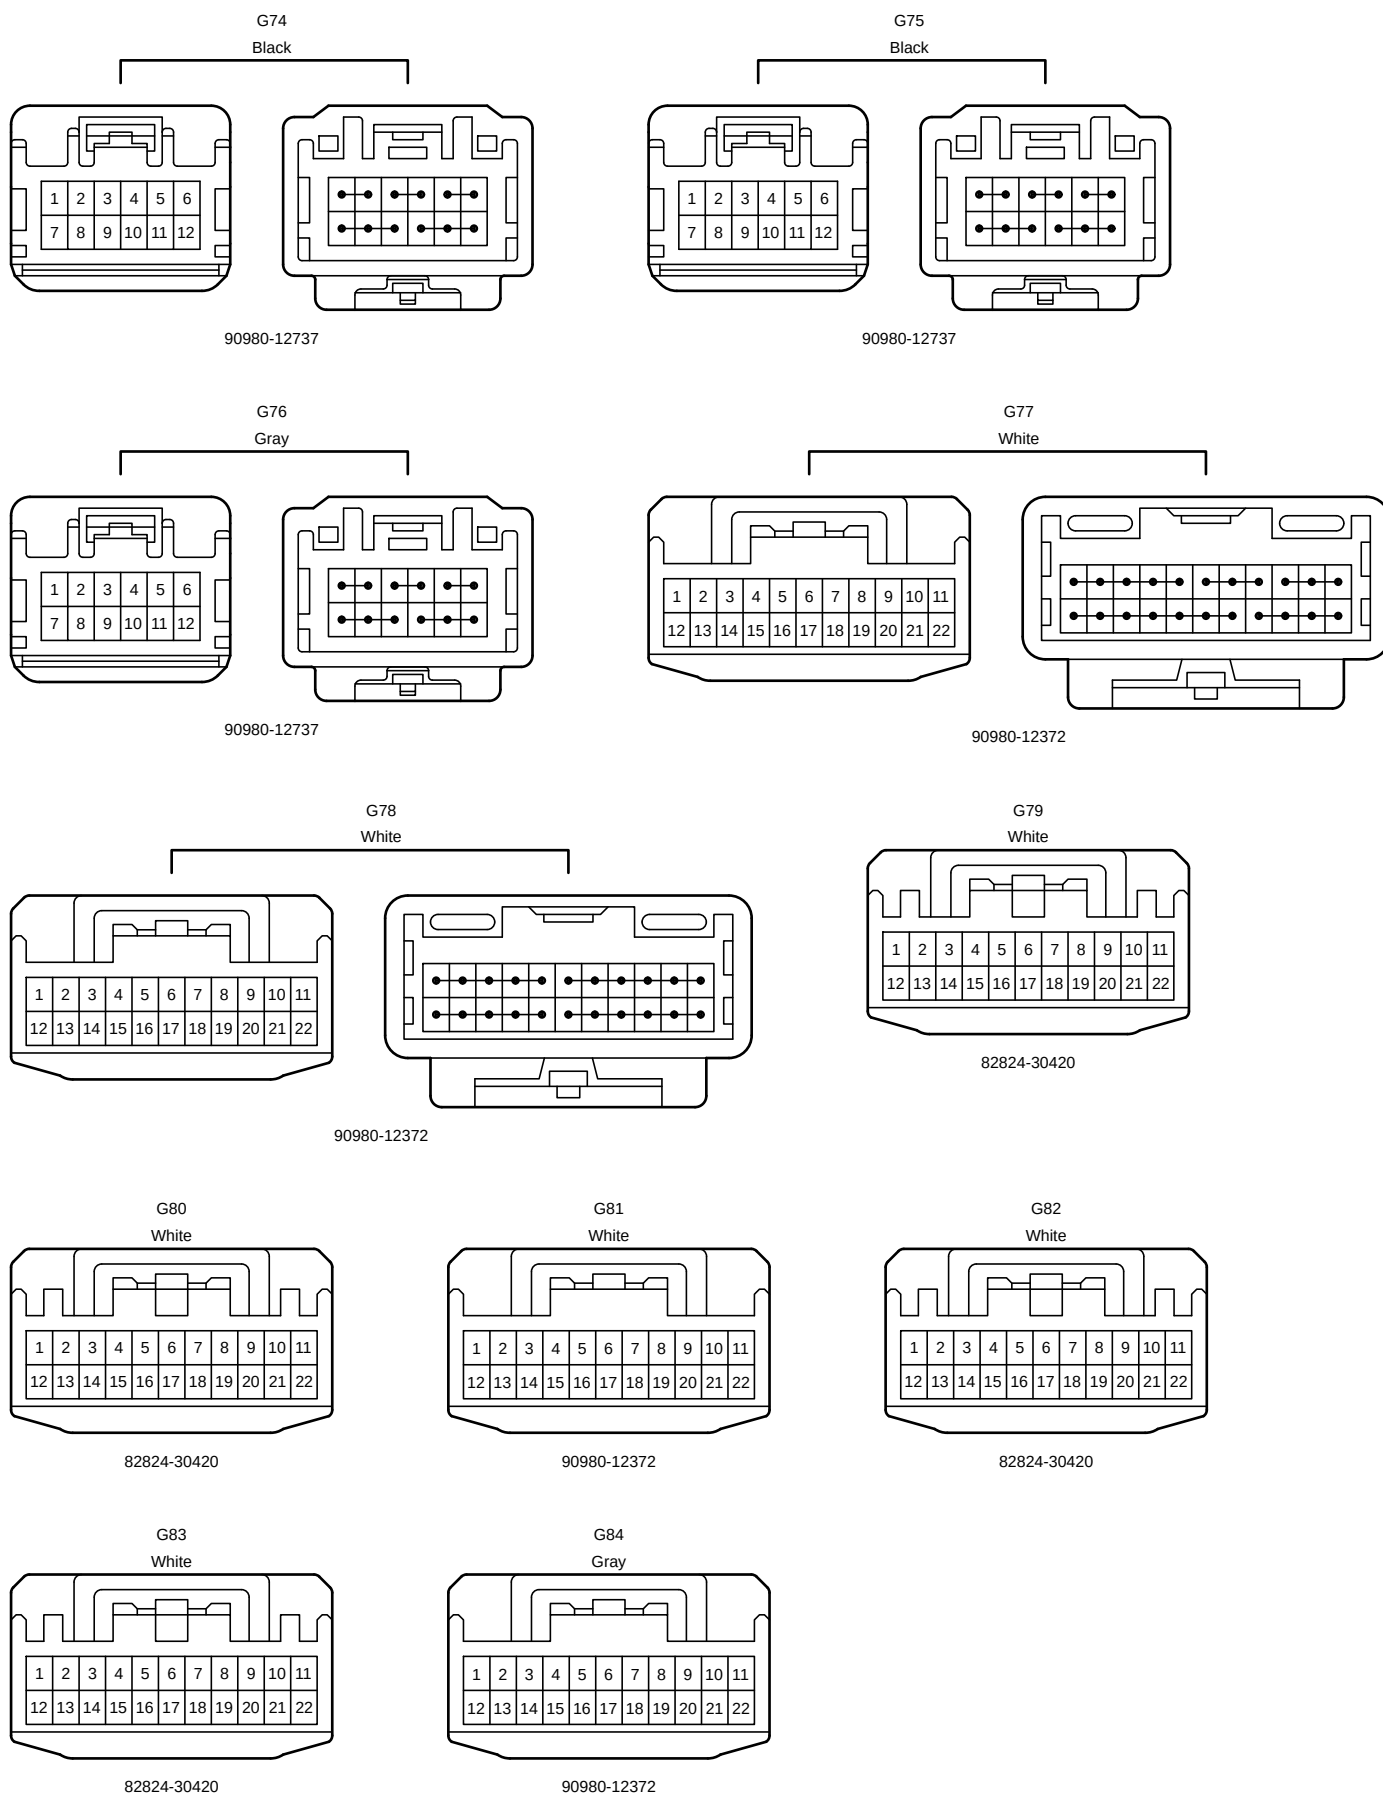


Position of Parts in Instrument Panel (Before Aug. 2013 Production)

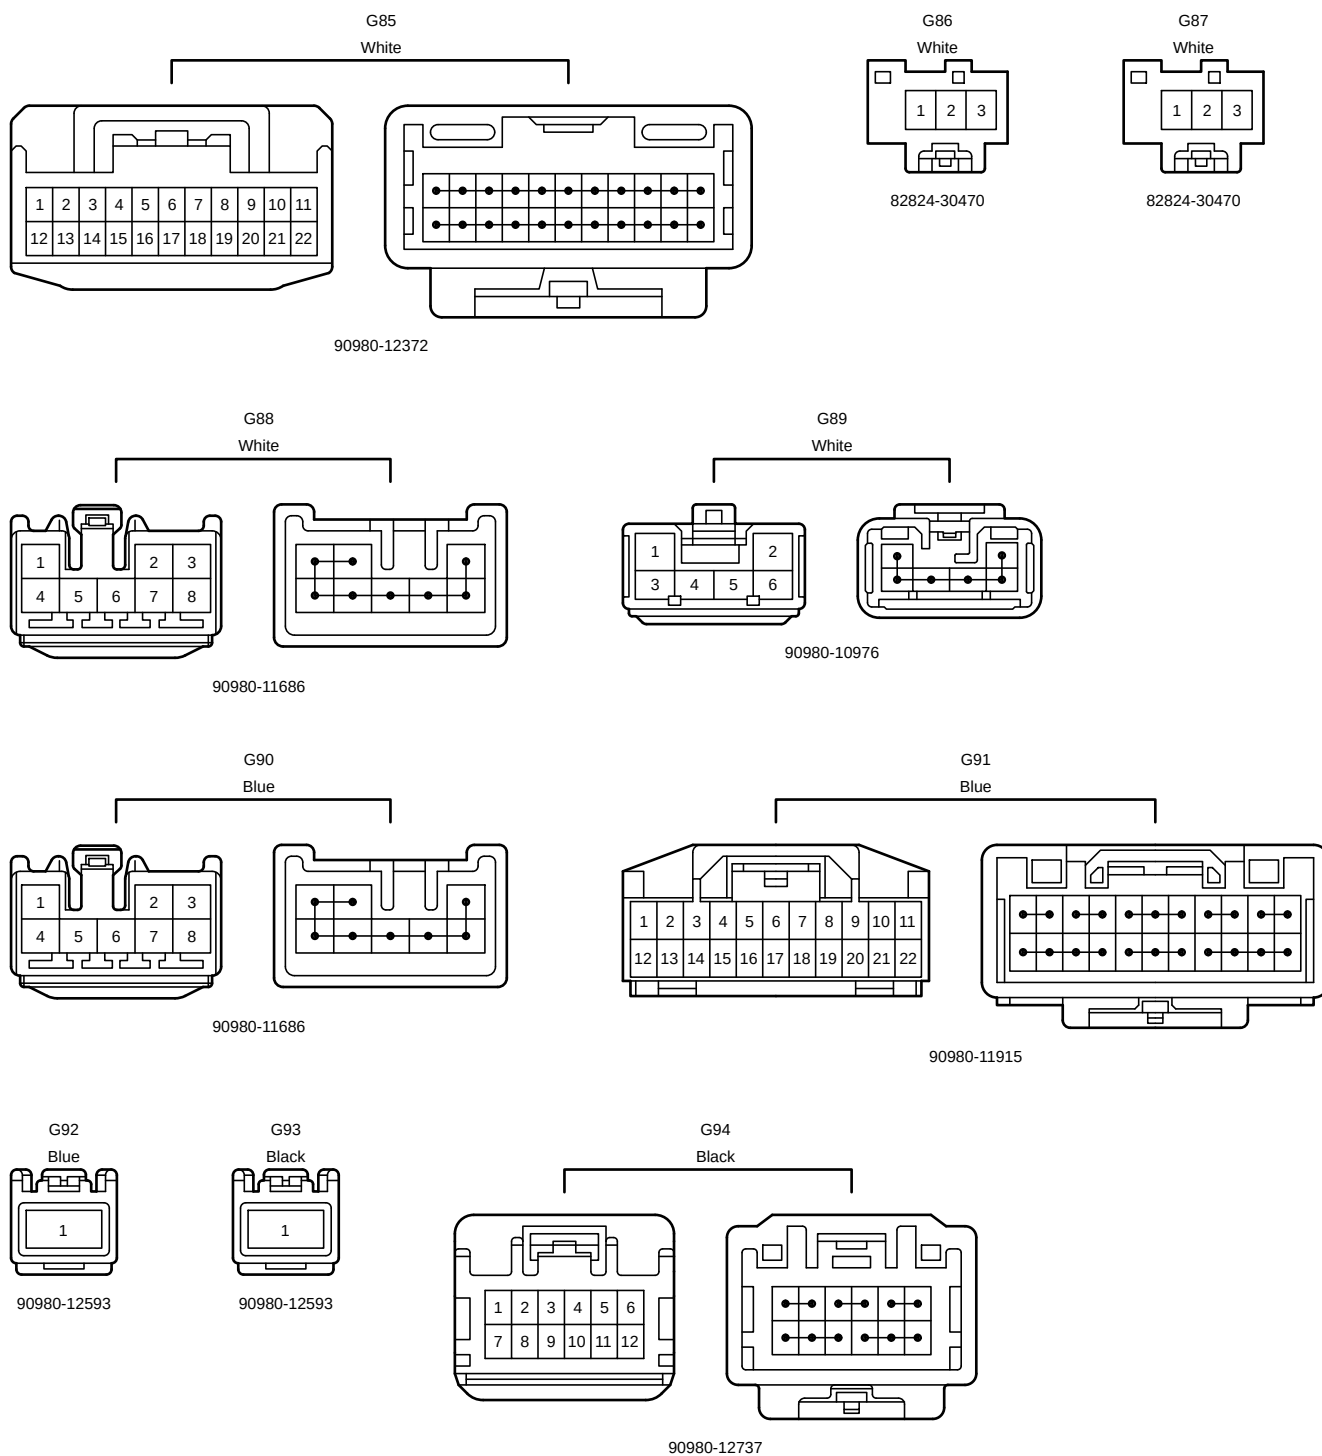


Position of Parts in Instrument Panel (Before Aug. 2013 Production)

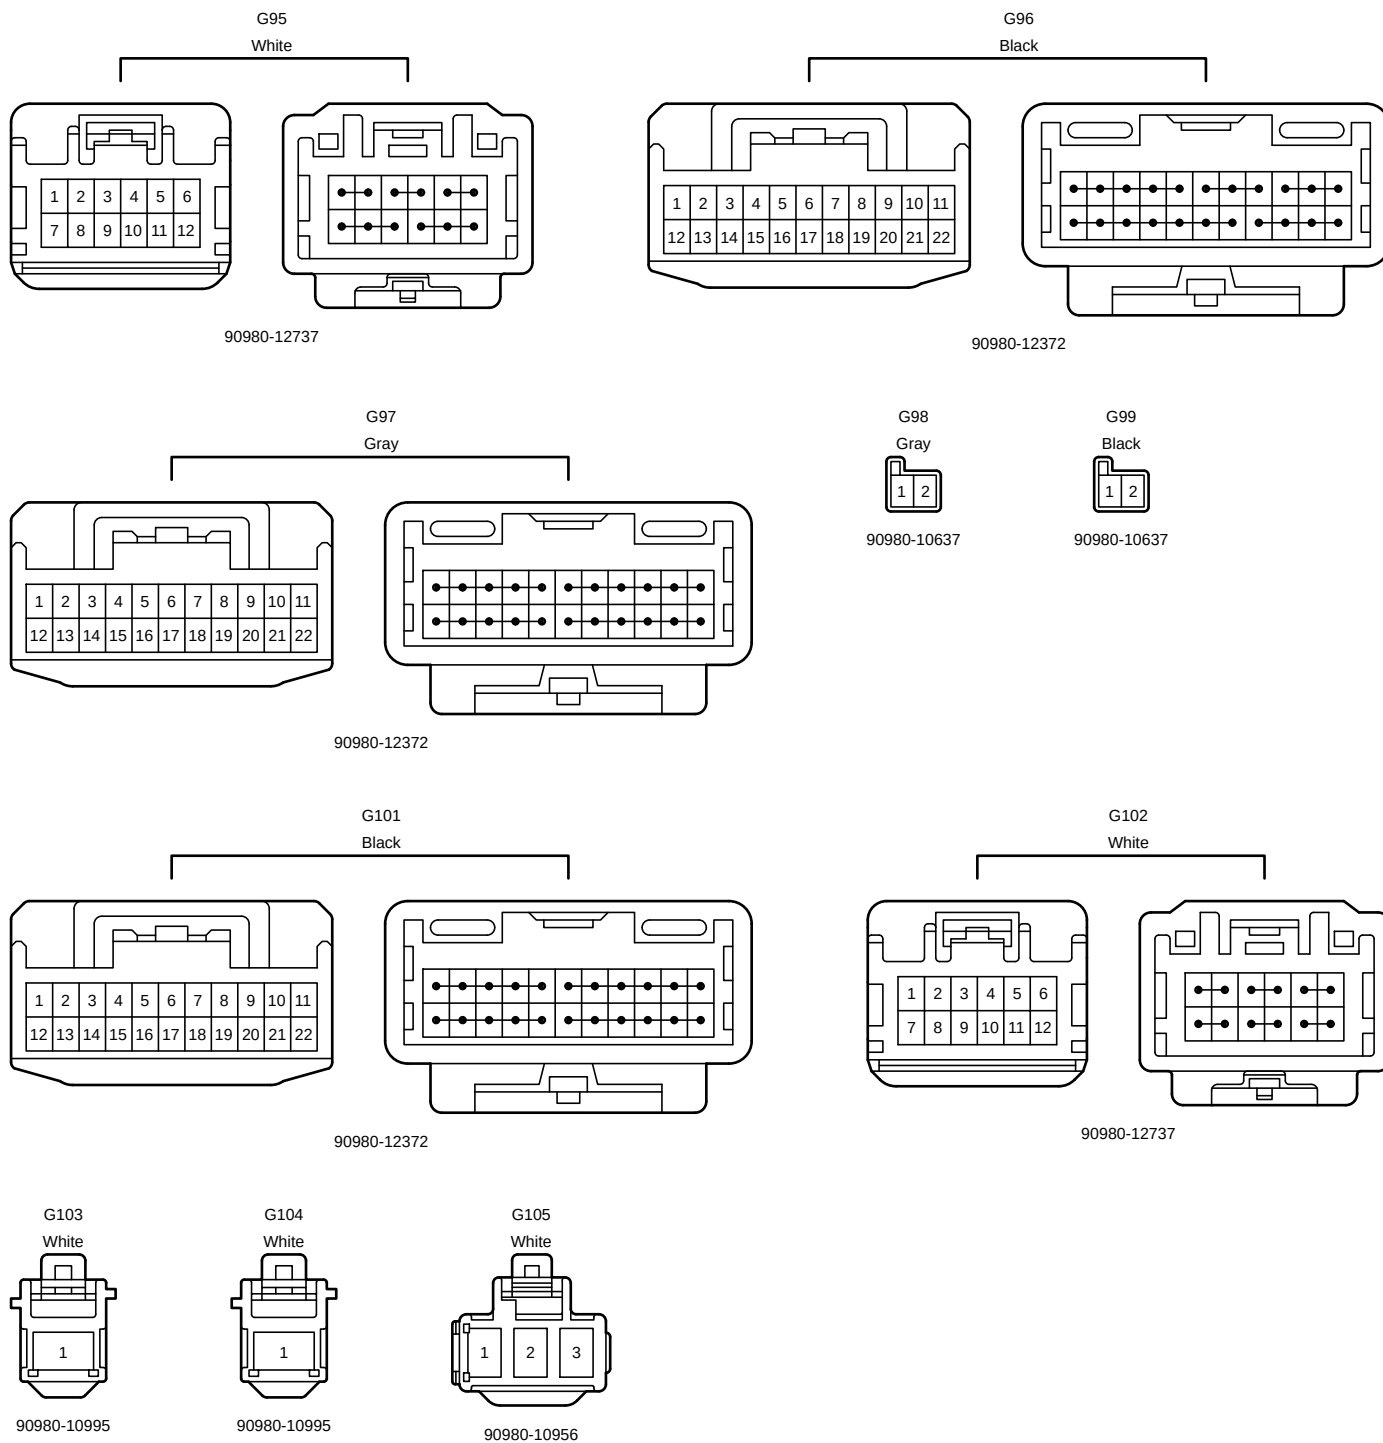

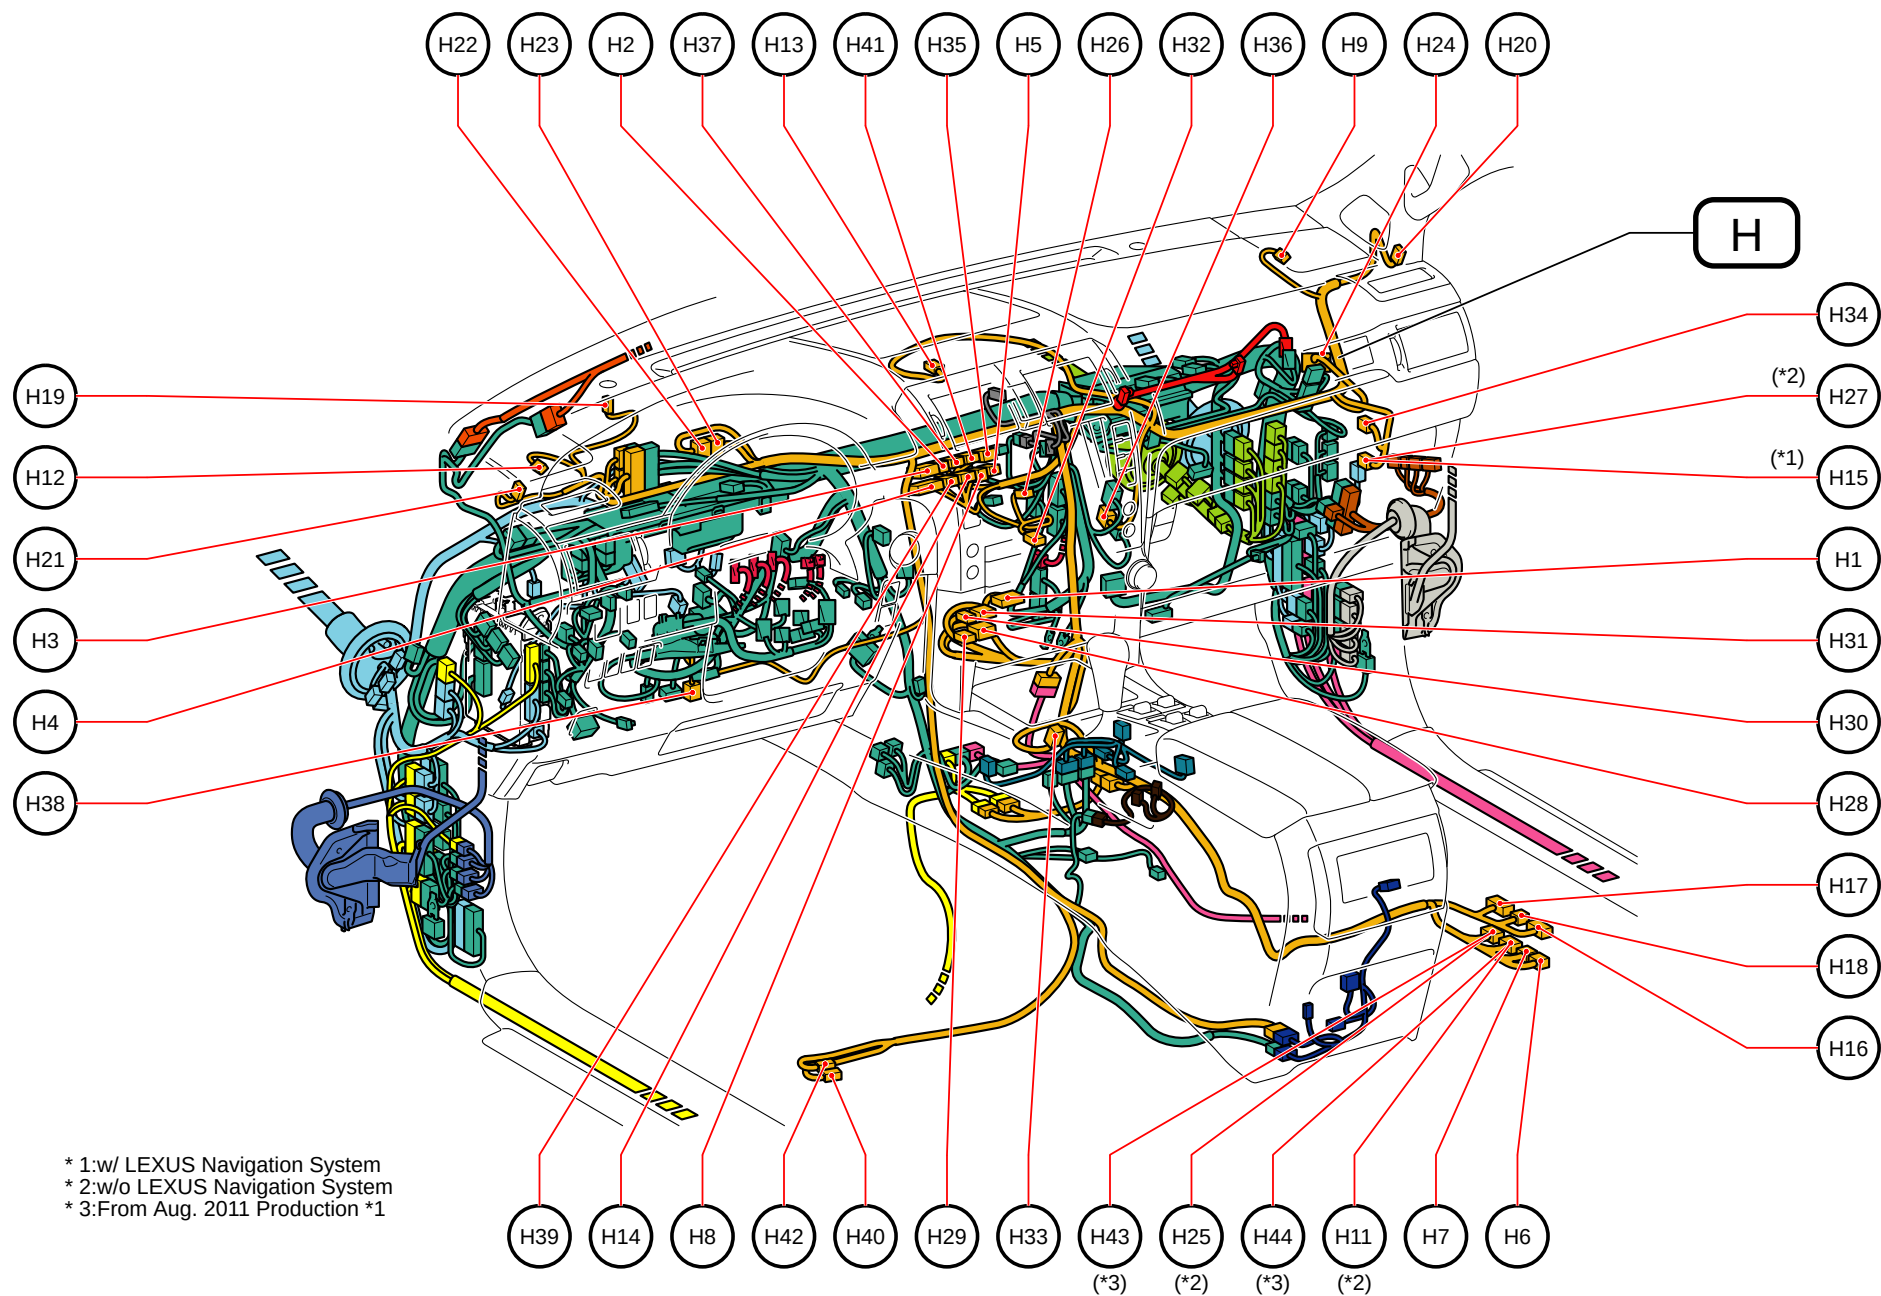


H1	Radio Receiver Assembly
H2	Display & Navigation Module Display
H3	Display & Navigation Module Display
H4	Display & Navigation Module Display
H5	Display & Navigation Module Display
H6	Stereo Component Amplifier Assembly
H7	Stereo Component Amplifier Assembly
H8	Display & Navigation Module Display
H9	Front No. 1 Speaker Assembly RH
H11	Stereo Component Amplifier Assembly
H12	Front No. 1 Speaker Assembly LH
H13	Front No. 4 Speaker Assembly
H14	Display & Navigation Module Display
H15	Multi-Media Interface ECU
H16	Multi-Display Controller Sub-Assembly
H17	Multi-Display Controller Sub-Assembly
H18	Multi-Display Controller Sub-Assembly
H19	Automatic Light Control Sensor
H20	Front No. 3 Speaker Assembly RH
H21	Front No. 3 Speaker Assembly LH
H22	Junction Connector
H23	Junction Connector
H24	Junction Connector
H25	Stereo Component Amplifier Assembly
H26	Accessory Meter Assembly
H27	Multi-Media Interface ECU
H28	Radio Receiver Assembly
H29	Radio Receiver Assembly
H30	Radio Receiver Assembly
H31	Radio Receiver Assembly
H32	Integration Control and Panel Assembly
H33	No. 1 Stereo Jack Adapter Assembly
H34	Multi-Media Interface ECU
H35	Display & Navigation Module Display
H36	Telematics Transceiver
H37	Display & Navigation Module Display
H38	IEEE Connector
H39	Display & Navigation Module Display
H40	Multi-Media Module Navigation Assembly
H41	Display & Navigation Module Display
H42	Multi-Media Module Navigation Assembly
H43	Stereo Component Amplifier Assembly
H44	Stereo Component Amplifier Assembly


Position of Parts in Instrument Panel (Before Aug. 2013 Production)

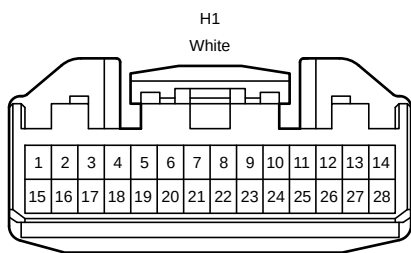


90980-12555

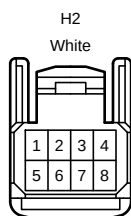


90980-12551

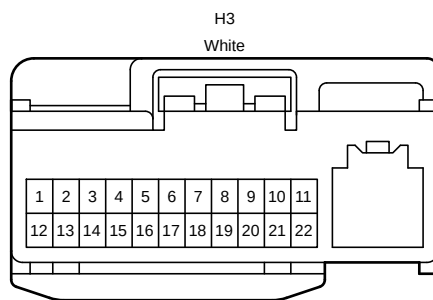


90980-12721

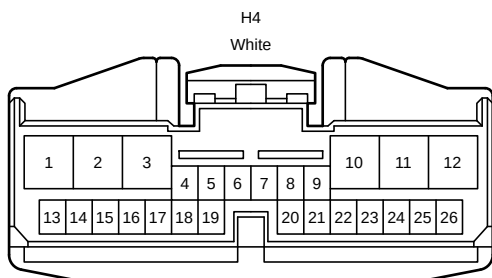


90980-12444

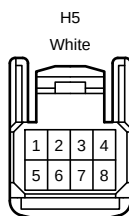


90980-12551

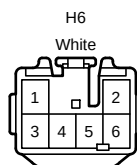


90980-10996

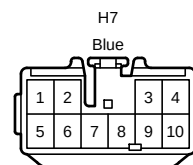


90980-10997

 


90980-12012

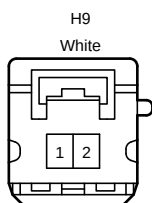


90980-12808

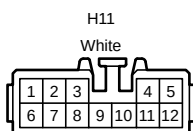


90980-10803

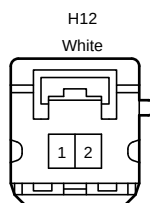


90980-12808

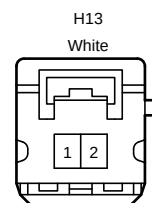


90980-12808

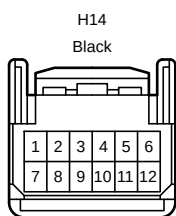


90980-12552

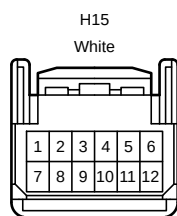


90980-12552

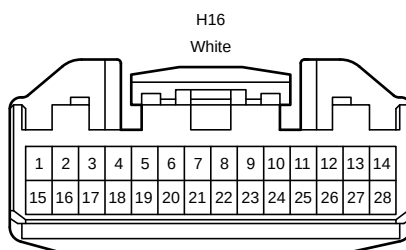


90980-12555

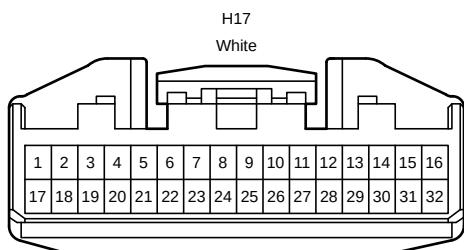


90980-12556

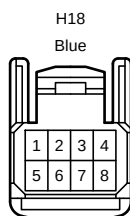

90980-12551

















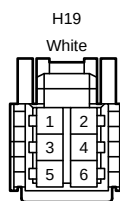


90980-12056

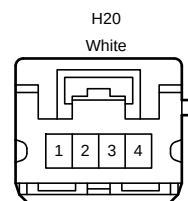


90980-12733

 
Position of Parts in Instrument Panel (Before Aug. 2013 Production)

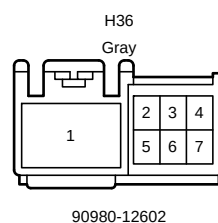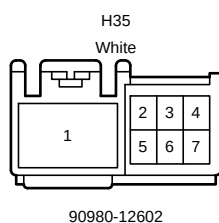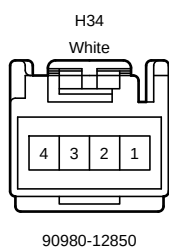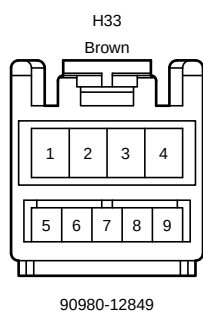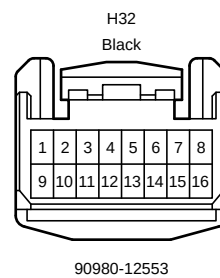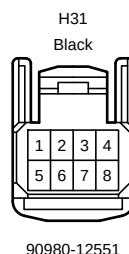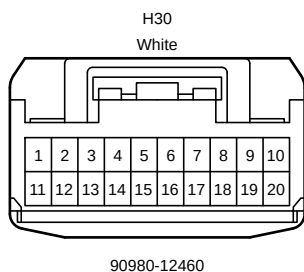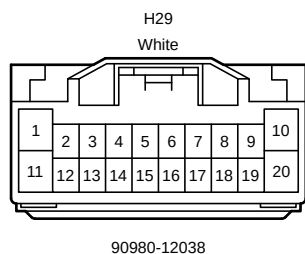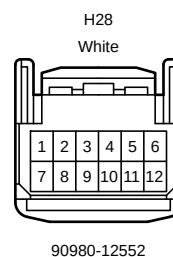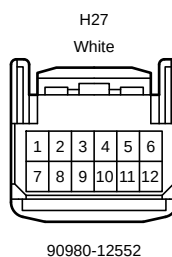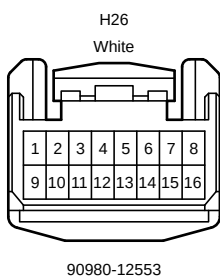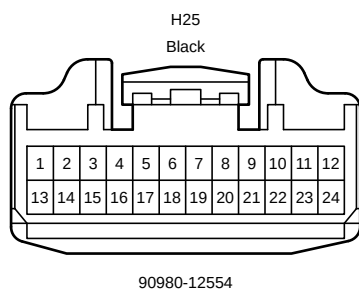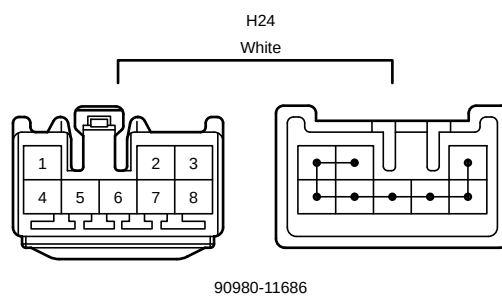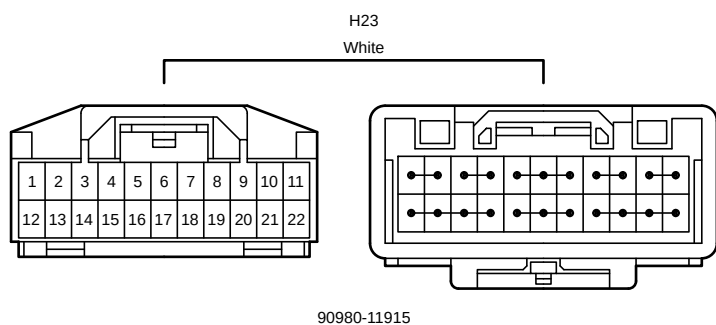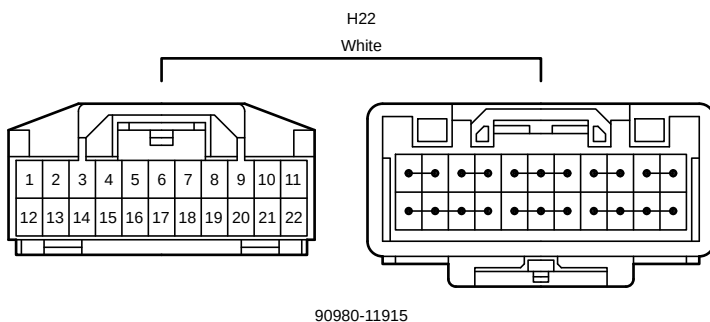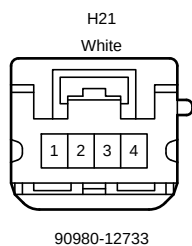


Position of Parts in Instrument Panel (Before Aug. 2013 Production)

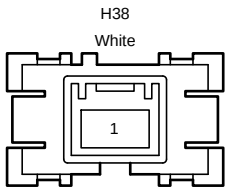


90980-12606

 


90980-12211

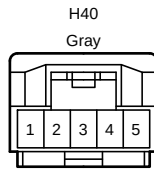


90980-11909

 


90980-12607

 


90980-12607

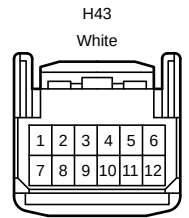

90980-12552

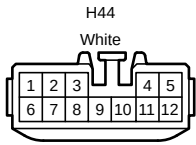


90980-10803

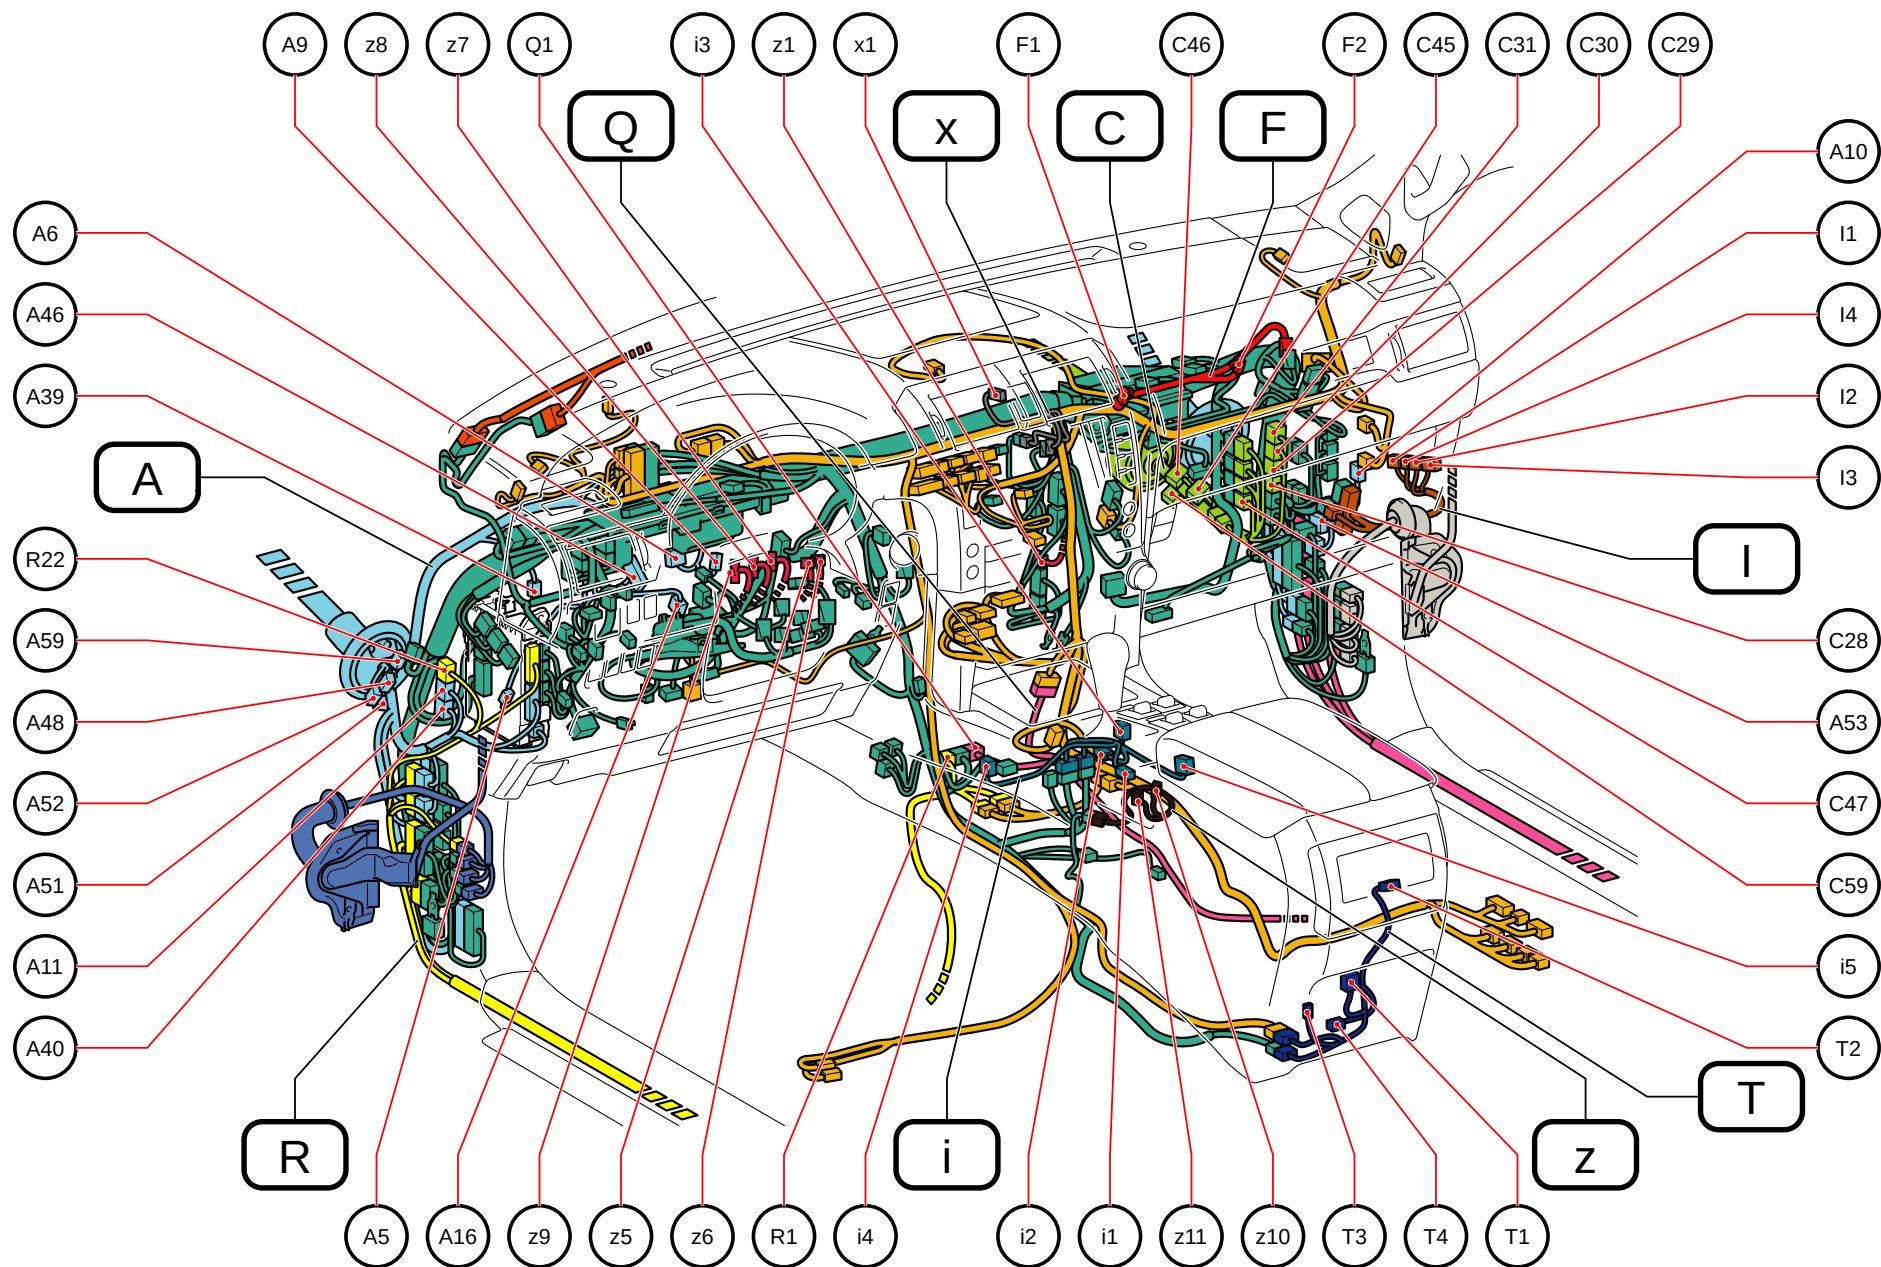


A5	Stop Light Switch Assembly
A6	Stop Light Control Relay Assembly
A9	Skid Control Buzzer Assembly
A10	Front Acceleration Sensor Assembly
A11	Suspension Control ECU
A16	Acceleration Sensor
A39	Parking Brake Switch Assembly
A40	Suspension Control ECU
A46	Headlight Swivel ECU Assembly
A48	Diode (Stop Light)
A51	Junction Connector
A52	Junction Connector
A53	Junction Connector
A59	Junction Connector
C28	ECM
C29	ECM
C30	ECM
C31	ECM
C45	Junction Connector
C46	Junction Connector
C47	Junction Connector
C59	Junction Connector
F1	Front Passenger Side Squib Circuit
F2	Front Passenger Side Squib Circuit
I1	Clearance Warning ECU Assembly
I2	Parking Assist ECU
I3	Parking Assist ECU
I4	Parking Assist ECU
Q1	Airbag Sensor Assembly
R1	Airbag Sensor Assembly
R22	Suspension Control ECU
T1	Headphone Terminal
T2	No. 2 A/C Control Assembly
T3	Console Box Illumination Light Assembly
T4	Cooling Box Assembly
i1	No. 1 Indoor Electrical Key Antenna Assembly
i2	Power Point Socket Assembly
i3	Refreshing Seat Switch RH
i4	Refreshing Seat Switch LH
i5	Combination Switch Assembly
x1	Hazard Warning Signal Switch Assembly
z1	A/C Amplifier Assembly , A/C Blower Assembly
z5	Driver Side Squib Circuit , Spiral Cable Sub-Assembly
z6	Driver Side Squib 2nd Step Circuit , Spiral Cable Sub-Assembly
z7	Cruise Control Main Switch , Spiral Cable Sub-Assembly
z8	Spiral Cable Sub-Assembly , Steering Pad Switch Assembly
z9	Spiral Cable Sub-Assembly , Steering Wheel Heater Control Assembly
z10	Cup Holder Illumination RH (No. 1 Interior Illumination Light Assembly)
z11	Cup Holder Illumination LH (No. 1 Interior Illumination Light Assembly)

 
Position of Parts in Instrument Panel (Before Aug. 2013 Production)




90980-10795

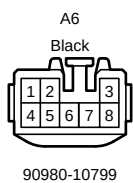


90980-10799

 


90980-10860

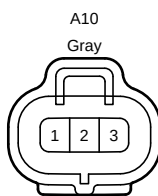

90980-10845

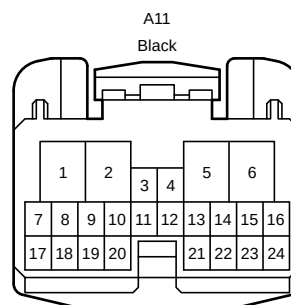


82824-50300

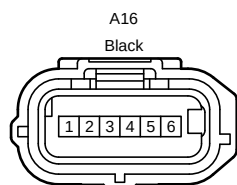


90980-12303




90980-10871

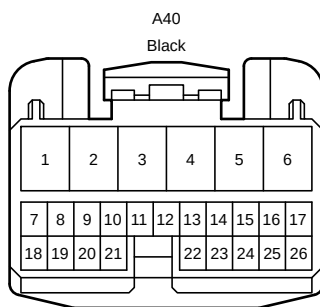


82824-50310

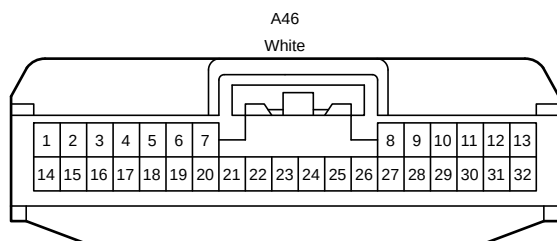

90980-12422

 


90980-10962

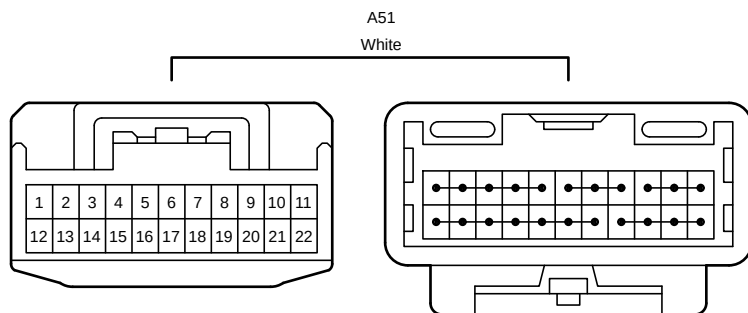

90980-12372


Position of Parts in Instrument Panel (Before Aug. 2013 Production)

A52
White

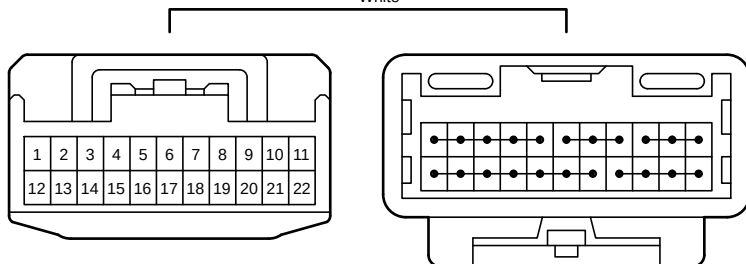


90980-12372

A53
White

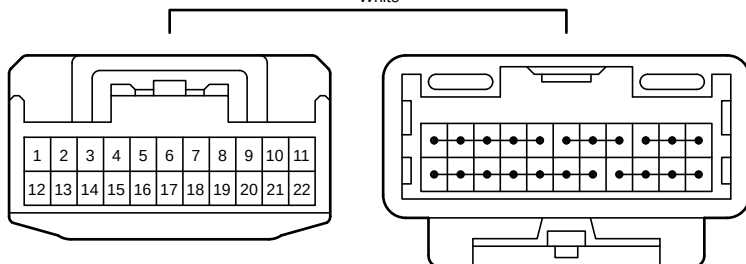


90980-12372

A59
White

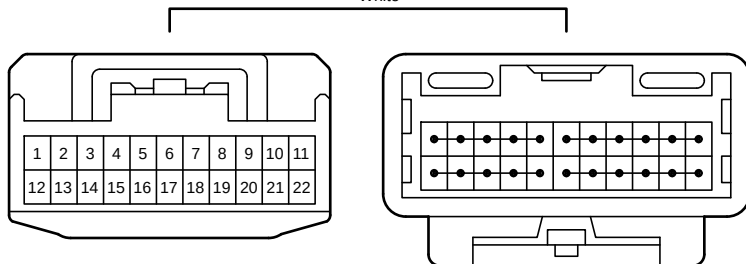


90980-12372

C28
White

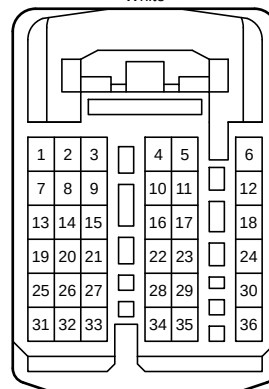


82824-26130

C29
White

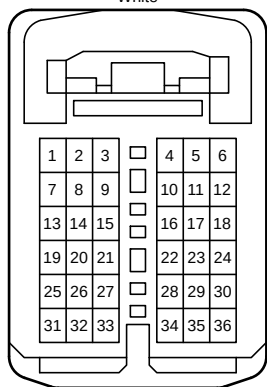


82824-26140

C30
White

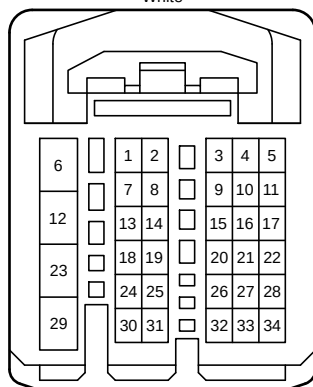









82824-26150

C31
White






















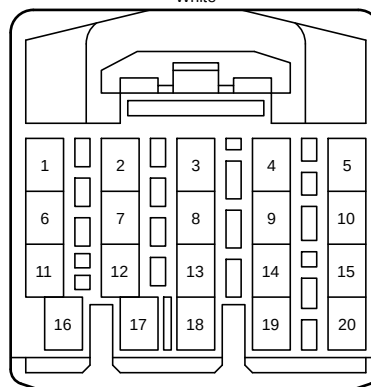



82824-26160


Position of Parts in Instrument Panel (Before Aug. 2013 Production)

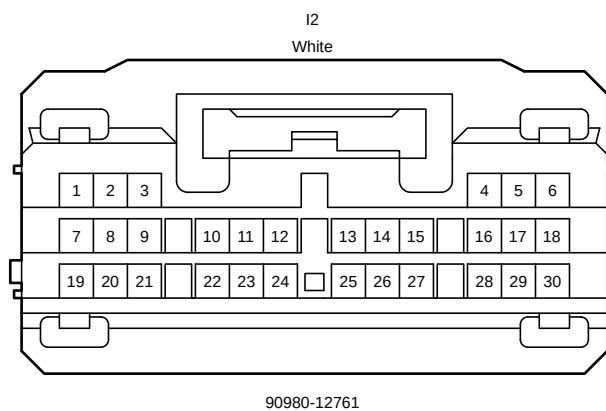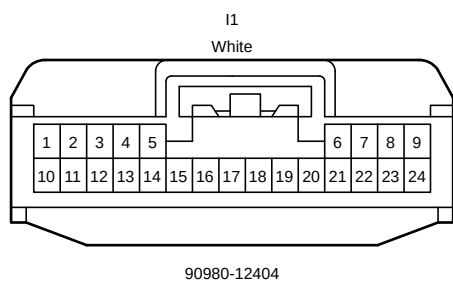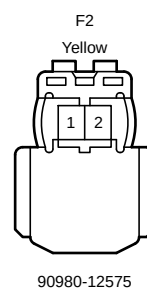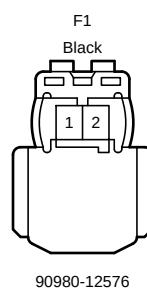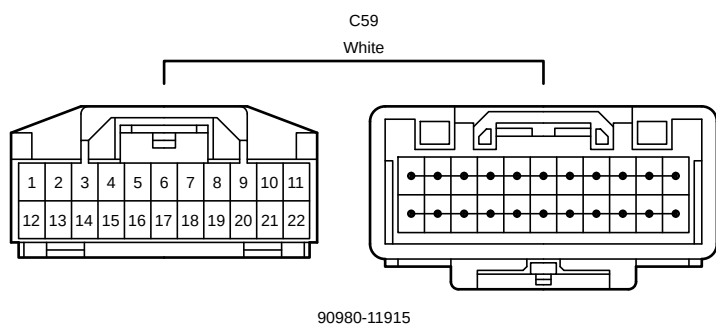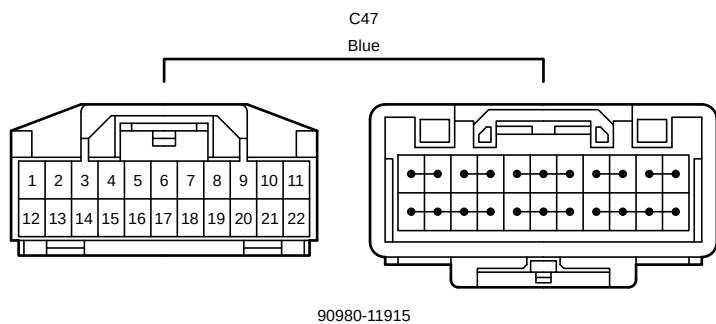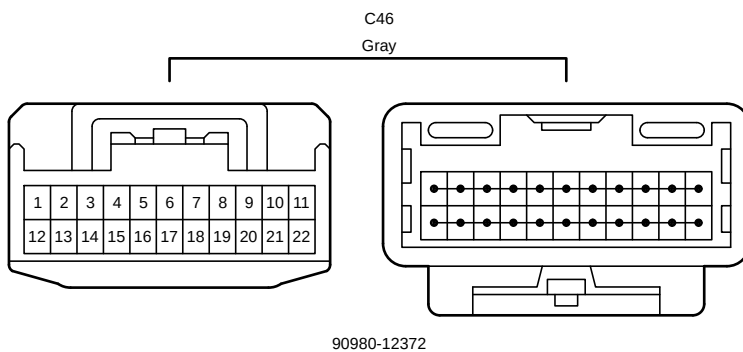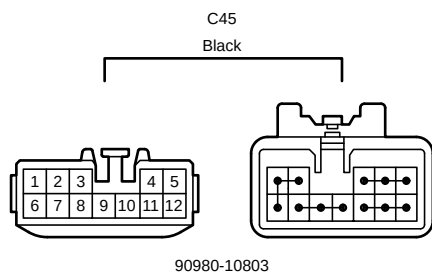

        
Position of Parts in Instrument Panel (Before Aug. 2013 Production)

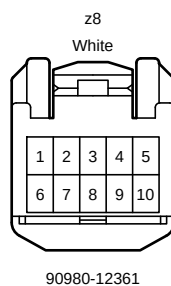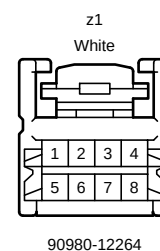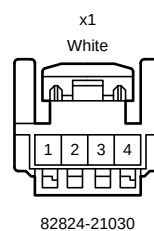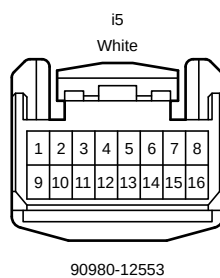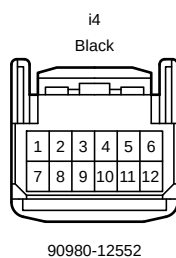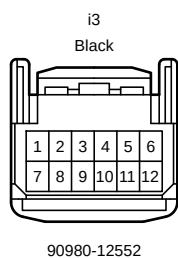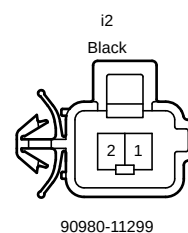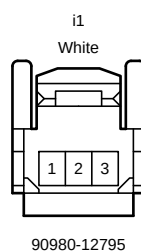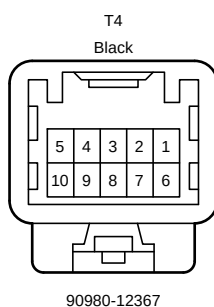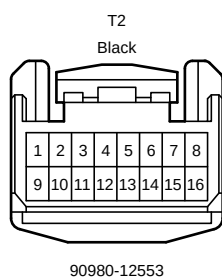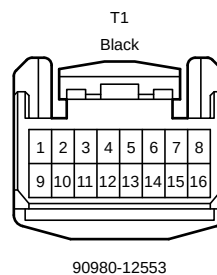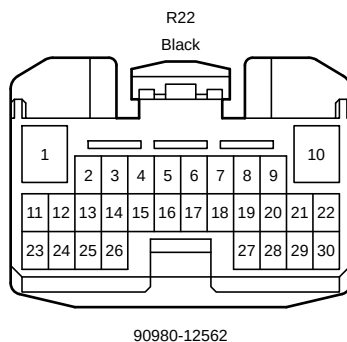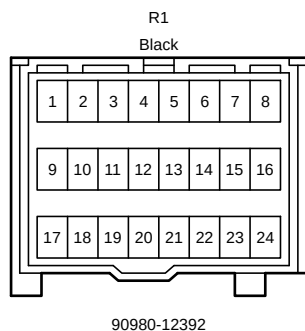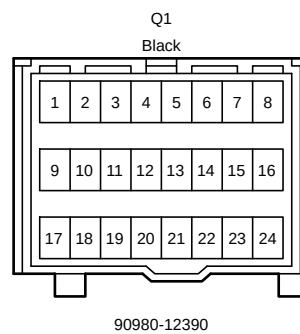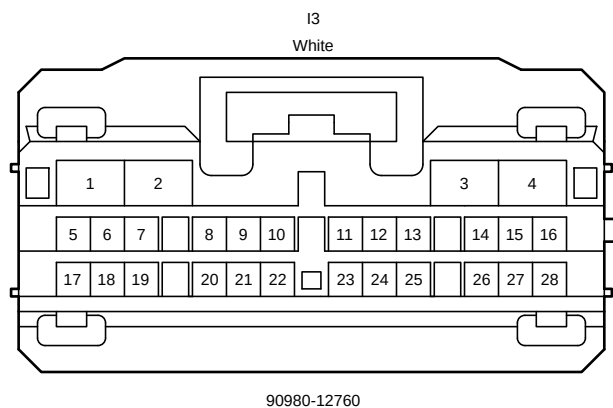



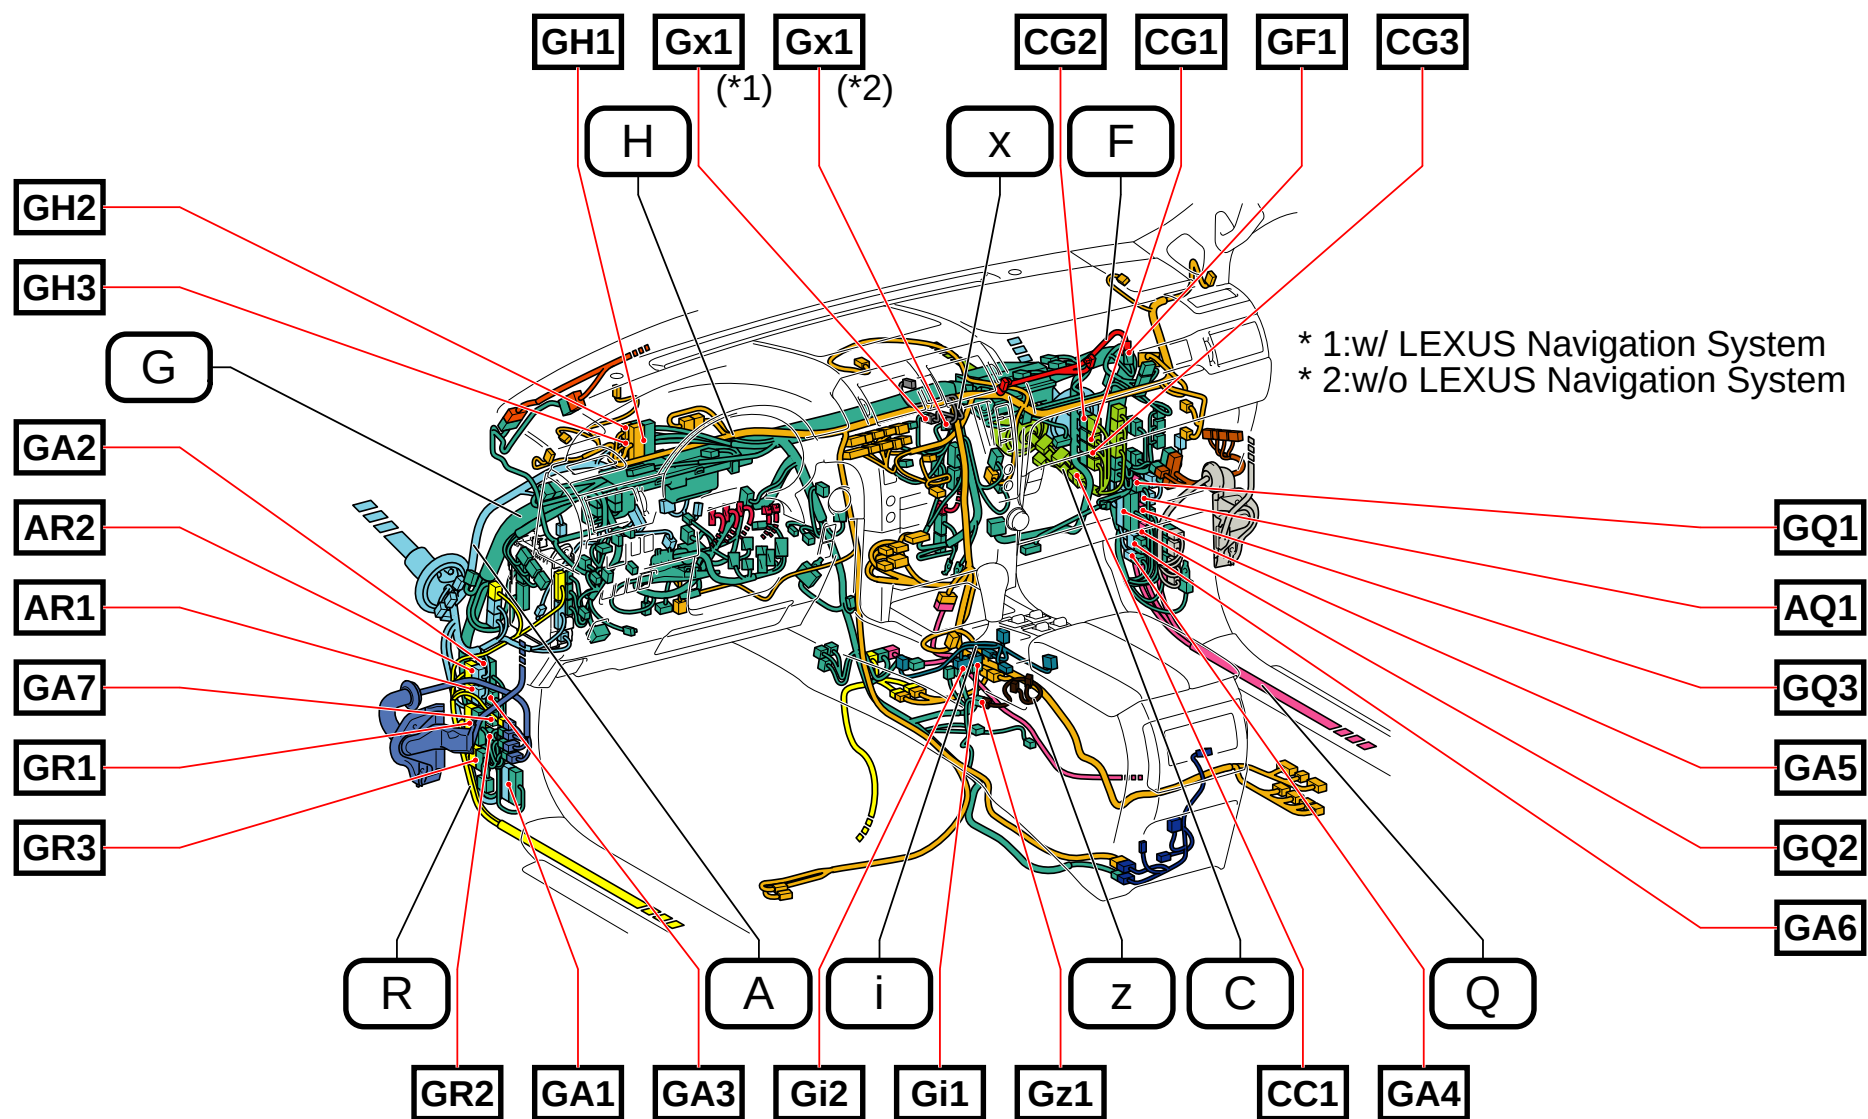


Wire and Wire in Instrument Panel (Before Aug. 2013 Production)

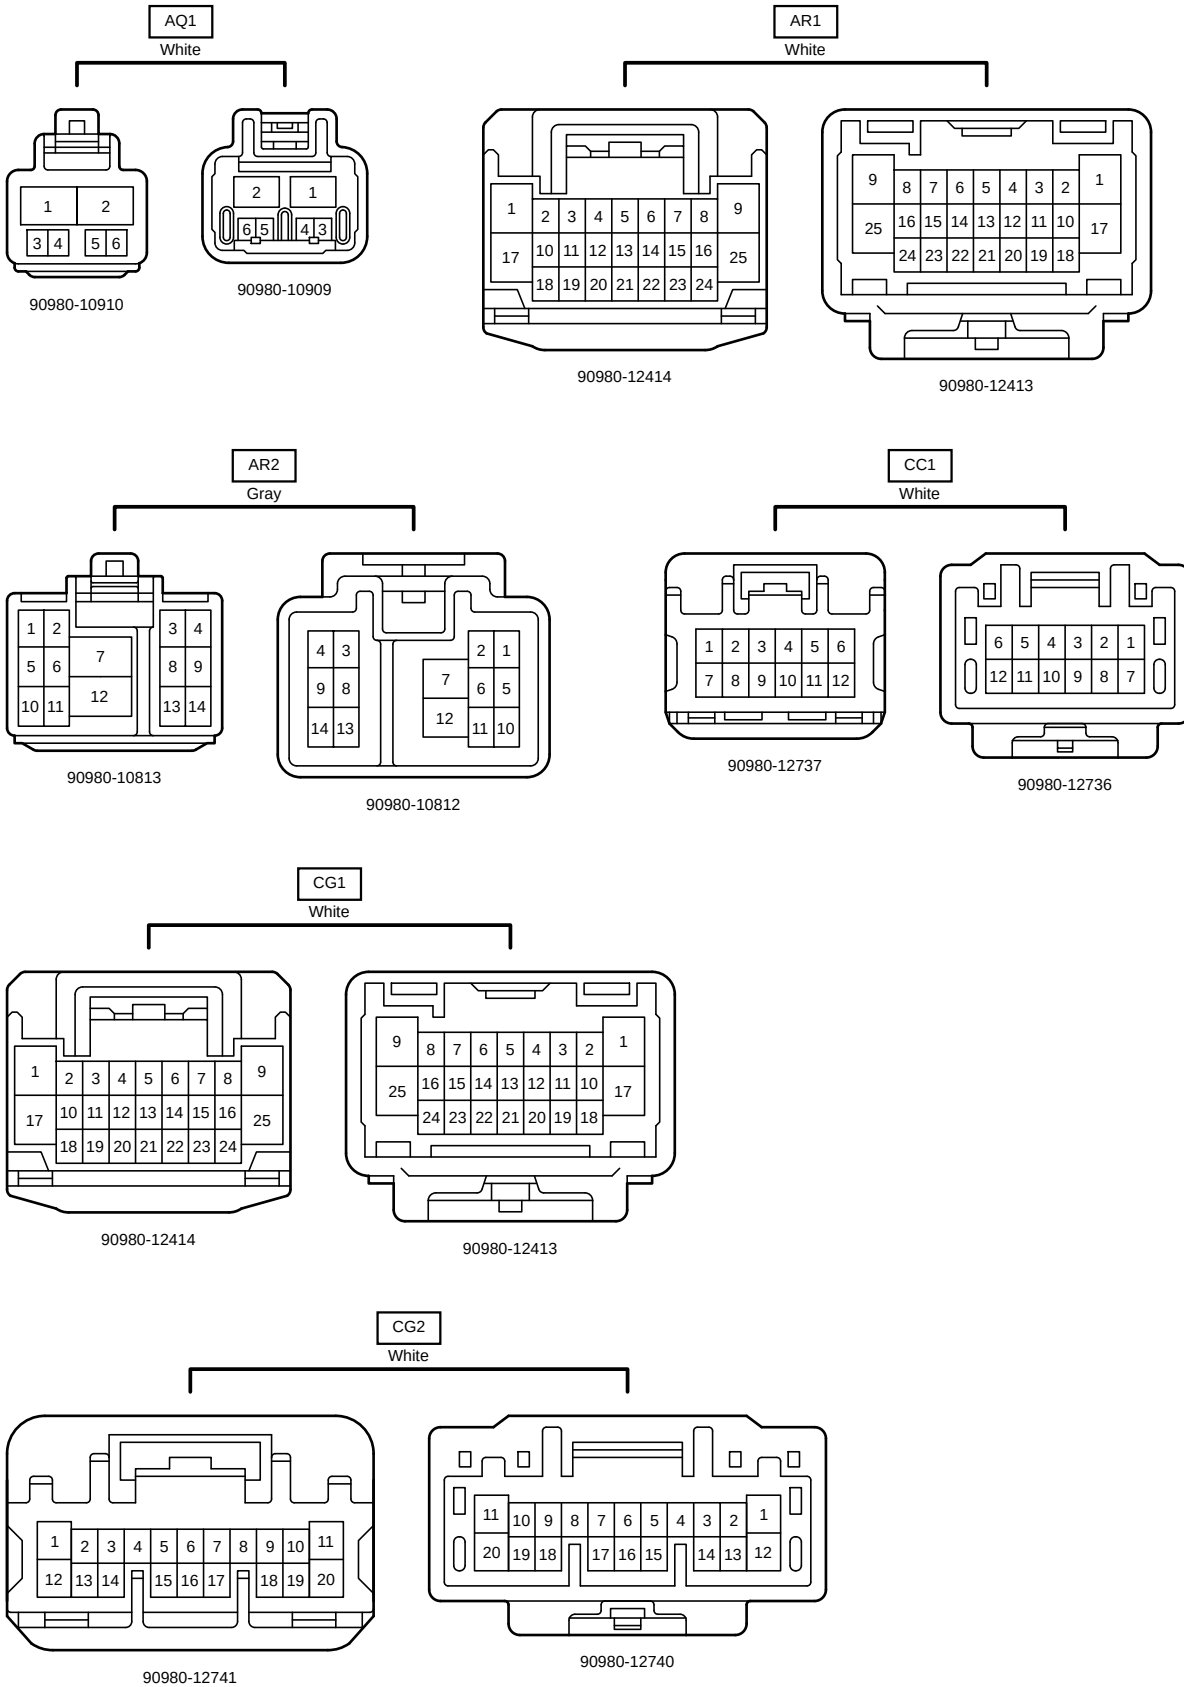


CG3

White

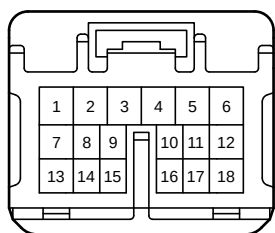


90980-12745

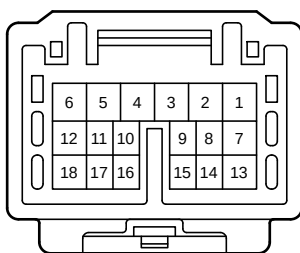


90980-12744

GA1

White

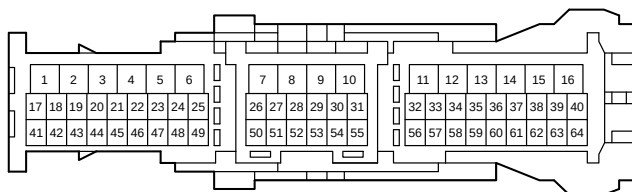


90980-12774

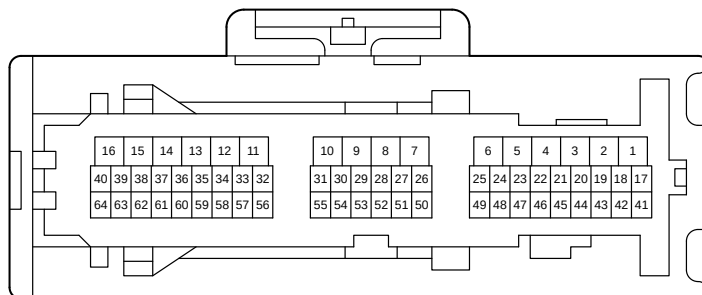


90980-12798

GA2

White

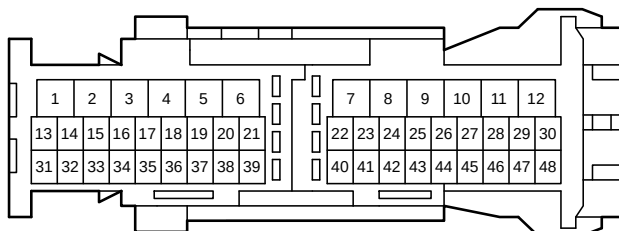


90980-12779

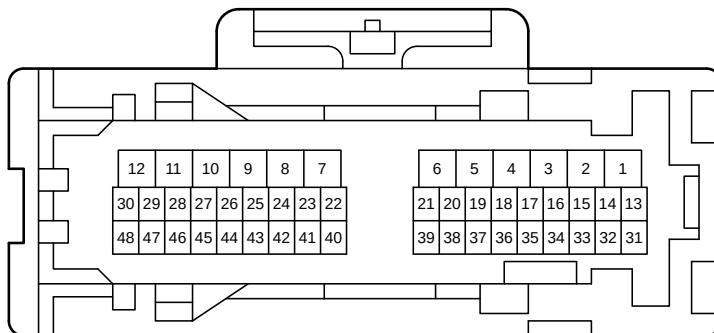


90980-12799

GA3

Black

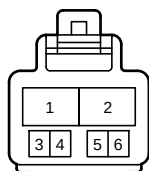


90980-10910

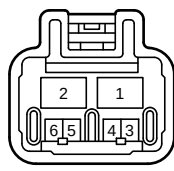


90980-10909

GA4





Yellow




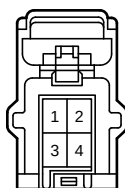


90980-11892

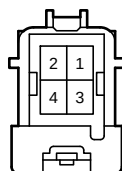

90980-11891

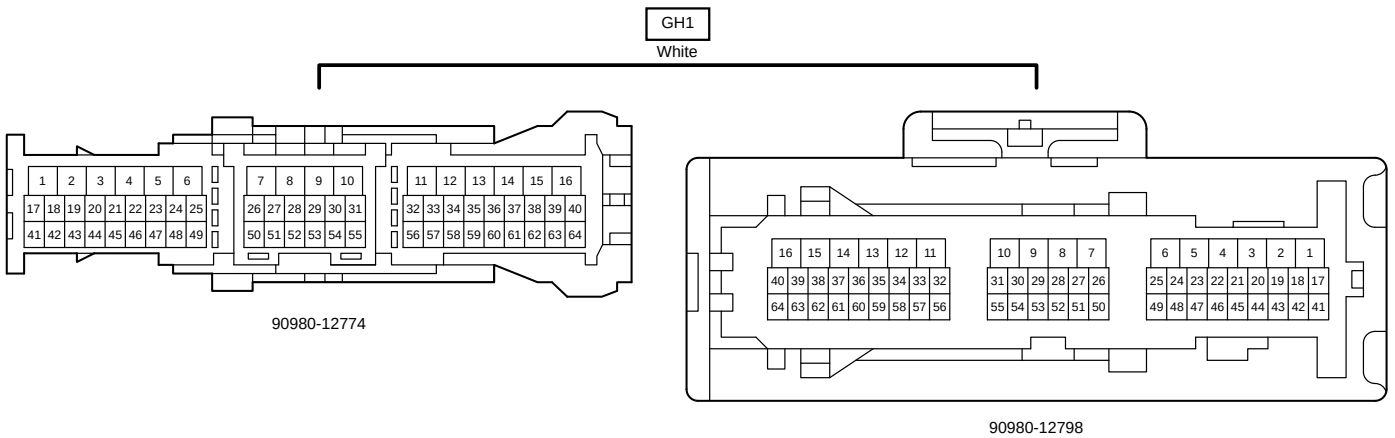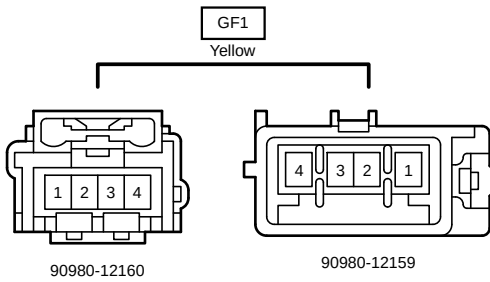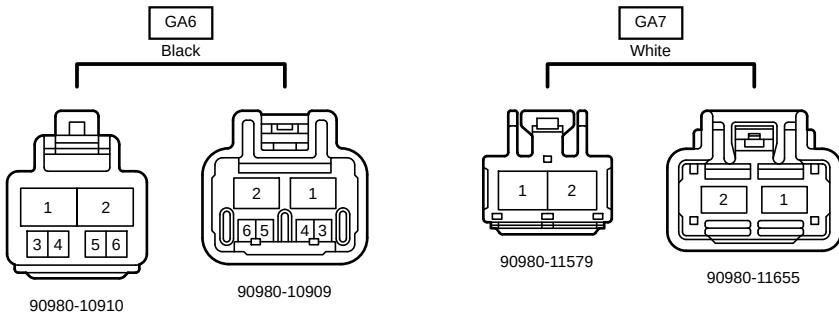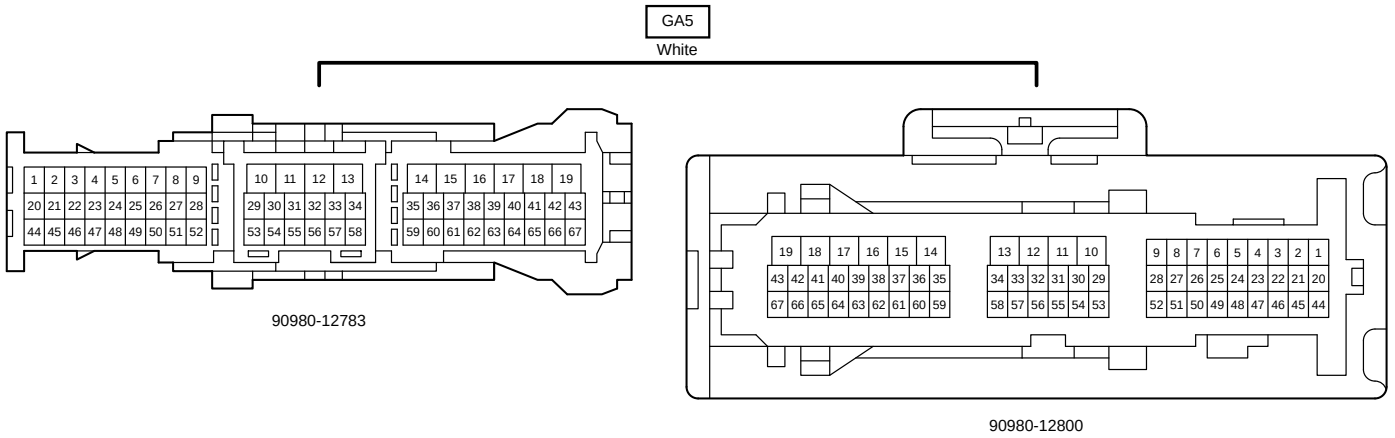


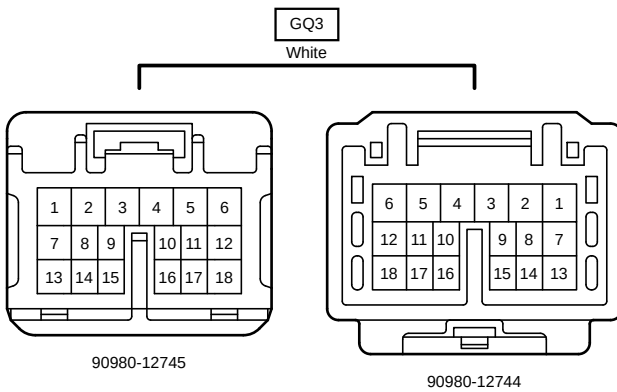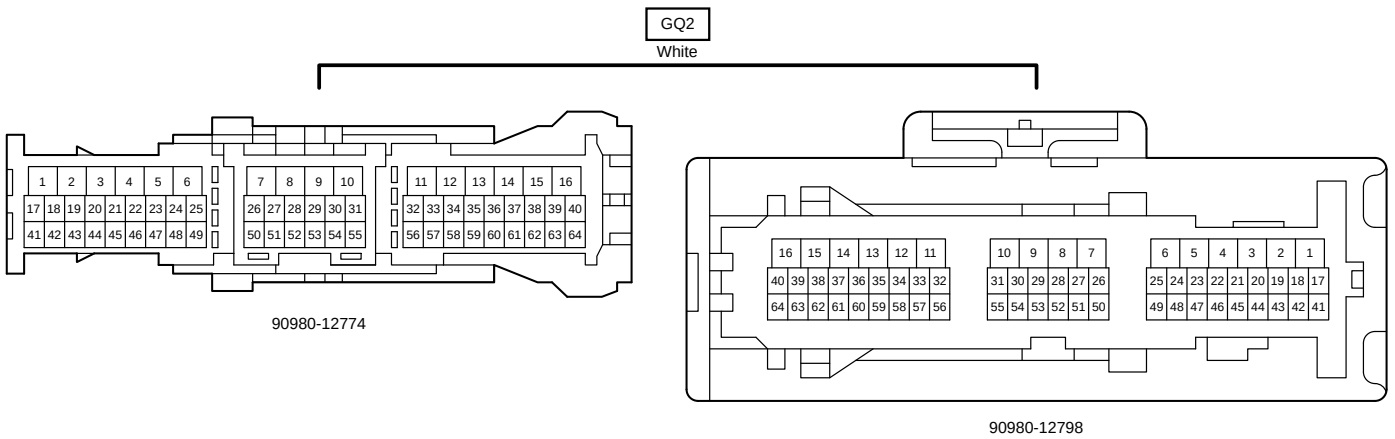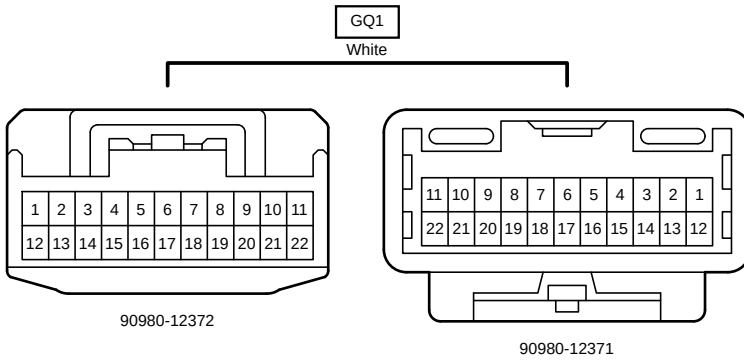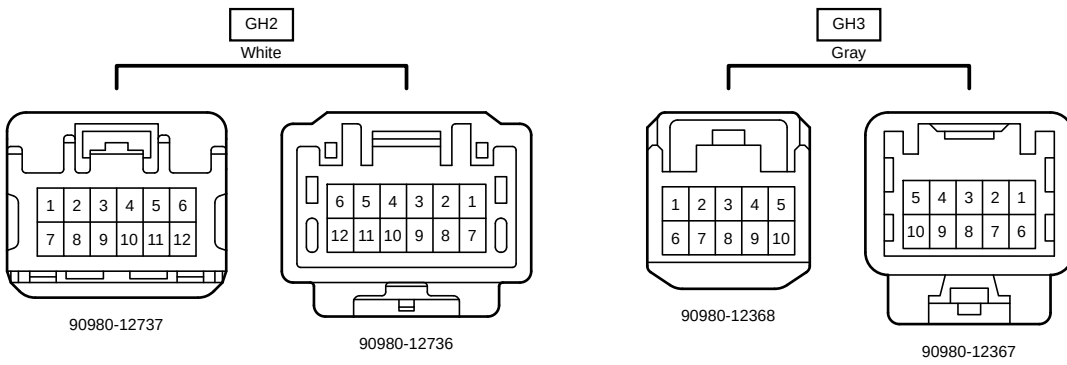


Wire and Wire in Instrument Panel (Before Aug. 2013 Production)

GR1

White

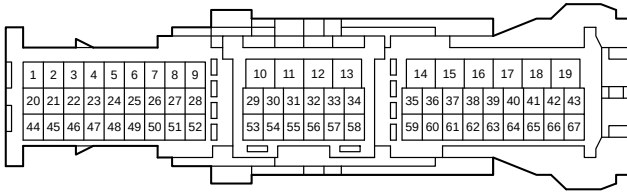


90980-12783

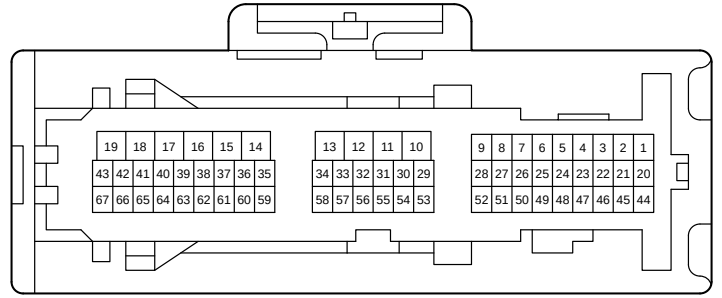


90980-12800

GR2

Gray

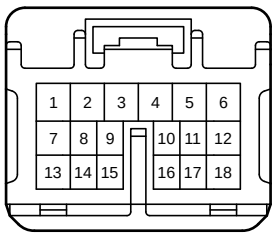


90980-12745

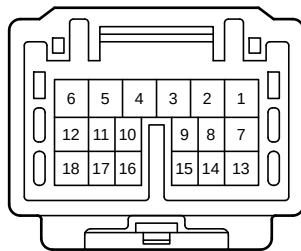


90980-12744

GR3

Blue

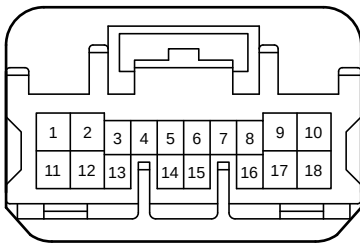


90980-12739

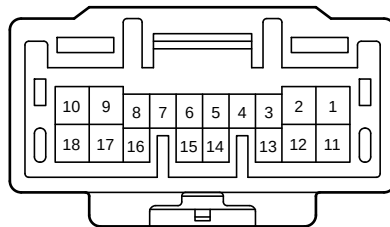


90980-12738

Gi1

White

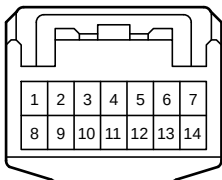


90980-12370

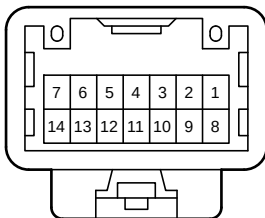


90980-12369

Gi2


White

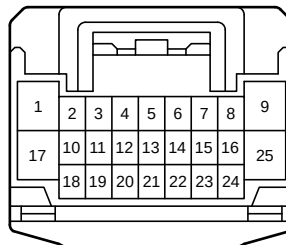


90980-12414




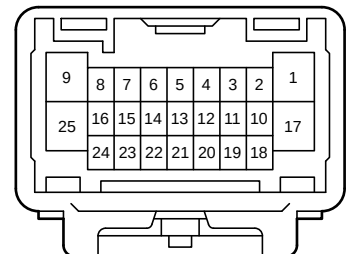


90980-12413

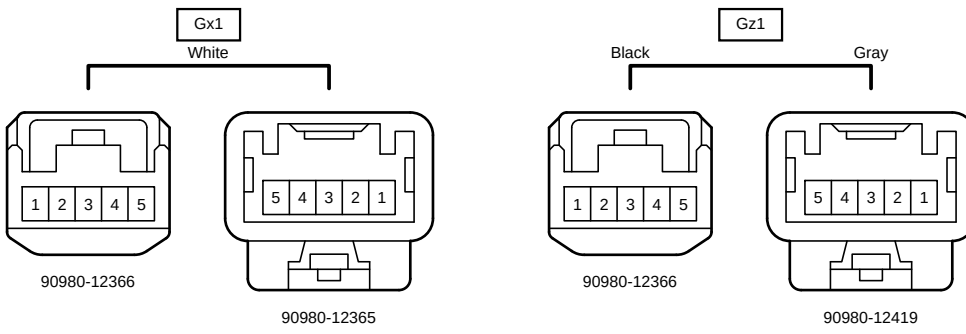


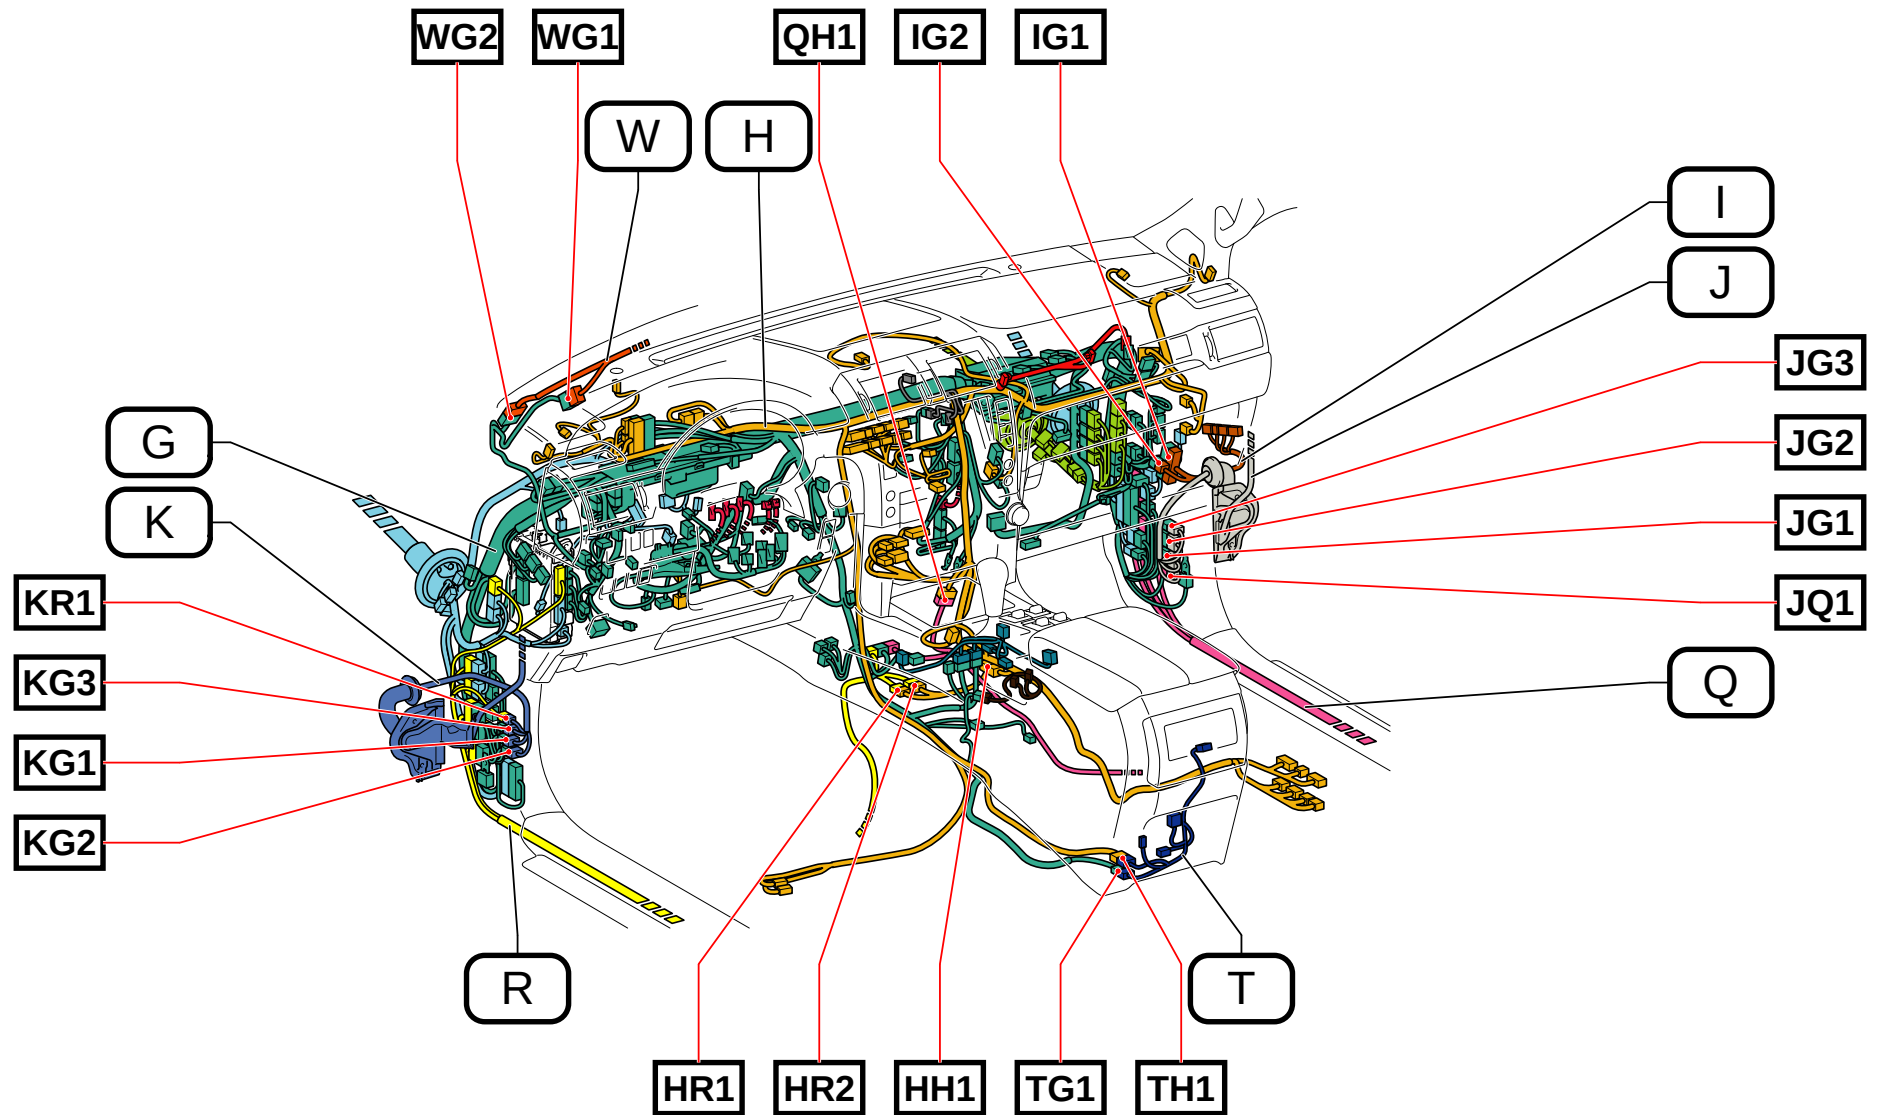


Wire and Wire in Instrument Panel (Before Aug. 2013 Production)

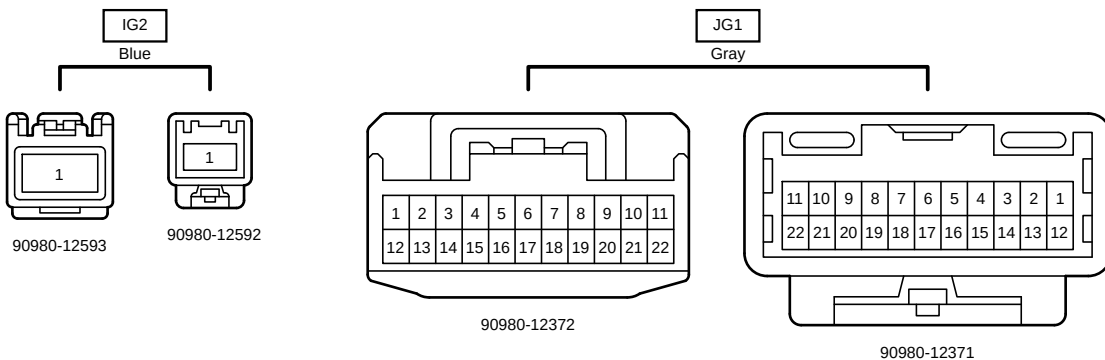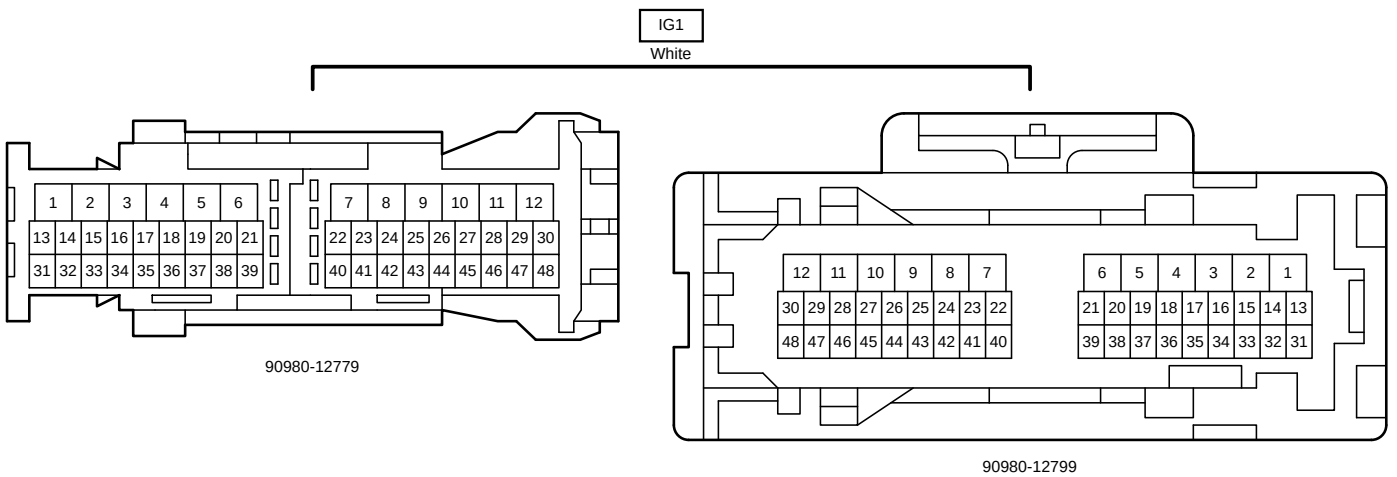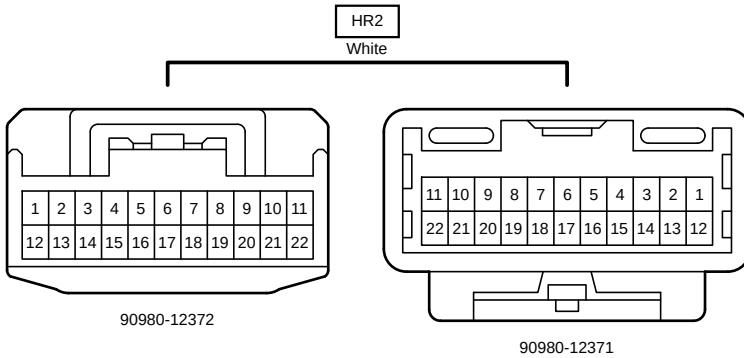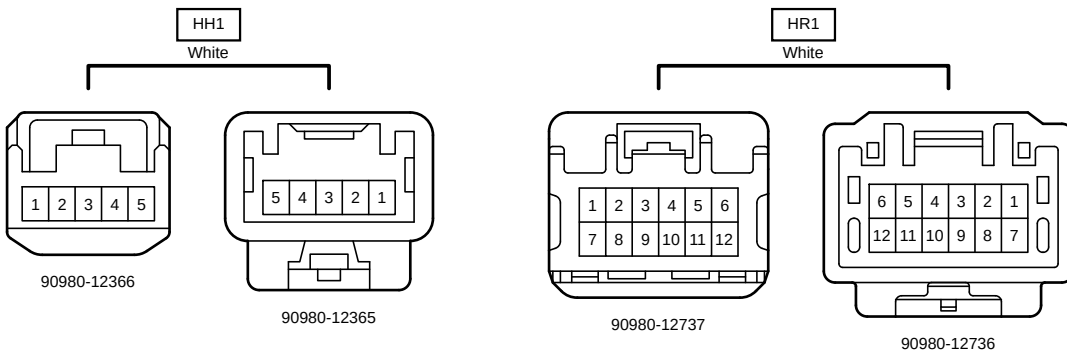

JG2
White

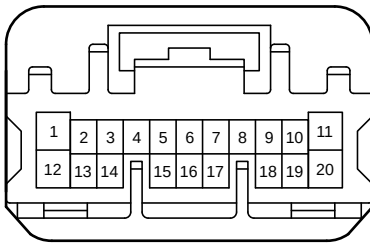


90980-12741

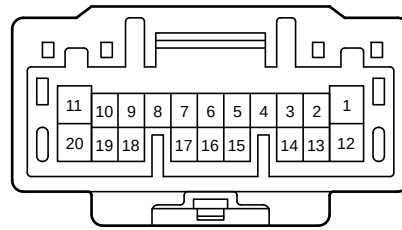


90980-12740

JG3
Black

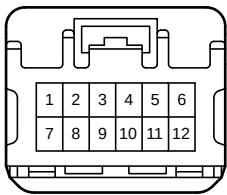


90980-12737

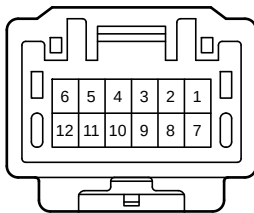


90980-12736

JQ1
Yellow

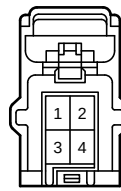


90980-11892

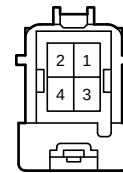


90980-11891

KG1
Gray

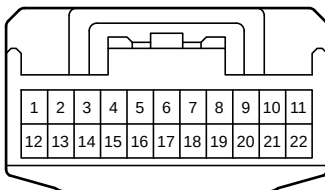


90980-12372

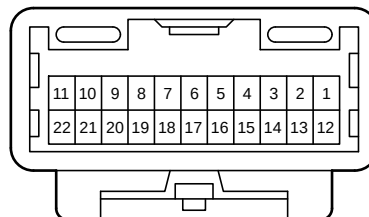


90980-12371

KG2
White

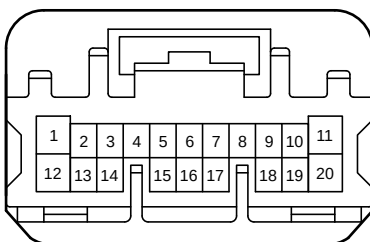


90980-12741

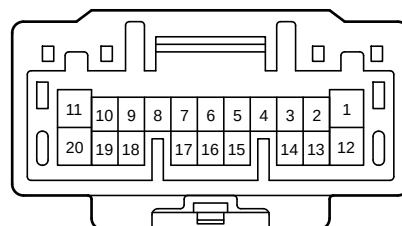


90980-12740

KG3

Black

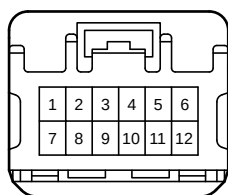


90980-12737

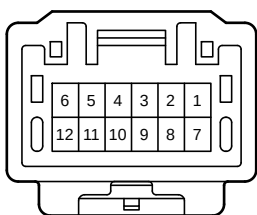


90980-12736

KR1

Yellow

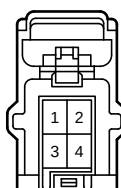


90980-11892

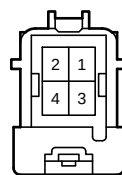


90980-11891

QH1

White

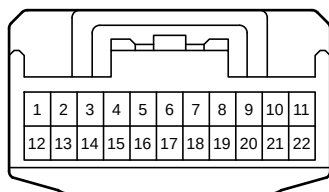


90980-12372

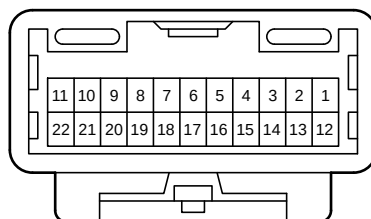


90980-12371

TG1

White

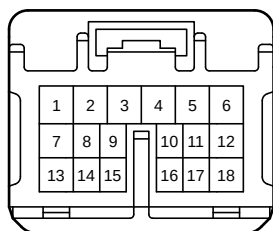


90980-12745

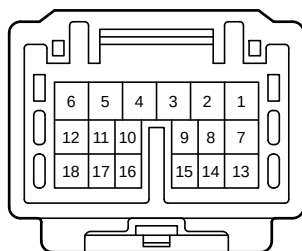


90980-12744

TH1

White

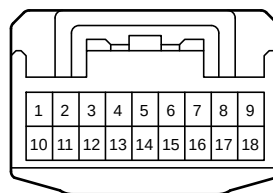


90980-12412

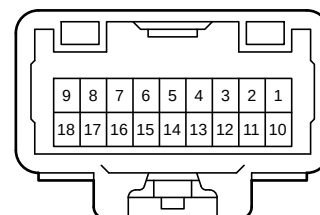


90980-12411

WG1


White

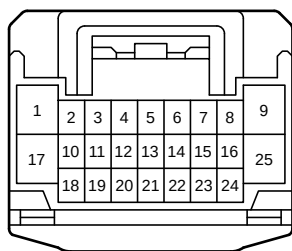



90980-12414

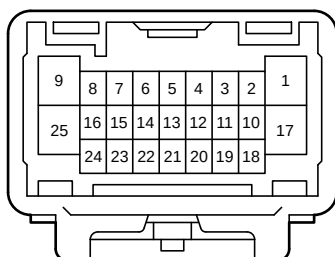

90980-12413

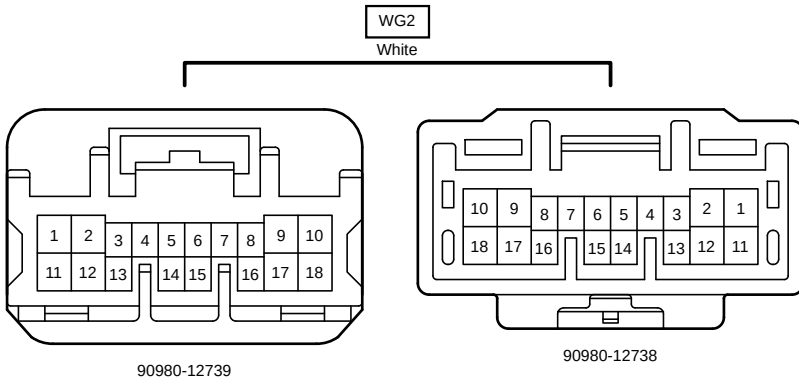


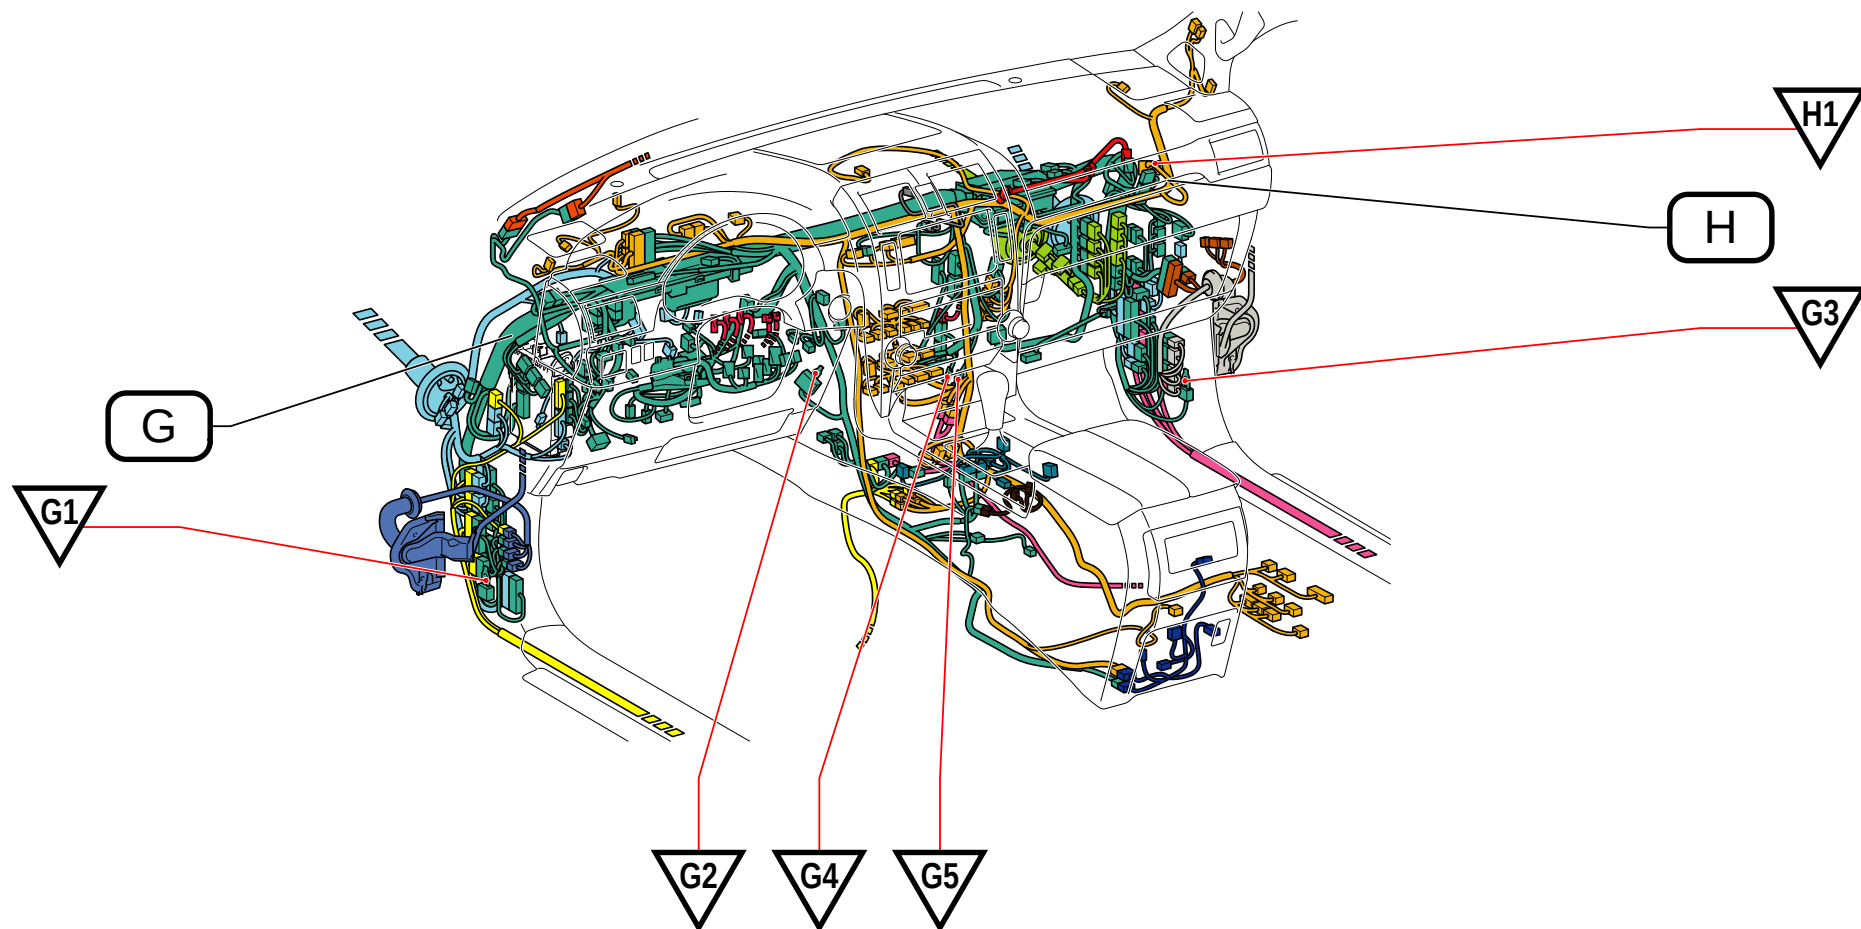

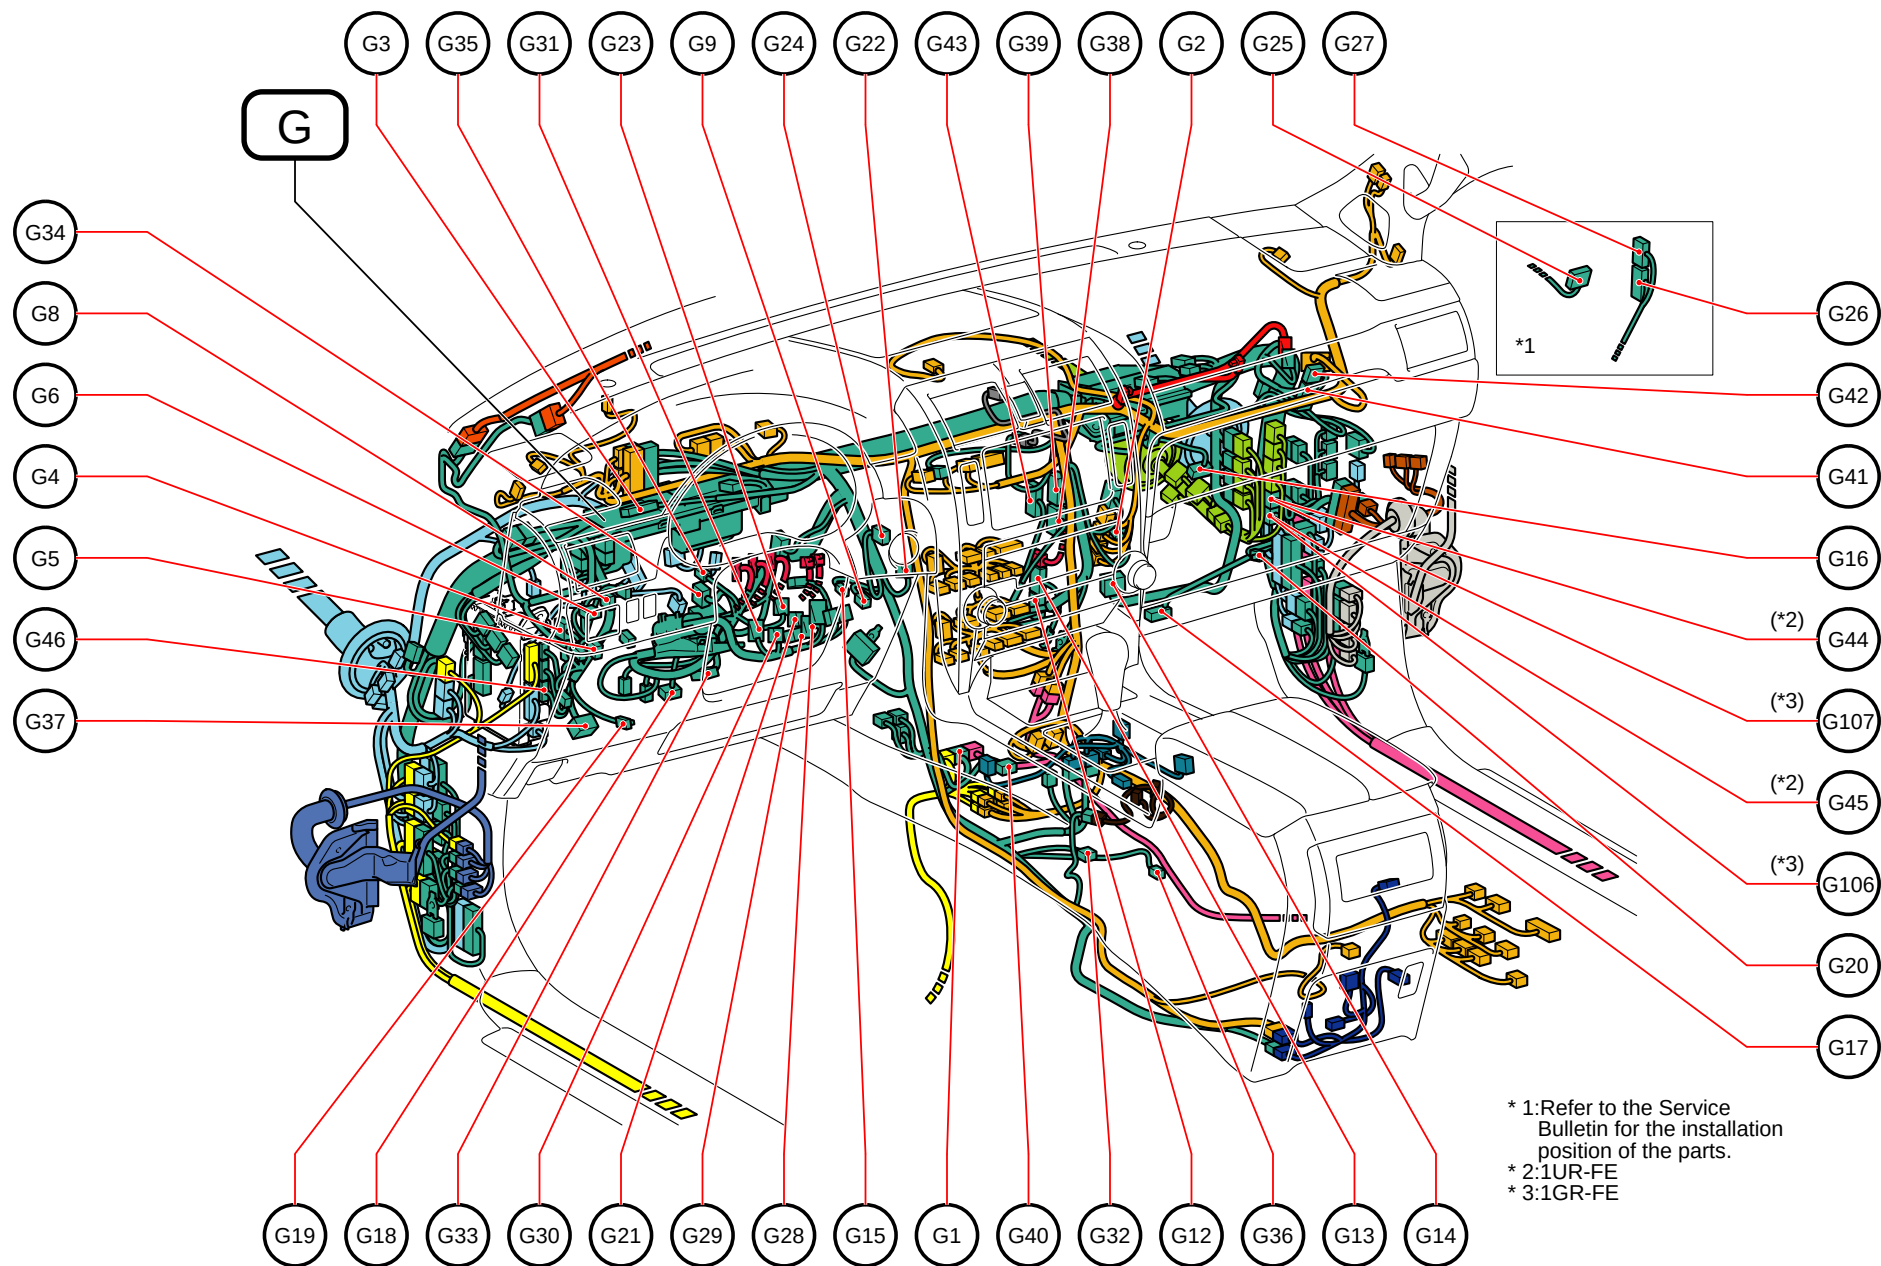


G1	Airbag Sensor Assembly
G2	Mayday Battery
G3	Combination Meter Assembly
G4	Turn Signal Flasher Assembly
G5	VSC Off Switch
G6	Outer Mirror Switch Assembly
G8	Light Control Rheostat
G9	Center Differential Lock Switch
G12	A/C Amplifier Assembly
G13	A/C Amplifier Assembly
G14	Front Blower with Fan Motor Sub-Assembly
G15	Intake Air Temperature Sensor
G16	Glove Box Light
G17	Interior Foot Light RH
G18	Interior Foot Light LH
G19	Lower No. 1 Instrument Panel Airbag Assembly
G20	Lower No. 2 Instrument Panel Airbag Assembly
G21	Steering Sensor
G22	No. 1 Clearance Warning Buzzer
G23	Steering Lock Actuator Assembly
G24	Engine Switch
G25	ID Code Box
G26	Certification ECU Assembly
G27	Certification ECU Assembly
G28	Spiral Cable Sub-Assembly
G29	Spiral Cable Sub-Assembly
G30	Spiral Cable Sub-Assembly , Steering Wheel Heater Control Assembly
G31	Headlight Dimmer Switch Assembly
G32	Shift Lock Control ECU Sub-Assembly
G33	Multiplex Tilt & Telescopic ECU
G34	Seat Belt Control ECU
G35	Seat Belt Control ECU
G36	Transmission Control Switch
G37	DLC3
G38	Power Management Control ECU
G39	Power Management Control ECU
G40	Yaw Rate Sensor Assembly
G41	Four Wheel Drive Control ECU
G42	Four Wheel Drive Control ECU
G43	Driving Support ECU Assembly
G44	ECM
G45	ECM
G46	Main Body ECU
G106	ECM
G107	ECM


Position of Parts in Instrument Panel (From Aug. 2013 Production)

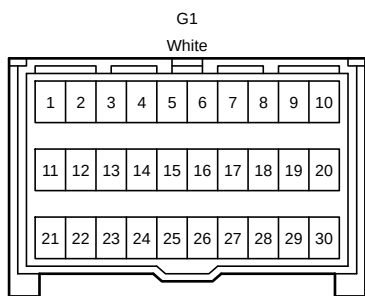


90980-12391

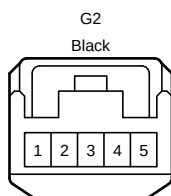


90980-12366

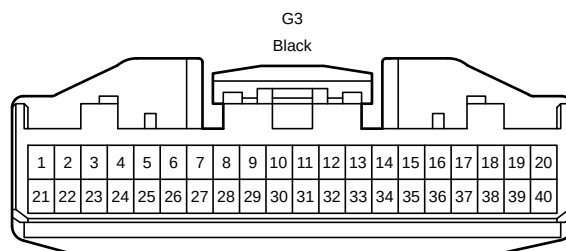


90980-12557

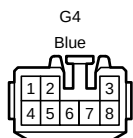


90980-10799

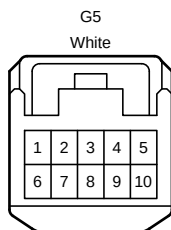


90980-12368

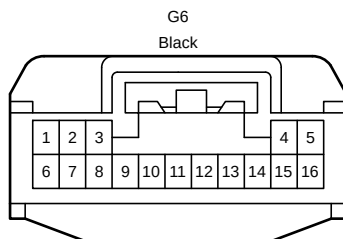


90980-12423

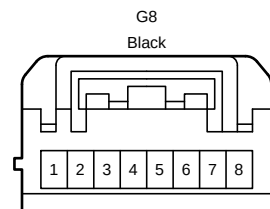


90980-12550

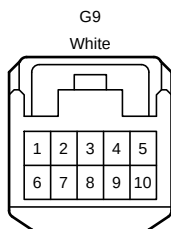


90980-12368

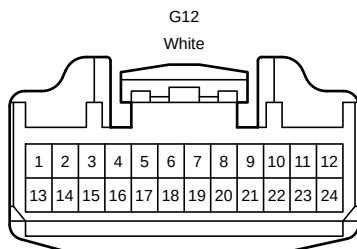


90980-12554

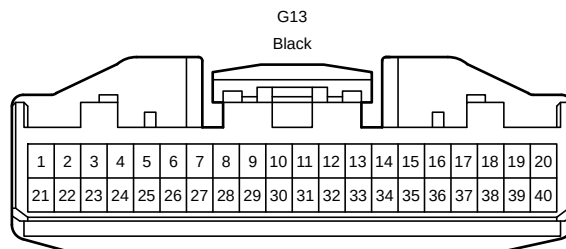





90980-12557

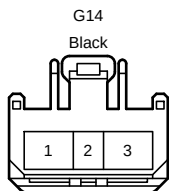


90980-11667

 


90980-11918

    


90980-12452

 


90980-12452

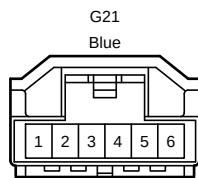


90980-11986

 

90980-10825

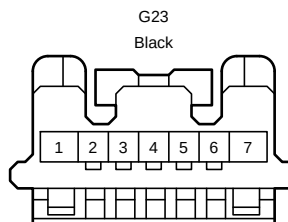


90980-12092

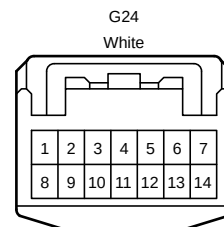


90980-12370


Position of Parts in Instrument Panel (From Aug. 2013 Production)

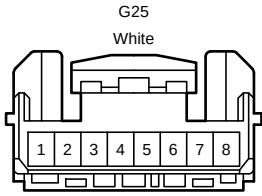


90980-12558

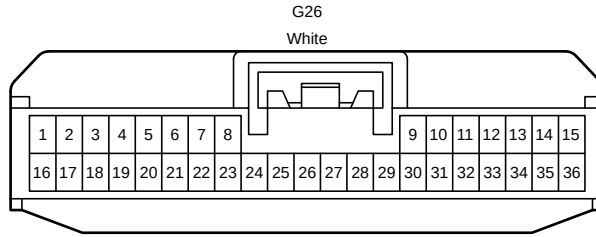


90980-12564

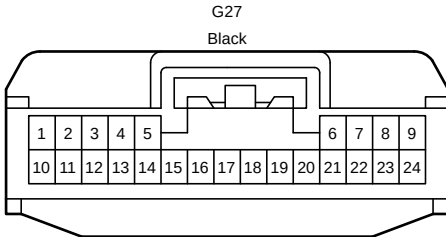


90980-12404

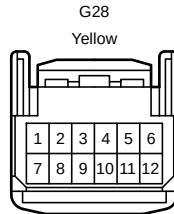


90980-12552

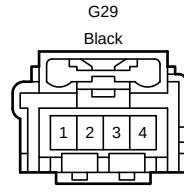


90980-12160

 


90980-10795

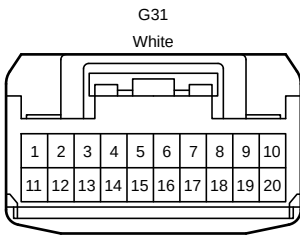


90980-12460

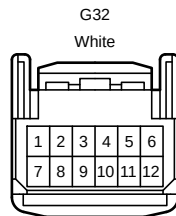


90980-12552

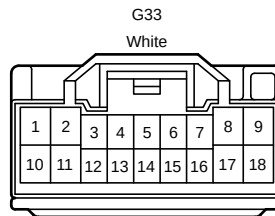


90980-11973

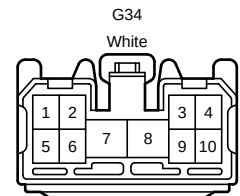


90980-11527

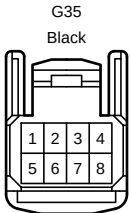


90980-12551

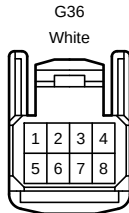


90980-12551

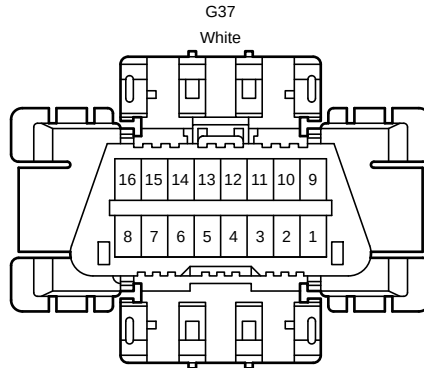

90980-11978







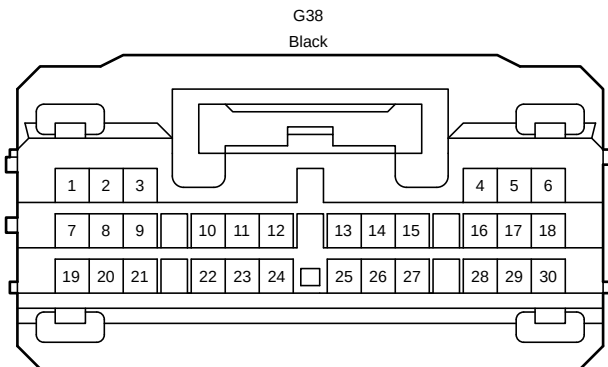



90980-12843

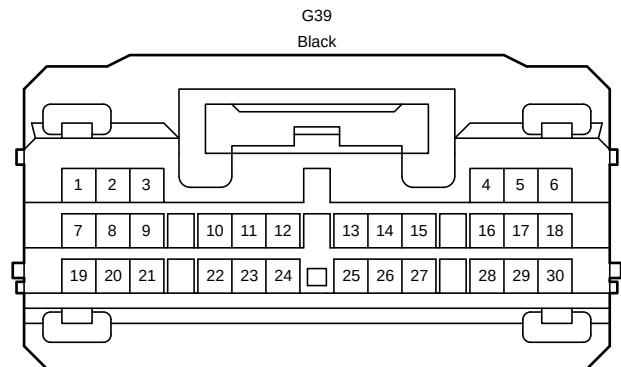


90980-12844

Position of Parts in Instrument Panel (From Aug. 2013 Production)

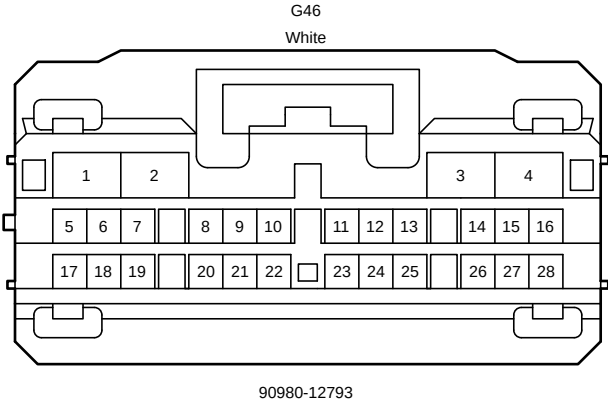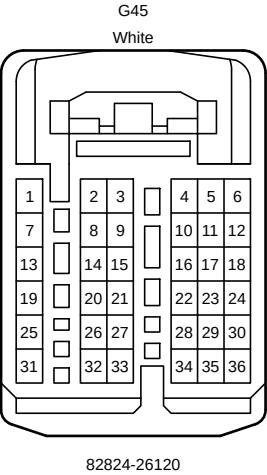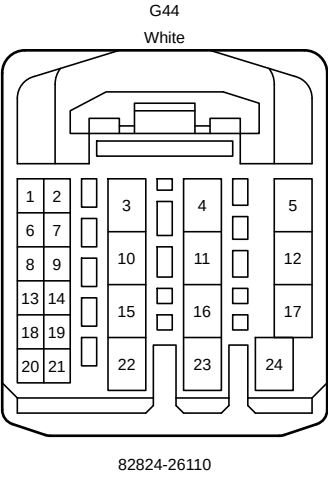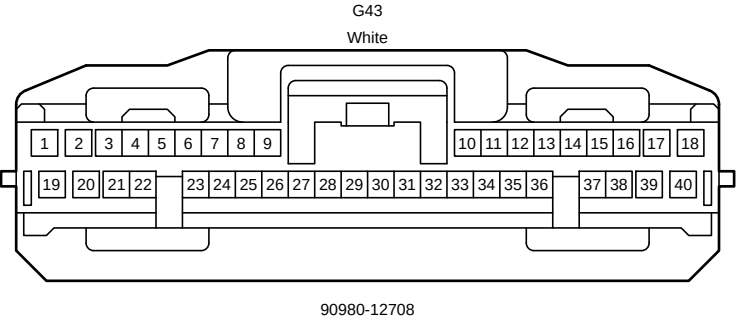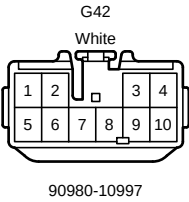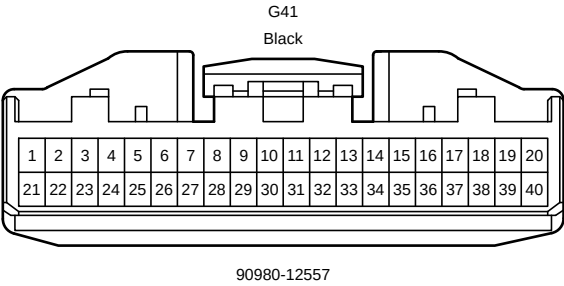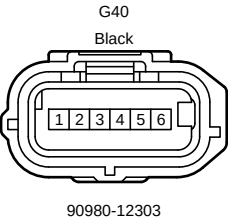


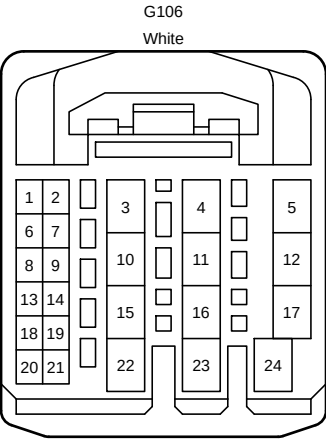

82824-26110

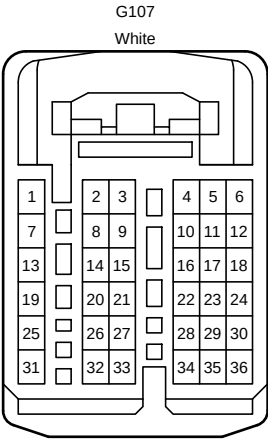


82824-26120

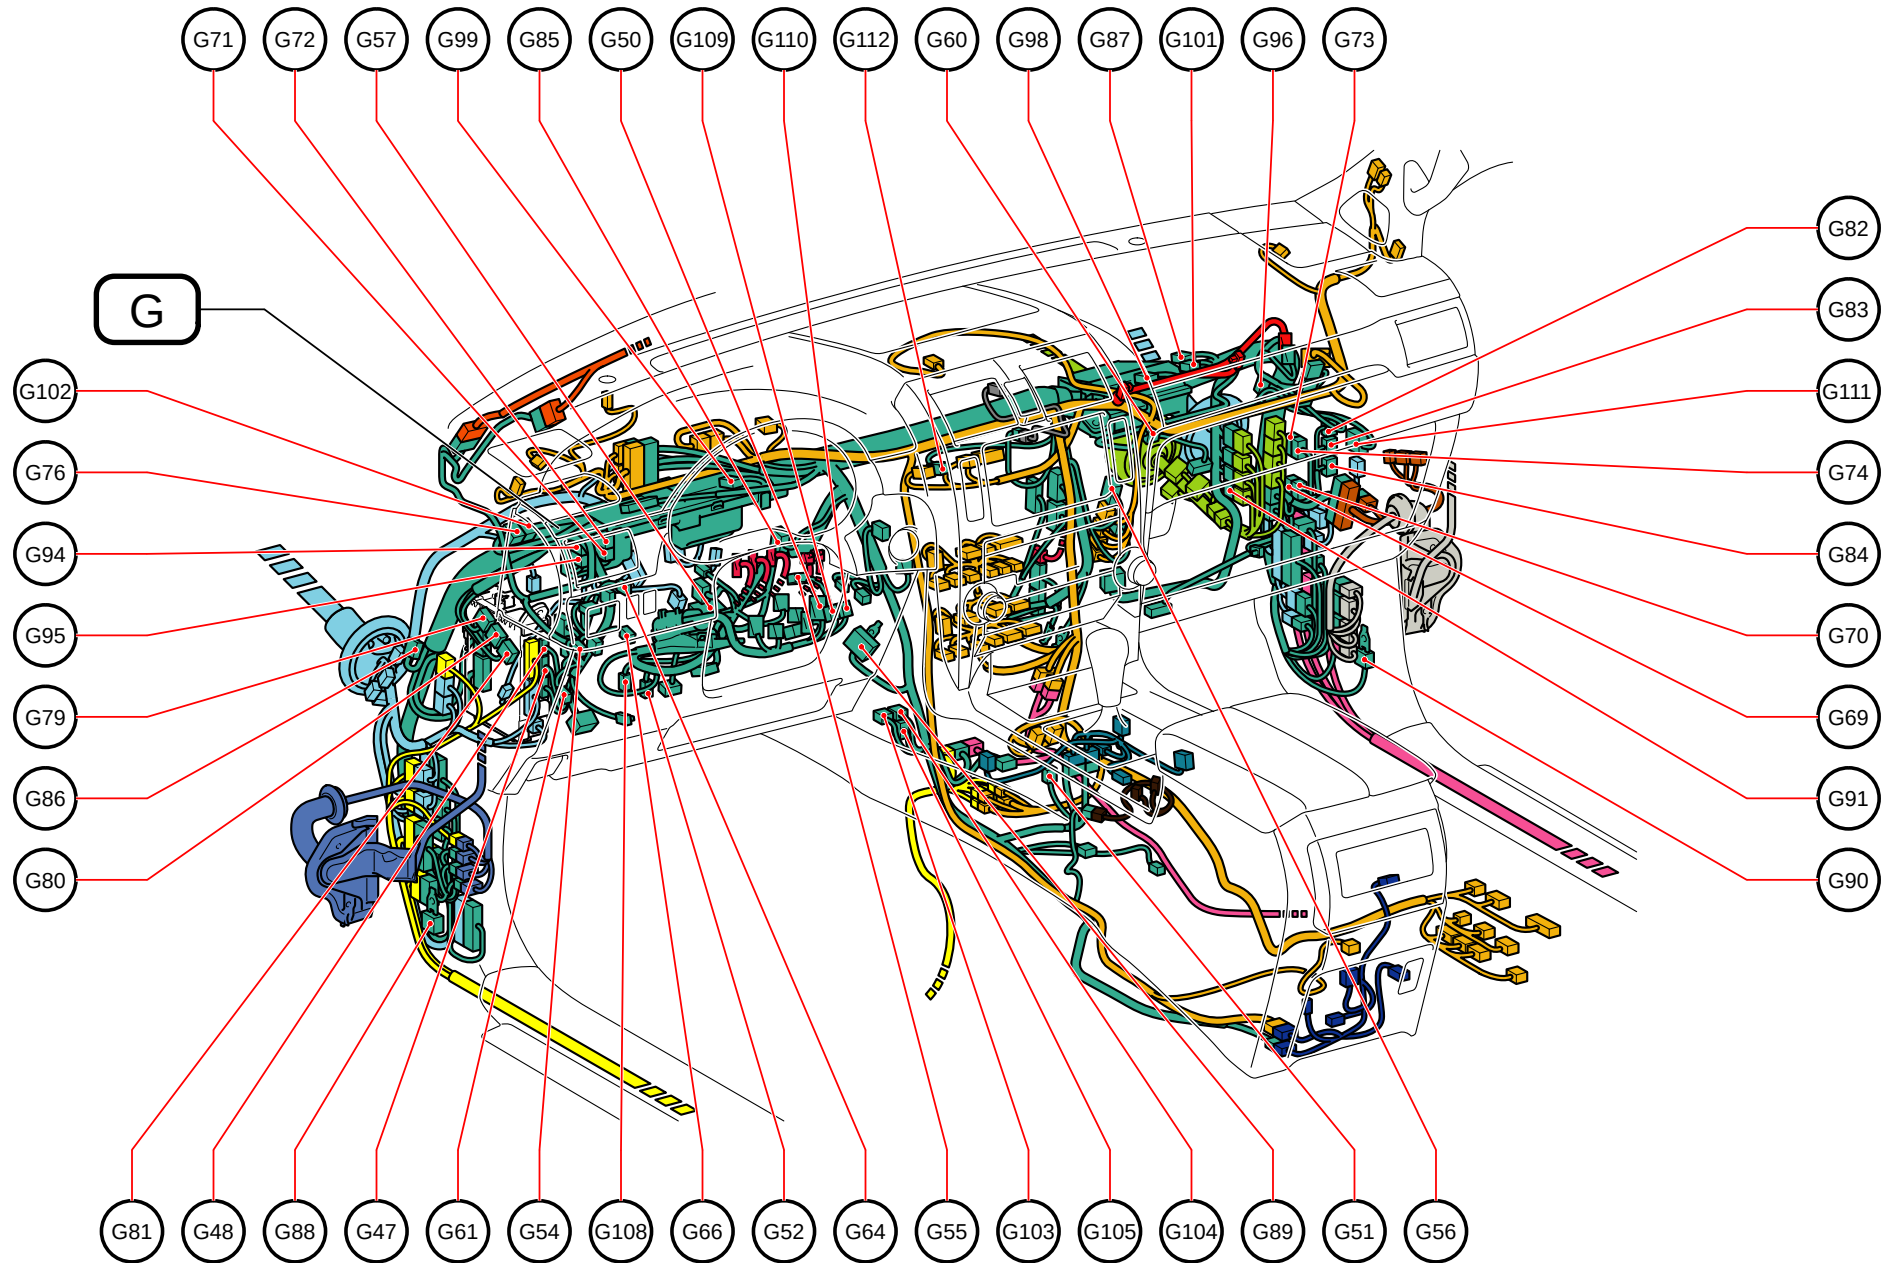

G47	Main Body ECU
G48	Main Body ECU
G50	Windshield Wiper Switch Assembly
G51	Shift Position Indicator (Console Box Assembly)
G52	Pre-Crash System Cancel Switch Assembly
G54	Headlight Cleaner Switch Assembly
G55	Power Tilt Motor
G56	Telematics Transceiver
G57	Stabilizer Control ECU
G60	Driving Support Switch Control ECU
G61	Fuel Lid Opener Switch
G64	Trip Switch
G66	Steering Heater Switch
G69	Junction Connector
G70	Junction Connector
G71	Junction Connector
G72	Junction Connector
G73	Junction Connector
G74	Junction Connector
G76	Junction Connector
G79	Junction Connector
G80	Junction Connector
G81	Junction Connector
G82	Junction Connector
G83	Junction Connector
G84	Junction Connector
G85	Junction Connector
G86	Junction Terminal
G87	Junction Terminal
G88	Junction Connector
G89	Junction Connector
G90	Junction Connector
G91	Junction Connector
G94	Junction Connector
G95	Junction Connector
G96	Junction Connector
G98	Diode (Shift Position No. 1)
G99	Diode (Shift Position No. 2)
G101	Junction Connector
G102	Junction Connector
G103	Quick Heater Assembly
G104	Quick Heater Assembly
G105	Quick Heater Assembly
G108	Tire Pressure Warning Reset Switch
G109	Windshield Wiper Switch Assembly
G110	Windshield Wiper Switch Assembly
G111	Clearance Warning ECU Assembly
G112	Multi-Display Assembly


Position of Parts in Instrument Panel (From Aug. 2013 Production)

G47
White

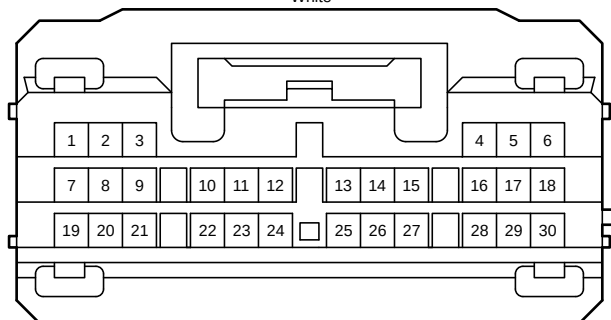


90980-12753

G48
White

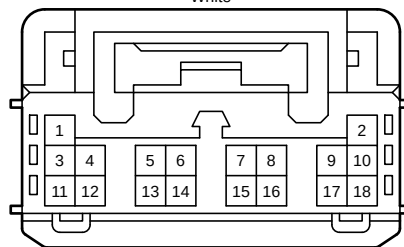


90980-12750

G50
White

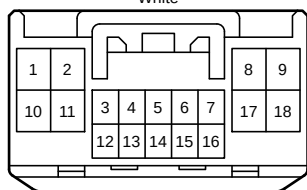


90980-12376

G51
Gray

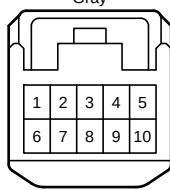


90980-12368

 G52
Gray




90980-10860

G54
White

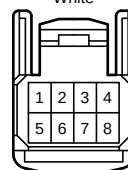


90980-12551

G55
White

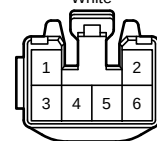


90980-10797

G56
White

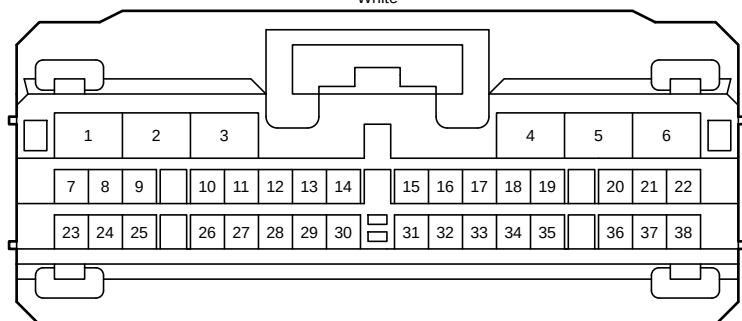


90980-12817

G57
Black

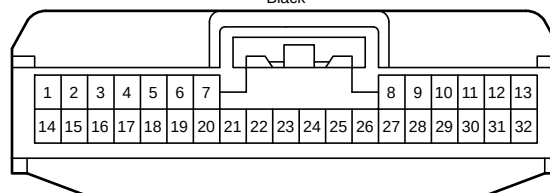


90980-12422

G60
Black

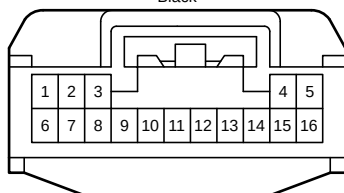


90980-12423

G61
White

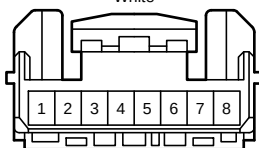


90980-12558

G64
Black

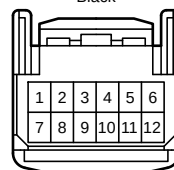













90980-12552

G66
White











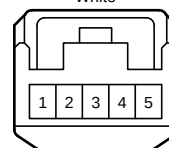


90980-12366


Position of Parts in Instrument Panel (From Aug. 2013 Production)

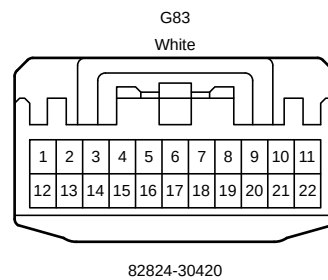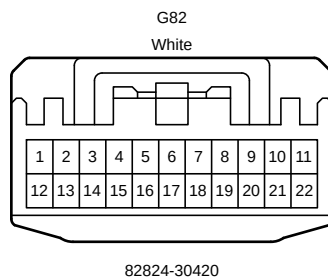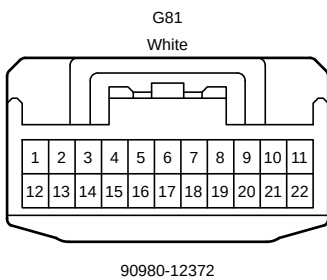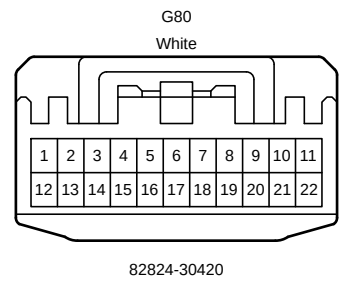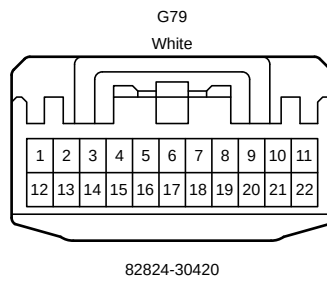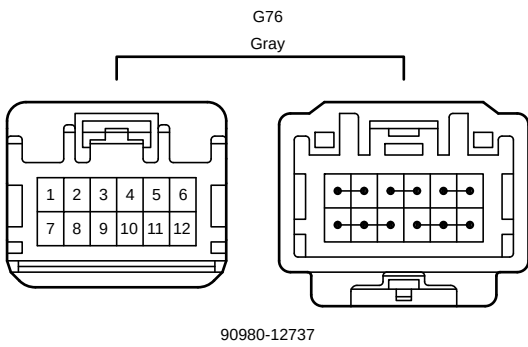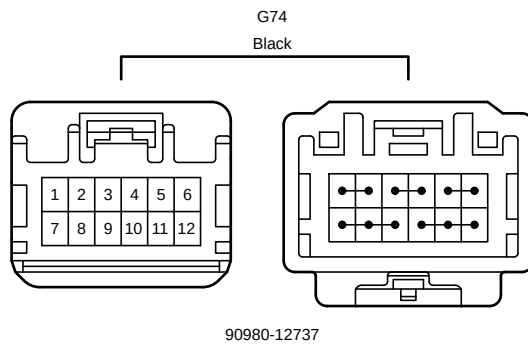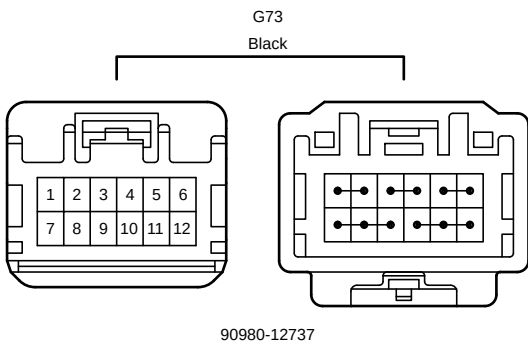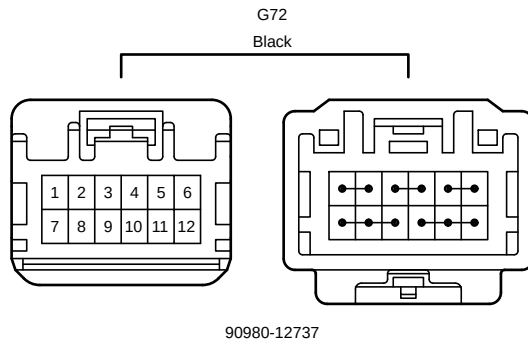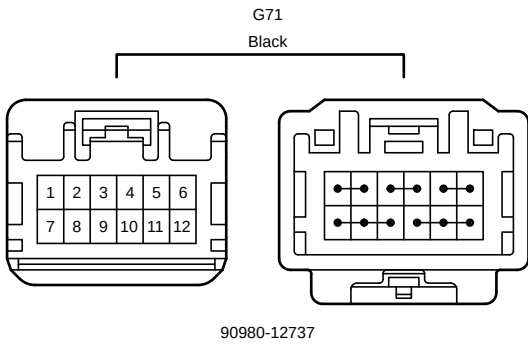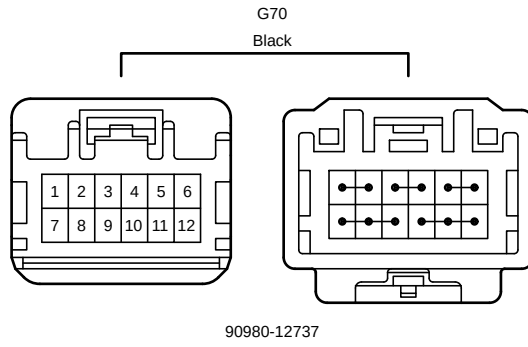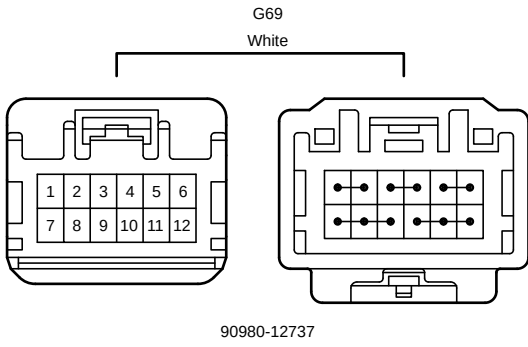


Position of Parts in Instrument Panel (From Aug. 2013 Production)

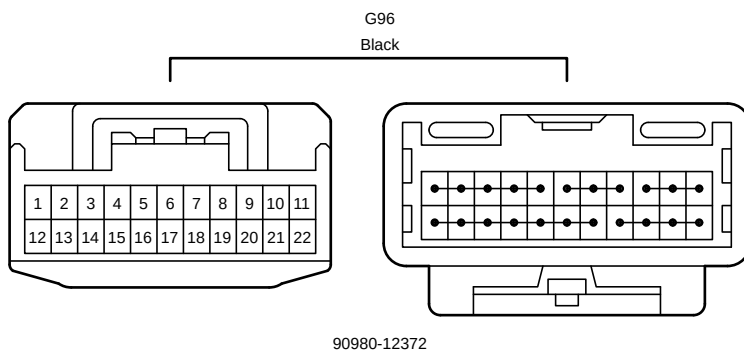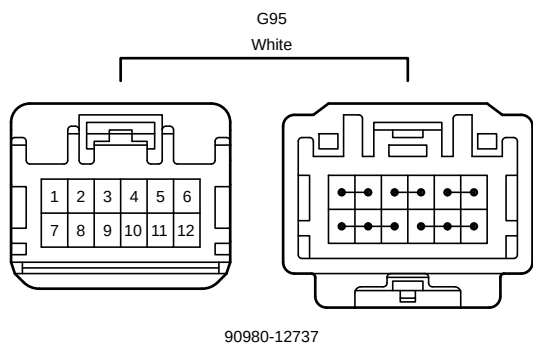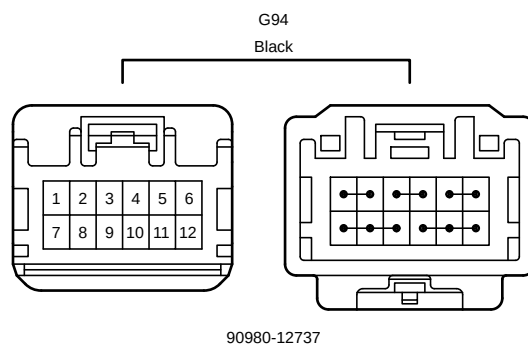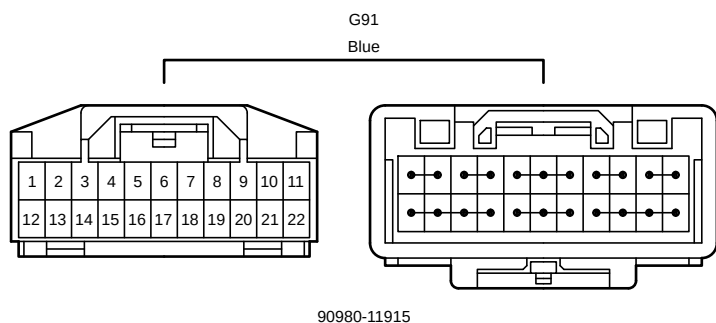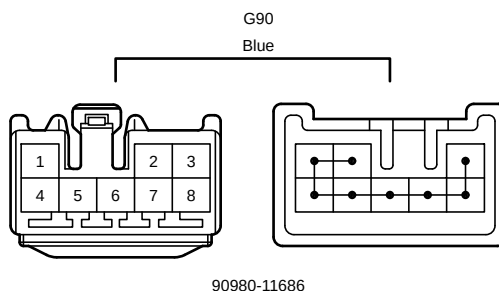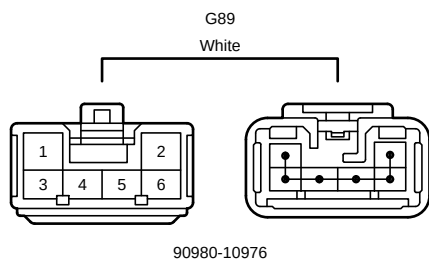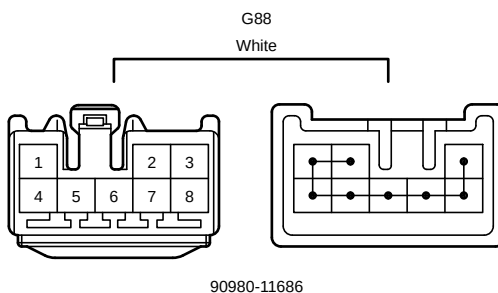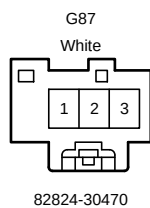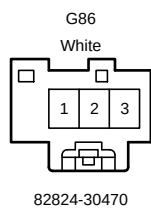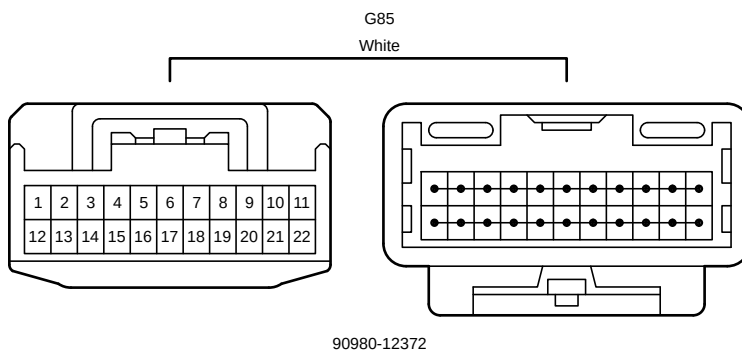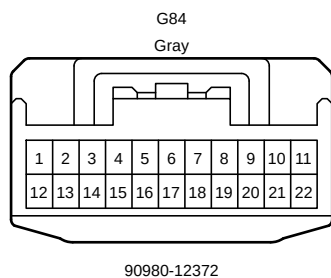


Position of Parts in Instrument Panel (From Aug. 2013 Production)

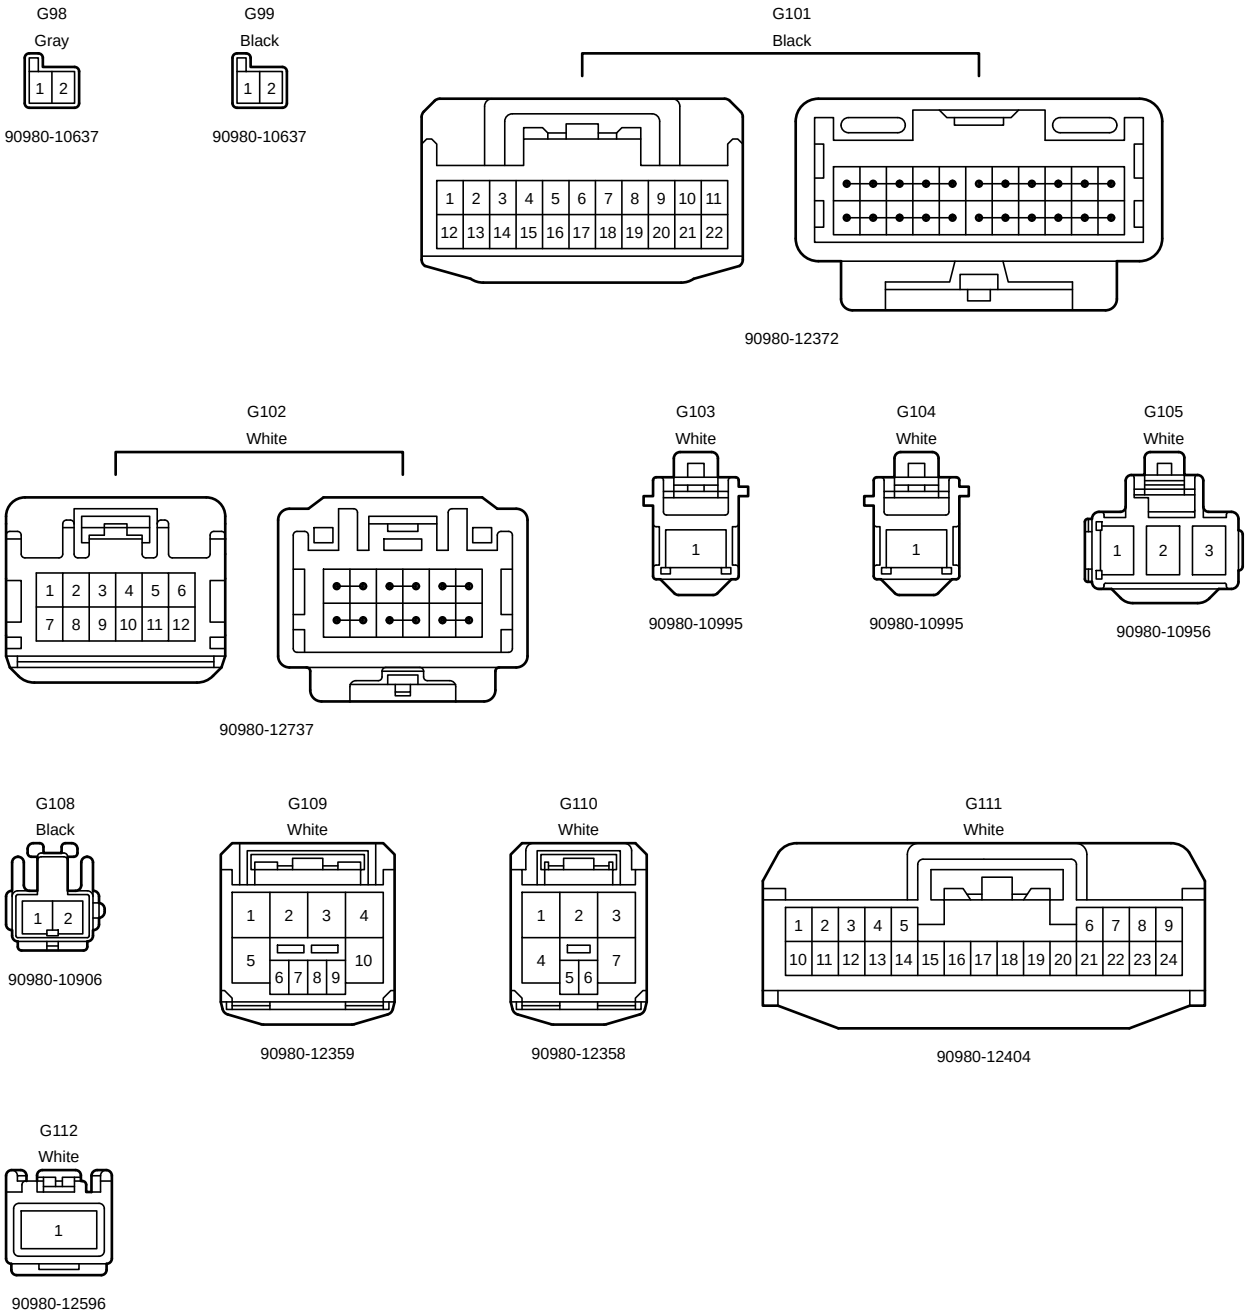

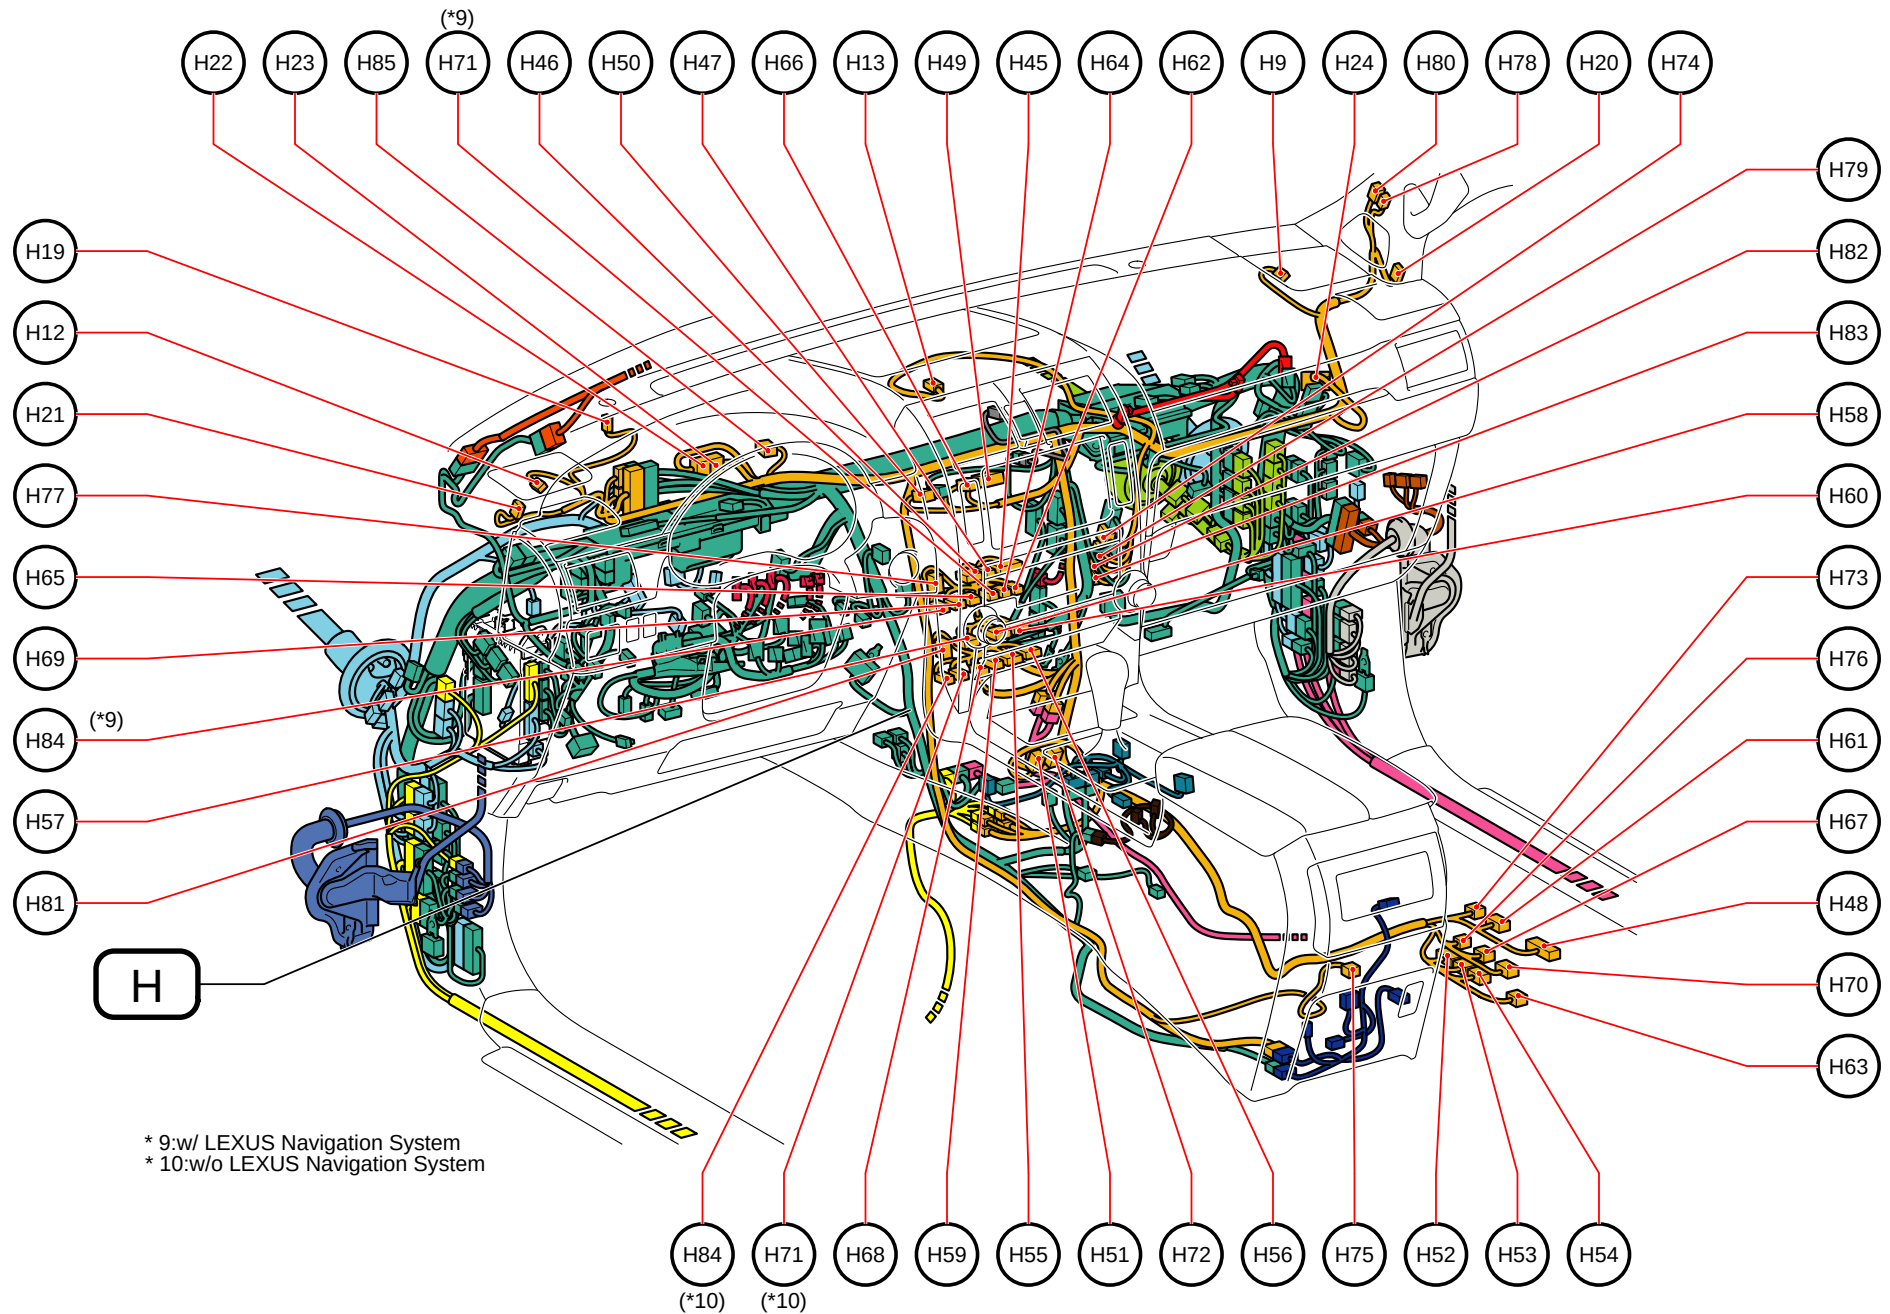


H9	Front No. 1 Speaker Assembly RH
H12	Front No. 1 Speaker Assembly LH
H13	Front No. 4 Speaker Assembly
H19	Automatic Light Control Sensor
H20	Front No. 3 Speaker Assembly RH
H21	Front No. 3 Speaker Assembly LH
H22	Junction Connector
H23	Junction Connector
H24	Junction Connector
H45	Multi-Media Module Receiver Assembly
H46	Multi-Media Module Receiver Assembly
H47	Multi-Media Module Receiver Assembly
H48	Stereo Component Amplifier Assembly
H49	Multi-Display Assembly
H50	Multi-Display Assembly
H51	No. 1 Stereo Jack Adapter Assembly
H52	Multi-Display Controller Sub-Assembly
H53	Multi-Display Controller Sub-Assembly
H54	Multi-Display Controller Sub-Assembly
H55	Multi-Media Module Receiver Assembly
H56	Multi-Media Module Receiver Assembly
H57	Multi-Media Module Receiver Assembly
H58	Multi-Media Module Receiver Assembly
H59	Multi-Media Module Receiver Assembly
H60	Multi-Media Module Receiver Assembly
H61	Stereo Component Amplifier Assembly
H62	Multi-Media Module Receiver Assembly
H63	Multi-Display Controller Sub-Assembly
H64	Multi-Media Module Receiver Assembly
H65	Multi-Media Module Receiver Assembly
H66	Multi-Display Assembly
H67	Multi-Display Controller Sub-Assembly
H68	Multi-Display Controller Sub-Assembly
H69	Multi-Media Module Receiver Assembly
H70	Multi-Display Controller Sub-Assembly
H71	Multi-Media Module Receiver Assembly
H72	No. 1 Stereo Jack Adapter Assembly
H73	Stereo Component Amplifier Assembly
H74	Telematics Transceiver
H75	Headphone Terminal
H76	Multi-Display Controller Sub-Assembly
H77	Multi-Media Module Receiver Assembly
H78	Antenna Cord Sub-Assembly
H79	Telematics Transceiver
H80	Antenna Cord Sub-Assembly
H81	Multi-Media Module Receiver Assembly
H82	Telematics Transceiver
H83	Telematics Transceiver
H84	Multi-Media Module Receiver Assembly
H85	Antenna Divider


Position of Parts in Instrument Panel (From Aug. 2013 Production)

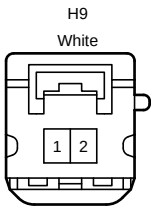


90980-12808

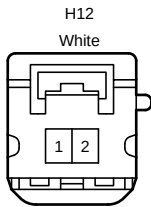


90980-12808

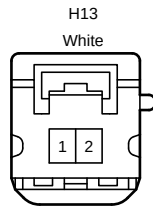


90980-12808

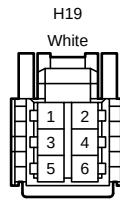


90980-12056

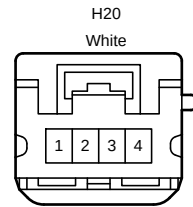


90980-12733

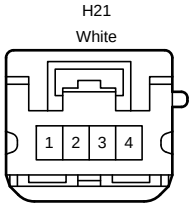


90980-12733

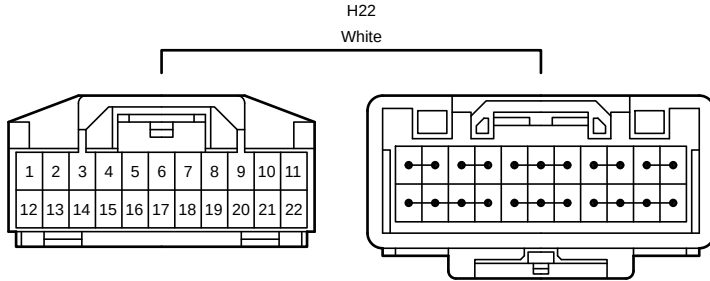


90980-11915

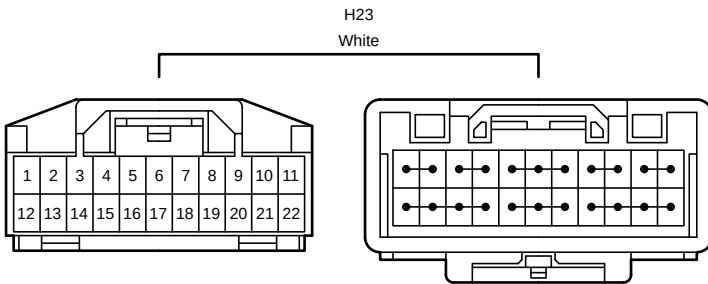


90980-11915

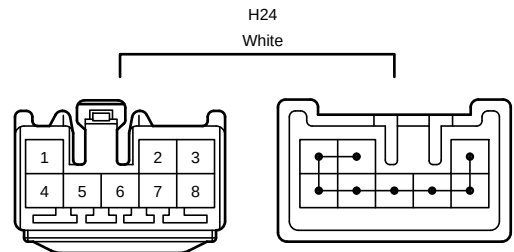


90980-11686

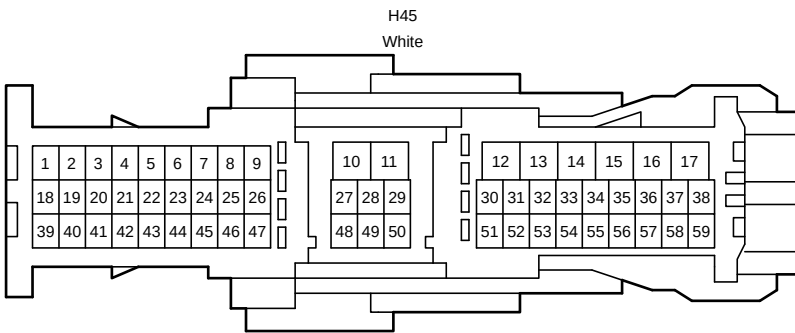


90980-12964

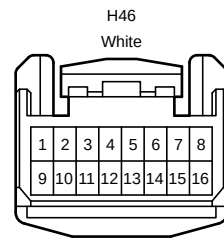


90980-12553

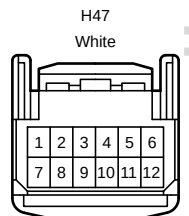


90980-12552

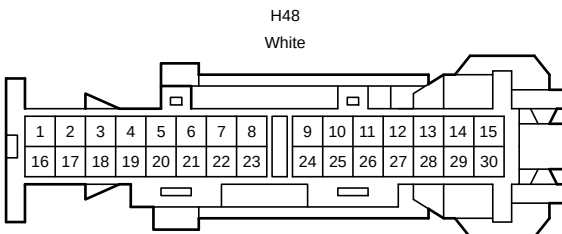

90980-12979

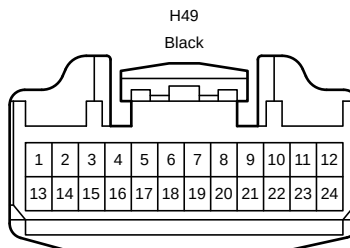


90980-12554

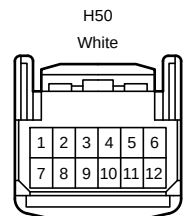


90980-12552


Position of Parts in Instrument Panel (From Aug. 2013 Production)

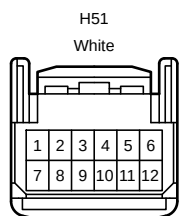


90980-12552

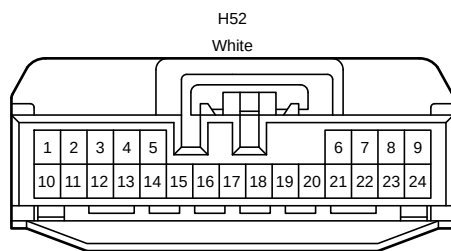


90980-12933

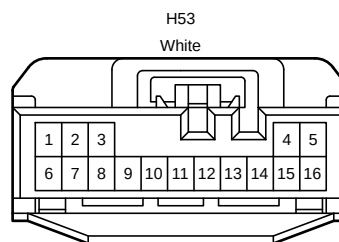


90980-12934

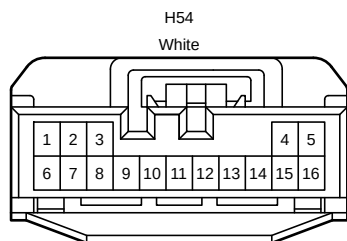


90980-12935

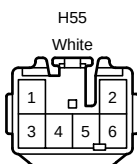


90980-10996

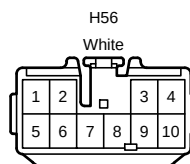


90980-10997

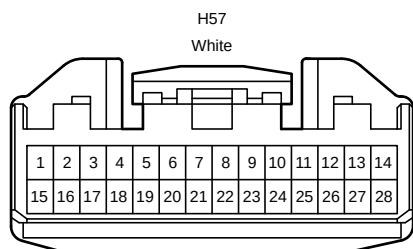


90980-12555

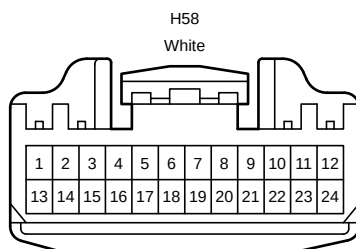


90980-12905

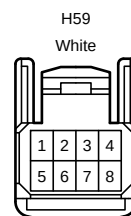


90980-12551

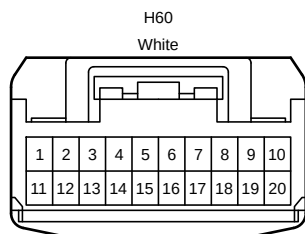


90980-12460

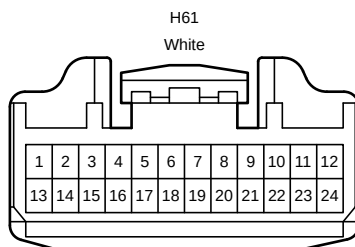


90980-12554

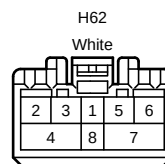


90980-12972

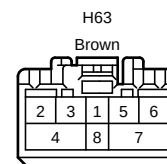


90980-12983

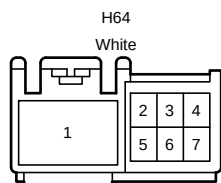


90980-12602

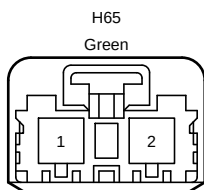


90980-12A73

 

90980-12593

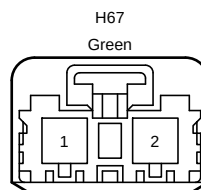


90980-12A73

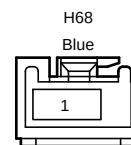


90980-12957


Position of Parts in Instrument Panel (From Aug. 2013 Production)

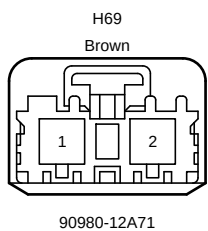


90980-12A71

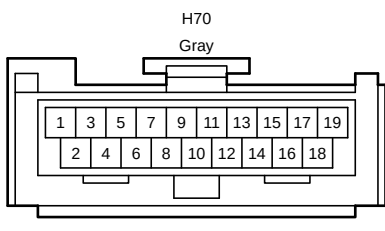


82824-60A30

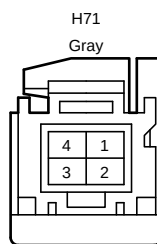


90980-12A52

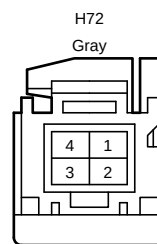


90980-12A52

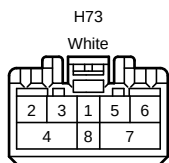


90980-12972

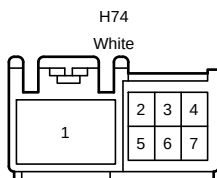


90980-12602

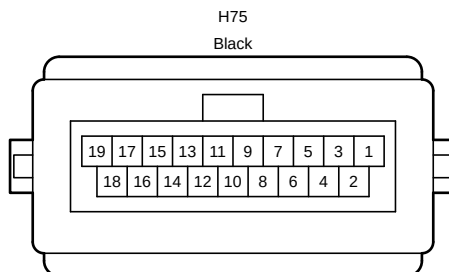


82824-60A60

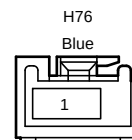


90980-12957

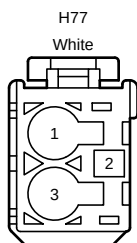


90980-50017

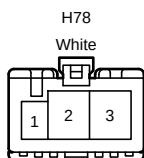


90980-12054

 


90980-50004

 


90980-50030

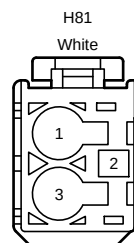


90980-50017

 


90980-50022

 


90980-50024

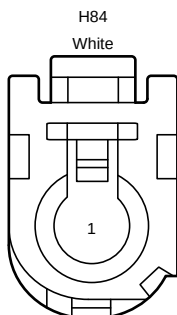

90980-50059

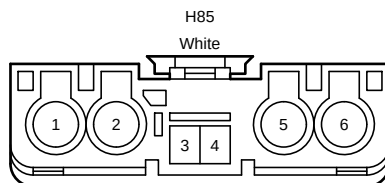


90980-12921

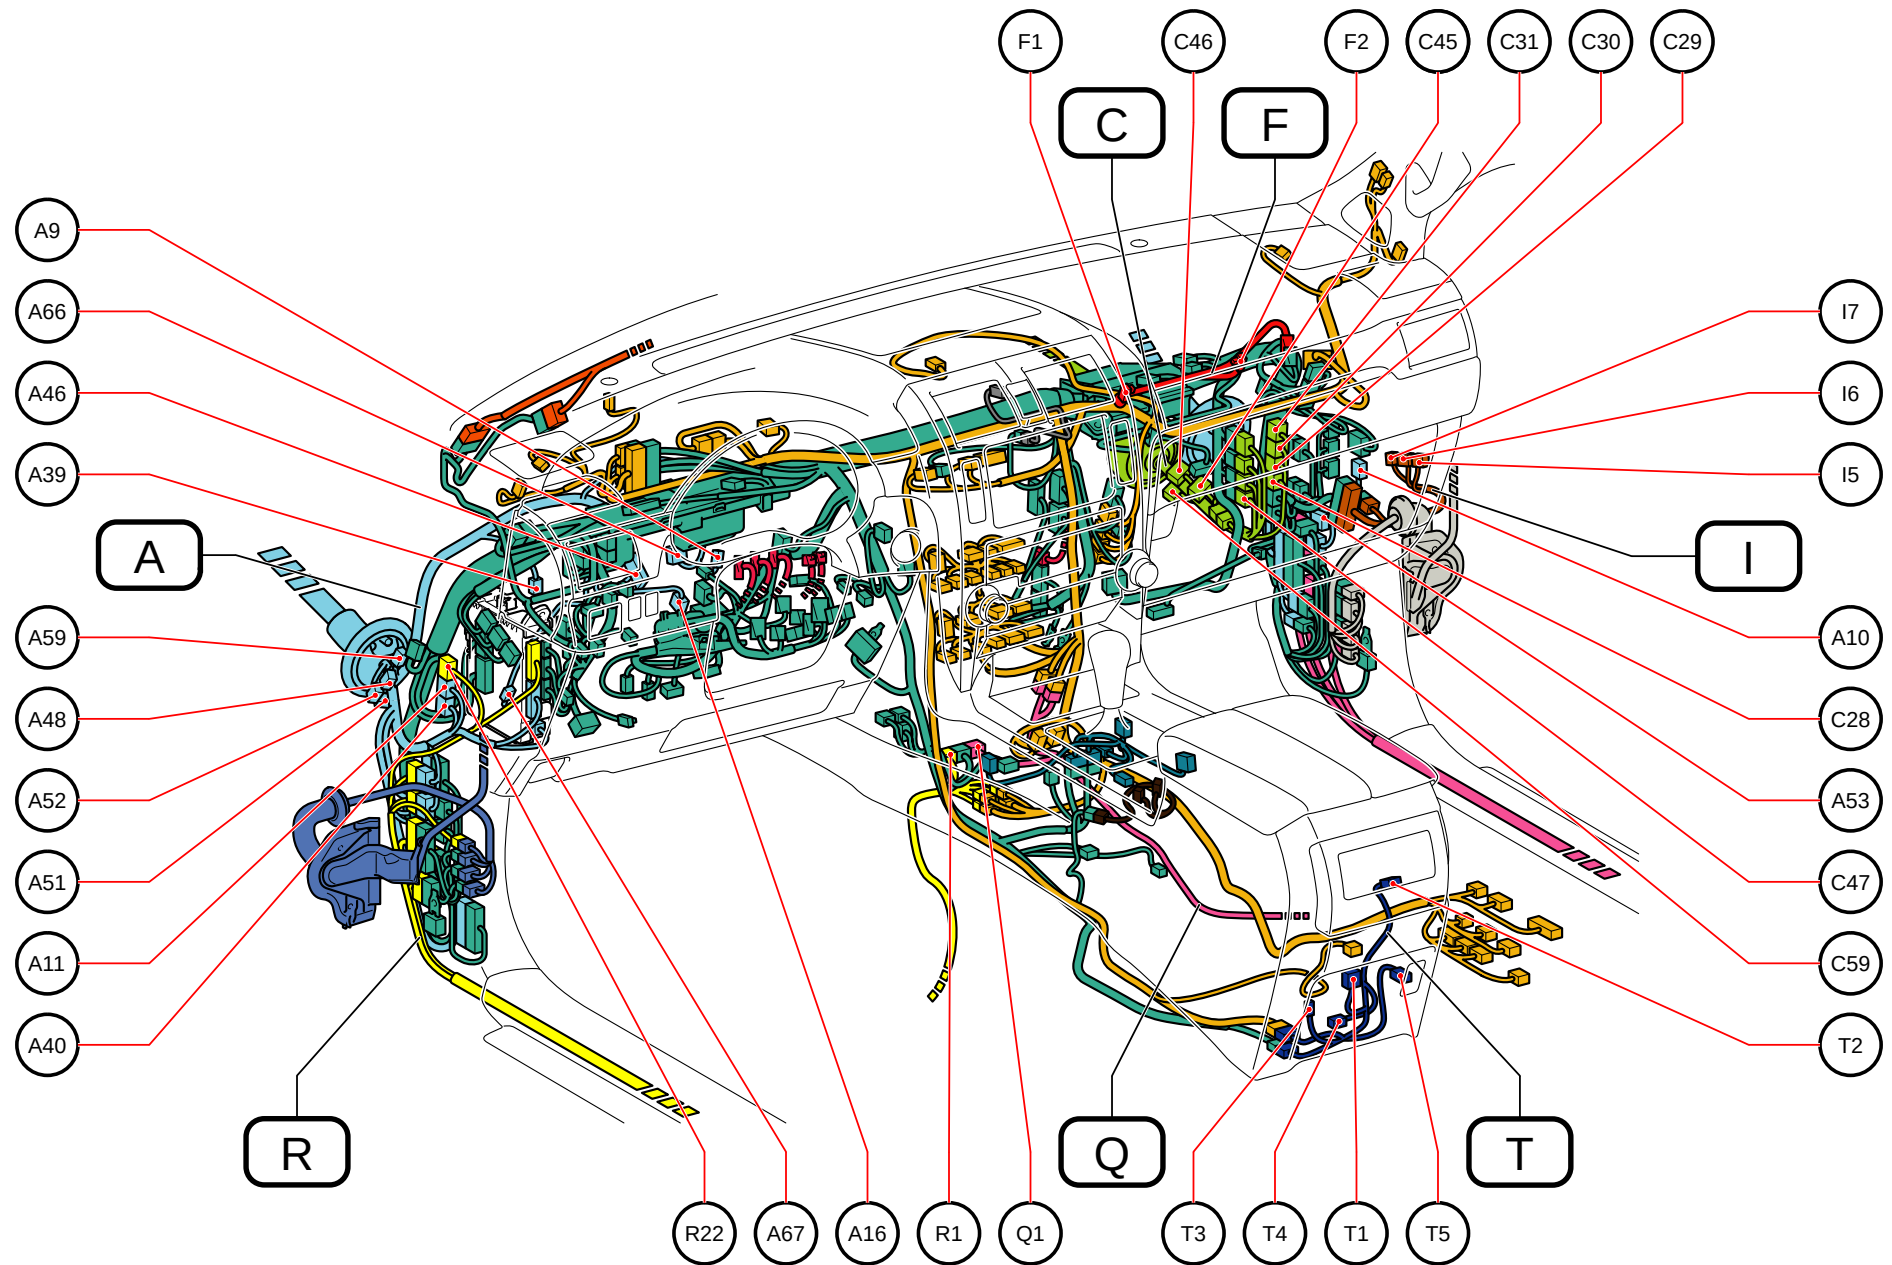


A9	Skid Control Buzzer Assembly
A10	Front Acceleration Sensor Assembly
A11	Suspension Control ECU
A16	Acceleration Sensor
A39	Parking Brake Switch Assembly
A40	Suspension Control ECU
A46	Headlight Swivel ECU Assembly
A48	Diode (Stop Light)
A51	Junction Connector
A52	Junction Connector
A53	Junction Connector
A59	Junction Connector
A66	Stop Light Control ECU Assembly
A67	Stop Light Switch Assembly
C28	ECM
C29	ECM
C30	ECM
C31	ECM
C45	Junction Connector
C46	Junction Connector
C47	Junction Connector
C59	Junction Connector
F1	Front Passenger Side Squib Circuit
F2	Front Passenger Side Squib Circuit
I5	Parking Assist ECU
I6	Parking Assist ECU
I7	Parking Assist ECU
Q1	Airbag Sensor Assembly
R1	Airbag Sensor Assembly
R22	Suspension Control ECU
T1	Headphone Terminal
T2	No. 2 A/C Control Assembly
T3	Console Box Illumination Light Assembly
T4	Cooling Box Assembly
T5	No. 2 Power Outlet Socket Assembly

 
Position of Parts in Instrument Panel (From Aug. 2013 Production)




90980-10860

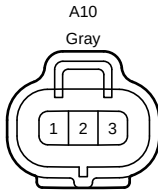


90980-10845

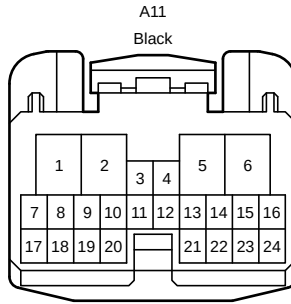


82824-50300

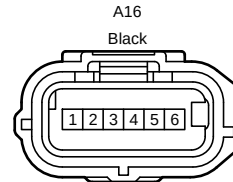


90980-12303

 


90980-10871

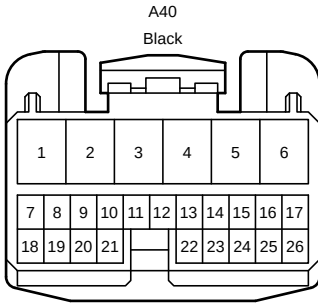


82824-50310

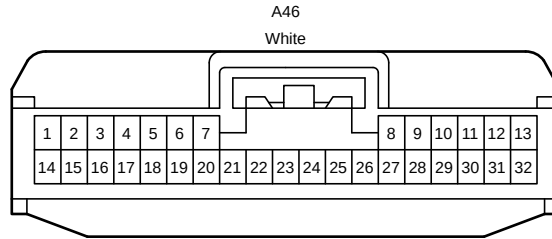


90980-12422

 

90980-10962

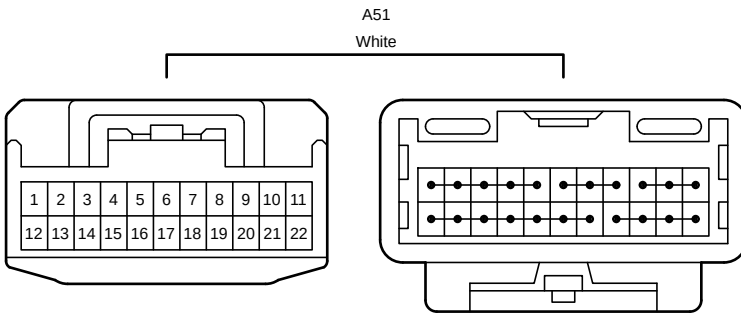


90980-12372

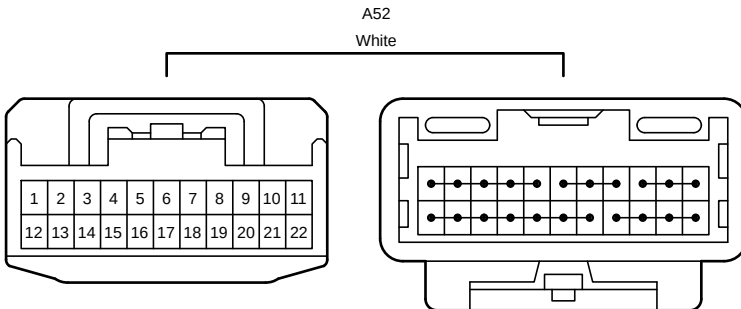

90980-12372


Position of Parts in Instrument Panel (From Aug. 2013 Production)

A53
White

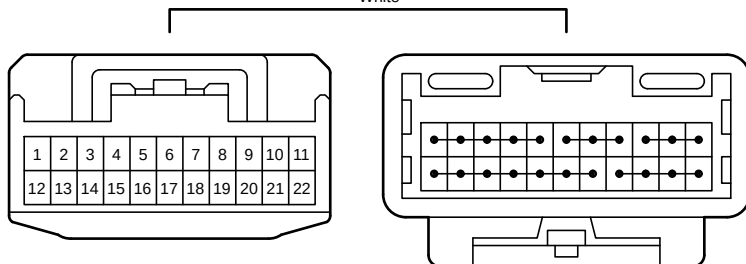


90980-12372

A59
White

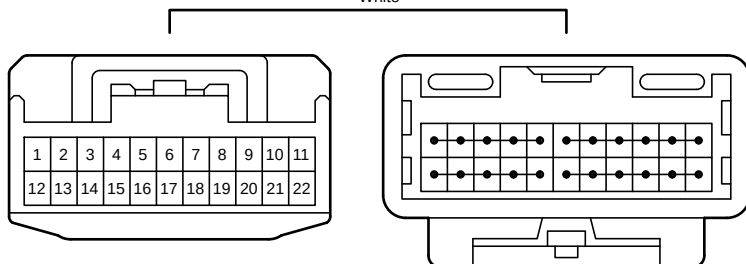


90980-12372

 A66
Black




90980-10997

A67
White

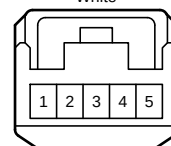


90980-12366

C28
White

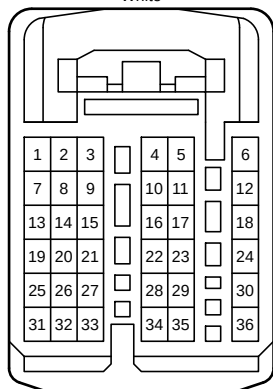


82824-26130

C29
White

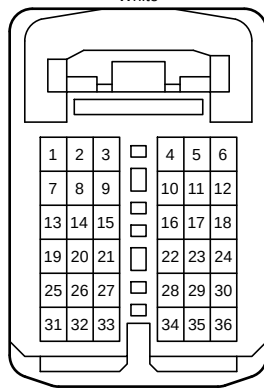


82824-26140

C30
White

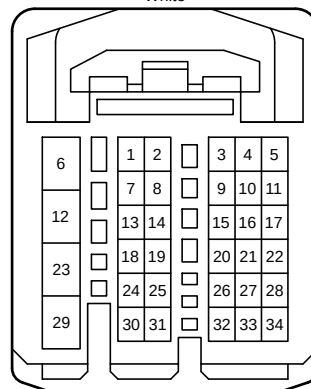


82824-26150

C31
White

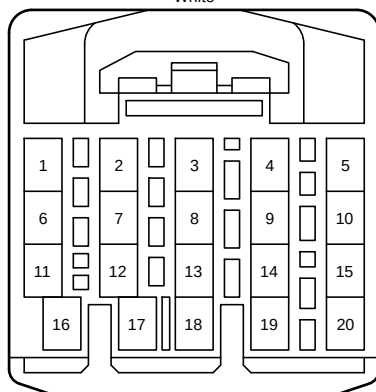







82824-26160

C45
Black










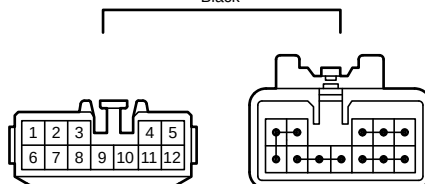


90980-10803


Position of Parts in Instrument Panel (From Aug. 2013 Production)

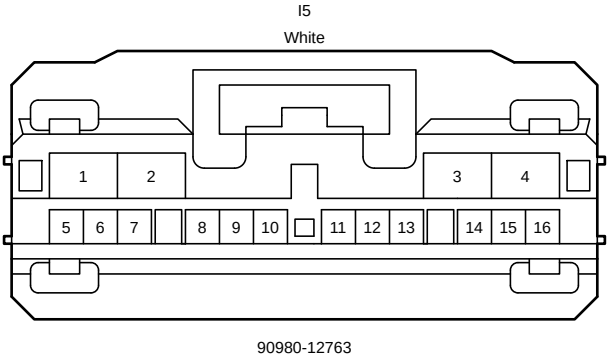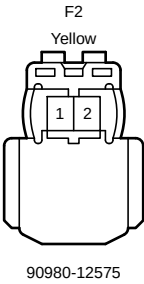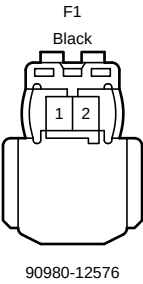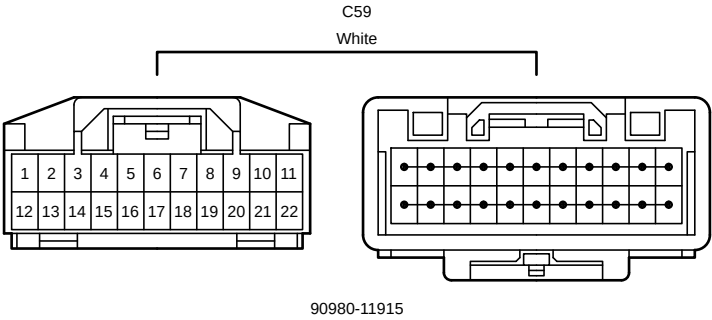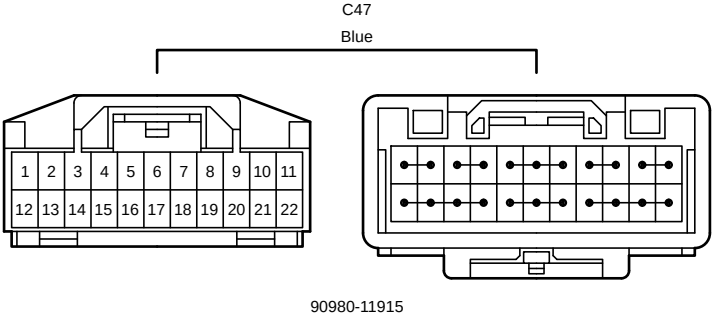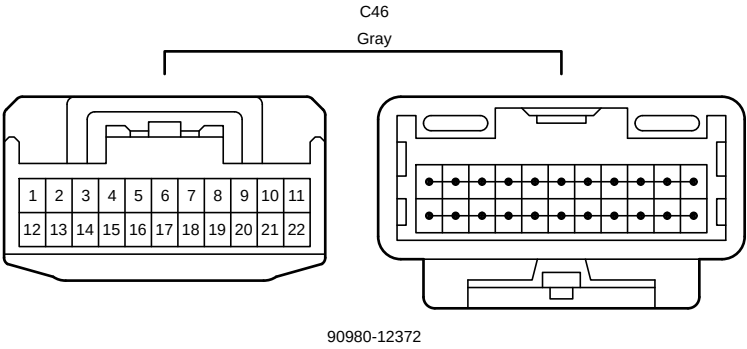

  Position of Parts in Instrument Panel (From Aug. 2013 Production)

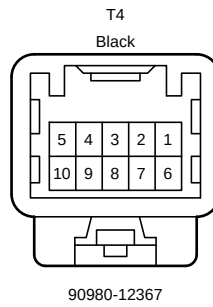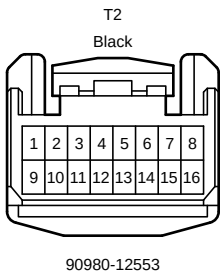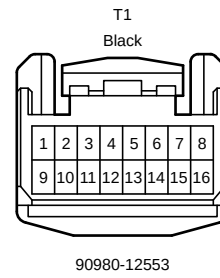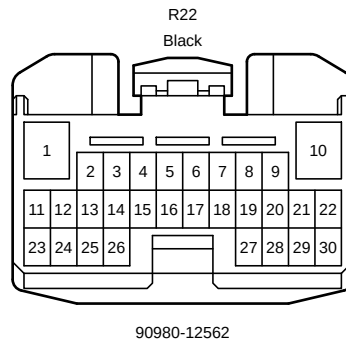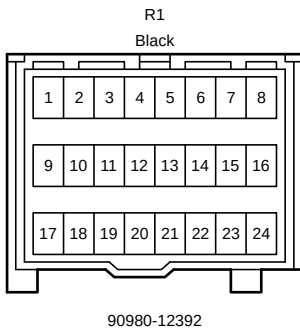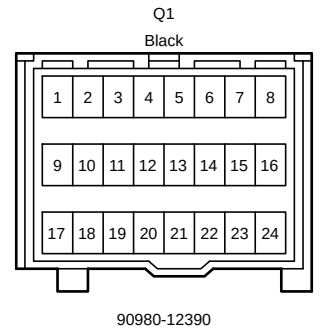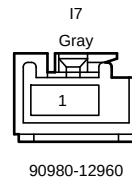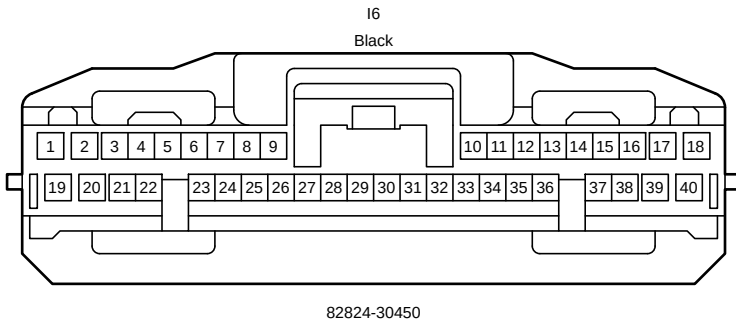


Position of Parts in Instrument Panel (From Aug. 2013 Production)

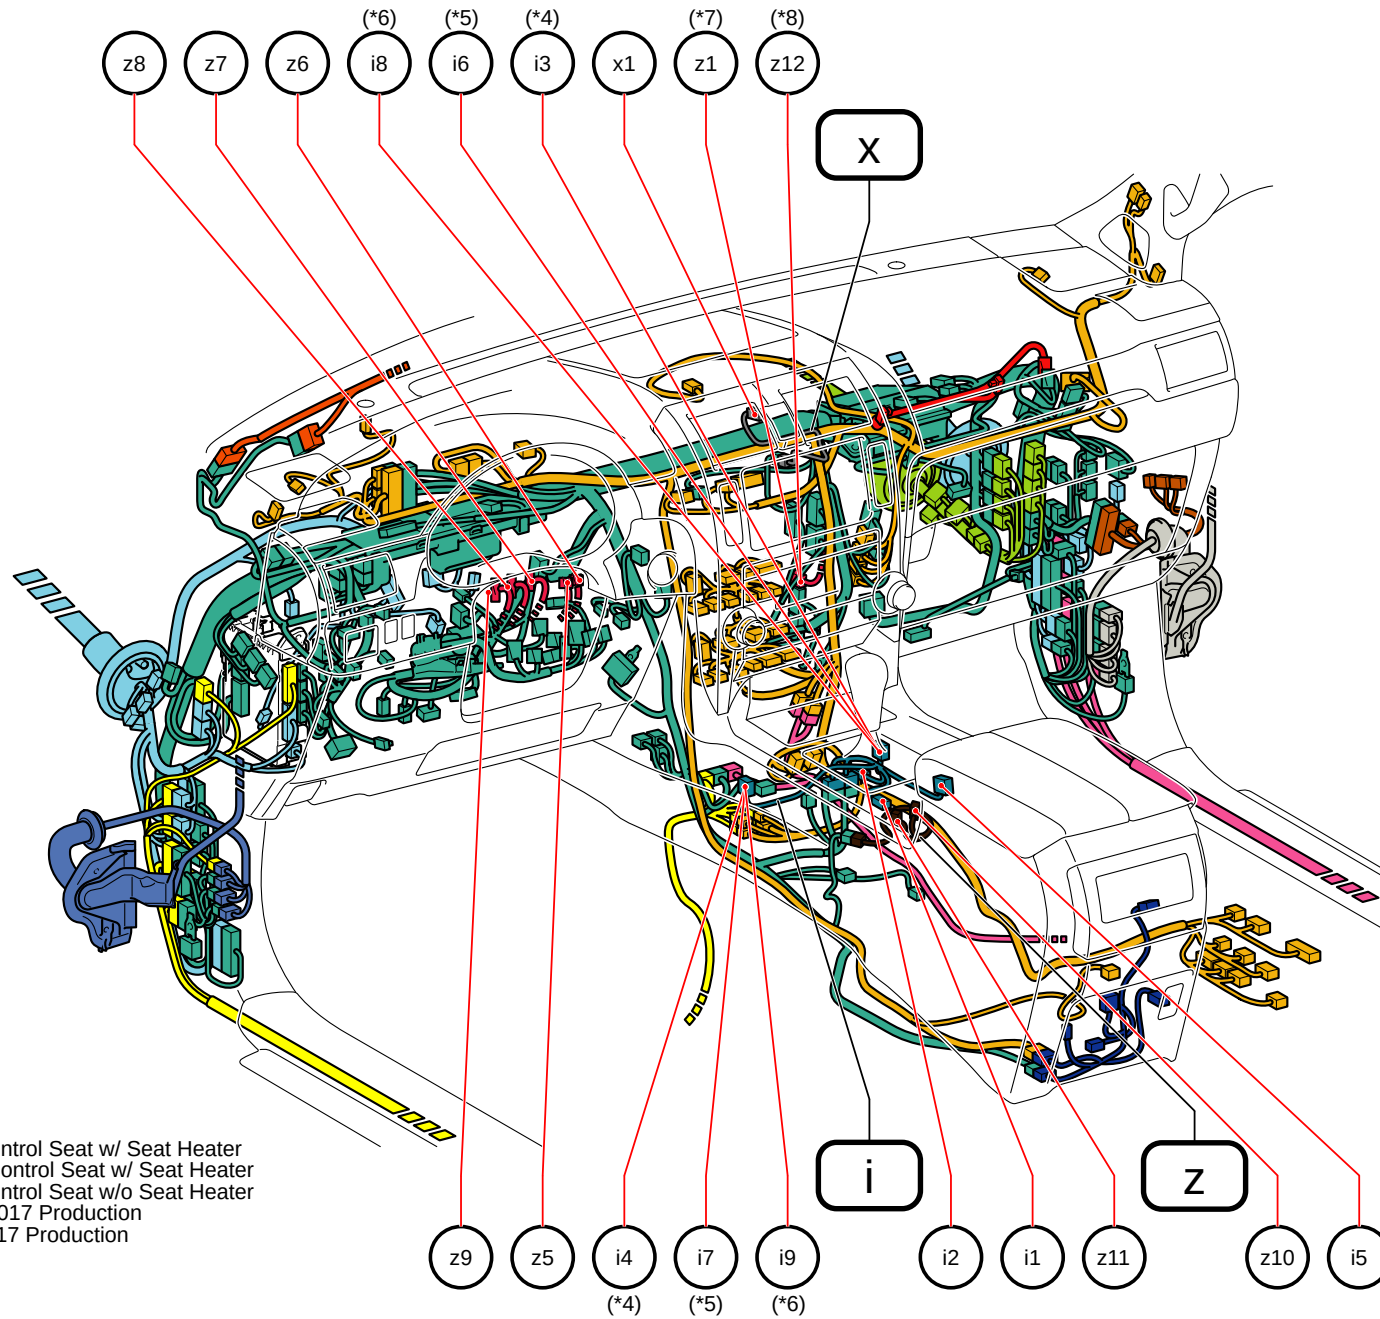


i1	No. 1 Indoor Electrical Key Antenna Assembly
i2	Power Point Socket Assembly
i3	Refreshing Seat Switch RH
i4	Refreshing Seat Switch LH
i5	Combination Switch Assembly
i6	Refreshing Seat Switch RH
i7	Refreshing Seat Switch LH
i8	Refreshing Seat Switch RH
i9	Refreshing Seat Switch LH
x1	Hazard Warning Signal Switch Assembly
z1	A/C Amplifier Assembly , A/C Blower Assembly
z5	Driver Side Squib Circuit , Spiral Cable Sub-Assembly
z6	Driver Side Squib 2nd Step Circuit , Spiral Cable Sub-Assembly
z7	Cruise Control Main Switch , Spiral Cable Sub-Assembly
z8	Spiral Cable Sub-Assembly , Steering Pad Switch Assembly
z9	Spiral Cable Sub-Assembly , Steering Wheel Heater Control Assembly
z10	Cup Holder Illumination RH (No. 1 Interior Illumination Light Assembly)
z11	Cup Holder Illumination LH (No. 1 Interior Illumination Light Assembly)
z12	A/C Amplifier Assembly , A/C Blower Assembly


Position of Parts in Instrument Panel (From Aug. 2013 Production)

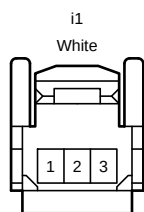


90980-12795

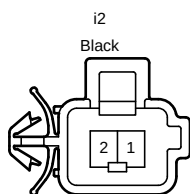


90980-11299

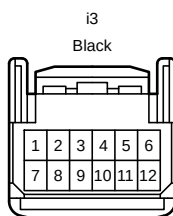


90980-12552

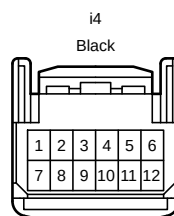


90980-12552

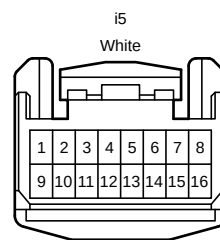


90980-12553

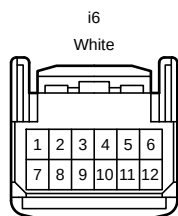


90980-12552

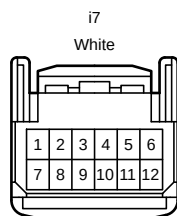


90980-12552

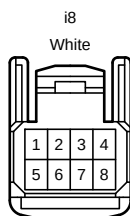


90980-12551

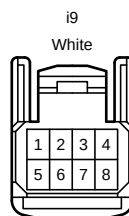


90980-12551

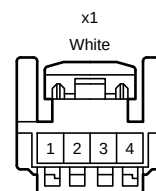


82824-21030

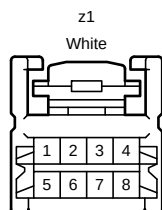


90980-12264

 


90980-12224

 


90980-12219

 




90980-12360

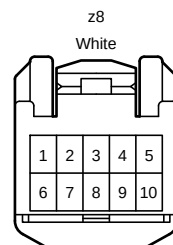


90980-12361

 


90980-10795

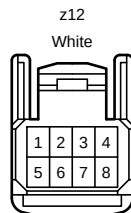  

90980-12551

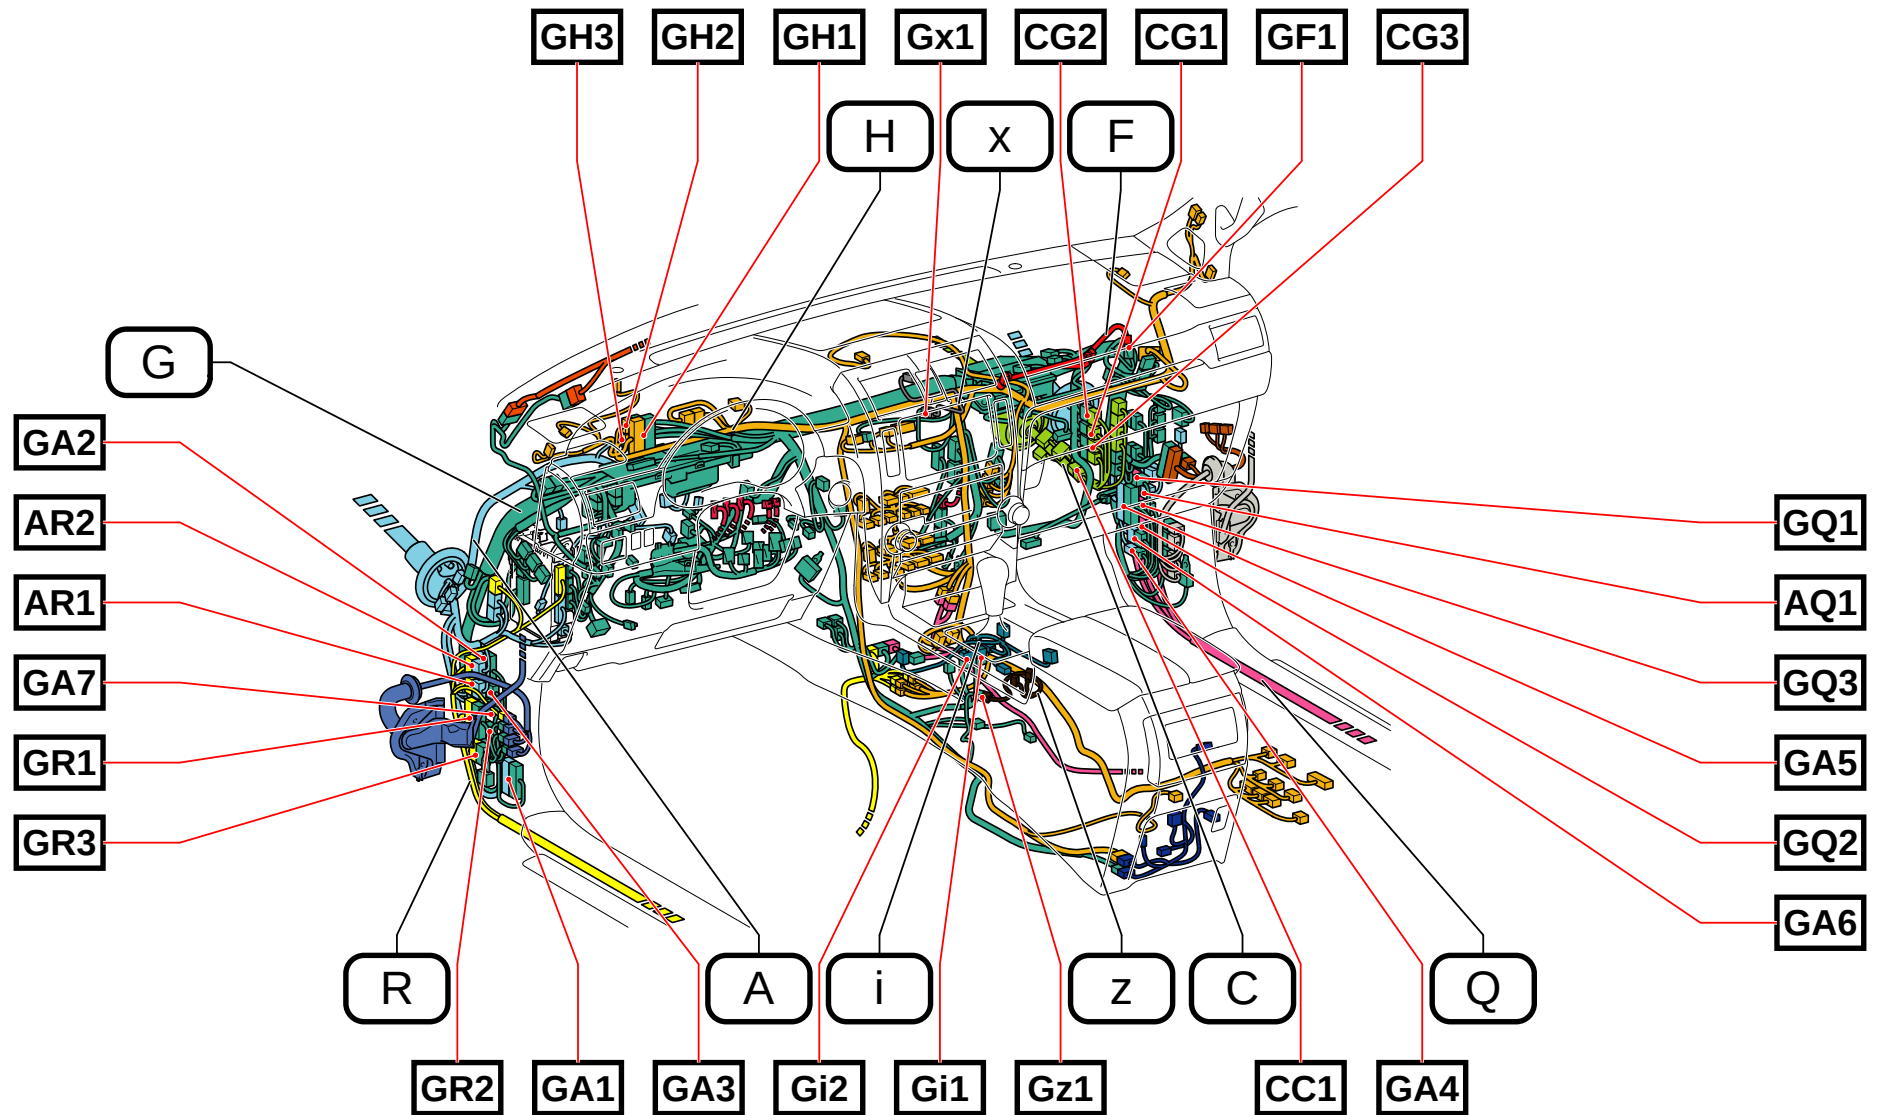


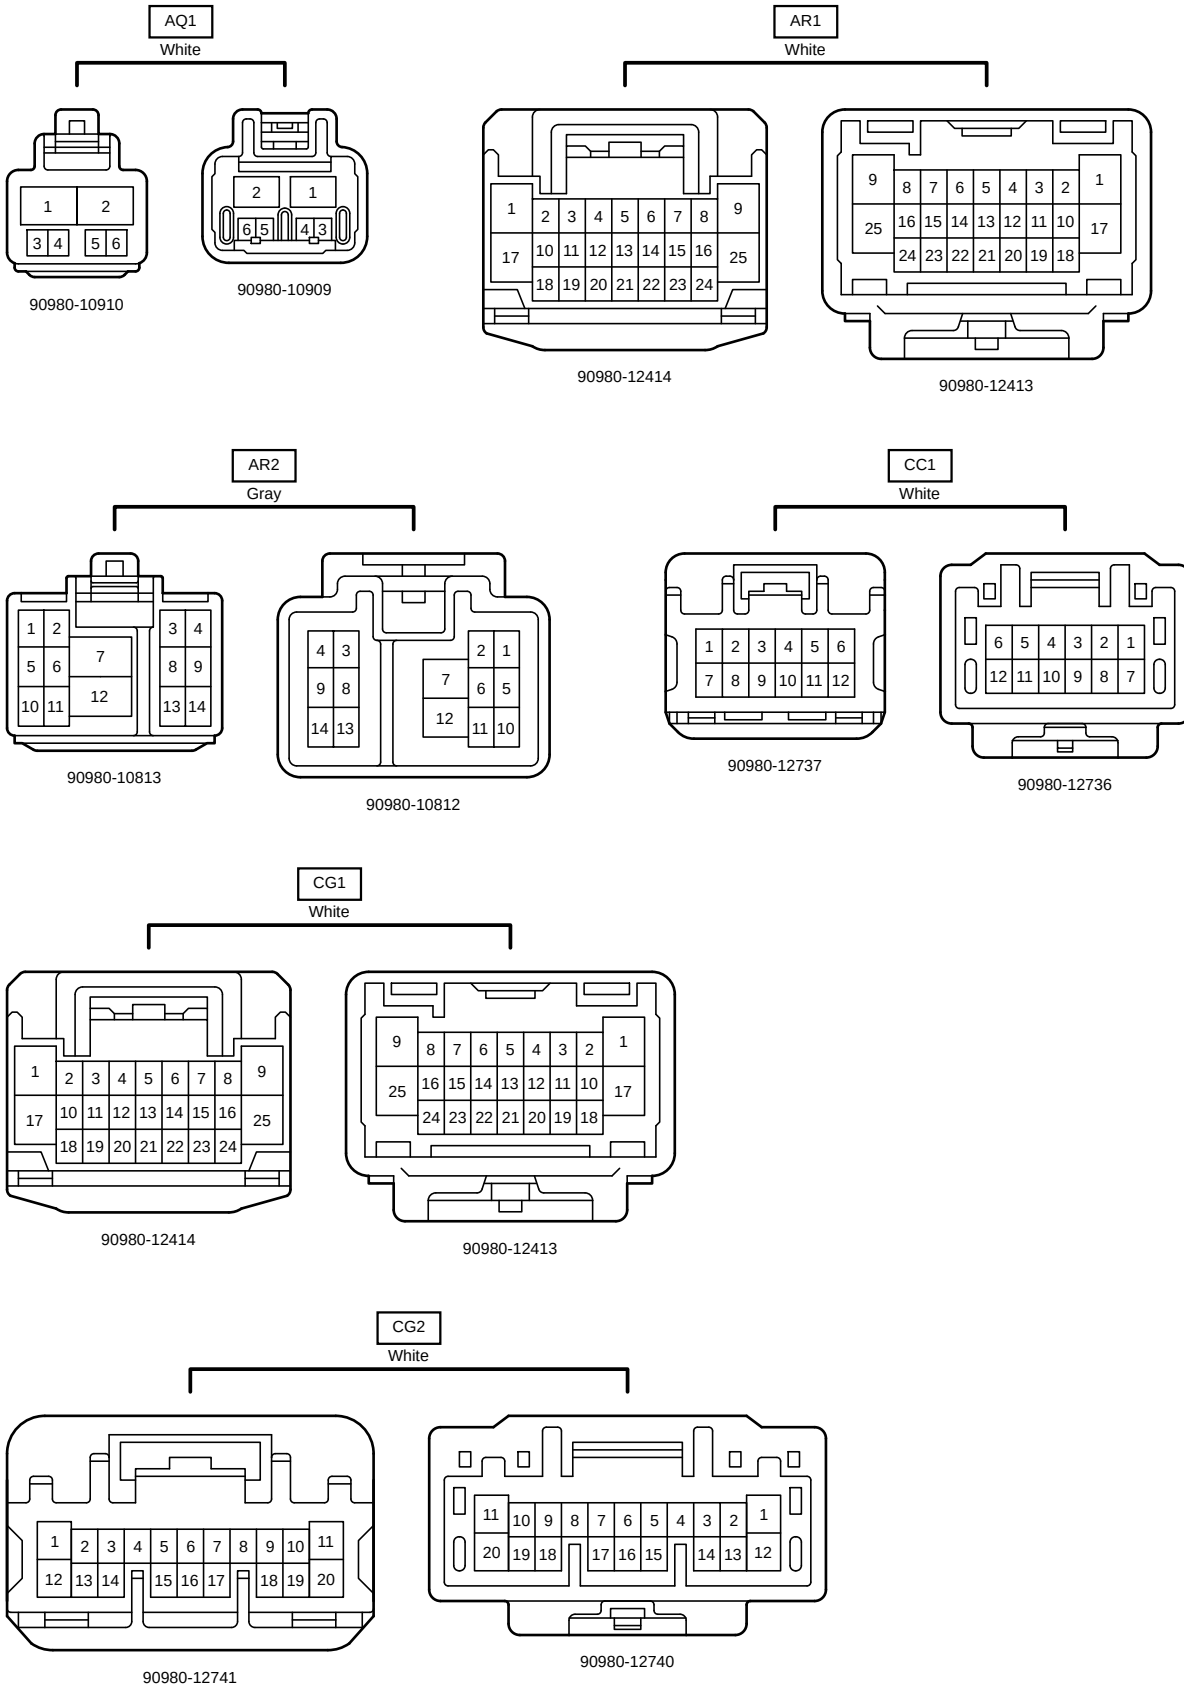


Wire and Wire in Instrument Panel (From Aug. 2013 Production)

CG3

White

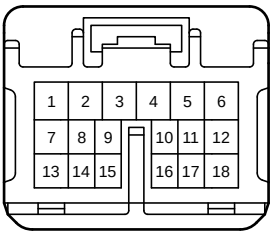


90980-12745

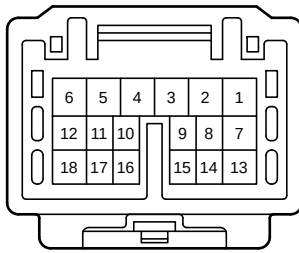


90980-12744

GA1

White

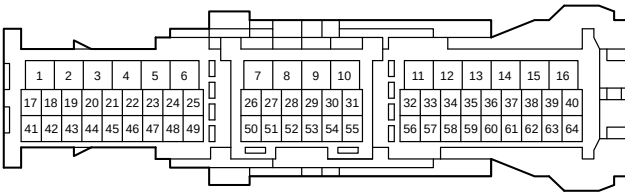


90980-12774

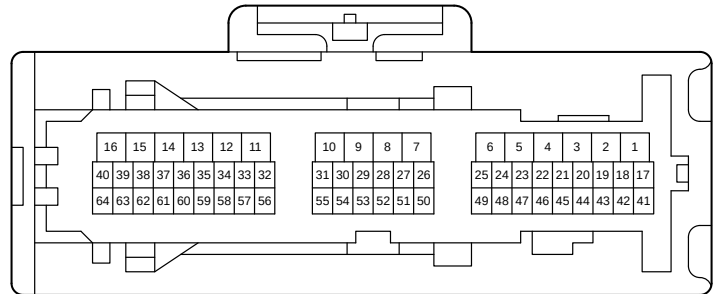


90980-12798

GA2

White

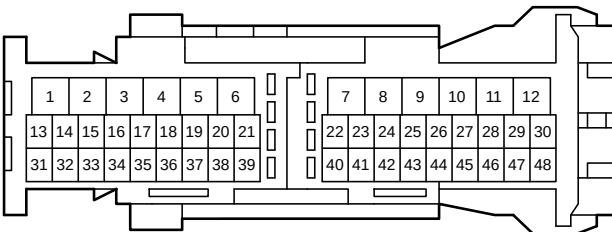


90980-12779

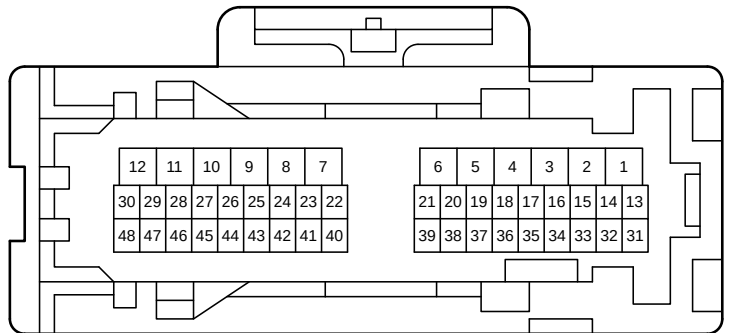


90980-12799

GA3

Black

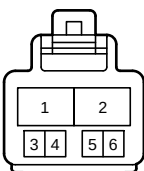


90980-10910

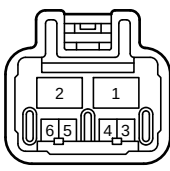


90980-10909

GA4

Yellow

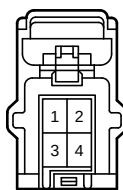


90980-11892




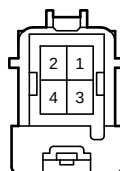


90980-11891

Wire and Wire in Instrument Panel (From Aug. 2013 Production)

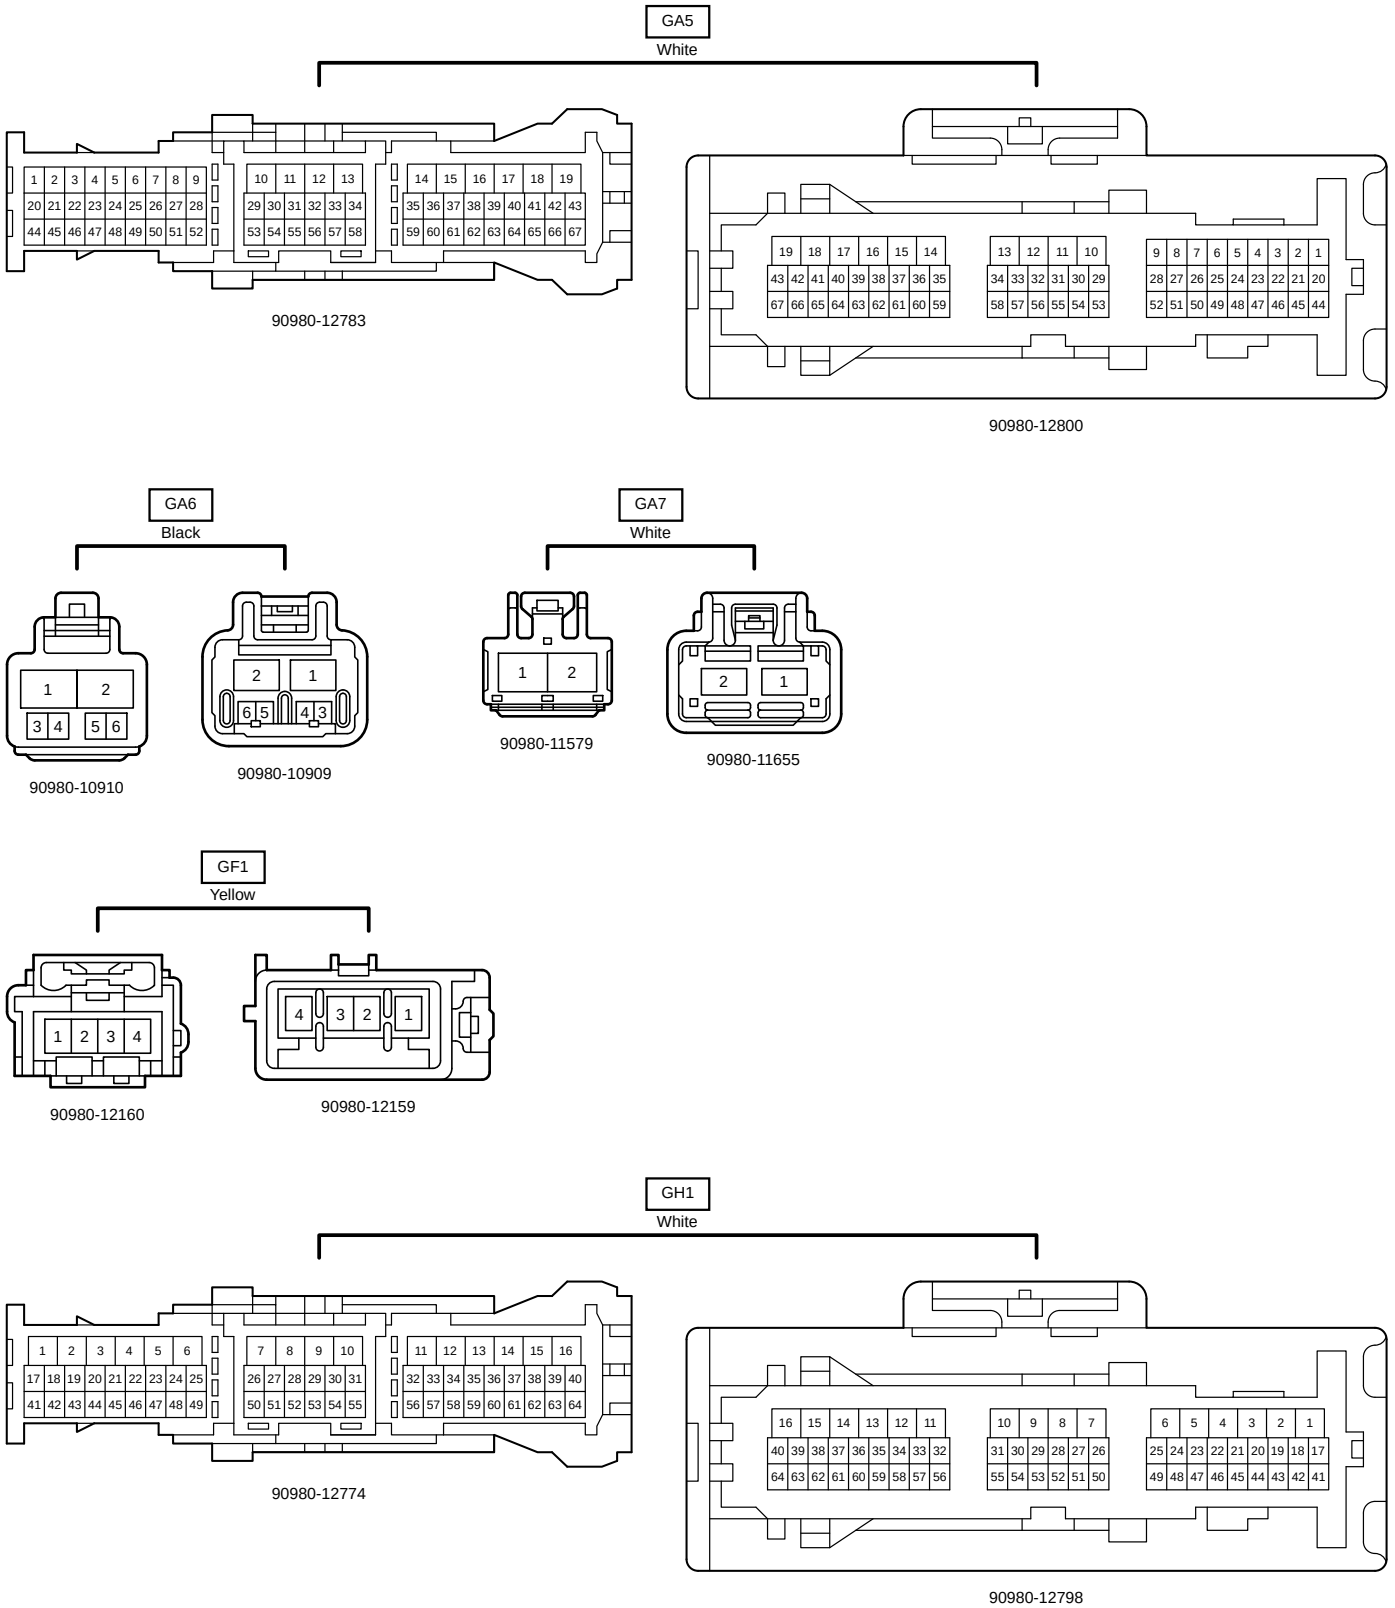


Wire and Wire in Instrument Panel (From Aug. 2013 Production)

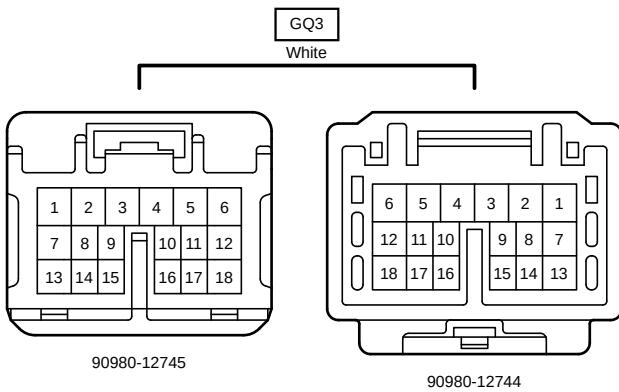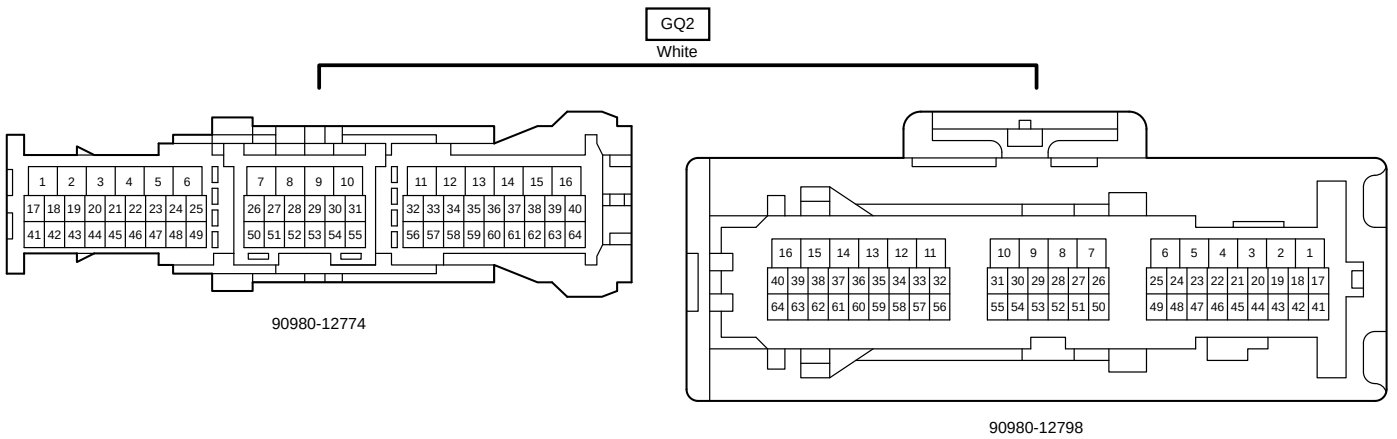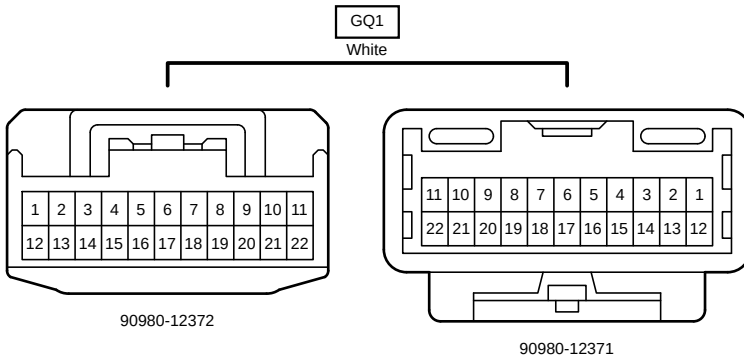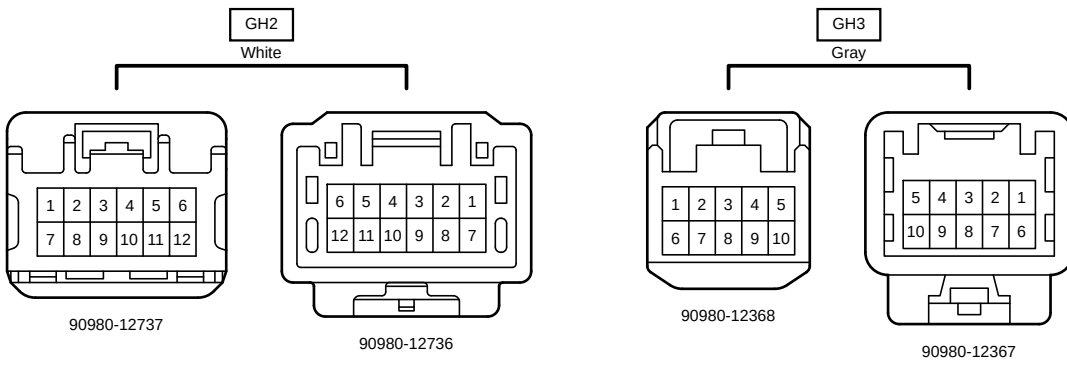


Wire and Wire in Instrument Panel (From Aug. 2013 Production)

GR1

White

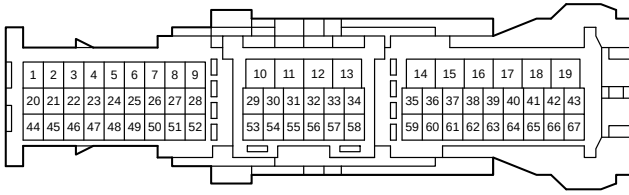


90980-12783

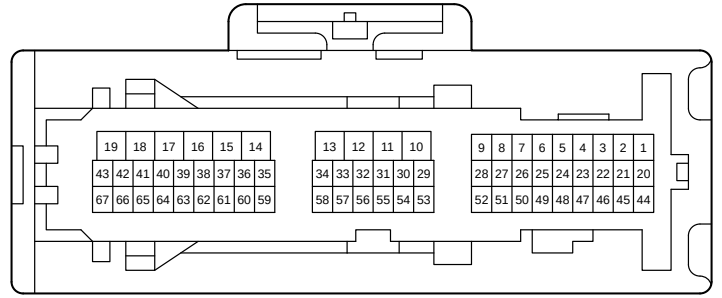


90980-12800

GR2

Gray

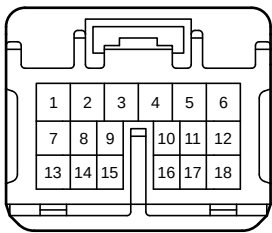


90980-12745

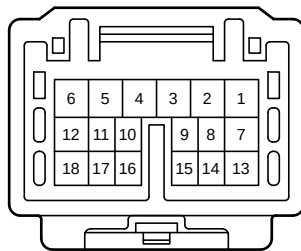


90980-12744

GR3

Blue

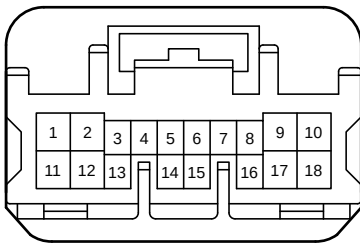


90980-12739

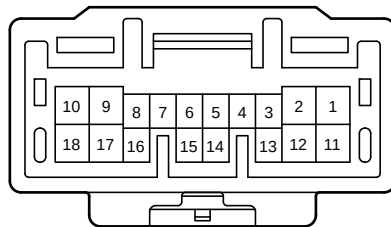


90980-12738

Gi1

White

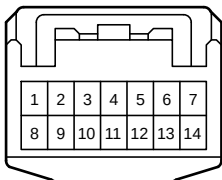


90980-12370

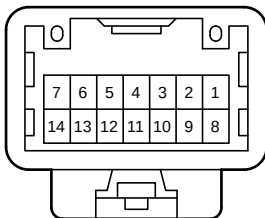


90980-12369

Gi2

White

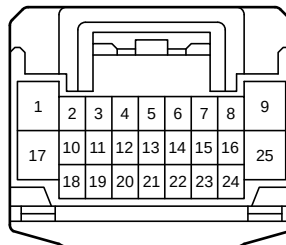


90980-12414

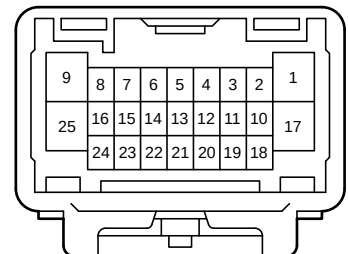


90980-12413




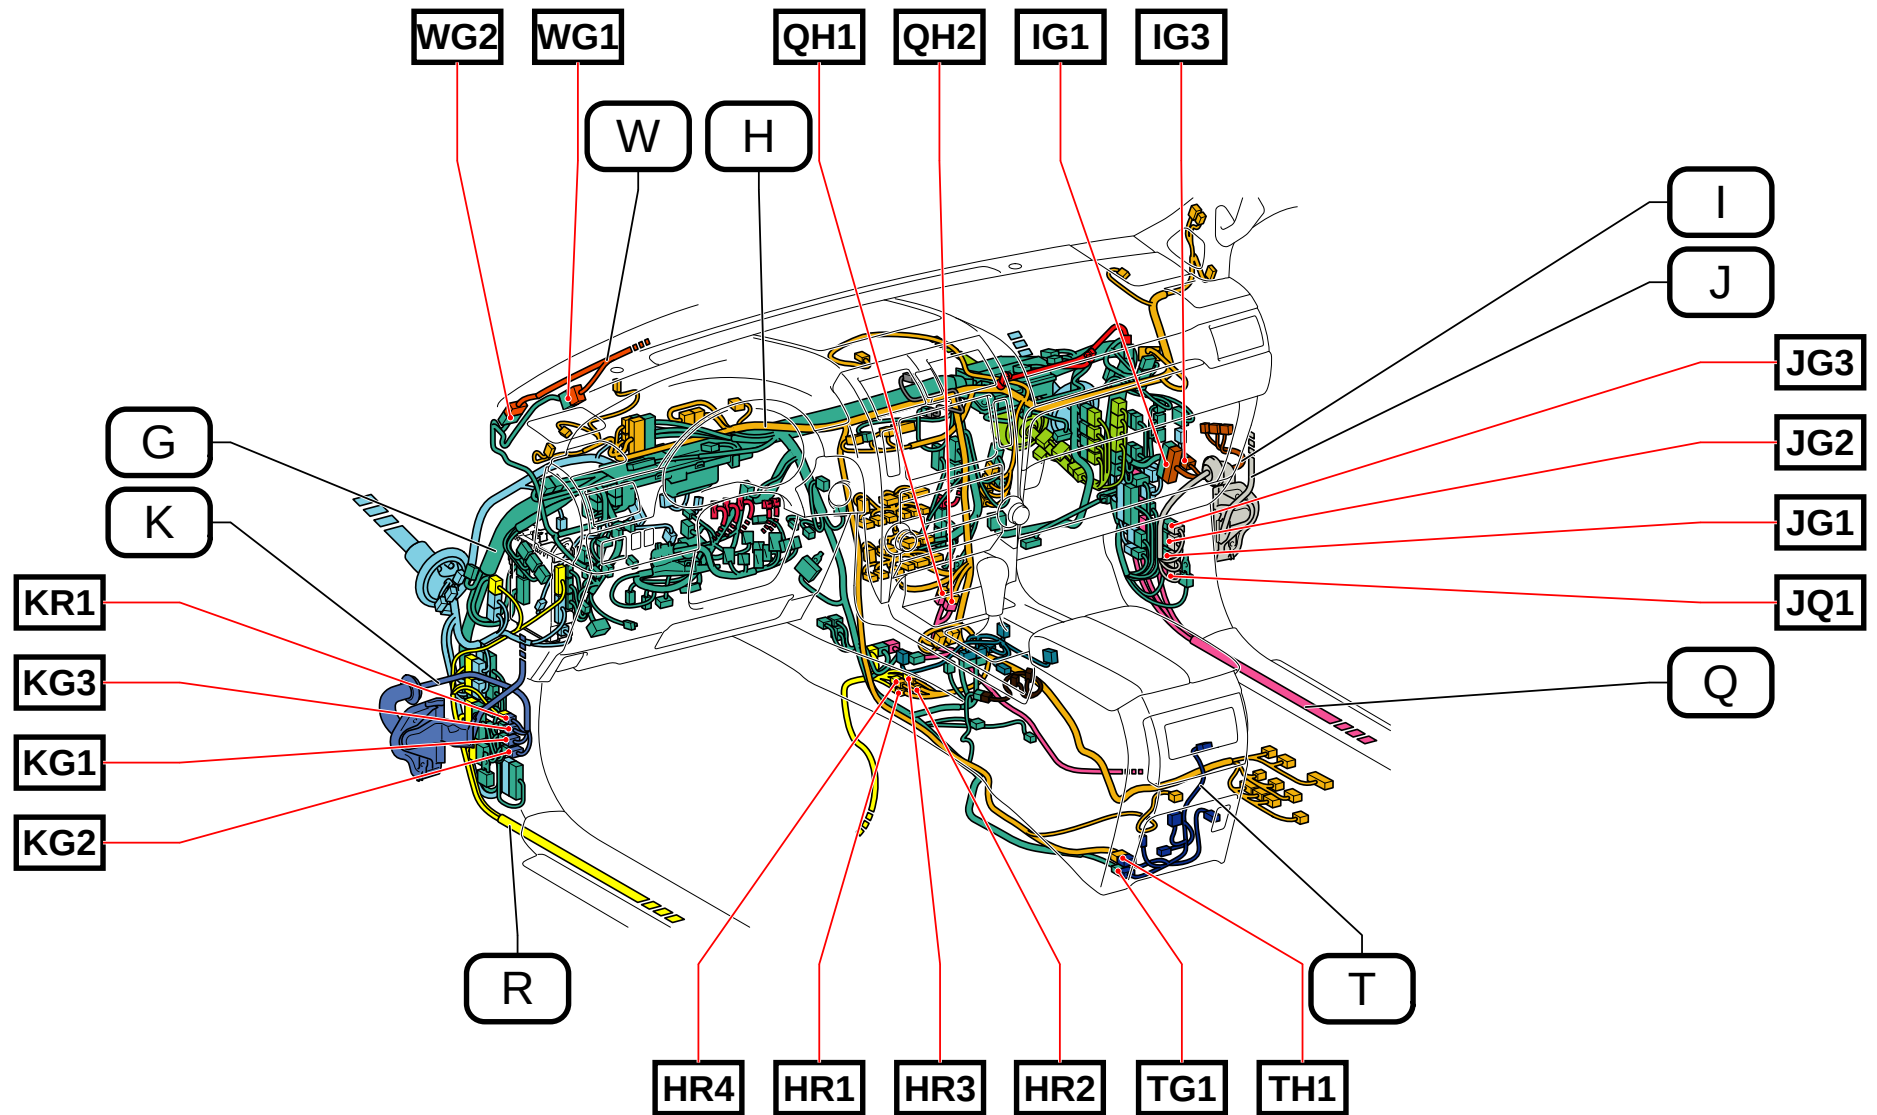


Wire and Wire in Instrument Panel (From Aug. 2013 Production)

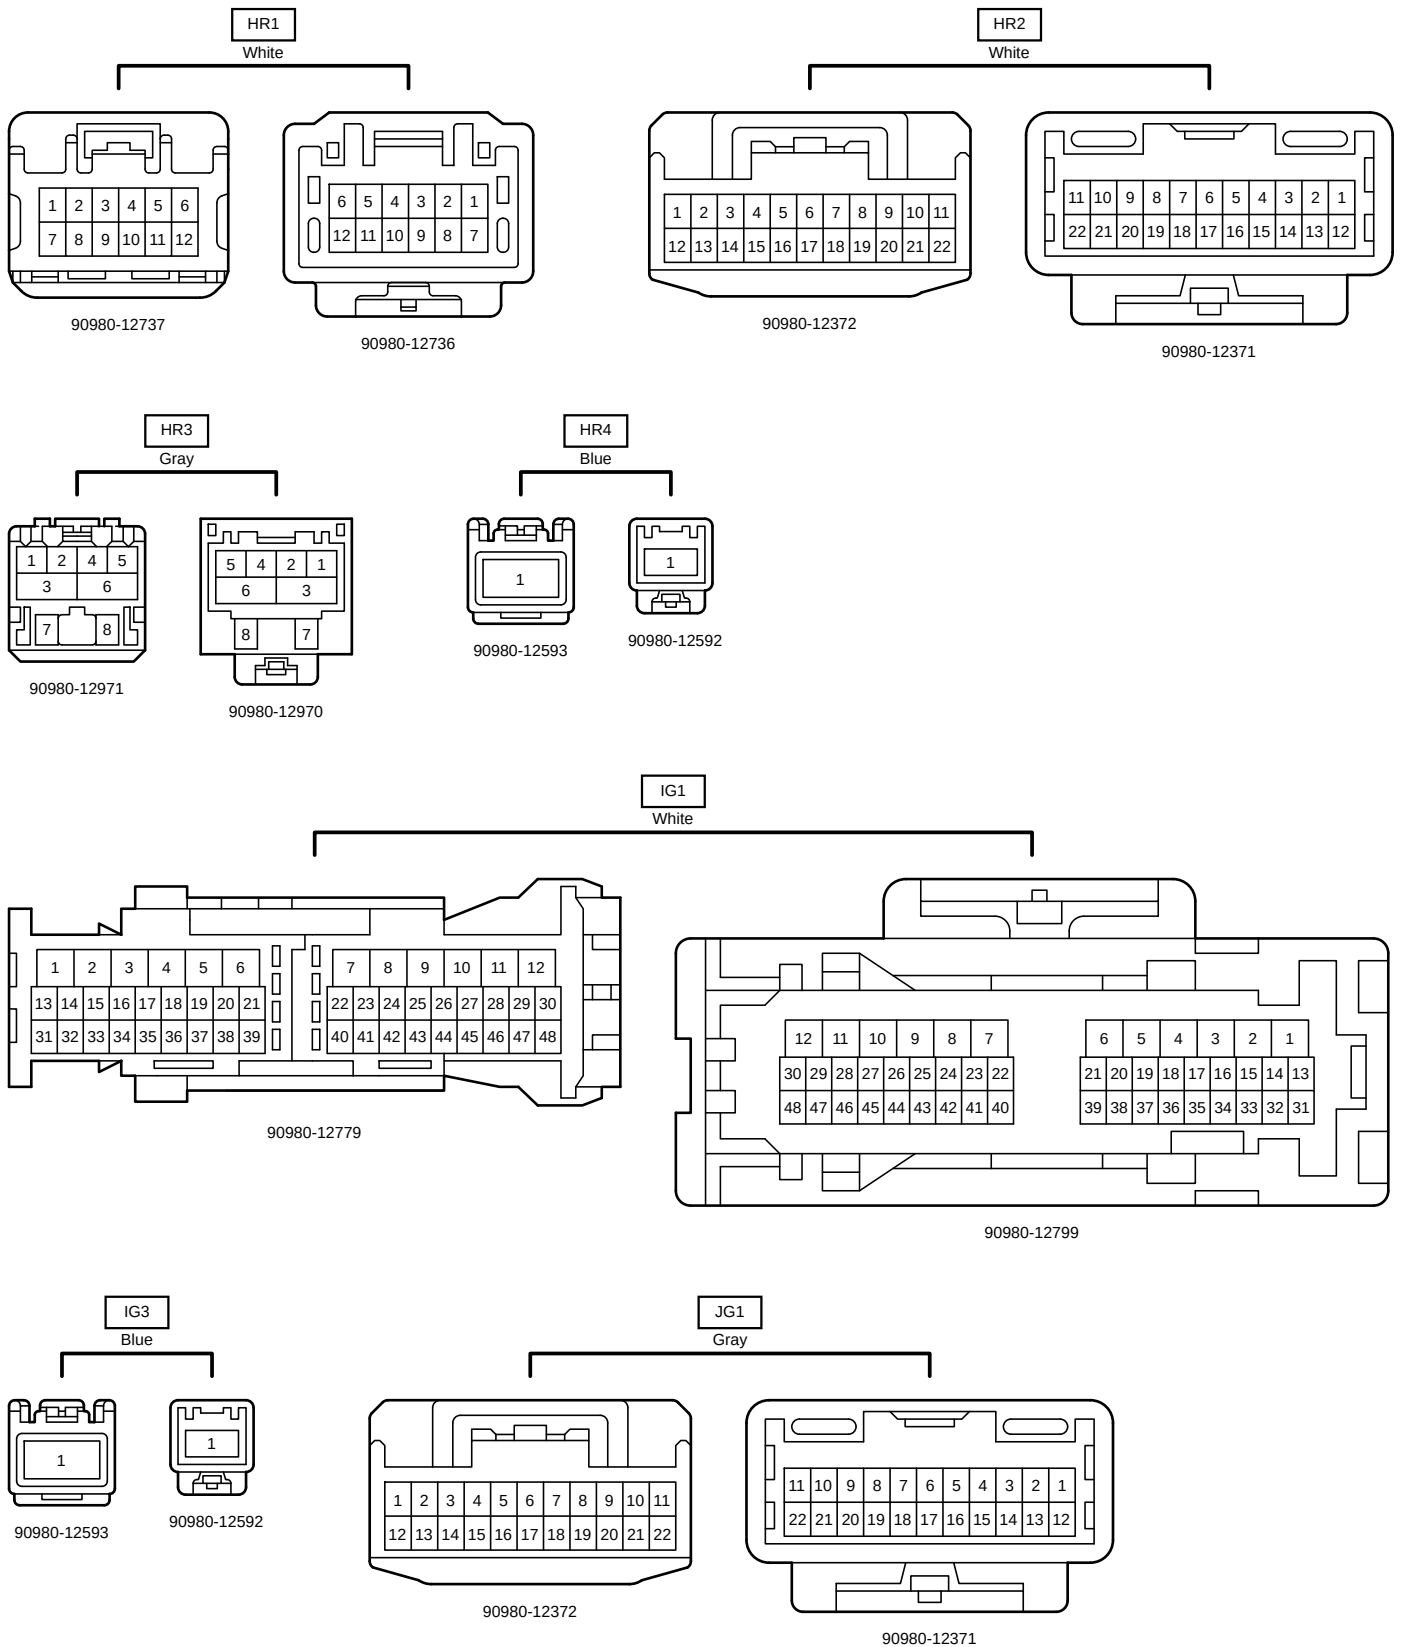

JG2
White

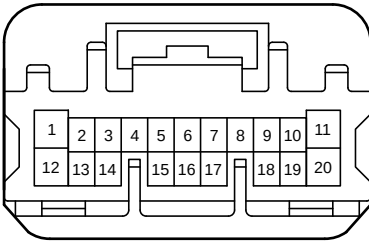


90980-12741

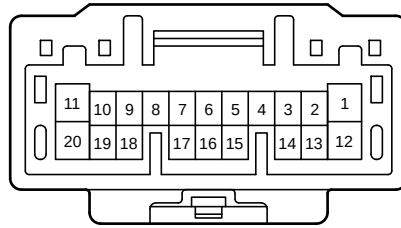


90980-12740

JG3
Black

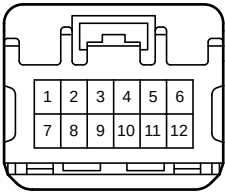


90980-12737

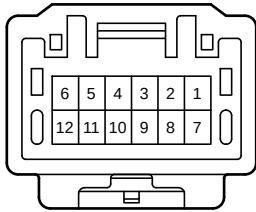


90980-12736

JQ1
Yellow

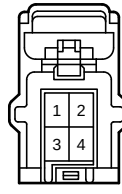


90980-11892

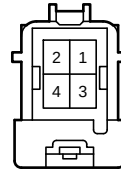


90980-11891

KG1
Gray

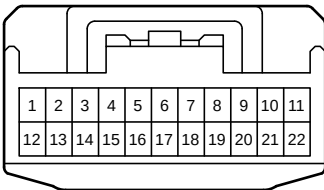


90980-12372

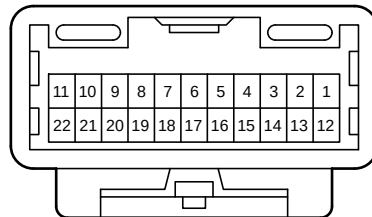


90980-12371

KG2
White

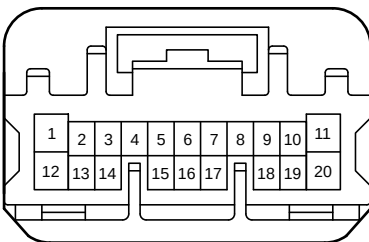



90980-12741

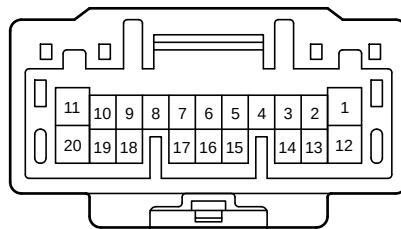


90980-12740

Wire and Wire in Instrument Panel (From Aug. 2013 Production)

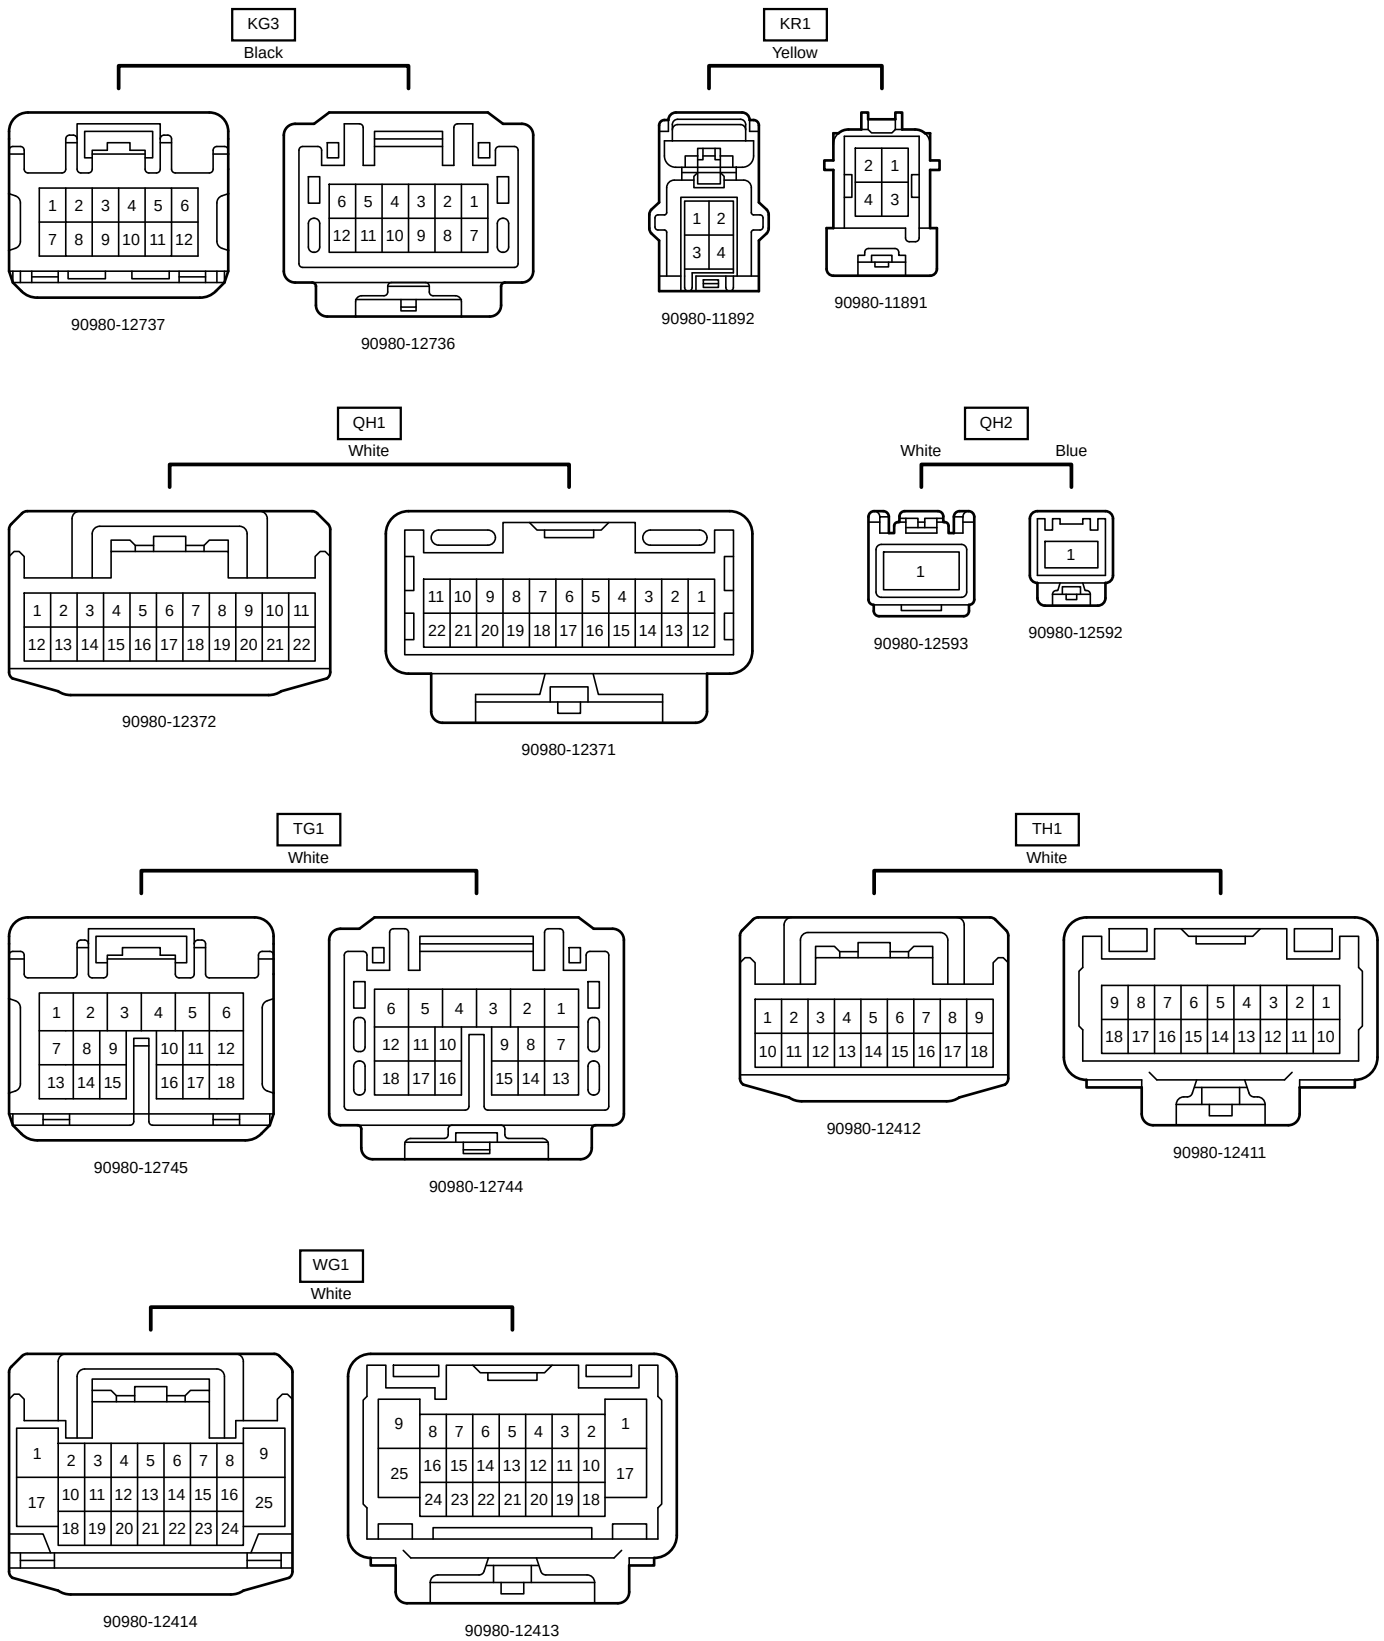


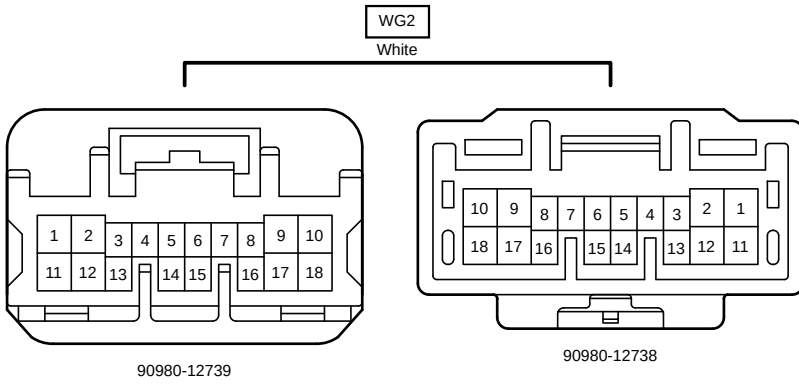

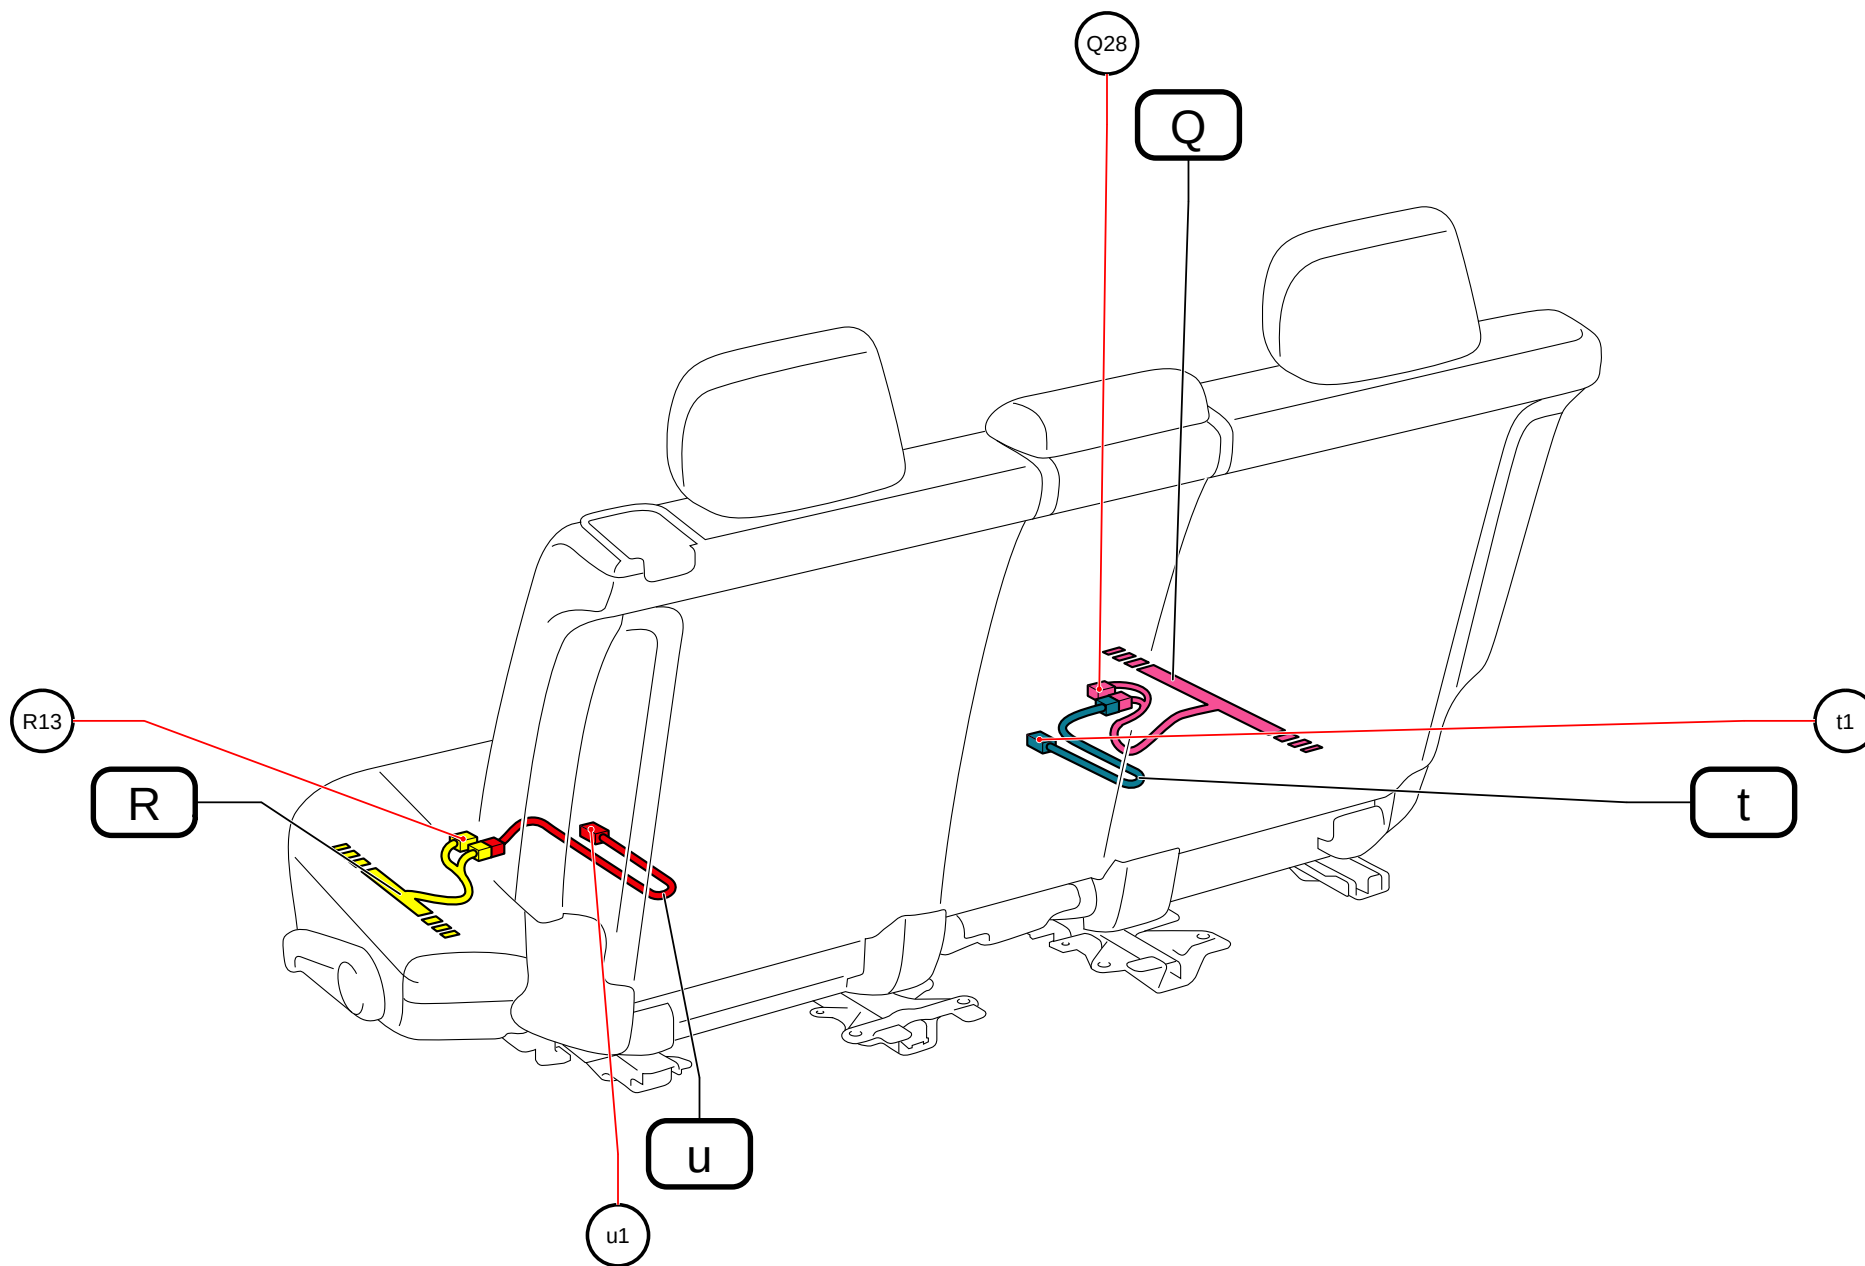


Q28 Rear Side Airbag Squib Circuit RH
R13 Rear Side Airbag Squib Circuit LH
t1 Rear Seat Heater Assembly RH
u1 Rear Seat Heater Assembly LH


Position of Parts in Seat (Rear No. 1 Seat)

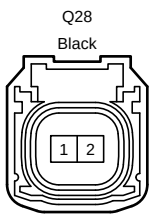


90980-12698

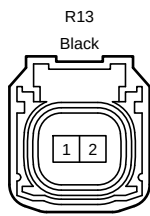


90980-12698

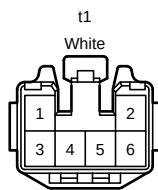

90980-12180

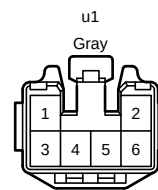

90980-12180

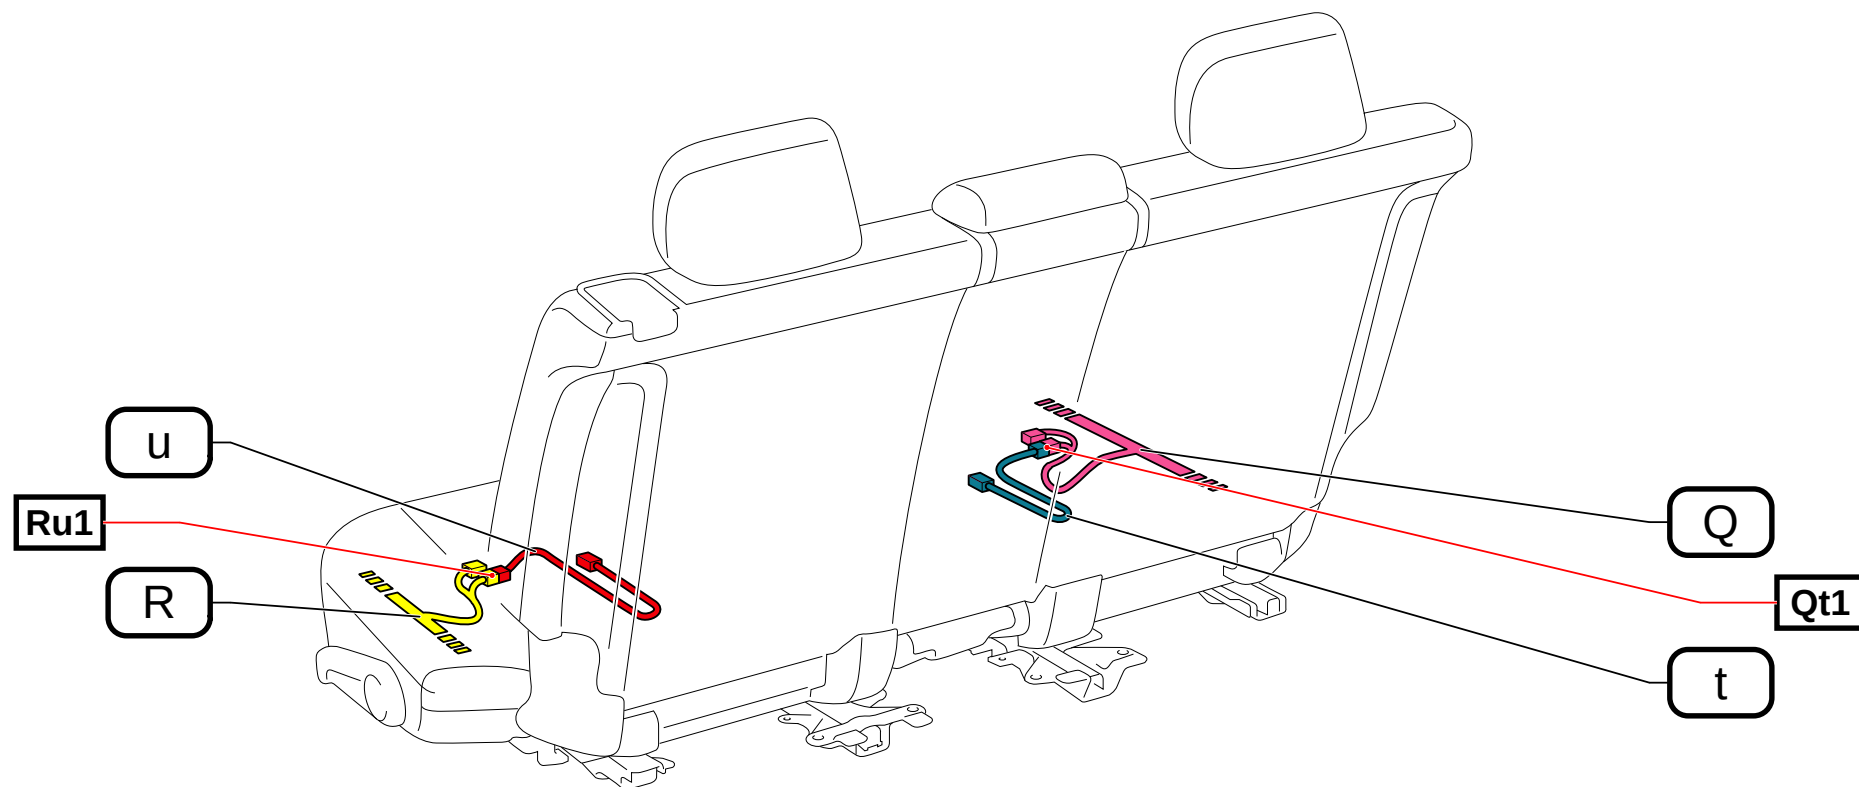

Wire and Wire in Seat (Rear No. 1 Seat)

