

Pontiac Montana 1999 fuse box diagram

Instrument Panel Fuse Block

The instrument panel fuse block is located at the right end of the instrument panel, on the passenger's side of the vehicle.

FUSE USAGE CHART					
CIRCUIT BREAKERS	SWC BACKLIGHT	RH T&P	LH T&P		
HEADLAMP	ELEC PRNDL	RR FOG L/P	RR DEFOG	ELC	
	PWR MIRROR	CRUISE	FRT PWR SCKT	CTSY LAMP	ABS SOL
	CRUISE	T&SIG	SH	IGN 1	
PWR WDO	PWR QTR VENT	RR HVAC	FRT HVAC LOW/MED BLWR		HVAC DRL
	FRT WIPER WSHR	SWC ACCY	MALL/RADIO/DC	RR WPR WSHR	BCM PROGRAM
PWR SEAT/PSD	PASS KEY	HAZARD	STOP LAMP	LH HEADUP LOW	RH HEADUP LOW
FRT HVAC HI BLWR	PWR LOCK	RR PWR SCKT	ABS MOD BATT	LH HEADUP HIGH	RH HEADUP HIGH
	HTO MIRROR	DRL	CAN VENT SOL	ABS/TC/IGN	PCM

Pontiac Montana – fuse box – instrument panel

Fuses	Usage
HEADLAMP	Daytime Running Lamps (DRL) Control Module, Headlamp and Instrument Panel Dimmer Switch
PWR WDO	Front Power Windows
PWR/HEATED SEAT PSD	Six-Way Power Seats and Rear Side Door Actuator Motor
FRT HVAC HI BLWR	Blower Motor Hi Speed Relay Module
SWC BACKLIGHT	Steering Wheel Radio Control Switches (Illumination)


ELEC PRNDL	Instrument Cluster to PRNDL Indicators
PWR MIRROR	Power Remote Control Mirror Switch
CRUISE	Cruise Control Module, Switch and Release Switch
PWR QTR VENT	Interior Lamps and Multifunction Switch (Power Vent Switch)
FRT WPR/WSHR	Windshield Wiper/Washer Motor and Switch
PASS KEY	PASS-Key III System
PWR LOCK	Body Control Module (BCM)
HTD MIRROR	Heated Mirrors
RH T/LP	Not Used
RR FOG LP	Not Used
CIGAR/DLC	Cigarette Lighter and Data Link Connector (DLC)
T/SIG	Turn Signal Switch
RR HVAC	Rear Blower Motor, Rear Heater-A/C Control, Temperature Door Actuator (Rear)
SWC ACCY	Steering Wheel Radio Control Switches
HAZARD	Turn Signal Switch

RR PWR SCKT	Rear Electric Accessory Plug Housing
DRL	Daytime Running Lamps (DRL) Control Module
LH T/LP	Not Used
RR DEFOG	Rear Window Defogger Relay, Heated Mirrors
FRT PWR SCKT	Front Electric Accessory Plug Housing
SIR	Inflatable Restraint Control Module
FRT HVAC LOW/MED BLWR	Heater-A/C Control
MALL/RADIO/DIC	BCM, Driver Information Display, Rear Seat Audio, ELC Sensor and Relay
STOP LAMP	Stoplamp Switch
ABS MOD BATT	Electronic Brake Control Module/Electronic Brake Traction Control Module (EBCM/EBTCM)
CAN VENT SOL	Evaporative Emissions (EVAP) Canister Vent Solenoid Valve
ELC	Electronic Level Control (ELC) Air Compressor and ELC Relay, Trailer Harness
CTSY LAMP	BCM

IGN 1	BCM, Electronic Brake Control Indicator Lamp Driver Module, Instrument Panel Cluster, Rear Side Door Actuator Control Module, Rear Window Wiper/Washer and Multifunction Switch (Fog Lamp Switch/Traction Control Switch) and Stoplamp/Torque Converter Clutch (TCC) Switch
RR WPR WSHR	Rear Window Wiper Motor, Rear Window Wiper/Washer and Multifunction Switch (Rear Window Wiper/Washer Switch)
LH HEADLP LOW	Not Used
LH HEADLP HIGH	Not Used
ABS/TCS IGN	Electronic Brake Control Module/Electronic Brake Traction Control Module (EBCM/EBTCM)
ABS SOL	LH and RH Front Brake Solenoid Valve
HVAC/DRL	Air Inlet Actuator, DRL Control Module, Heater-A/C Control, Temperature Door Actuator (Front) and Rear Window Defogger Relay
BCM PROGRAM	Body Control Module (BCM)
RH HEAD LP LOW	Not Used
RH HEAD LP HIGH	Not Used
PCM/ABS	IGN MAIN Relay and PCM

Underhood Fuse Block

This fuse block is located in the engine compartment, in front of the windshield washer fluid reservoir.

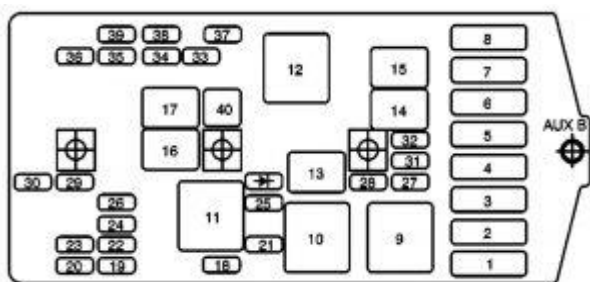

Pontiac Montana – fuse box – engine

compartment

Maxi Fuses		Usage
1	COOL FAN 2	Coolant Fans
2	—	Not Used
3	HEADLAMPS	Circuit Breakers: FRT HVAC HI BLWR, and HEADLAMP Fuses (Instrument Panel): HAZARD and STOPLAMP
4	BATT MAIN 2	Circuit Breaker: PWR SEAT/PSD. Fuses (Instrument Panel): ELC and RR DEFOG
5	IGN MAIN 1	Ignition Switch to Fuses (Instrument Panel): ABS/TCS IGN, CRUISE, DRL, ELEC PRNDL, IGN 1, PSD, SIR, T/SIG and PCM [IGN MAIN Relay (Underhood Electrical Center Fuses: A/C CLU, ELEK IGN, IGN 1-U/H, INJ, TCC)]
6	COOL FAN 1	Coolant Fans
7	BATT MAIN 1	Fuses (Instrument Panel): ABS MOD BATT, CIGAR/DLC, CTSY LAMP, FRT PWR SCKT, PWR LOCK, PWR MIRROR and RR PWR SCKT

8	-IGN MAIN 2	Ignition Switch to Fuses (I/P): BCM PRGRM, FRT HVAC LOW/MED BLWR, FRT WPR/WSHR, HVAC/DRL, MALL/RADIO/DIC, PWR QRT VENT, RR HVAC, RR WPR/WSHR. SWC ACCY and PWR WDO Circuit Breaker
---	-------------	--

Mini relays		Usage
9	COOL FAN	RH FAN 1, LH FAN 2
10	COOL FAN 2	LH FAN 2
11	IGN MAIN	FUSES: A/C CLU, IGN 1-U/H, INS, ELEK IGN, TCC
12	COOL FAN 1	RH FAN 1, LH FAN 2

Micro relays		Usage
13	A/C CLU	A/C Clutch
14	FUEL PUMP	Fuel Pump
15	F/PMP SPD CONT	Not Used
16	HORN	Horn

17	FOG LAMP	Left Fog Lamp, Right Fog Lamp, Fog Lamp Indicator
----	----------	---

Mini fuses		Usage
18	INJ	Fuel Injectors 1-6
19	SPARE	Not Used
20	—	Not Used
21	IGN1-UH	Evaporative Emissions (EVAP) Canister Purge Valve, Heated Oxygen Sensors 1 and 2, Mass Air Flow (MAF) Sensor
22	SPARE	Not Used
23	SPARE	Not Used
24	SPARE	Not Used
25	ELEK IGN	Ignition Control Module (ICM)
26	SPARE	Not Used
27	B/U LAMP	Transaxle Range Switch to Back-up Lamps
28	A/C CLU	A/C Clutch Relay to A/C Compressor Clutch Oil

29	RADIO	Driver Information Display, Heater A/C Control, Radio, Rear Side Door Actuator Control Motor, Remote Control Door Lock Receiver (RCDLR), Security Indicator Lamp and Theft-Deterrent Shock Sensor
30	ALT SENSE	Generator
31	TCC	Automatic Transaxle (Torque Converter Clutch Solenoids) Stoplamp Switch to PCM
32	FUEL PUMP	Fuel Pump Relay
33	ECM SENSE	Powertrain Control Module (PCM)
34	—	Not Used
35	FOG LP	Fog Lamp Relay
36	HORN	Horn Relay
37	PARK LP	Daytime Running Lamps (DRL) Control Module, Headlamps and Instrument Panel Dimmer Switch Theft-Deterrent Relay to Headlamp
38	—	Not Used
39	SPARE	Not Used

40	—	Mini Fuse Puller
----	---	------------------