


Citroen C4 Picasso mk1 (2006 – 2013) – fuse box diagram

Year of production: 2006, 2007, 2008, 2009, 2010, 2011, 2012, 2013

Fuse box under dashboard


Fuse box number 1

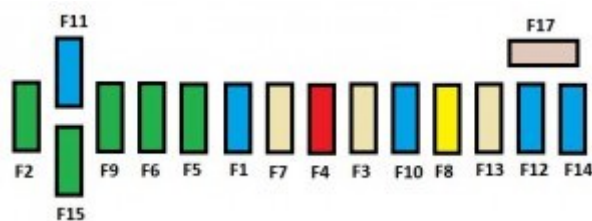

Citroen C4 Picasso – fuse box – under dashboard

Reference	Ampere rating [A]	Function
F1	15	Rear screen wipe
F2	30	Locking and unlocking earth
F3	5	Airbag
F4	10	Multimedia, photochromic rear view mirror, particle filter, diagnostic socket, air conditioning, headlamp height correction control
F5	30	Front windows, front door electronics, panoramic glass roof
F6	30	Rear windows
F7	5	Interior lamps, refrigerated glovebox, radio
F8	20	Multifunction display, radio, CD changer, steering wheel controls, multimedia, deflation detection, alarm, trailer
F9	30	Cigar lighter, multimedia, front 12V socket, torch, radio
F10	15	Height corrector (suspension)
F11	15	Brake switch, ignition switch
F12	15	Parking assistance, automatic screen wipe and lighting, passenger's electric seat, AFIL, Hi-Fi amplifier, trailer
F13	5	Engine relay unit, driver's electric seat
F14	15	Air conditioning, Bluetooth® hands-free kit, automatic gearbox selector, airbag, instrument panel
F15	30	Locking and unlocking
F16	SHUNT	
F17	40	Heated rear screen


Fuse box number 2

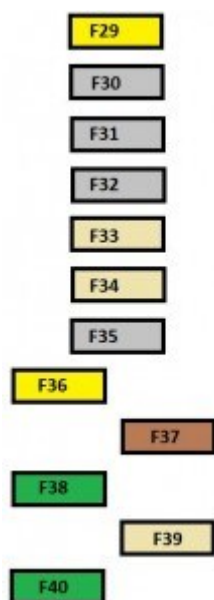

Citroen C4 Picasso – fuse box – under dashboard (fuse box number 2)

Reference	Ampere rating [A]	Function
F29	20	Heated seats
F30	Free	
F31	Free	
F32		
F33	5	Parking assistance, automatic screen wipe and lighting, passenger's electric seat, AFIL, Hi-Fi amplifier
F34	5	Trailer
F35	Free	
F36	20	Hi-Fi amplifier
F37	10	Air conditioning, light pack
F38	30	Driver's electric seat
F39	5	Fuel flap
F40	30	Passenger's electric seat, panoramic roof

Fuse box in engine compartment

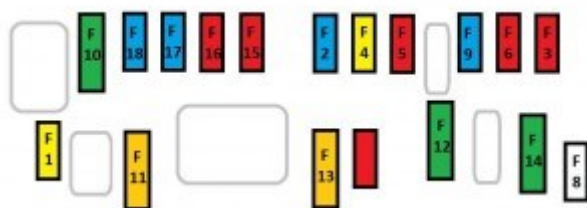


Citroen C4 Picasso – fuse box – engine compartment

Reference	Ampere rating [A]	Function
F1	20	Engine management

F2	15	Horn
F3	10	Screen wash pump
F4	20	Headlamp wash pump
F5	15	Engine components
F6	10	Xenon dual-function directional headlamps, headlamp height correction motor, clutch switch, BCP (protection switch box)
F7	10	Automatic gearbox, engine coolant level switch, power steering
F8	25	Starter motor
F9	10	Stoplamp switch
F10	30	Engine components
F11	40	Rear blower
F12	30	Screen wipe
F13	40	BSI (Built-in Systems Interface)
F14	30	Air pump, heat exchange saver
F15	10	Right-hand main beam
F16	10	Left-hand main beam
F17	15	Left-hand dipped beam
F18	15	Right-hand dipped beam

Fuse box on the battery

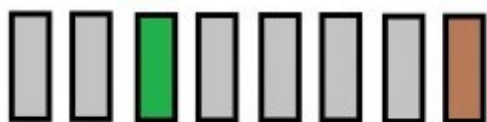

Citroen C4 Picasso – fuse box – battery

Reference	Ampere rating [A]	Function
F1		Battery Plus connection studs
F2		Supply connection studs, BSM (engine relay unit)
F3		
F4	5	Automatic gearbox actuator and ECU
F5	15	Diagnostic socket
F6	15	ECU for 6-speed electronic gearbox / automatic gearbox
F7	5	ESP ECU

F8	20	Rear 12V socket
----	----	-----------------

WARNING: Terminal and harness assignments for individual connectors will vary depending on vehicle equipment level, model, and market.