

Vauxhall Tigra II Twin Top (2004 – 2008) fuse box diagram


Fuse box in engine compartment



Vauxhall Tigra – fuse box – engine compartment -engine z13dt



Vauxhall Tigra – fuse box – engine compartment – engine z13dt

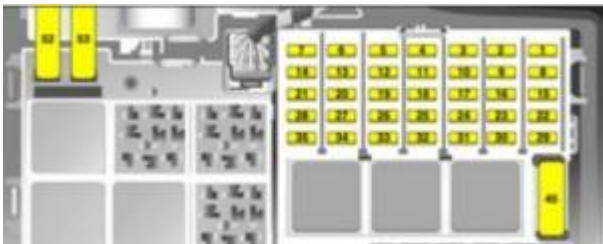

Vauxhall Ttigra – fuse box – engine compartment – others engine



Vauxhall Tigra – fuse box – engine compartment – others engine

The fuse box is located in the engine compartment next to the coolant expansion tank.

Number	Circuit
1	Central control unit

2	Engine control unit
3	Instruments, information display, light switch, horn, hazard warning lamps, immobiliser
4	—
5	Electric window (left)
6	—
7	—
8	Ignition switch, starter
9	Injection system, fuel pump
10	Horn
11	Central control unit
12	Information display, Infotainment system: engine Z 13 DT
13	Vauxhall alarm system
14	Heated exterior mirrors
15	Windscreen washer system
16	Courtesy lamp

17	Central control unit
18	Heated rear window
19	Electric window (right)
20	—
21	—
22	Central control unit, immobiliser
23	Windscreen wipers
24	Infotainment system, Information display, Light switch, Courtesy lamp, Instruments, ESP®Plus
25	Reversing lamps, cigarette lighter, accessory socket
26	Seat heater (right)
27	Seat heater (left)
28	ABS
29	Retractable steel roof
30	Engine control unit
31	Air conditioning system

32	ABS, airbag
33	Engine control
34	Diesel filter heater
35	Electric window, Infotainment system
36	Dipped beam (left)
37	Right dipped beam, headlamp range adjustment
38	Tail lamp (left), parking lamp (left)
39	Tail lamp (right), parking lamp (right)
40	Brake lamps, cruise control
41	Front fog lamps
42	Fog tail lamp
43	Main beam (left)
44	Main beam (right)
45	Ventilation fan
46	Engine control unit

47	Retractable steel roof
48	Starter
49	ESP
50	ABS, ESP
51	Petrol engine: Easytronic
	Diesel engine: Engine control unit
52	Radiator fan
53	Radiator fan
54	—