

# Oldsmobile Silhouette 1999 fuse box diagram

## Instrument Panel Fuse Block

The instrument panel fuse block is located to the right of the glove box.

| FUSE USAGE CHART                         |               |             |                       |                |                |
|------------------------------------------|---------------|-------------|-----------------------|----------------|----------------|
| CIRCUIT BREAKERS                         | SWC BACKLIGHT | RH TLP      | LH TLP                |                |                |
| HEADLAMP                                 | ELEC PRNDL    | RR FOG LP   | RR DEFOG              | ELC            |                |
|                                          | PWR MIRROR    | CIGAR/DLC   | FRT PWR SCKT          | QTSY LAMP      | ABS SOL        |
|                                          | CRUISE        | TISIG       | SHR                   | IGN1           |                |
| PWR WDO                                  | PWR QTR VENT  | RR HVAC     | FRT HVAC LOW/MED BLWR |                | HVAC/DRL       |
|                                          | FRT WPWWSHR   | SWC ACCY    | MALL/RADIO/DIG        | RR WPWWSHR     | BCM PRORM      |
| PWR SEAT/PSD                             | PASS KEY      | HAZARD      | STOP LAMP             | LH HEADUP LOW  | RR HEADUP LOW  |
| FRT HVAC/HI BLWR                         | PWR LOCK      | RR PWR SCKT | ABS MOD BATT          | LH HEADUP HIGH | RR HEADUP HIGH |
|                                          | HTD MIRROR    | DRL         | CAN VENT SOL          | ABS/CS IGN     | PCM            |
| For More Information, See Owner's Manual |               |             |                       |                |                |
| Printed in:                              |               |             |                       |                |                |

Oldsmobile Silhouette –


fuse box – instrument panel

| Circuit breakers | Circuitry                                                                        |
|------------------|----------------------------------------------------------------------------------|
| HEADLAMP         | DRL Control Module, Headlamp and Instrument Panel Dimmer Switch                  |
| PWR WDO          | Front Power Windows                                                              |
| PWR SEAT/PSD     | 6-Way Power Seat(s) and Rear Side Door Actuator Motor                            |
| FRT HVAC/HI BLWR | Blower Motor Hi Speed Relay in Module                                            |
| Fuses            | Circuitry                                                                        |
| SWC BACKLIGHT    | Steering Wheel Radio Control Switches (Illumination)                             |
| ELEC PRNDL       | Instrument Cluster to PRNDL Indicators                                           |
| PWR MIRROR       | Power Remote Control Mirror Switch                                               |
| CRUISE           | Cruise Control Module, Switch and Release Switch                                 |
| PWR QTR VENT     | Interior Lamps and Multifunction Switch (Power Vent Switch)                      |
| FRT WPWWSHR      | Windshield Wiperwasher Motor and Switch                                          |
| PASS KEY         | PASS-Key III System                                                              |
| PWR LOCK         | Body Control Module (BCM)                                                        |
| HTD MIRROR       | Heated Mirrors                                                                   |
| RH TLP           | Not Used                                                                         |
| RR FOG LP        | Not Used                                                                         |
| CIGAR/DLC        | Cigarette Lighter and Data Link Connector (DLC)                                  |
| TISIG            | Turn Signal Switch                                                               |
| RR HVAC          | Rear Blower Motor, Rear Heater-A/C Control, and Temperature Door Actuator (Rear) |
| SWC ACCY         | Steering Wheel Radio Control Switches                                            |

|                             |                                                                                                                                                                                                                                                                             |
|-----------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| HAZARD                      | Turn Signal Switch                                                                                                                                                                                                                                                          |
| RR PWR SCKT                 | Rear Electric Accessory Plug Housing                                                                                                                                                                                                                                        |
| DRL                         | DRL Control Module                                                                                                                                                                                                                                                          |
| LH T/LP                     | Not Used                                                                                                                                                                                                                                                                    |
| RR DEFOG                    | Rear Window Defogger Relay, Heated Mirrors                                                                                                                                                                                                                                  |
| FRT PWR SCKT                | Front Electric Accessory Plug Housing                                                                                                                                                                                                                                       |
| SIR                         | Inflatable Restraint Control Module                                                                                                                                                                                                                                         |
| FRT<br>HVAC LOW/MED<br>BLWR | Heater-A/C Control                                                                                                                                                                                                                                                          |
| MALL/RADIO/DIC              | BCM, Driver Information Display, Rear Seat Audio, ELC Sensor and Relay                                                                                                                                                                                                      |
| STOP LAMP                   | Stoplamp Switch                                                                                                                                                                                                                                                             |
| ABS MOD BATT                | Electronic Brake Control Module/Electronic Brake Traction Control Module (EBCM/EBTCM)                                                                                                                                                                                       |
| CAN VENT SOL                | Evaporative Emissions (EVAP) Canister Vent Solenoid Valve                                                                                                                                                                                                                   |
| ELC                         | Electronic Level Control (ELC) Air Compressor and ELC Relay, Trailer Harness                                                                                                                                                                                                |
| CTSY LAMP                   | BCM                                                                                                                                                                                                                                                                         |
| IGN 1                       | BCM, Electronic Brake Control Indicator Lamp Driver Module, Instrument Panel Cluster, Rear Side Door Actuator Control Module, Rear Window Wiper/Washer and Multifunction Switch (Fog Lamp Switch/Traction Control Switch) and Stoplamp/Torque Converter Clutch (TCC) Switch |
| RR WPR WSHR                 | Rear Window Wiper Motor, Rear Window Wiper/Washer and Multifunction Switch (Rear Window Wiper/Washer Switch)                                                                                                                                                                |
| LH HEADLP LOW               | Not Used                                                                                                                                                                                                                                                                    |
| LH HEADLP HIGH              | Not Used                                                                                                                                                                                                                                                                    |
| ABSITCS IGN                 | Electronic Brake Control Module/Electronic Brake Traction Control Module (EBCM/EBTCM)                                                                                                                                                                                       |
| ABS SOL                     | LH and RH Front Brake Solenoid Valve                                                                                                                                                                                                                                        |
| HVAC/DRL                    | Air Inlet Actuator, DRL Control Module, Heater-A/C Control, Temperature Door Actuator (Front) and Rear Window Defogger Relay                                                                                                                                                |
| BCM PRGRM Body              | Body Control Module (BCM)                                                                                                                                                                                                                                                   |
| RH HEADLP LOW               | Not Used                                                                                                                                                                                                                                                                    |
| RH HEADLP HIGH              | Not Used                                                                                                                                                                                                                                                                    |
| PCM                         | IGN MAIN Relay and PCM                                                                                                                                                                                                                                                      |

### Underhood Fuse and Relay Center

This fuse and relay center is located in the engine compartment, in front of the windshield washer fluid reservoir.

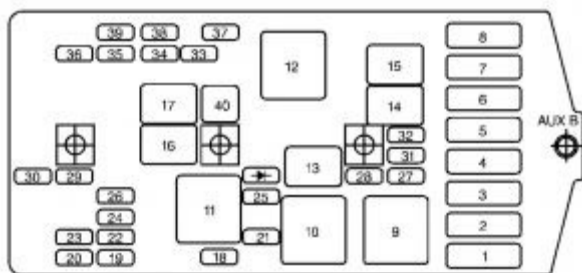

Oldsmobile Silhouette –

fuse box – underhood fuse and relay center

| Maxi Fuse        | Circuitry                                                                                                                                                                                                      |
|------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1 COOL FAN<br>2  | Coolant Fans                                                                                                                                                                                                   |
| 3 HEADLAMP       | Circuit Breakers: FRT HVAC HI BLWR, and HEADLAMP Fuses (VP): HAZARD and STOPLAMP                                                                                                                               |
| 4 BATT MAIN<br>2 | Circuit Breaker: PWR SEAT/PSD. Fuses (UP): ELC and RR DEFOG                                                                                                                                                    |
| 5 IGN MAIN<br>1  | Ignition Switch to Fuses (Instrument Panel): ABS/TCS IGN, CRUISE, DRL, ELEC PRNDL, IGN 1, PSD, SIR, T/SIG and PCM [IGN MAIN Relay (Underhood Electrical Center Fuses: A/C CLU, ELEK IGN, IGN 1-U/H, INJ, TCC)] |
| 6 COOL FAN       | Coolant Fans                                                                                                                                                                                                   |
| 7 BATT MAIN<br>1 | Fuses (Instrument Panel): ABS MOD BATT, CIGAR/DLC, CTSY LAMP, FRT PWR SCKT, PWR LOCK, PWR MIRROR and RR PWR SCKT                                                                                               |
| 8 IGN MAIN<br>2  | Ignition Switch to Fuses (I/P): BCM PRGRM, FRT HVAC LOW/MED BLWR, FRT WPR/WSHR, HVAC/DRL, MALL/RADIO/DIC, PWR QRT VENT, RR HVAC, RR WPR/WSHR, SWC ACCY and PWR WDO Circuit Breaker                             |

| Mini Relays   | Circuitry                                     |
|---------------|-----------------------------------------------|
| 9 COOL FAN    | RH FAN 1, LH FAN 2                            |
| 10 COOL FAN 2 | LH FAN 2                                      |
| 11 1GN MAIN   | FUSES: A/C CLU, IGN I-U/H, INS, ELEK IGN, TCC |
| 12 COOL FAN 1 | RH FAN 1, LH FAN 2                            |

| Micro Relays      | Circuitry                                    |
|-------------------|----------------------------------------------|
| 13 A/C CLU        | A/C Clutch                                   |
| 14 FUEL PUMP      | Fuel Pump                                    |
| 15 F/PMP SPD CONT | Not Used                                     |
| 16 HORN           | Horn                                         |
| 17 FOG LAMP       | LH Fog Lamp, RH Fog Lamp, Fog Lamp Indicator |

| Mini Fuse | Circuitry |
|-----------|-----------|
|-----------|-----------|

|    |              |                                                                                                                                                                                                   |
|----|--------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 18 | INJ          | Fuel Injectors 1-6                                                                                                                                                                                |
| 19 | SPARE        | Not Used                                                                                                                                                                                          |
| 20 | SPARE        | Not Used                                                                                                                                                                                          |
| 21 | IGNI-<br>UH  | Evaporative Emissions (EVAP) Canister Purge Valve, Heated Oxygen Sensors 1 and 2, Mass Air Flow (MAF) Sensor                                                                                      |
| 22 | SPARE        | Not Used                                                                                                                                                                                          |
| 23 | SPARE        | Not Used                                                                                                                                                                                          |
| 24 | SPARE        | Not Used                                                                                                                                                                                          |
| 25 | ELEK<br>IGN  | Ignition Control Module (ICM)                                                                                                                                                                     |
| 26 | SPARE        | Not Used                                                                                                                                                                                          |
| 27 | B/U<br>LAMP  | Transaxle Range Switch to Back-up Lamps                                                                                                                                                           |
| 28 | A/C<br>CLU   | A/C CLU to A/C Compressor Clutch Oil                                                                                                                                                              |
| 29 | RADIO        | Driver Information Display, Heater A/C Control, Radio, Rear Side Door Actuator Control Motor, Remote Control Door Lock Receiver (RCDLR), Security Indicator Lamp and Theft-Deterrent Shock Sensor |
| 30 | ALT<br>SENSE | Generator                                                                                                                                                                                         |
| 31 | TCC          | Automatic Transaxle (Torque Converter Clutch Solenoids) Stoplamp Switch to PCM                                                                                                                    |
| 32 | FUEL<br>PUMP | Fuel Pump Relay                                                                                                                                                                                   |
| 33 | ECM<br>SENSE | Powertrain Control Module (PCM)                                                                                                                                                                   |
| 34 | —            | Not Used                                                                                                                                                                                          |
| 35 | FOG LP       | Fog Lamp Relay                                                                                                                                                                                    |
| 36 | HORN         | Horn Relay                                                                                                                                                                                        |
| 37 | PARK<br>LP   | Daytime Running Lamps (DRL) Control Module, Headlamps Switch Theft Deterrent Relay to Headlamps                                                                                                   |
| 38 | —            | Not Used                                                                                                                                                                                          |
| 39 | SPARE        | Not Used                                                                                                                                                                                          |
| 40 |              | Mini Fuse Puller                                                                                                                                                                                  |