


Chevrolet Silverado from 2016 (Third Generation) fuse box diagrams

Engine Compartment Fuse Block

The engine compartment fuse block is in the engine compartment, on the driver side of the vehicle.

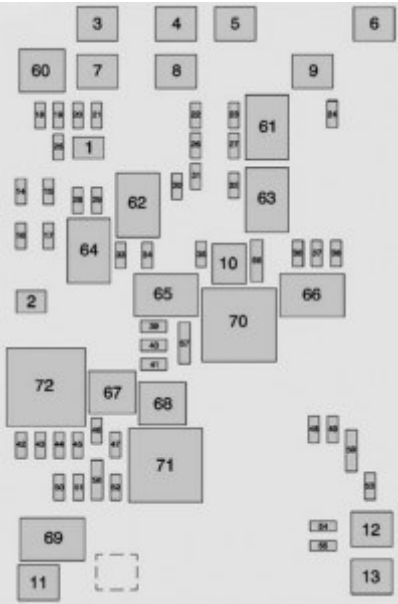

Chevrolet Silverado mk3 – fuse box – engine compartment

Fuses	Usage
1	Trailer brake
2	Trailer battery
3	ABS pump
4	Instrument panel BEC 1
5	MSB passenger
6	4WD transfer case electronic control
7	Electronic park brake
8	Instrument panel BEC 2
9	MSB driver
10	Rear window defogger
11	Starter

12	Cooling fan 1
13	Cooling fan 2
14	Left trailer stop/ Turn lamps
15	Trailer reverse lamps
16	Trailer reverse lamps
17	Right trailer stop/ Turn lamps
18	Fuel Pump
19	Integrated Chassis Control Module
20	Electronic Suspension Control Module
21	Fuel Pump Power Module
22	Upfitter 1
23	Upfitter 2
24	Front Wiper
25	ABS Valves
26	Upfitter 2
27	Upfitter 3
28	Right parking lamps
29	Left parking lamps
30	Upfitter 3
31	Upfitter 4
32	Upfitter 4
33	Reverse lamps
34	Engine control module/Ignition
35	A/C clutch
36	Heated Mirrors
37	Upfitter 1
38	Center high-mount stoplamp


39	Miscellaneous/ Ignition
40	Transmission/ Ignition
41	Fuel Pump 2
42	Cooling Fan Clutch
43	Engine
44	Fuel injectors A-odd
45	Fuel injectors B-even
46	O2 Sensor B
47	Throttle Control
48	Horn
49	Fog Lamps
50	O2 Sensor A
51	Engine control module
52	Interior heater
53	Accessory power module/TPM pump
54	Front washer
55	A/C/Battery regulated voltage contro
56	A/C module/ Battery pack
57	Transmission control module/ Engine control module
58	Headlamps
59	Fuel pump

Relays	Usage
60	Upfitter 2
61	Upfitter 3
62	Upfitter 4

63	Trailer Parking Lamps
64	Run/Crank
65	Upfitter 1
66	Fuel Pump 2
67	A/C Control
68	Starter
69	Rear window defogger
70	Engine control module
71	Cooling fan clutch
72	CKT 95
73	CKT 92

Instrument Panel Fuse Block (Left)

The left instrument panel fuse block access door is on the driver side edge of the instrument panel.

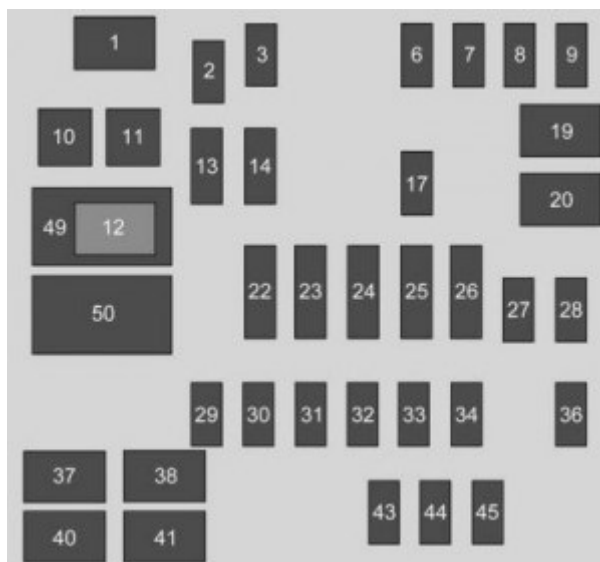

Chevrolet Silverado mk3 – fuse box – instrument

panel (left)


Number	Usage
1	Accessory Power Outlet 2
2	SEO /Retained Accessory Power

3	Universal garage door opener/Interior rearview mirror
6	Body Control Module 3
7	Body Control Module 5
8	Driver Window Switch/Mirror Switch
9	—
10	Accessory power outlet/Retained accessory power
11	Accessory Power Outlet Battery
12	Accessory Power Outlet 1/Cigarette Lighter
13	Discrete Logic Ignition Switch
14	Switch Backlighting
17	Body Control Module 1
19	—
20	—
22	HVAC/Auxiliary HVAC/Ignition
23	Instrument cluster/ Ignition sensing diagnostic module/ Ignition
24	—
25	Data Link Connector/ Driver Seat Module
26	Passive entry/Passive start/HVAC
27	—
28	—
29	Park enable/ Electrically adjustable pedals
30	SEO
31	Accessory/Run/Crank
32	Heated Steering Wheel
33	—
34	Instrument Cluster
36	—

37	—
38	4WD TREC
40	Left Doors
41	Driver Power Seat
43	Left heated, cooled or ventilated seats (if equipped)
44	Right heated, cooled or ventilated seats (if equipped)
45	—
49	Retained Accessory Power/Accessory
50	Run/Crank

Instrument Panel Fuse Block (Right)

The right instrument panel fuse block access door is on the passenger side edge of the instrument panel.

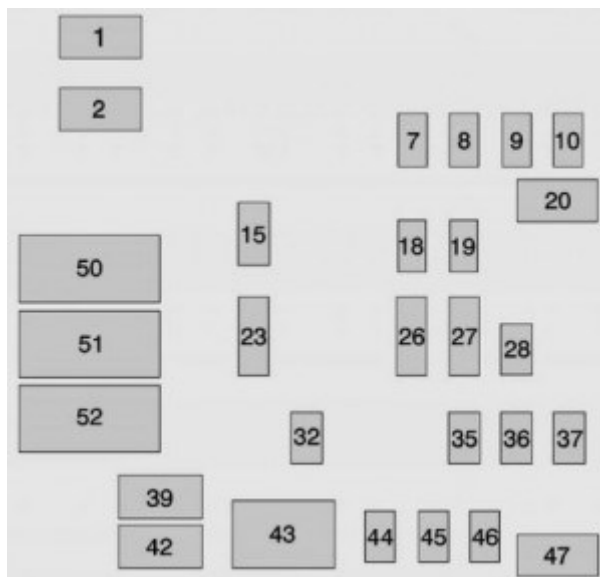

Chevrolet Silverado mk3 – fuse box – instrument pane
(right)

Number	Usage
1	Accessory Power Outlet 3
2	Accessory Power Outlet 4
7	Body Control Module 4
8	Body Control Module 8
9	Rear Seat Entertainment

10	Cargo Lamp
15	Steering Wheel Controls
18	Radio
19	—
20	Sunroof
23	Airbag/Info
26	Export/Power Take Off/SEO Battery 1
27	Obstacle Detection/ USB Ports
28	Body Control Module 2
32	SEO Battery 2
35	AC Inverter
36	Amplifier
37	—
39	Rear Sliding Window
42	Right Door Window Motor
43	Front Blower
44	SEO
45	Body Control Module 6
46	Body Control Module 7
47	Passenger Seat
50	Retained Accessory Power/Accessory
51	Rear Sliding Window Open
52	Rear Sliding Window Close