


Chevrolet Malibu 1997 – 2003 fuse box diagram


Passenger Compartment Fuse Box (Left)

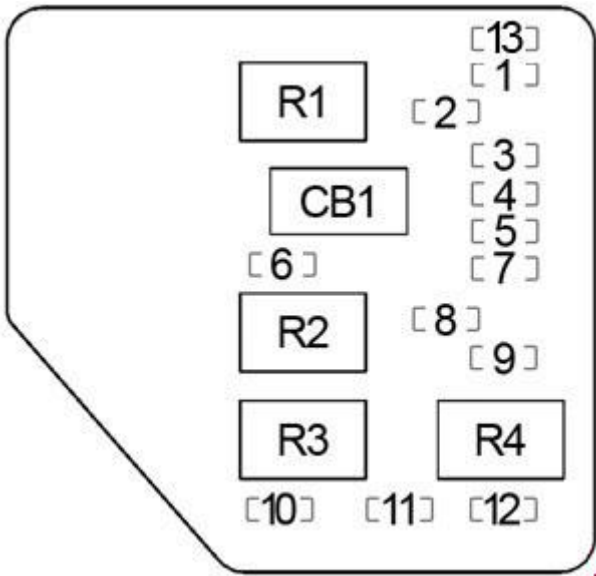

.Chevrolet Malibu – fuse box diagram – passenger compartment (left)

No.	A	Protected Component
1	25	Wipers, Multifunction Switch
2	10	Trunk Release, Remote Keyless Entry
3	10	Turn Sigals
4	10	Power Mirrors
5	10	Air Bag (Sensing & Diagnostic Module (SDM))
6	10	Body Control Module (BCM)
7	10	Powertrain Control Module (PCM)
8	15	Power Door Lock
9	10	Instrument Panel Cluster, Body Control Module
10	15	Stop Lamps
11	10	Hazard Lamps
12	10	Climate Control, Cluster, Data Link Connector
13	10	Radio
Relay		
R1		Trunk Release
R2		Power Door Lock (Unlock)
R3		Power Door Lock (Lock)
R4		Driver Door Unlock
Circuit Breaker		
CB1		Power Seat

Passenger Compartment Fuse Box (Right)

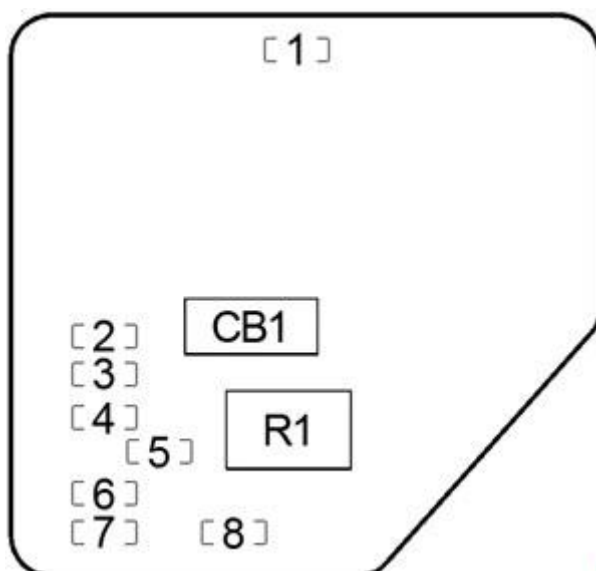


.Chevrolet Malibu – fuse box diagram – passenger

compartment (right)

No.	A	Protected Component
1	10	Interior Lamps (Dimming)
2	2	Cruise Control Switch
3	20	Climate Control
4	10	Cruise Control Module, Brake Switch, Body Control Module (BCM)
5	10	Fog Lamps
6	10	Interior Lamps (Non-Dimming)
7	10	Radio, Clock
8	20	Sunroof
Relay		
R1		Fog Lamps
Circuit Breaker		
CB1		Power Windows

Engine Compartment Fuse Box

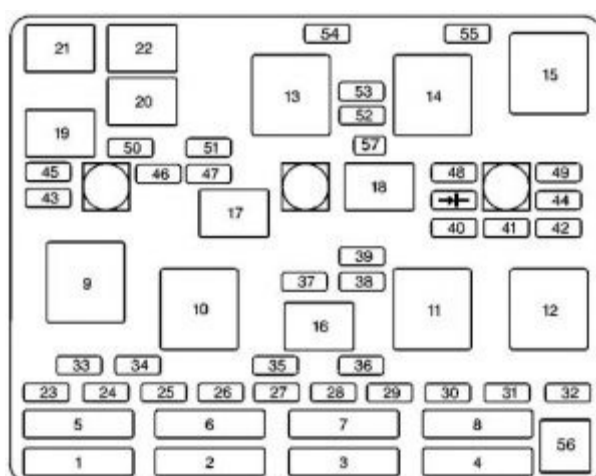

.Chevrolet Malibu – fuse box diagram – engine

compartment

No.	A	Protected Component
-----	---	---------------------

1	30	Ignition Switch
2	30	Passenger Compartment Fuse Box (Right (Fuse: "1", "5", "6"))
	40	Passenger Compartment Fuse Box (Left (Fuse: "2", "4", "8", "CB1"))
3	30	Passenger Compartment Fuse Box (Left (Fuse: "6", "10", "11", "12"))
4	50	ABS
	30	Passenger Compartment Fuse Box (Right (Fuse: "1", "5", "6"))
5	40	Ignition Switch
6	30	Air Pump
7	40	Passenger Compartment Fuse Box (Left (Fuse: "2", "4", "8", "CB1"))
	40	ABS
8	30	Cooling Fan No.1 (Left)
23	–	–
24	–	–
25	–	–
26	–	–
27	–	–
28	–	–
29	–	–
30	–	–
31	–	–
32	–	–
33	30	Rear Window Defogger
34	20	Cigar Lighter, Accessory Power Outlets
35	10	Generator
	10	ABS
36	15	ABS
37	10	Air Conditioning Compressor, Body Control Module (BCM)
38	10	Automatic Transaxle
39	10	Powertrain Control Module (PCM), Ignition
40	10	ABS, ABS Relay
41	10	Ignition Control Module
42	10	Back-Up Lamps, Automatic Transaxle Shift Lock Control System
43	15	Horn
44	10	Powertrain Control Module (PCM), Mass Air Flow (MAF) Sensor
45	15	Parking Lamps
46	10	Climate Control System, Air Temperature Actuator, Daytime Running Lamps Relay, Rear Window Defogger Relay
47	10	Evaporative Emission (EVAP) Canister Purge Valve, Evaporative Emission (EVAP) Canister Vent Solenoid, Powertrain Control Module (PCM), Heated Oxygen Sensors

48	15	Fuel Pump Relay, Fuel Injectors
49	10	Generator
50	15	Right Headlamp
51	15	Left Headlamp, Automatic Lamp Control Relay
52	15	Cooling Fan No.2 (Right)
53	30	Blower Motor Relay
54	–	–
55	15	Cooling Fan No.2 (Right)
56	–	Fuse Puller
57	–	'97-: j Tach Test Point for Diagnostic Testing
Relay		
9		Rear Window Defogger
10	–	
11		ABS
12		Cooling Fan No.1
13		Blower Motor
14		Cooling Fan No.2
15		Cooling Fan
16		Air Conditioning Compressor
17	–	
18		Fuel Pump
19		Automatic Lamp Control
20		Automatic Lamp Control
21		Horn
22		Daytime Running Lamps (DRL)
Circuit Breaker		
CB1		Power Windows