

Instrument Panel Wiring Harness

WIRING SYSTEM

53. Instrument Panel Wiring Harness


A: LOCATION

1. LHD MODEL

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
i1	28	Blue	C-3	B36	Bulkhead wiring harness
i2	25	★	C-3	B37	
i10	30	Green	B-2		Combination meter
i11	10	Green	B-3		
i12	14	Green	B-2		
i22	8	★	B-4		Hazard switch
i51	2	★	B-3		Sunload sensor
i59	4	★	B-3		Clock
★: Non-colored					

Instrument Panel Wiring Harness

WIRING SYSTEM

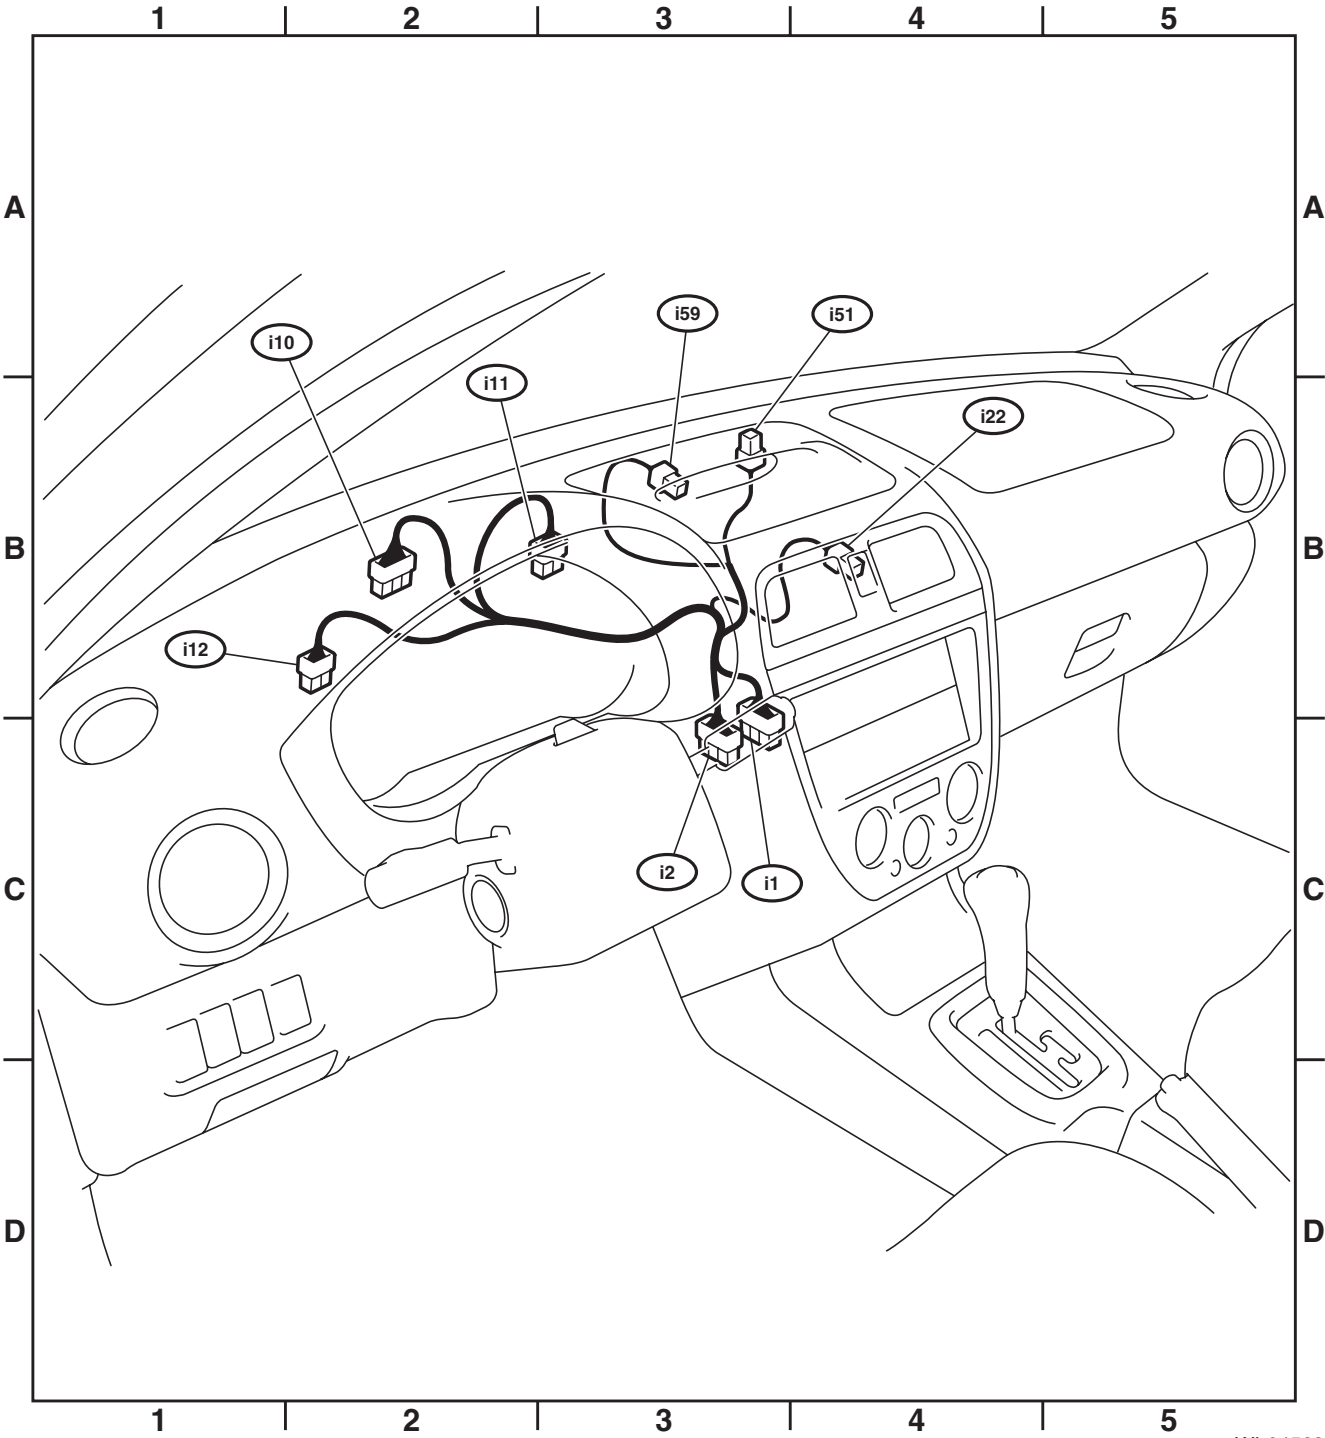

WI-04528

Instrument Panel Wiring Harness


WIRING SYSTEM

2. RHD MODEL

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
i1	22	Black	C-3	B36	Bulkhead wiring harness
i3	32	Black	C-3	B38	Bulkhead wiring harness (AT model and MT model with Driver's control center differential)
i10	30	Green	B-4		Combination meter
i11	10	Green	B-4		
i12	14	Green	B-3		Combination meter (Normal meter)
	16	Green	B-3		Combination meter (Red luminescent meter)
i22	8	★	B-2		Hazard switch
i51	2	★	B-3		Sunload sensor
i59	4	★	B-3		Clock
★: Non-colored					

Instrument Panel Wiring Harness

WIRING SYSTEM

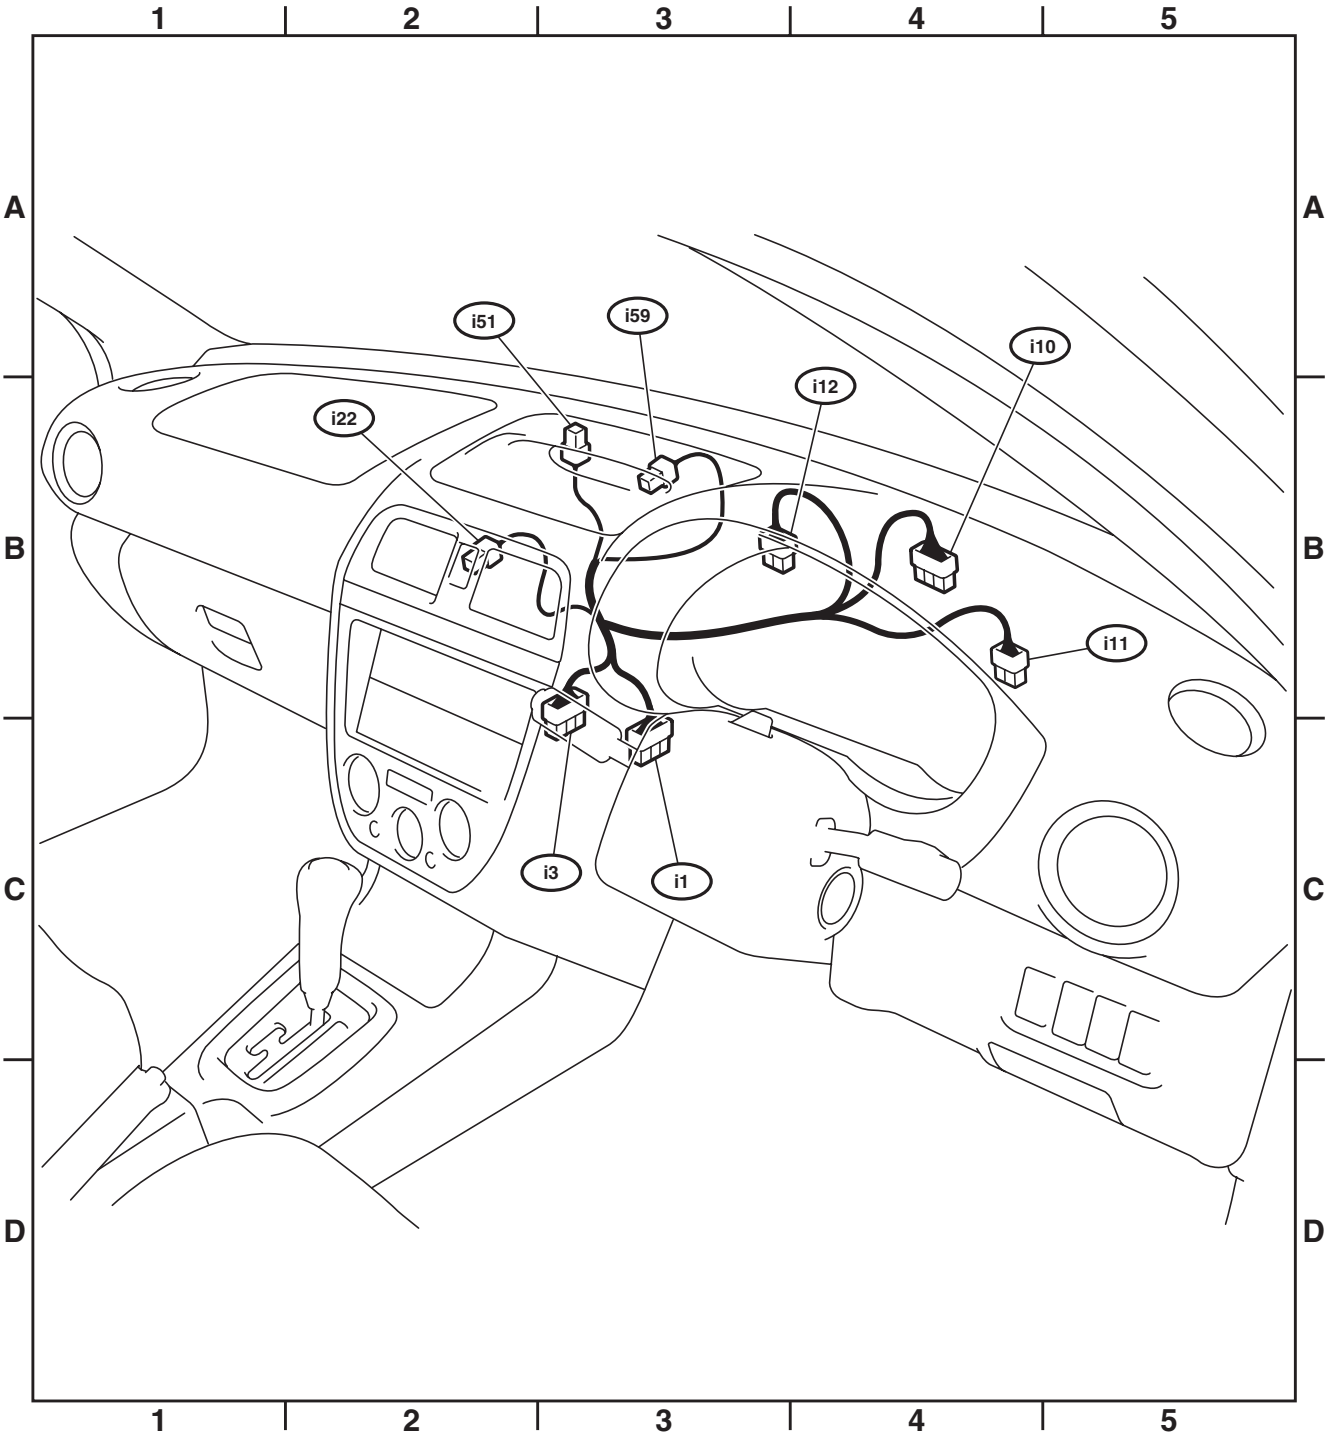

WI-07255

Rear Wiring Harness

WIRING SYSTEM

54.Rear Wiring Harness

A: LOCATION

1. LHD MODEL

• Rear Wiring Harness

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
R1	8	★	B-2	B97	Bulkhead wiring harness
R3	24	★	B-2	B99	Bulkhead wiring harness
R4	1	Black	B-3		Parking brake switch
R8	2	★	C-4		Seat belt switch
R15	4	★	B-3	R57	Fuel tank cord
R22	3	★	B-5		Rear door switch LH
R41	4	Blue	B-2		Seat heater RH
R42	4	★	B-3		Seat heater switch RH
R43	4	Blue	B-3		Seat heater switch LH
R44	4	Blue	C-4		Seat heater LH
R46	2	Black	B-3	R67	Fuel tank cord
R72	2	★	B-3		Rear ABS sensor RH
R73	2	★	B-5		Rear ABS sensor LH
R97	2	★	B-5		Antenna amp. (Sedan model)
R240	6	★	C-3		AT power mode & hold mode switch
★: Non-colored					

• Bulkhead Wiring Harness

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
B97	8	★	B-2	R1	Rear wiring harness
B99	24	★	B-2	R3	Rear wiring harness
B265	8	★	A-2	D27	Rear door cord RH
B267	3	★	C-4		Front door switch LH
B268	3	★	B-2		Front door switch RH
B269	8	★	B-5	D21	Rear door cord LH
★: Non-colored					

• Roof Cord

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
R50	4	★	B-1	B90	Bulkhead wiring harness
R52	3	★	A-3		Room light
R55	1	Gray	A-2		Sunroof
R56	2	★	A-3		Spot map light
★: Non-colored					

Rear Wiring Harness

WIRING SYSTEM

• Fuel Tank Cord


Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
R57	4	★	B-3	R15	Rear wiring harness
R58	6	★	B-3		Fuel pump assembly
R59	2	★	B-4		Fuel sub level sensor (Turbo model)
R67	2	Black	B-3	R46	Rear wiring harness
R148	1	★	B-4		Rear differential gear oil temperature sensor (+)
R159	1	Black	B-4		Rear differential gear oil temperature sensor (–)
★: Non-colored					

• Airbag Wiring Harness

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
AB7	12	Yellow	C-2		Airbag control module
AB8	12	Yellow	B-2		Airbag control module
AB9	2	Yellow	C-4	AB29	Side airbag module LH
AB10	4	Yellow	B-5		Side sensor LH
AB11	2	Yellow	B-2	AB28	Side airbag module RH
AB12	4	Yellow	B-2		Side sensor RH
AB19	2	Yellow	C-4		Pretensioner LH
AB20	2	Yellow	B-2		Pretensioner RH

Rear Wiring Harness

WIRING SYSTEM

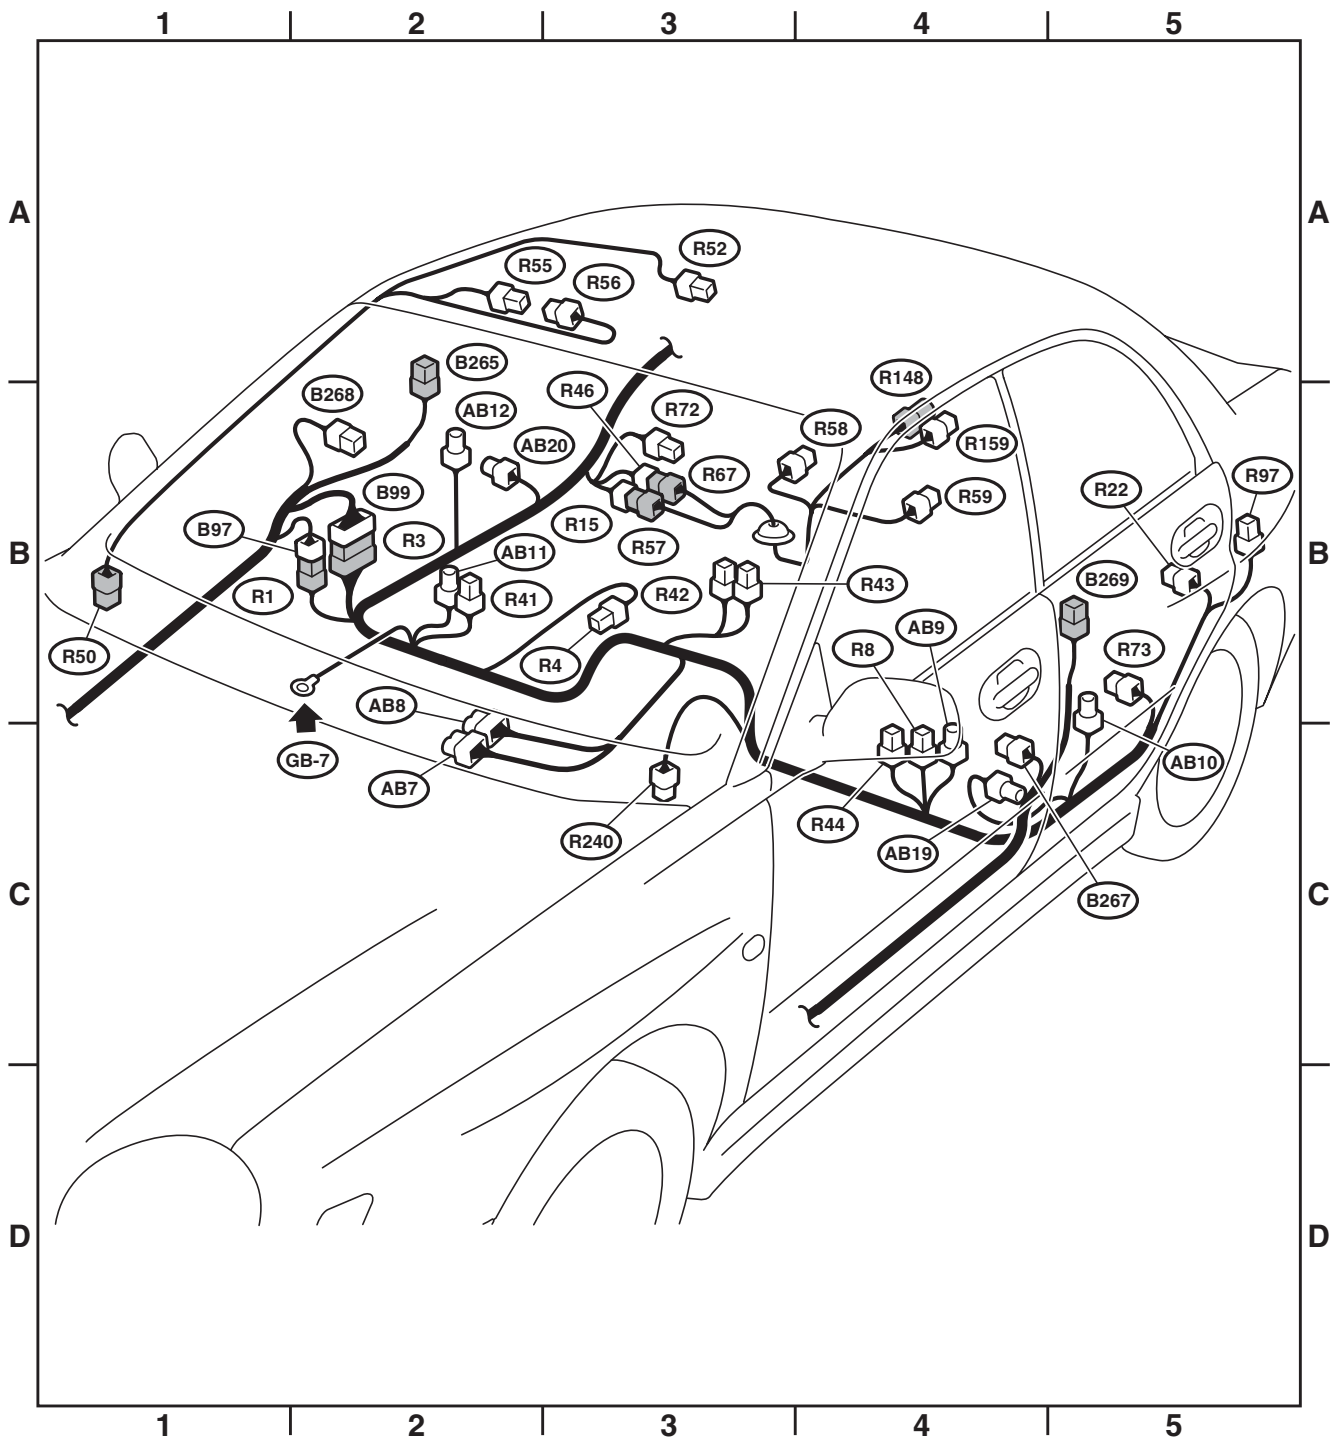

WI-07256

Rear Wiring Harness

WIRING SYSTEM

2. RHD MODEL

• Rear Wiring Harness

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
R1	8	Black	B-2	B97	Bulkhead wiring harness
R3	32	★	B-2	B99	Bulkhead wiring harness
R4	1	★	B-3		Parking brake switch
R8	2	★	B-2		Seat belt switch
R15	4	★	B-3	R57	Fuel tank cord
R22	3	★	B-5		Rear door switch LH
R41	4	Blue	B-2		Seat heater RH
R42	4	★	B-3		Seat heater switch RH
R43	4	Blue	B-3		Seat heater switch LH
R44	4	Blue	C-4		Seat heater LH
R46	2	Black	B-3	R67	Fuel tank cord
R72	2	★	B-3		Rear ABS sensor RH
R73	2	★	B-5		Rear ABS sensor LH
R97	2	★	B-5		Antenna amp. (Sedan model)

★: Non-colored

• Bulkhead Wiring Harness

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
B97	8	Black	B-2	R1	Rear wiring harness
B99	32	★	B-2	R3	Rear wiring harness
B265	8	★	B-2	D27	Rear door cord RH
B267	3	★	B-2		Front door switch RH
B268	3	★	C-4		Front door switch LH
B269	8	★	B-5	D21	Rear door cord LH

★: Non-colored

• Roof Cord

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
R50	4	★	B-1	B90	Bulkhead wiring harness
R52	3	★	A-3		Room light
R55	1	Gray	A-2		Sunroof
R56	2	★	A-3		Spot map light

★: Non-colored

• Fuel Tank Cord

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
R57	4	★	B-3	R15	Rear wiring harness
R58	6	★	B-3		Fuel pump assembly
R59	2	★	B-4		Fuel sub level sensor (Turbo and 2.5 L model)
R67	2	Black	B-3	R46	Rear wiring harness
R148	1	★	B-4		Rear differential gear oil temperature sensor (+)
R159	1	Black	B-4		Rear differential gear oil temperature sensor (-)

★: Non-colored

Rear Wiring Harness


WIRING SYSTEM

• Airbag Wiring Harness

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
AB7	12	Yellow	C-2		Airbag control module
AB8	12	Yellow	C-2		Airbag control module
AB9	2	Yellow	C-4	AB29	Side airbag module LH
AB10	4	Yellow	C-5		Side sensor LH
AB11	2	Yellow	B-2	AB28	Side airbag module RH
AB12	4	Yellow	B-2		Side sensor RH
AB19	2	Yellow	C-4		Pretensioner LH
AB20	2	Yellow	B-2		Pretensioner RH

Rear Wiring Harness

WIRING SYSTEM

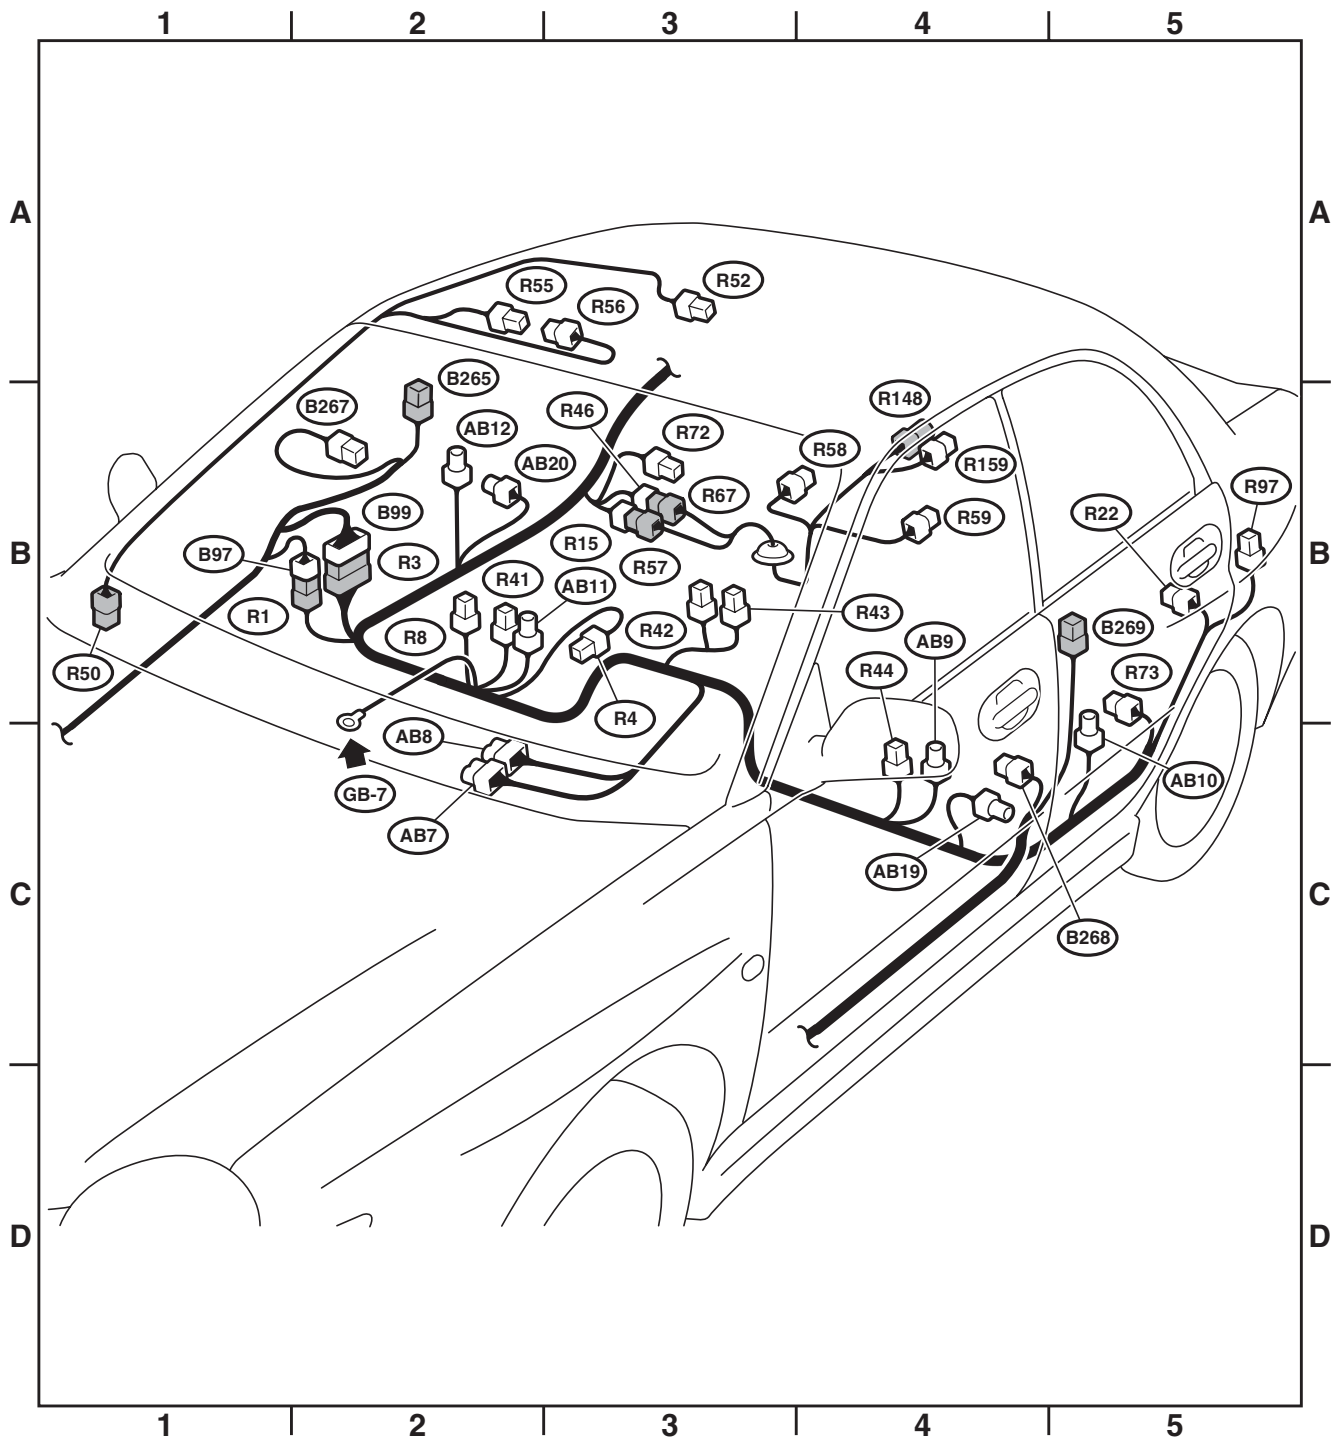

WI-04531