


15.Rear Vehicle Speed Sensor


A: REMOVAL

- 1) Set the vehicle on a lift.
- 2) Disconnect the ground cable from the battery.
- 3) Lift up the vehicle.
- 4) Disconnect the connector from the rear vehicle speed sensor.

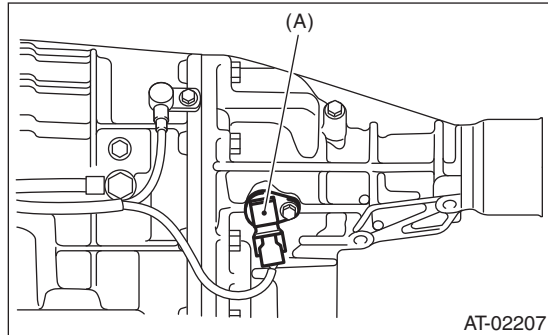

(A) Rear vehicle speed sensor

- 5) Remove the rear vehicle speed sensor.

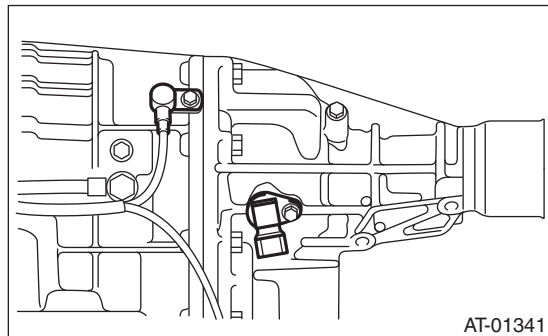

B: INSTALLATION

Install in the reverse order of removal.

NOTE:

Replace the O-ring with a new part.

Tightening torque:

7 N·m (0.7 kgf-m, 5.2 ft-lb)