

8. Transfer Clutch Pressure Test


A: INSPECTION

Check the transfer clutch pressure in accordance with the following chart in the same manner as for line pressure. <Ref. to 4AT-32, Line Pressure Test.>

ST 498897700 OIL PRESSURE
ADAPTER SET
ST 498575400 OIL PRESSURE GAUGE
ASSY

NOTE:

- Before setting to FWD mode, install the spare fuse on the FWD mode switch.

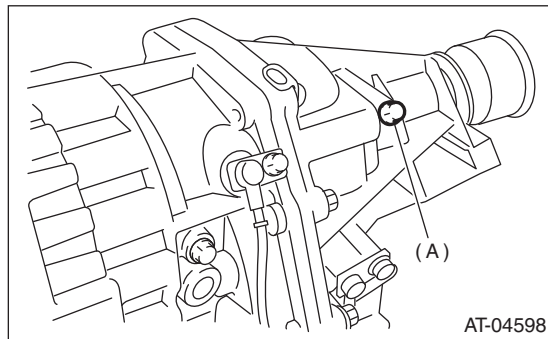

(A) Test plug

- If no oil pressure is produced or if it does not change in AWD mode, there may be a problem in the transfer duty solenoid or control valve body.
- If oil pressure is produced in FWD mode, there is the same problem as the AWD mode.

Range position	ON duty ratio (%)	Acceleration opening angle (%)	Standard transfer clutch pressure kPa (kg/cm ² , psi)	
			AWD mode	FWD mode
Manual mode (2nd)	95	Fully opened (100)	1,000 — 1,200 (10.2 — 12.2, 145 — 174)	—
	60	Adjust ON Duty ratio to 60%.	500 — 700 (5.1 — 7.1, 72 — 101)	—
	5	Fully closed (0)	—	0 (0, 0)
N or P	5	Fully closed (0)	0	—