

9. Clear Memory Mode

A: OPERATION

- 1) Move the select lever to “P” range.
- 2) Using the Subaru Select Monitor, select {Each System Check} in the «Main Menu».
- 3) On the «Each System Check Menu» screen, select {Transmission Control System}.
- 4) After transmission type information is displayed, select [OK].
- 5) On the «Transmission Diagnosis», select {Clear Memory}.
- 6) When “Done. Turn ignition switch OFF” is displayed, select [OK].
- 7) Turn the ignition switch to OFF. When turning the ignition switch to ON again, wait for 10 seconds or more.
- 8) Turn the Subaru Select Monitor OFF.

NOTE:

- If {Clear Memories 2} is executed, DTCs and learned control memory are cleared.
- If {Clear Memories 2} is executed, perform learning. <Ref. to 4AT(diag)-20, Learning Control.>