

58.Instrument Panel Wiring Harness

A: LOCATION

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
i1	28	★	B-5	B36	Bulkhead wiring harness
i3	28	★	C-1	B38	
i5	20	★	C-2		Fuse & relay box (F/B)
i6	10	★	C-2		Remote control mirror switch
i10	40	★	B-2		Combination meter
i15	6	★	C-4		Blower fan switch (Manual A/C)
i16	12	★	C-4		A/C control panel (Manual A/C)
i22	4	★	B-3		Hazard switch
i24	4	★	C-4	AD1	Front accessory power supply socket & pocket light
i29	1	★	C-4		Audio bracket ground (without navigation system)
i50	24	★	C-4		Navigation unit
i51	2	★	B-4		Sunload sensor
i53	16	★	C-5	R98	Rear wiring harness RH
i55	2	★	C-3		In-vehicle sensor
i56	12	★	C-5	R100	Rear wiring harness RH
i59	10	★	C-3		Clock
i76	25	★	C-1	D83	Front door cord RH
i79	6	★	C-2		Illumination CM
i82	12	Blue	B-1		Joint connector
i83	12	Blue	B-1		
i84	35	★	B-1		Body integrated unit
i85	20	★	C-4		Audio (without navigation system)
i86	8	★	C-4		
i87	14	★	C-4		Audio (with navigation system)
i88	40	★	B-4		A/C control pane (Auto A/C)
i97	12	Blue	B-5		Joint ground connector
i98	12	Blue	B-5		
i101	28	★	C-1	D84	Front door cord LH
i102	16	★	C-1	R167	Rear wiring harness LH
i106	4	★	B-1		CAN joint connector
i107	4	★	B-1		
i120	4	★	B-2		Joint connector (with navigation system)

★ White or natural color

WIRING SYSTEM

