


Pontiac Firebird 1981 fuse box diagram

Fuse box diagram

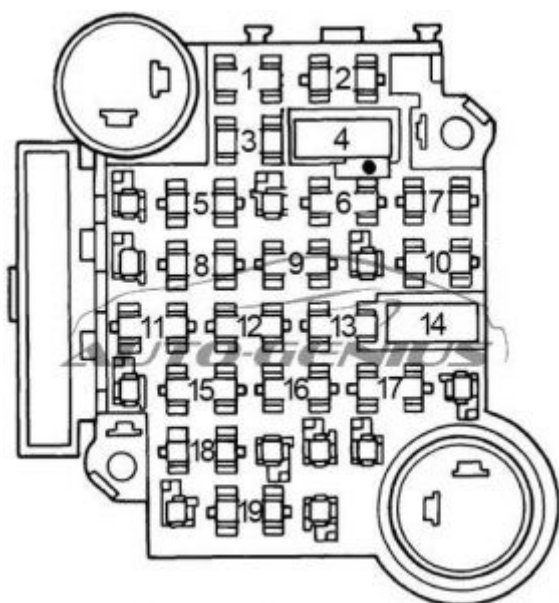

Pontiac Firebird – fuse box diagram

№ A	Protected Component
1 5	Instrument panel, ash tray, clock, radio dial, cigar lighter, heater or A/C control lights, windshield wiper switch, headlight switch, automatic transmission shift indicator lights
2 20	Electric choke
3 —	—
4 30	Circuit breaker: Power windows
5 —	—
6 25	Heater, air conditioning blower motor
7 —	—
8 10	Tachometer, fuel and temperature gauge, voltmeter, transmission converter clutch, rear defogger timer relay, brake warning indicator, choke indicator, computer command control
9 25	Windshield wiper/washer, pulse wiper
10 20	Stop and hazard lights, key warning buzzer
11 10	Seat belt buzzer and timer, rear window defogger timer
12 20	Tail, parking, side marker and license lights
13 10	Radio, tape player, CB radio, power antenna, cruise control
14 30	Circuit breaker: Rear window defogger feed, power door locks
15 20	Back-up and turn signal lights
16 20	Clock, power antenna, digital radio, computer command control
17 20	Vanity, dome, glove box and deck lid lights, deck lid release, cigar lighter
18 —	—
19 —	—

Circuit Breaker:

Headlights – Circuit breaker is located in headlight switch