

Toyota Celica (T230; 1999-2006) fuses

*In this article, we consider the seventh-generation Toyota Celica (T230), produced from 1999 to 2006. Here you will find fuse box diagrams of **Toyota Celica 2000, 2001, 2002, 2003, 2004, 2005 and 2006**, get information about the location of the fuse panels inside the car, and learn about the assignment of each fuse (fuse layout).*

See other Toyota Celica:

Fuse Layout Toyota Celica 2000-2006



Cigar lighter (power outlet) fuse in the Toyota Celica is the fuse #33 “CIG” in the Instrument panel fuse box.


Passenger Compartment Fuse Box

Fuse Box Location

The fuse box is located behind the cover on the right side of the central console.



Fuse Box Diagram

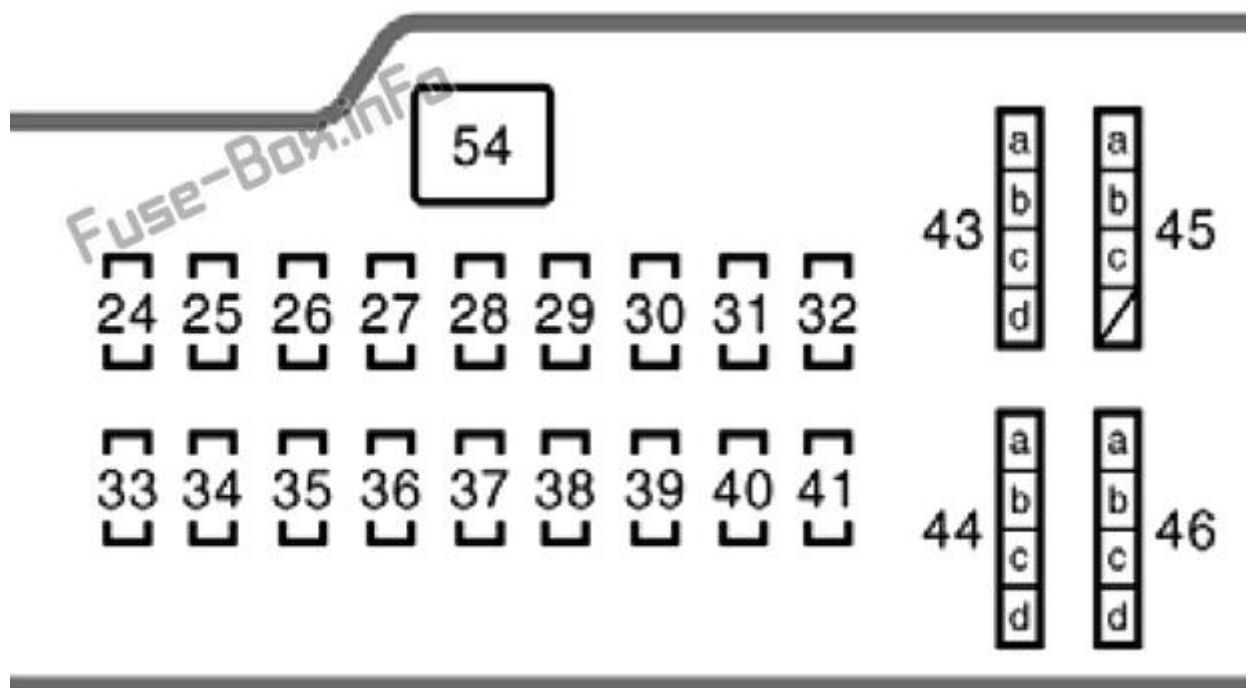

Assignment of the fuses in the instrument panel


No	Name	Amp	Description
24	S/ROOF	15A	Electric moon roof
25	FL P/W	20A	Power windows
26	STOP	10A	Stop lights, anti-lock brake system, high mounted stoplight, multiport fuel injection system/sequen-tial multiport fuel injection system, electronically controlled automatic transmission system, cruise control system
27	SRS-IG	7.5A	SRS airbag system
28	WASHER	15A	Windshield washer, rear window washer
29	RADIO	15A	Audio system
30	TURN	7.5A	Turn signal lights
31	HTR	10A	Air conditioning system
32	TAIL	10A	Tail lights, instrument panel lights, license plate lights, front side maker lights
33	CIG	15A	Cigarette lighter
34	AM1	25A	Starting system, "CIG", "ECU ACC", "SRS-IG", "WASHER", "WIPER", "BK/UP LP", "TENS RDC", "DEF RLY", "BODY ECU-IG", "TURN", "HTR", "WARNING", "FAN RLY", "ABS-IG" and "ECU-IG" fuses
35	DOOR	20A	Power door lock system
36	FR FOG	15A	Front fog lights
37	OBD	7.5A	On-board diagnosis system
38	WIPER	25A	Windshield wipers
39	MIR HTR	10A	No circuit

No	Name	Amp	Description
40	RR WIPER	15A	Rear window wiper
41	FR P/W	20A	Power windows
43a	MPX-B	7.5A	Wireless remote control system
43b	RR FOG	7.5A	No circuit
43c	DOME	7.5A	Clock, interior light
43d	ECU-B	7.5A	Air conditioning system, gauges and meters
44a	WARNING	5A	Charging system, gauges and meters
44b	ECU-IG	5A	Cruise control system
44c	ABS-IG	5A	Anti-lock brake system
44d	FAN RLY	5A	Electric cooling fan
45a	PANEL1	7.5A	2000: Gauges and meters, air conditioning system, electronically controlled automatic transmission system, headlight beam level control system, front fog lights, emergency flasher, turn signal lights; 2001-2002: Car audio system, cigarette lighter, glove box light; 2003-2006: Glove box light, instrument panel lights
45b	PANEL2	7.5A	2000: Car audio system, cigarette lighter, glove box light; 2001-2002: Gauges and meters, air conditioning system, electronically controlled automatic transmission system, headlight beam level control system, front fog lights, emergency flasher, turn signal lights; 2003-2006: Front fog lights, instrument panel lights, instrument cluster lights
45c	ECU-ACC	7.5A	Clock, audio system, power rear view mirror controls, power antenna
46a	BK/UP LP	5A	Back-up lights

No	Name	Amp	Description
46b	DEF RLY	5A	Power windows, rear window defogger
46c	BODY ECU-IG	5A	2000: Theft deterrent system; 2001-2006: Multiplex communication system
46d	TENS RDC	5A	Electronically controlled automatic transmission system, shift lock control system, electric moon roof, power antenna
54	DEF	30A	Rear window defogger


Engine Compartment Fuse Boxes

Fuse Box Location

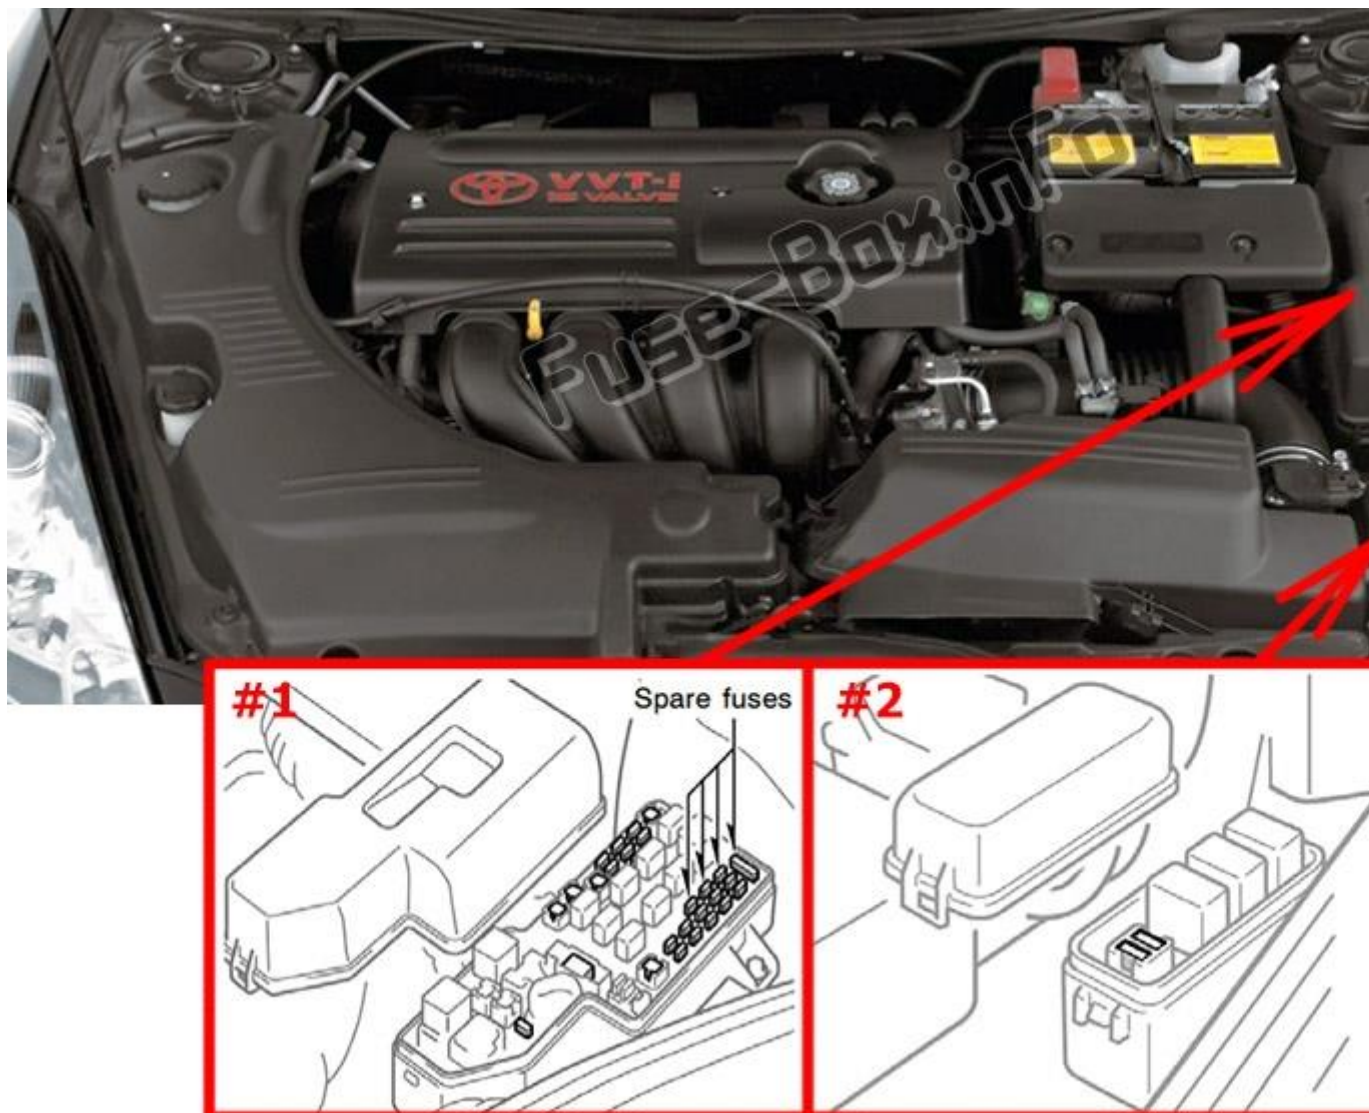

Fuse Box Diagram

#1

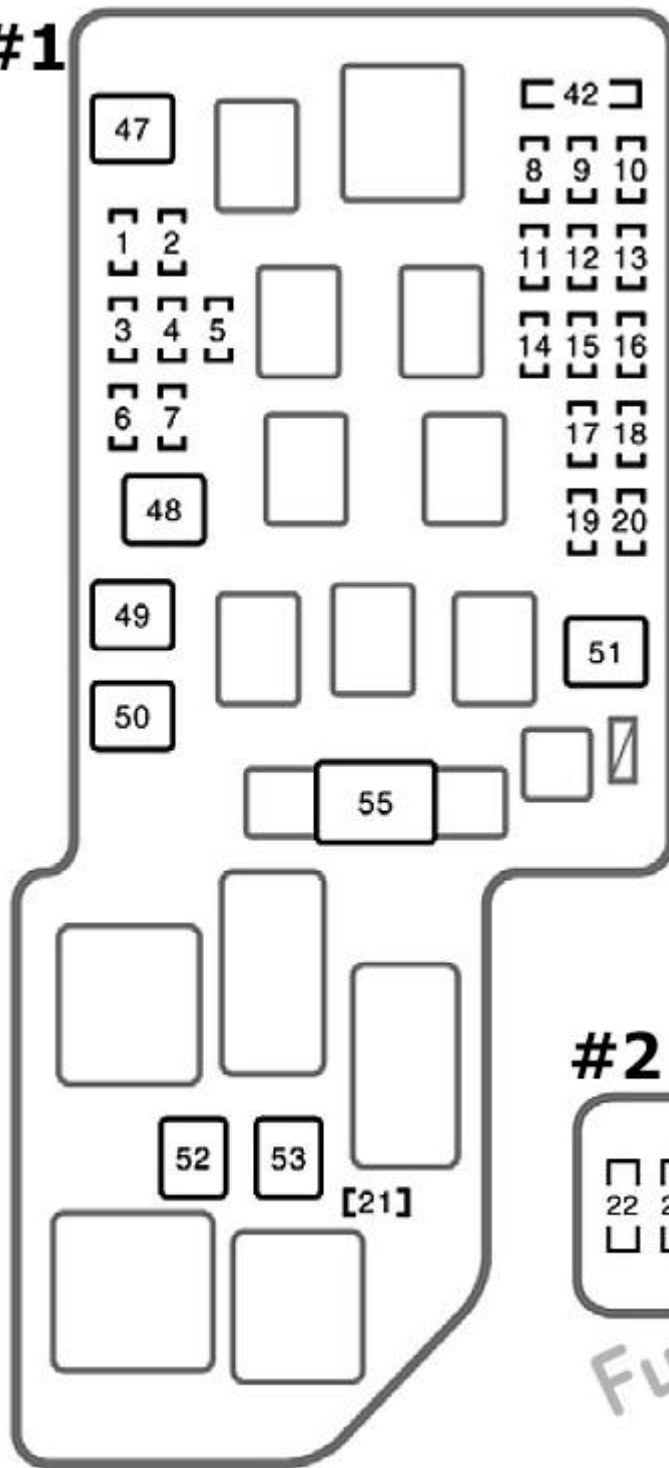

#2



Assignment of the fuses in the engine compartment

Nº	Name	Amp	Description
1	AUTO ANTENNA	15A	2000-2002: Not Used; 2003-2006: Power antenna
2	HEAD LH UPR	10A	2000-2003: Left-hand headlight (high beam); 2004-2006: No circuit

№	Name	Amp	Description
3	HEAD RH UPR	20A	2000-2003: Right-hand headlight (high beam); 2004-2006: No circuit
4	HEAD LVL DRL №1 (or DRL №1)	7.5A	Daytime running light system, headlight beam level control system (2003-2006)
5	HEAD RH LWR	10A or 15A	Right-hand headlight (low beam) (2000-2002: 10A; 2003- 2006: 15A)
6	HEAD LH LWR	10A or 15A	Left-hand headlight (low beam) (2000-2002: 10A; 2003- 2006: 15A)
7	ABS №2	25A	Anti-lock brake system
8	SPARE	30A	Spare
9	HORN	10A	Horn
10	ALT-S	7.5A	Charging system
11	SPARE	15A	Spare
12	EFI №1	10A	Multiport fuel injection system/sequential multiport fuel injection system
13	DCC	25A	"RADIO", "DOME", "MPX-B" and "ECU-B" fuses
14	SPARE	10A	Spare
15	EFI №2	10A	Multiport fuel injection system/sequential multiport fuel injection system, emission control system
16	EFI	20A	Multiport fuel injection system/sequential multiport fuel injection system, "EFI №1" and "EFI №2" fuses
17	ST	7.5A	Starting system, multiport fuel injection system/sequential multi-port fuel injection system

№	Name	Amp	Description
18	AM2	7.5A	Starting system
19	IG2	15A	Starting system, multiport fuel injection system/sequential multi-port fuel injection system
20	HAZ	10A	Emergency flashers
21	ETCS	10A	2000-2002: Not Used; 2003-2006: Electronic throttle control system
22	HEAD RH UPR	10A	Right-hand headlight (high beam), daytime running light system (2000-2003)
23	HEAD LH UPR	10A	Left-hand headlight (high beam), daytime running light system (2004-2006)
42	SPARE	7.5A	Spare fuse
47	HTR	50A	Air conditioning system
48	RDI	30A	Electric cooling fan
49	ABS №1	50A	Anti-lock brake system
50	CDS	30A	Electric cooling fan
51	MAIN	40A	Starting system, daytime running light system, "ST" fuse
52	A-PMP	50A	2000-2003: Not Used; 2004-2006: Emission control system
53	H-LP CLN	50A	No circuit
55	ALT	120A	Cooling system, electric cooling fan, starting system, rear window defogger, tail lights, "ABS №1", "ABS №2", "HTR", "FR P/W", "FL P/W", "DOOR", "OBD", "STOP", "S/ ROOF", "MIR HTR", "FR FOG" and "AM1" fuses