 
 


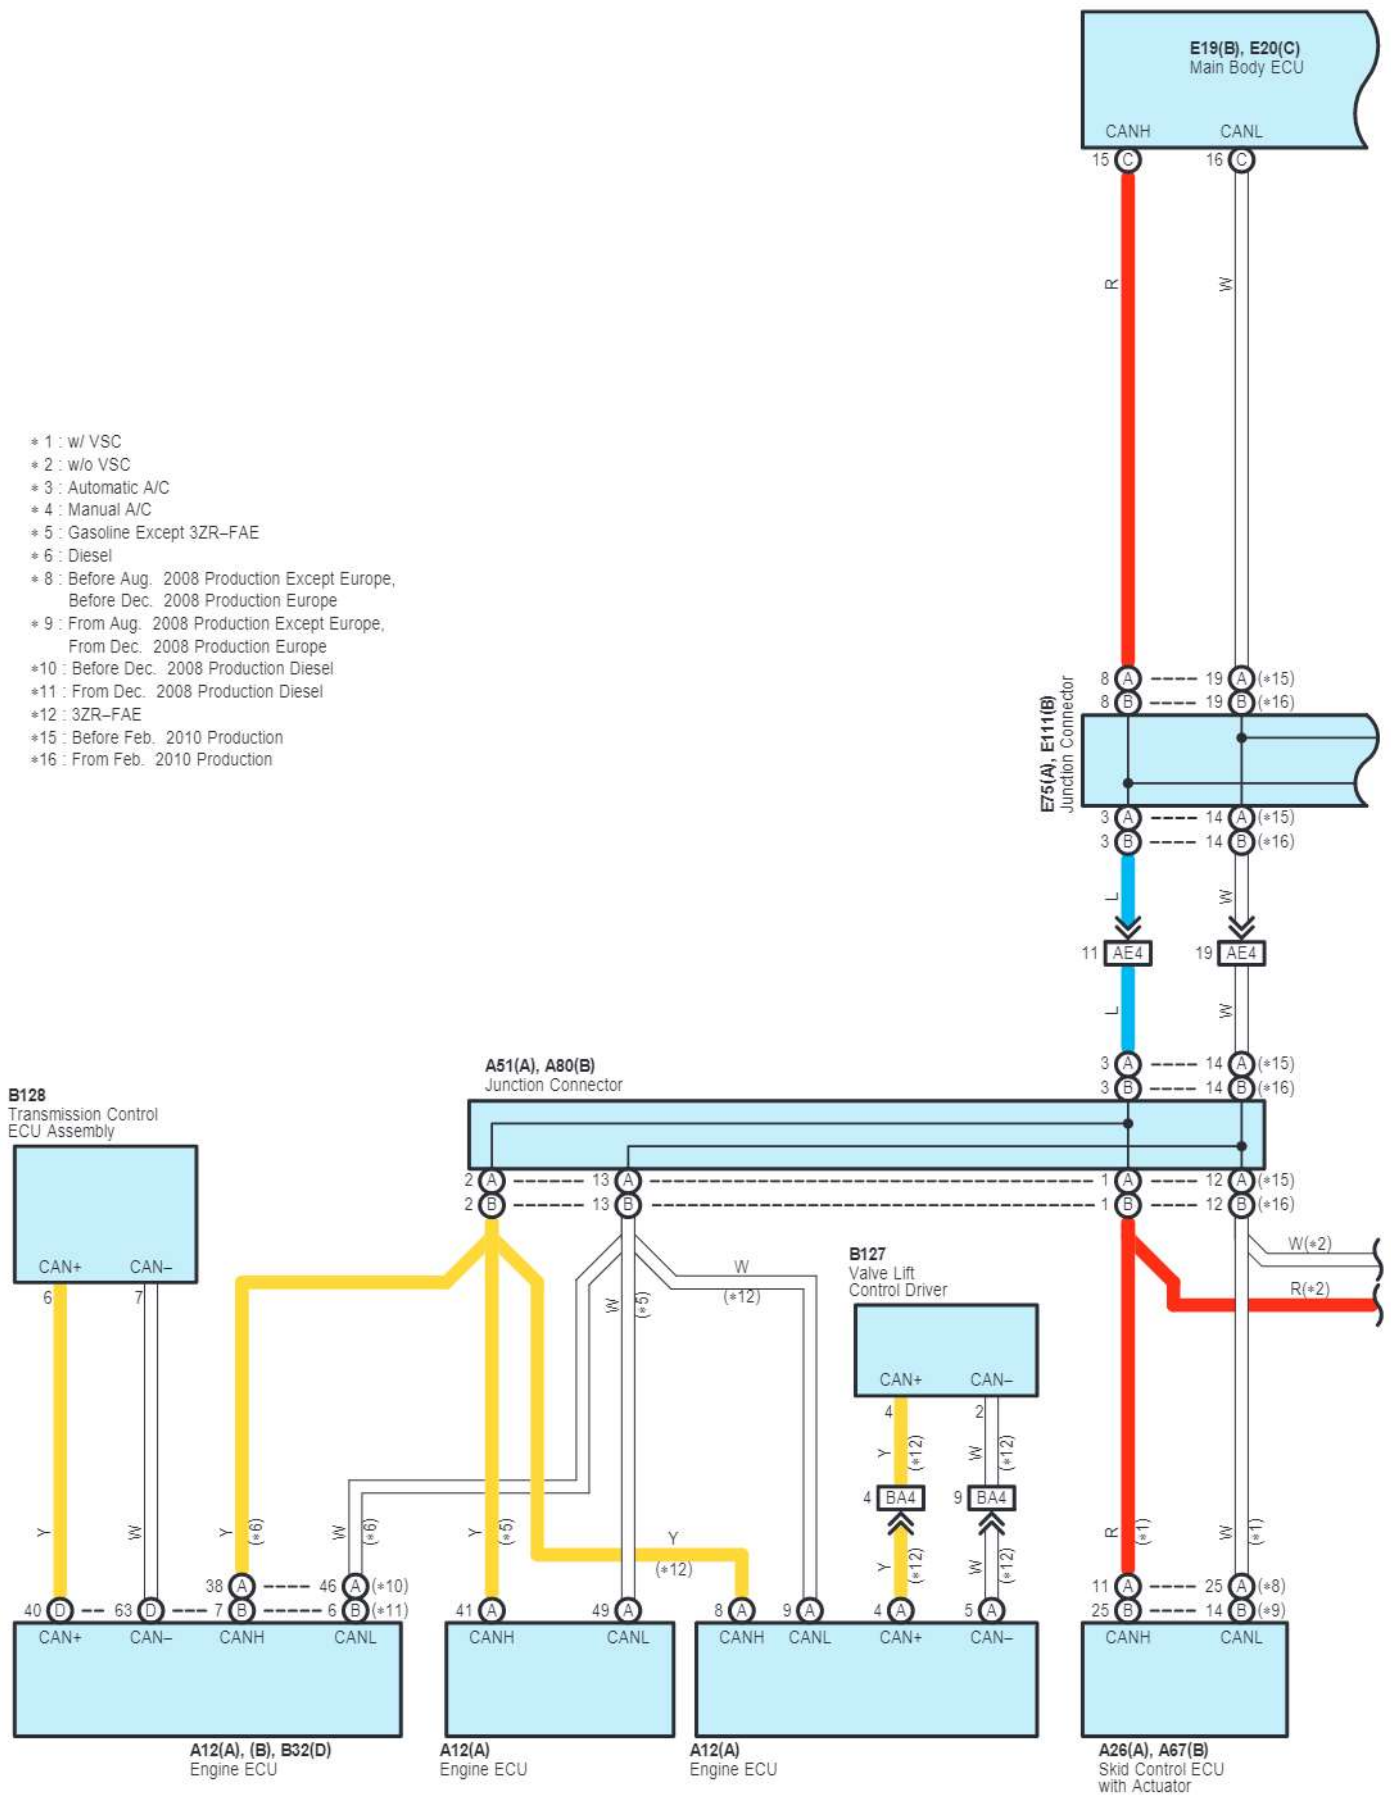


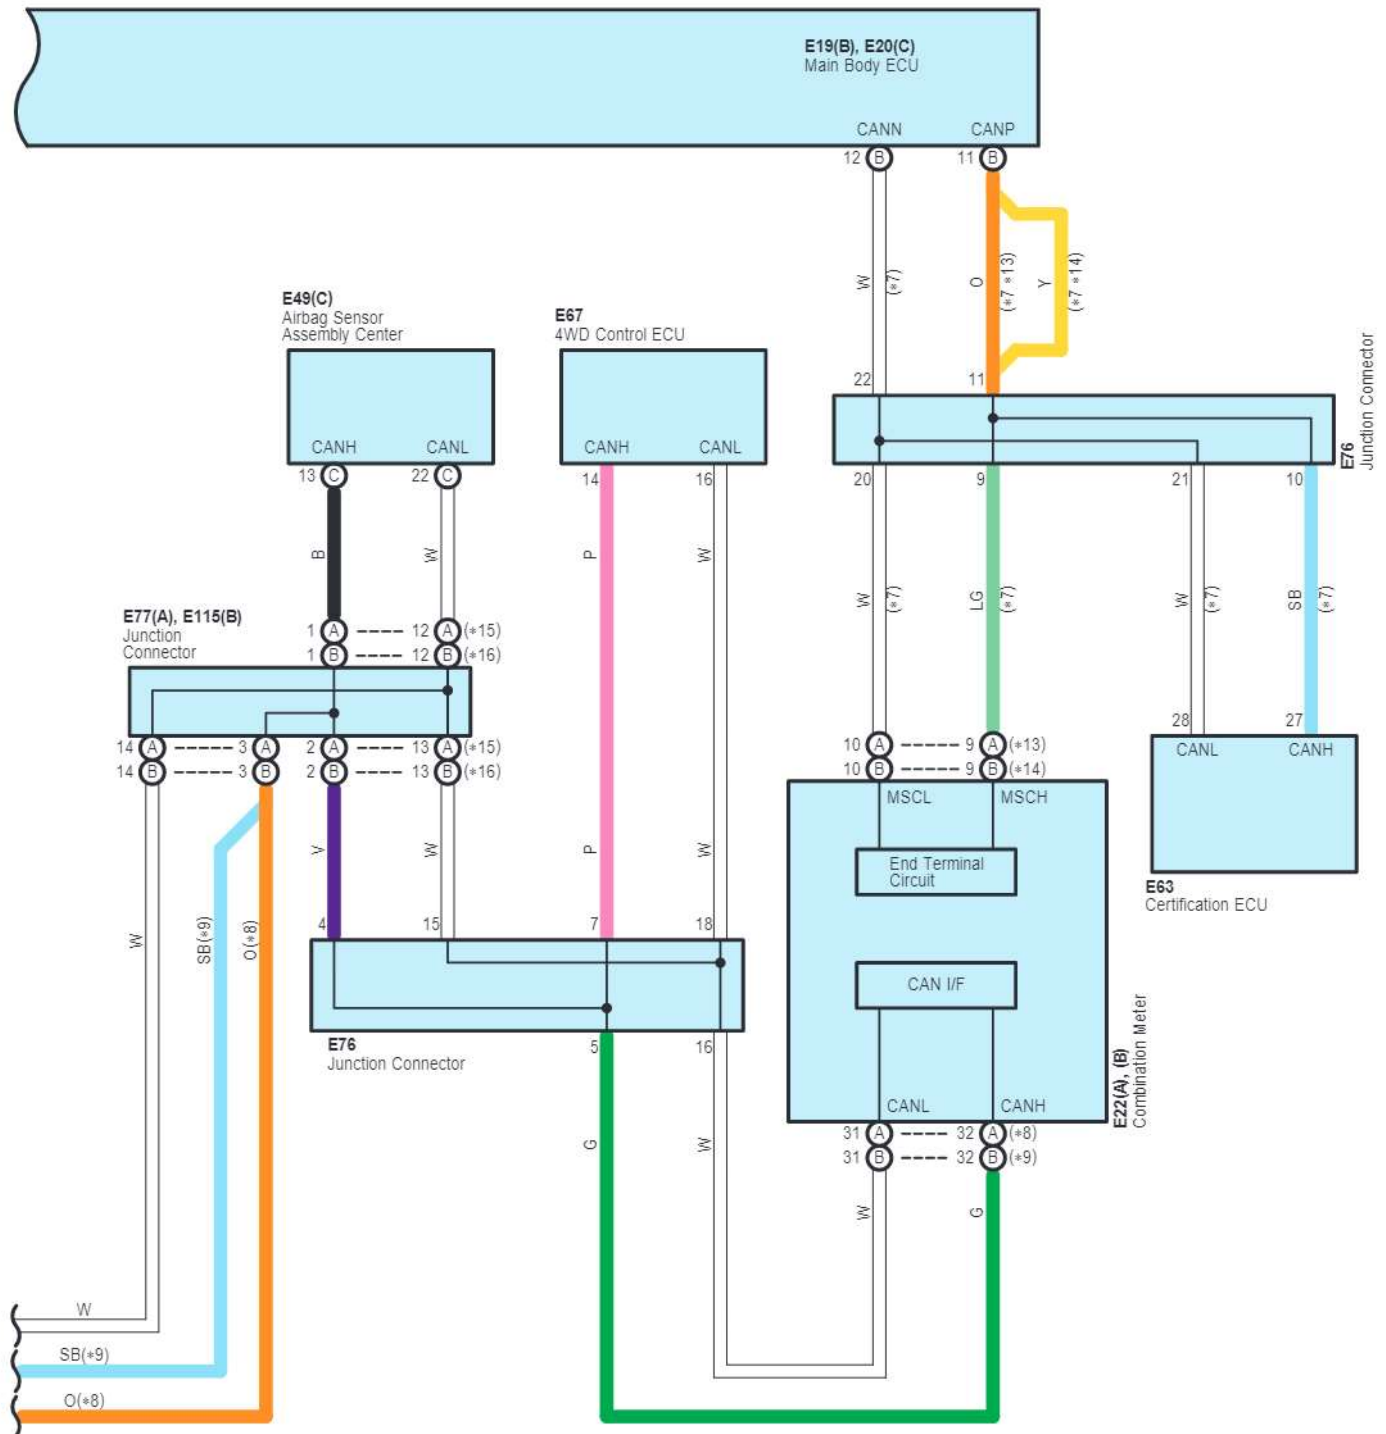




- * 7 : w/ Entry & Start System
- * 8 : Before Aug. 2008 Production Except Europe,
Before Dec. 2008 Production Europe
- * 9 : From Aug. 2008 Production Except Europe,
From Dec. 2008 Production Europe
- * 13 : Before Dec. 2008 Production Europe
- * 14 : From Dec. 2008 Production Europe
- * 15 : Before Feb. 2010 Production
- * 16 : From Feb. 2010 Production

 
A 12
Black

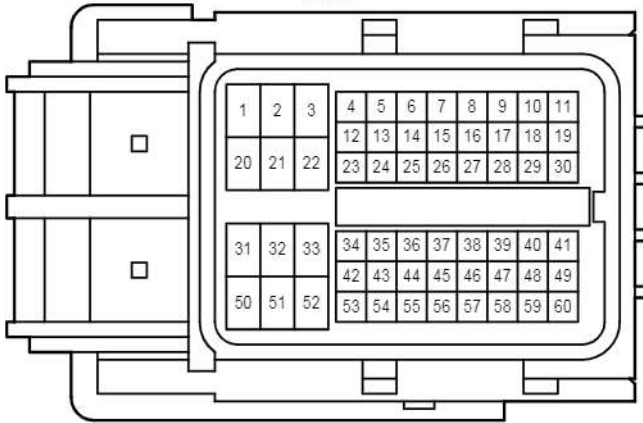


A 26
Black

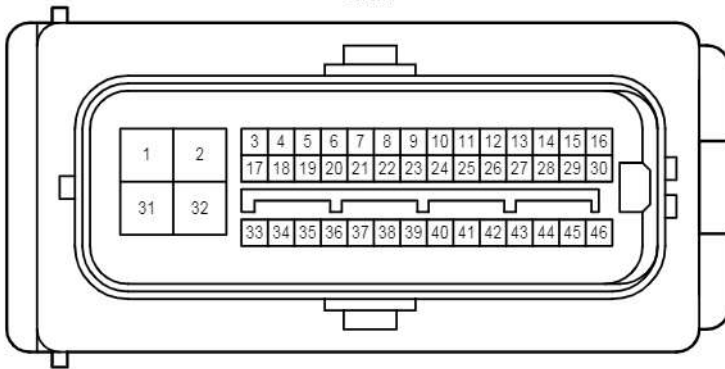 


A 27
Black

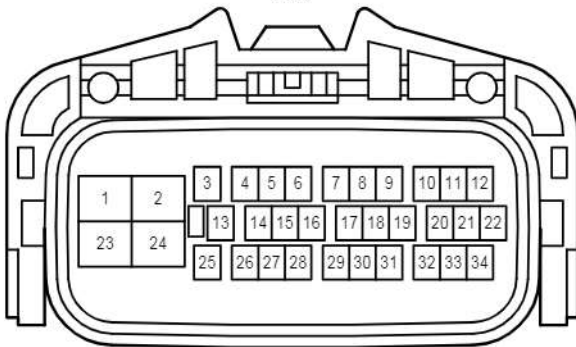 


A 51
Gray

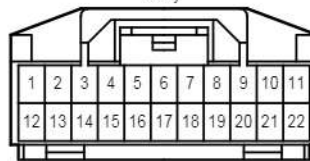 


A 67
Black

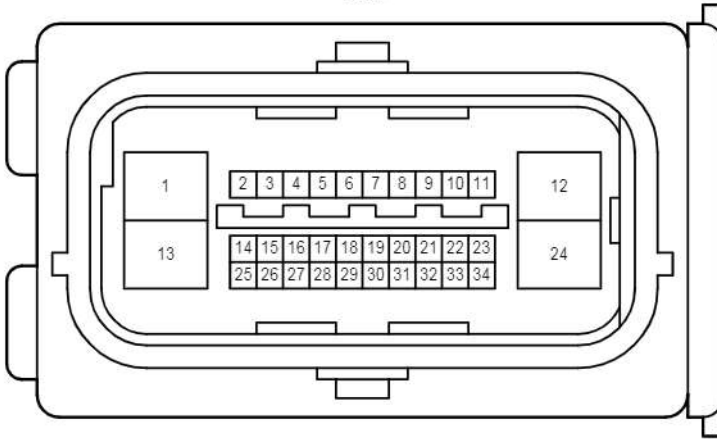 


A 80
Gray

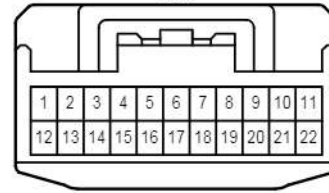 


B 32
Black

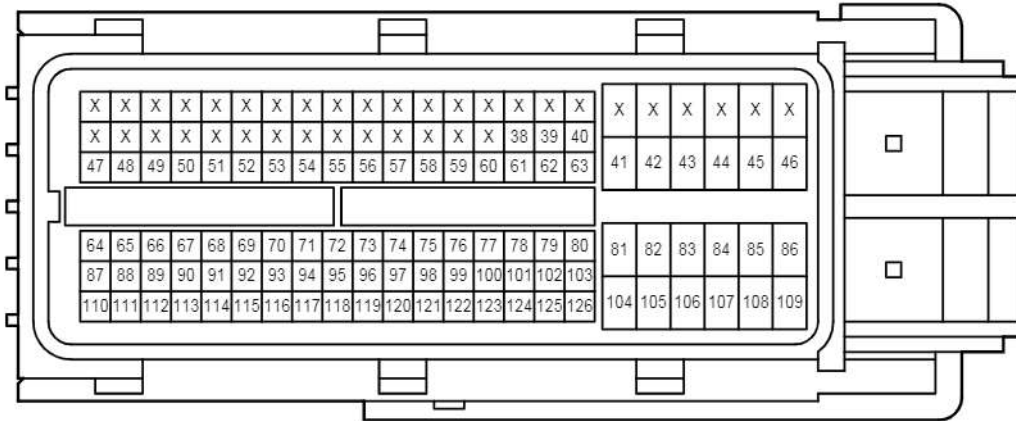 


B127
Gray

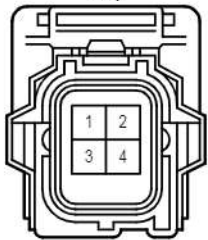 


B128
Gray

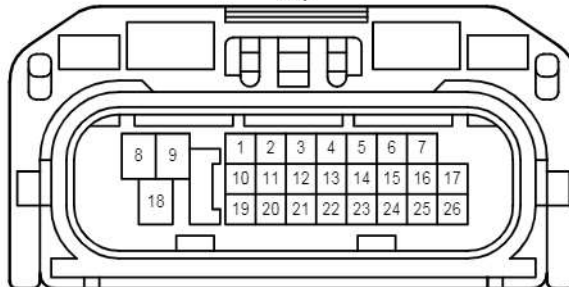 


E 14
Gray

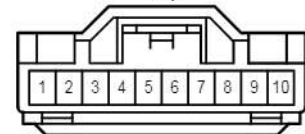 


E 16
White

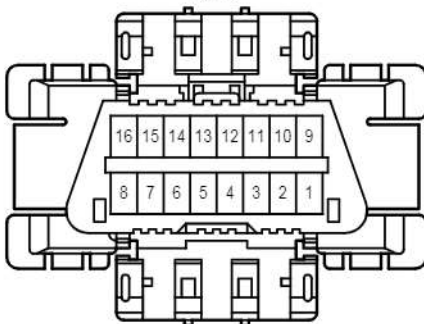 

E 19
White

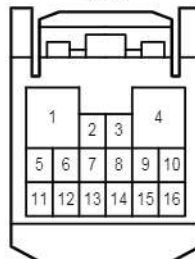 

E 20
White

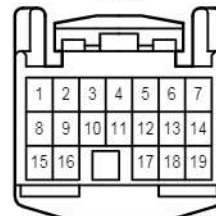 


E 21

White




E 22

 White

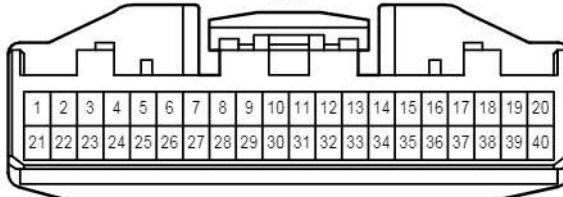


E 41

 White

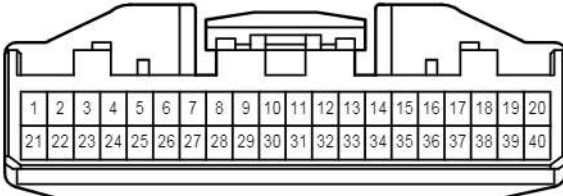


E 42

 White

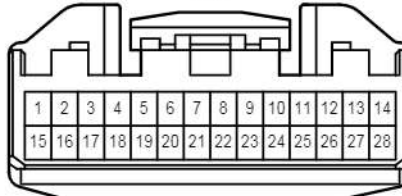


E 49

 Yellow

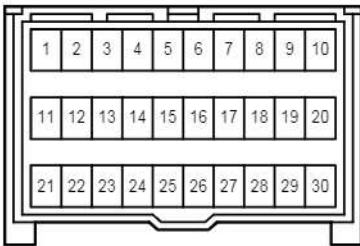


E 63

 White

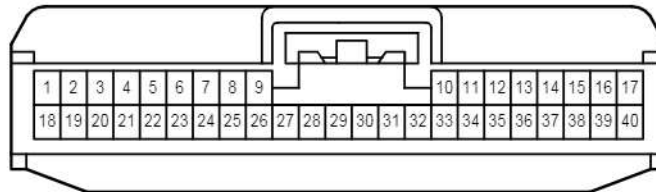


E 67

 White

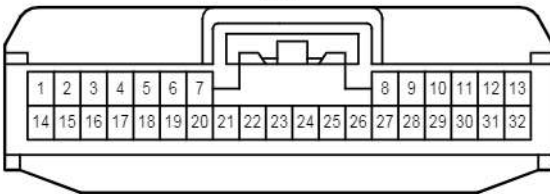


E 75

 Gray

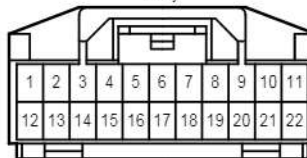


E 76

 Black

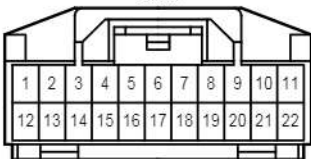


E 77

 Gray

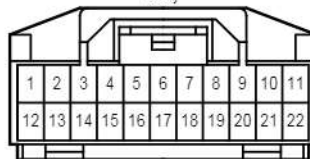


E 95

 White

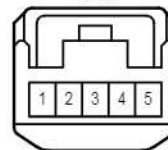


E111

 Gray

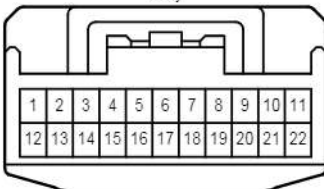


E115

 
Gray

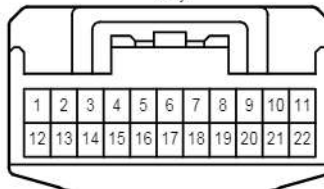


K 6

  Black

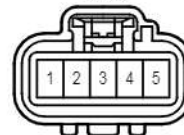

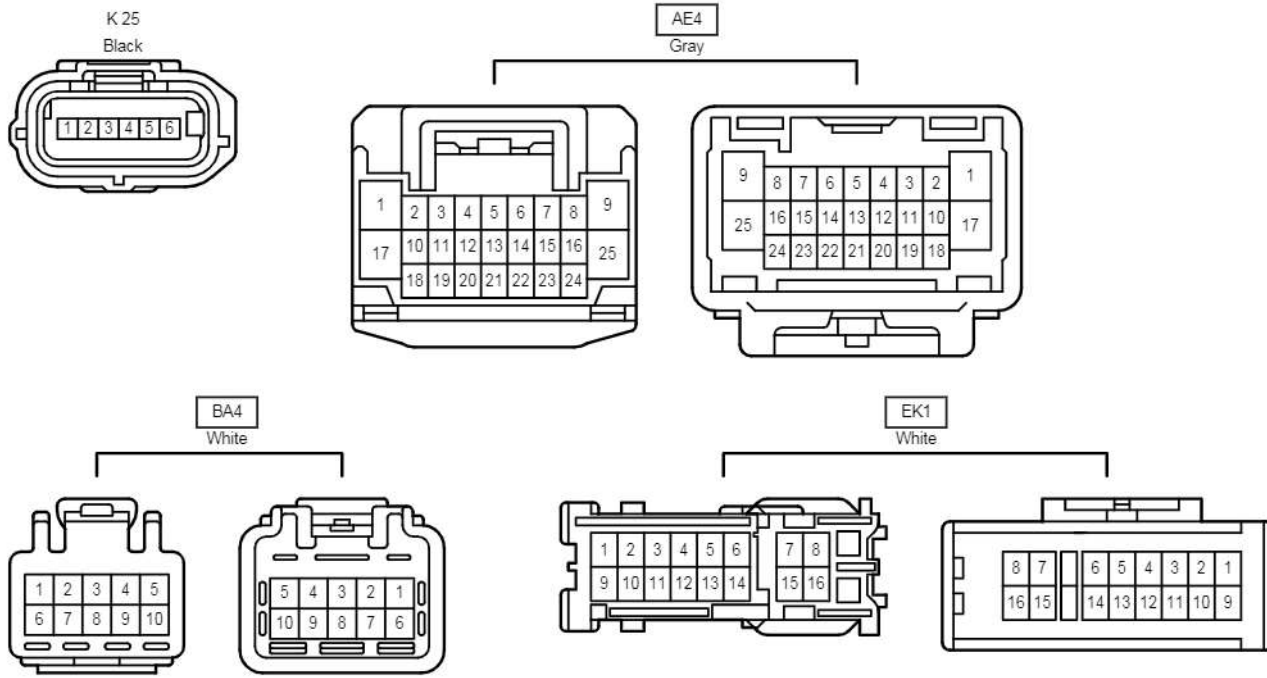


- * 1 : Gasoline Except 3ZR-FAE
- * 2 : Diesel
- * 3 : w/ VSC
- * 4 : w/o VSC
- * 5 : Automatic A/C
- * 6 : Manual A/C
- * 8 : Before Aug. 2008 Production Except Europe,
Before Dec. 2008 Production Europe
- * 9 : From Aug. 2008 Production Except Europe,
From Dec. 2008 Production Europe
- * 12 : 3ZR-FAE
- * 13 : Before Dec. 2008 Production Diesel
- * 14 : From Dec. 2008 Production Diesel
- * 15 : Before Feb. 2010 Production
- * 16 : From Feb. 2010 Production

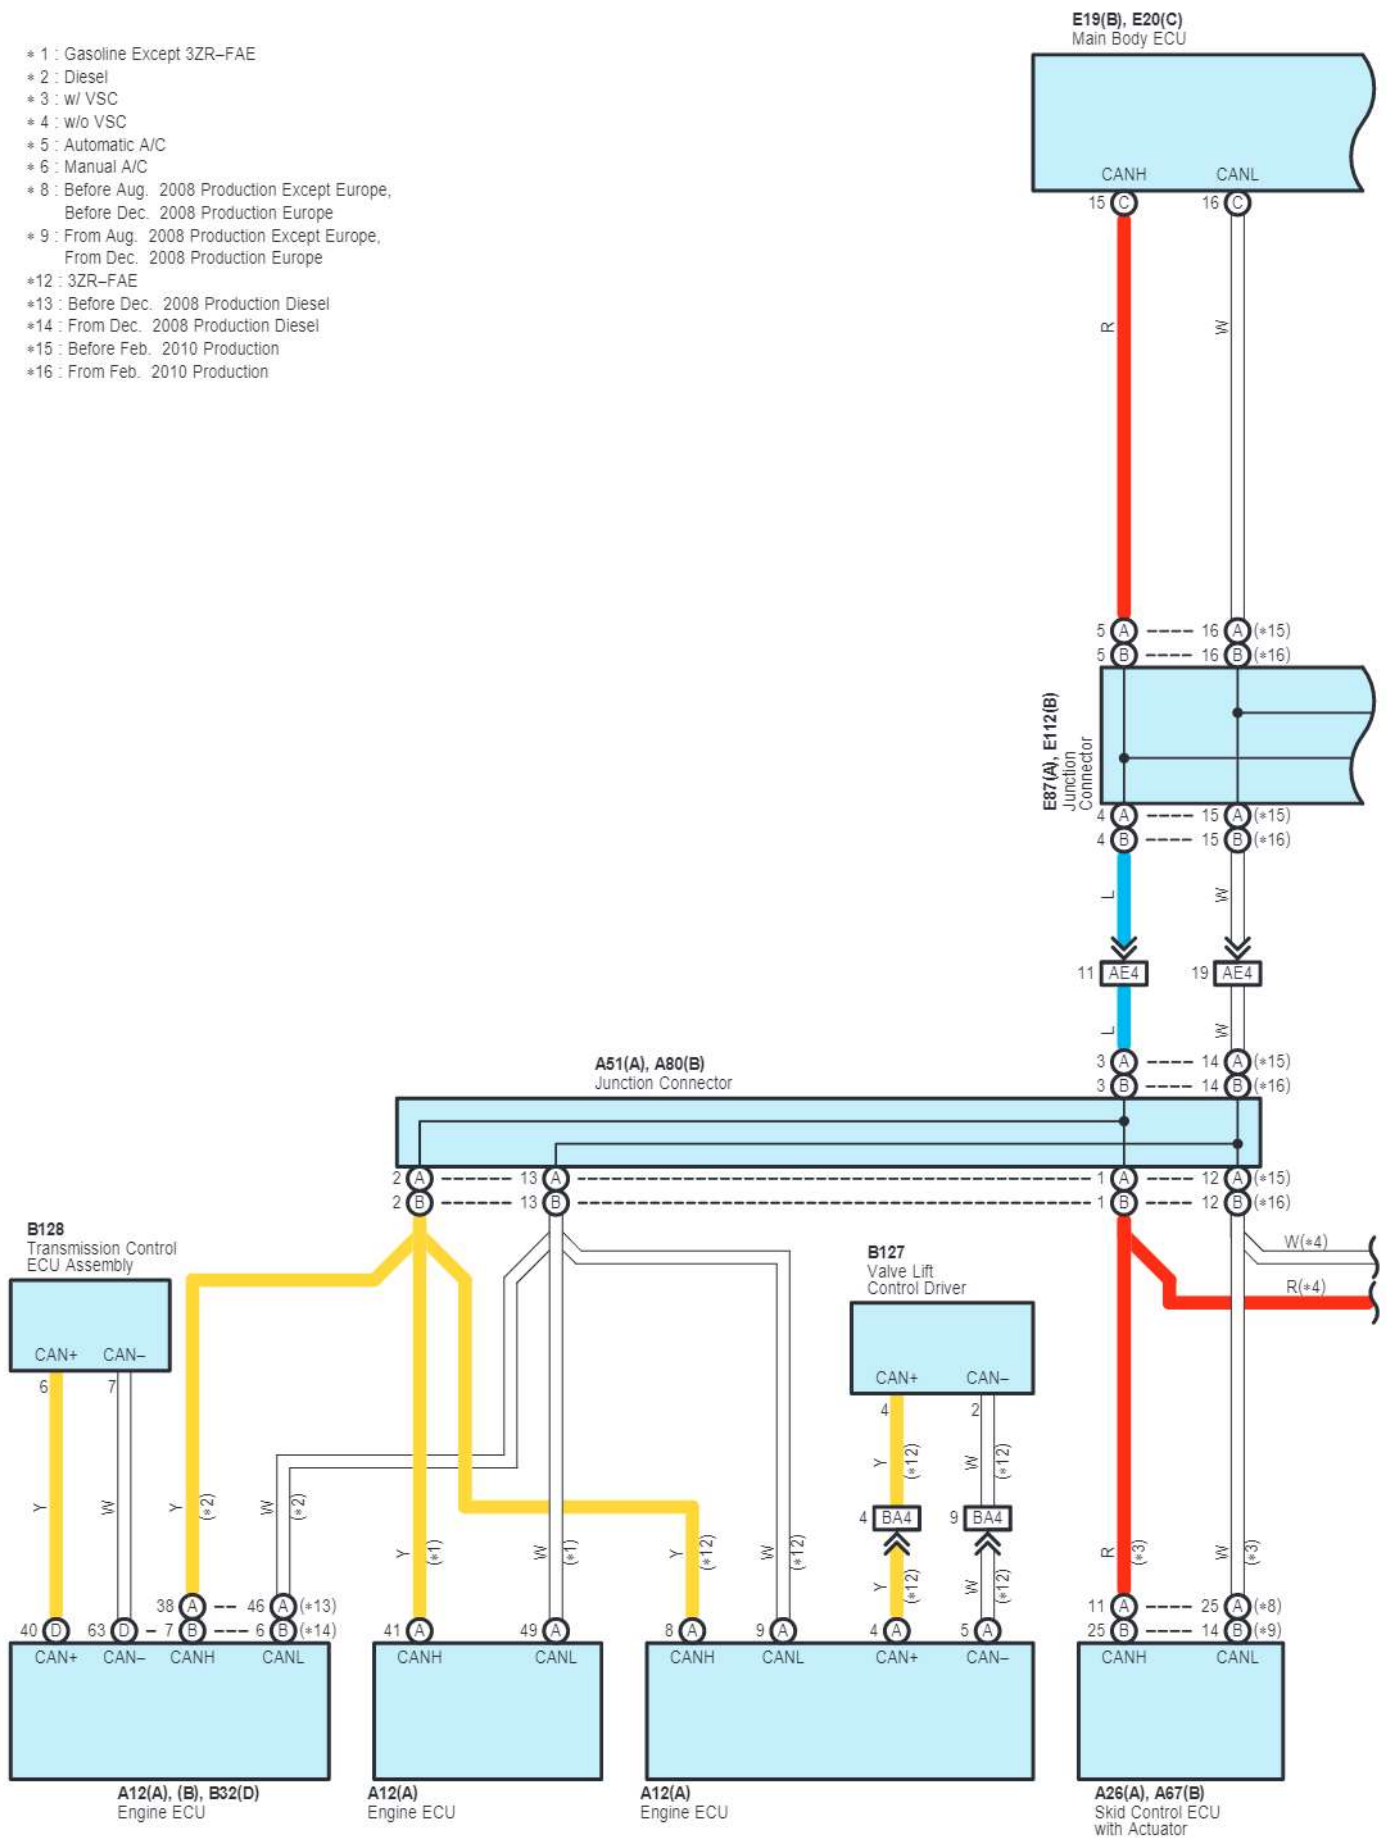 


E19(B), E20(C)
Main Body ECU



 
K6(A), K25(B)
Yaw Rate Sensor

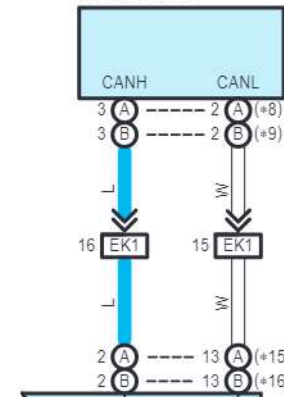

E21(B)
Power Steering ECU

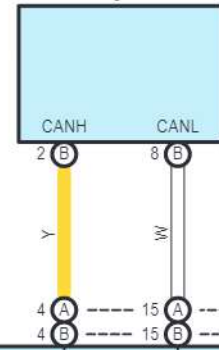 


E49(C)
Airbag Sensor
Assembly Center

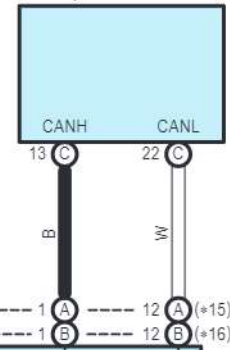 


E77(A), E115(B)
Junction
Connector



 
E87(A), E112(B)
Junction
Connector

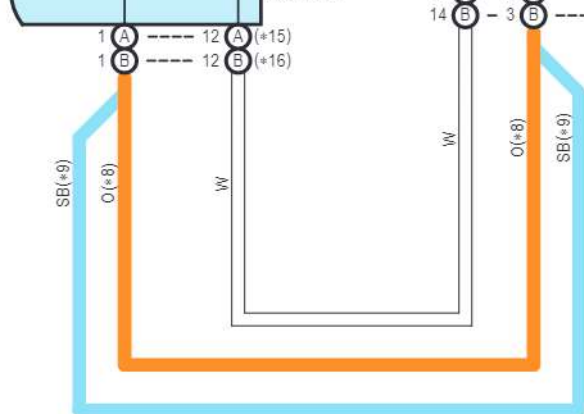

 
E88(A), E89(B),
E113(C), E114(D)
Junction
Connector




A27
Skid Control ECU
with Actuator

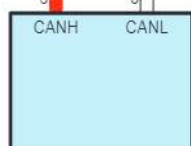 


E42(A)
A/C Amplifier

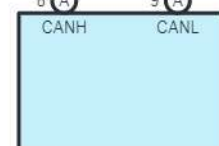 


E41(A)
A/C Amplifier

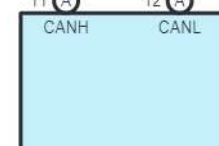 


E67
4WD Control ECU

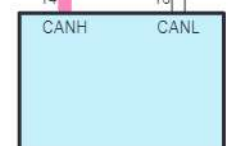 


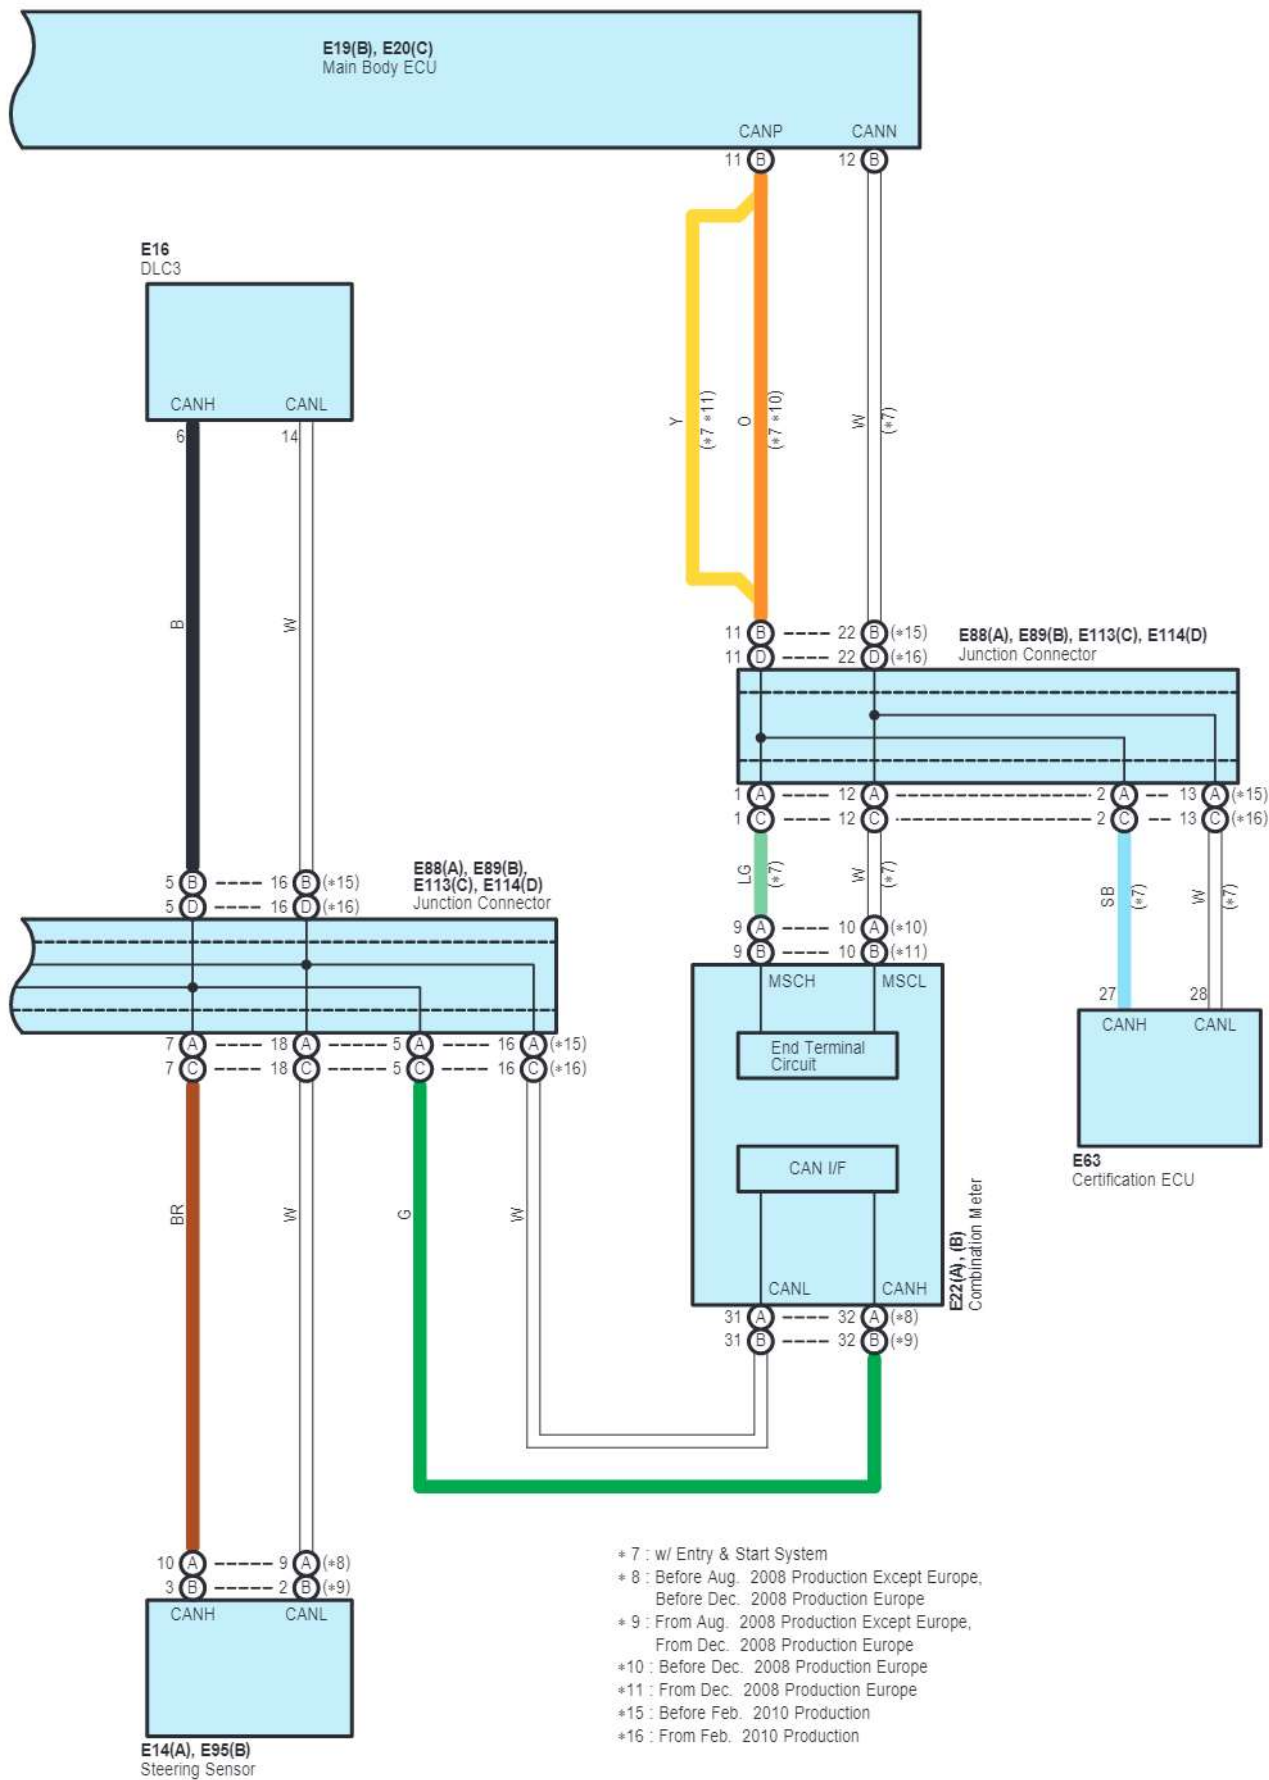 


A 12
Black

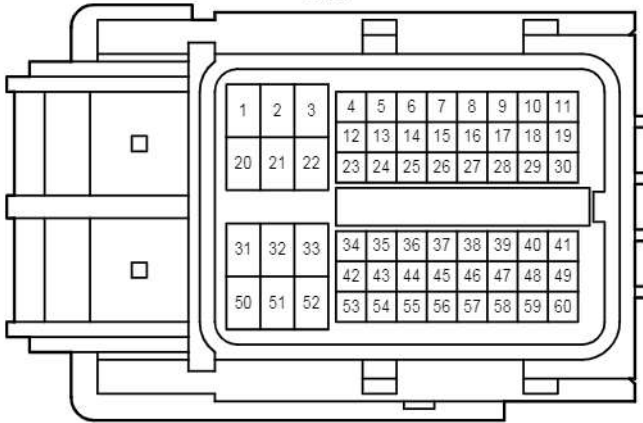 


A 26
Black

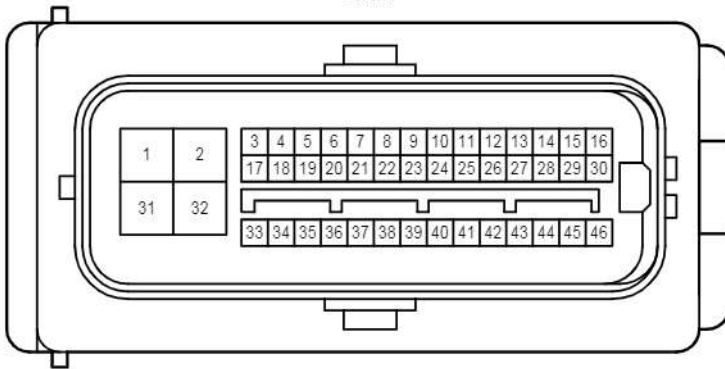 


A 27
Black

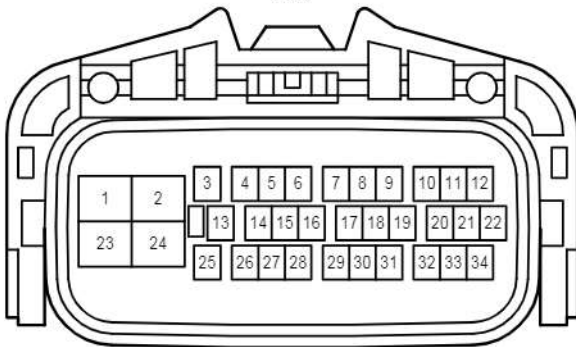 


A 51
Gray

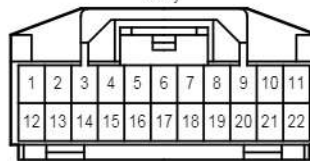 


A 67
Black

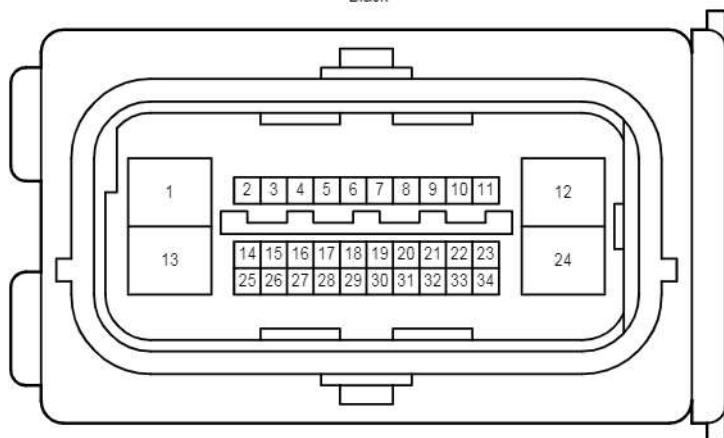 


A 80
Gray

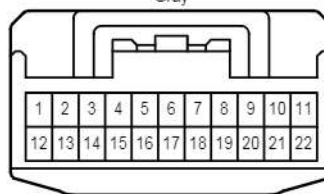 


B 32
Black

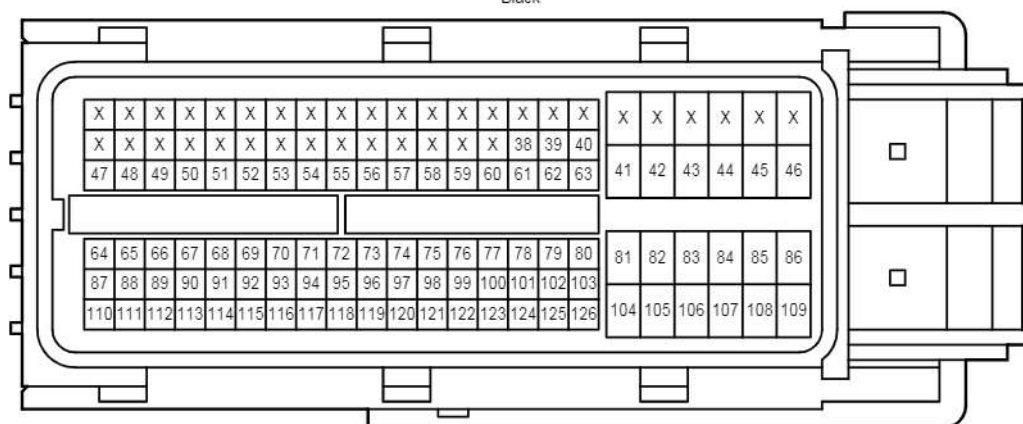 


B127
Gray

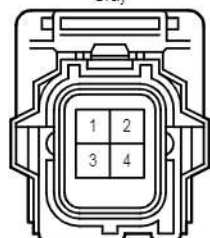 


B128
Gray

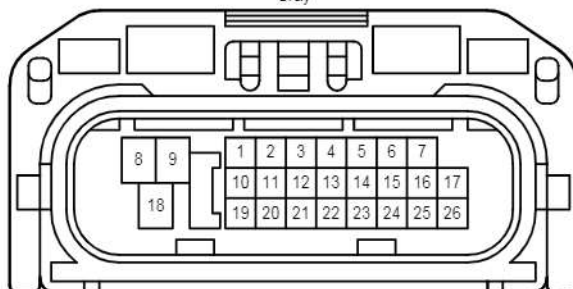 


E 14
Gray

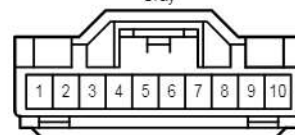 


E 16
White

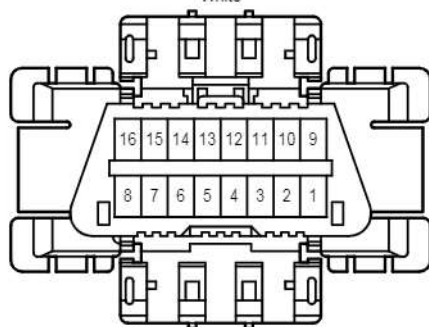 

E 19
White

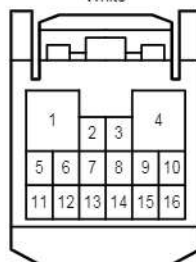 


E 20
White

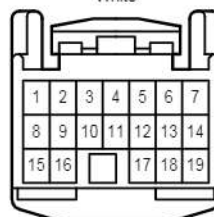 


E 21

 White

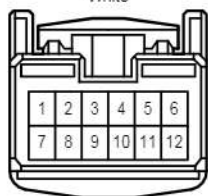


E 22

 White

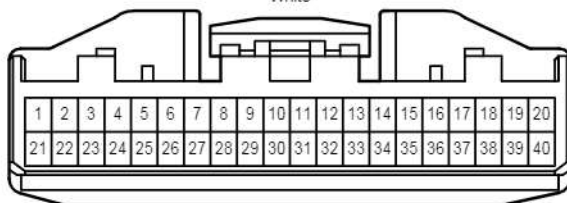


E 41

 White

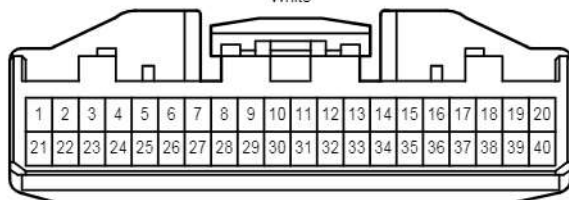


E 42

 
White

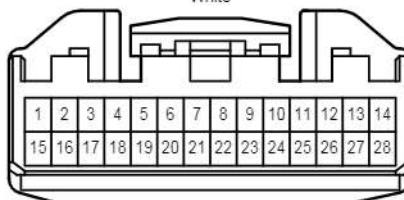


E 49
Yellow

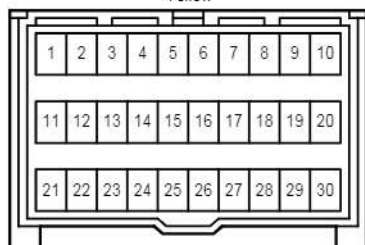 


E 63
White

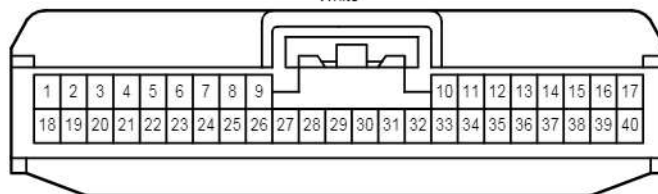 


E 67
White

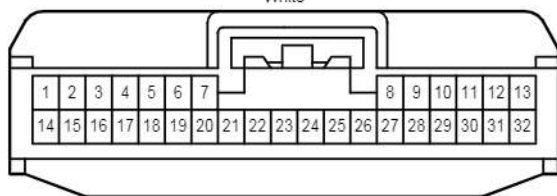 


E 77
Gray

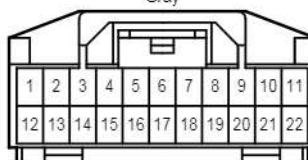 


E 87
Gray

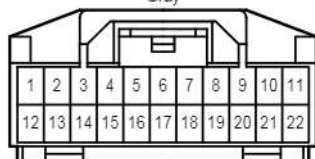 

E 88
Blue

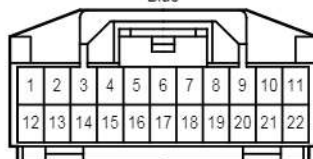 


E 89
Blue

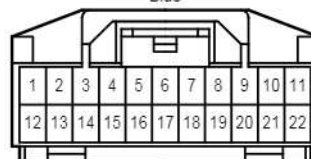 

E 95
White



 E112
Gray

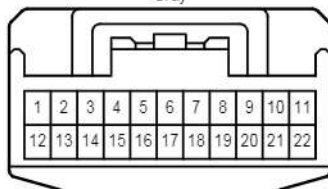

E113
Black

