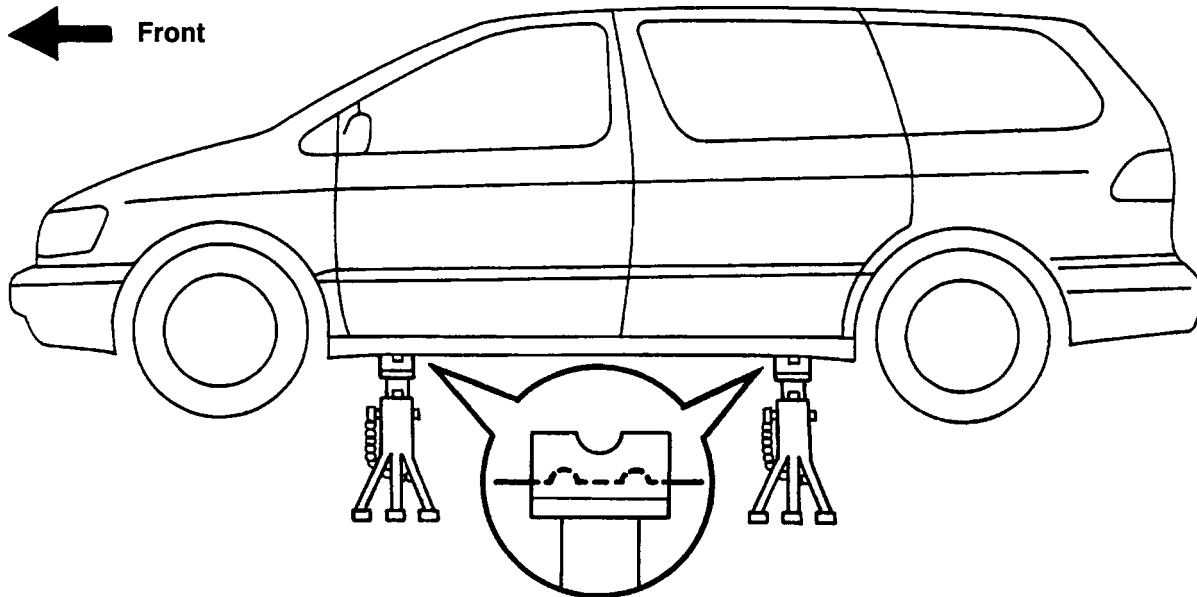
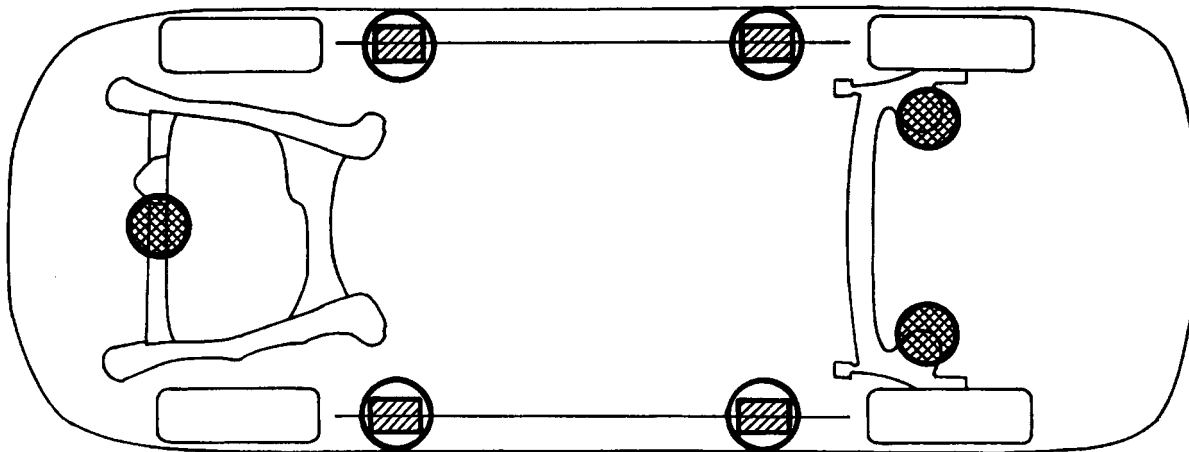


VEHICLE LIFT AND SUPPORT LOCATIONS**JACK POSITION**

Front - - - - - Front crossmember


Rear - - - - - Rear axle beam

CAUTION : When jacking-up the rear and front, make sure the car is not carrying any extra weight.**NOTICE :**

Do not jack up at the center of the rear axle beam. If the vehicle is lifted at the center of the rear axle beam, the rear axle beam will be damaged.

PANTOGRAPH JACK POSITION**SUPPORT POSITION**

Safety stand and swing arm type lift - - - - -

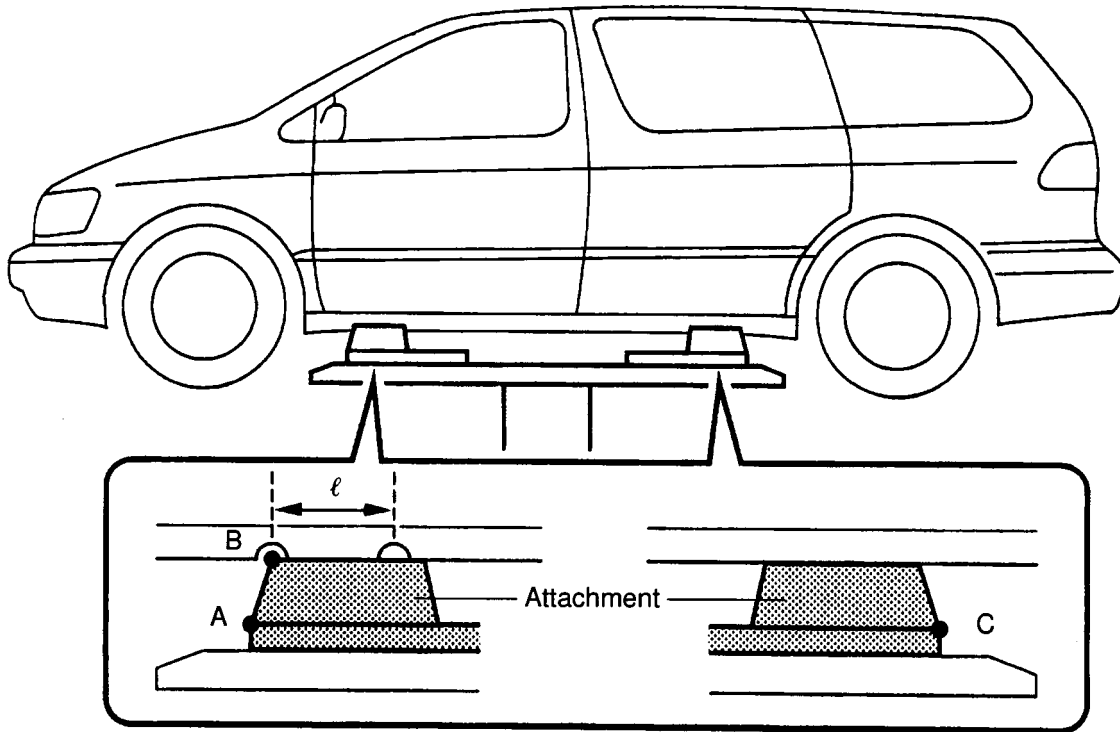PLATE TYPE LIFT**NOTICE :**

Set the rear side attachment so that it is behind the parting line between Front Door and Sliding Door.

HINT :

Left and right set position

Place the vehicle over the center of the lift.

Front and rear set position

- Align the cushion gum ends of the plate with the attachment lower ends (A, C).
- Align the attachment upper end (B) with the front jack supporting point (ℓ).

Attachment dimensions