

L PART NUMBER OF CONNECTORS

Code	Part Name	Part Number	Code	Part Name	Part Number
A 1	A/C Condenser Fan Motor	90980-10928	B16	Blower Motor Controller (Front)	90980-11676
A 2	A/C Magnetic Clutch and Lock Sensor	90980-10942	B17	Buckle SW LH	90980-10859
A 3	A/C Triple Pressure SW (A/C Dual and Single Pressure SW)	90980-10943	B18	Blower Resistor Transistor (Cooler)	90980-11136
A 5	ABS Actuator and ECU	90980-11851	B19	Blower Resistor Transistor (Heater)	90980-11136
A 6	ABS Speed Sensor Front LH	90980-11002	C 2	Crankshaft Position Sensor	90980-10947
A 7	ABS Speed Sensor Front RH		C 3	Cruise Control Actuator	90980-11150
A 8	A/C Amplifier	90980-10848	C 4	Center Airbag Sensor Assembly	90980-11869
A 9	A/C Amplifier	90980-10799	C 5	Center Airbag Sensor Assembly	90980-11872
A10	A/C SW	90980-11280	C 6	Center Airbag Sensor Assembly	90980-11867
A11	A/C Thermistor	90980-11918	C 7	Cigarette Lighter	90980-10760
A12	ACC Main Relay	82660-20340	C 8	Clock	90980-10789
A13	Airbag Squib (Front Passenger Airbag Assembly)	90980-11884	C 9	Combination Meter	90080-98048
A14	Airbag Squib (Steering Wheel Pad)	90980-10850	C10	Combination Meter	90080-98046
A15	Ashtray Illumination	-	C11	Combination Meter	90080-98047
A16	Automatic Light Control Sensor	90980-11107	C12	Combination SW	90980-11672
A17	ABS Speed Sensor Rear LH	90980-11003	C13	Combination SW	90980-11616
A18	ABS Speed Sensor Rear RH	90980-11075	C14	Combination SW	90980-11594
A19	Air Fuel Ratio Sensor (Bank 1 Sensor 1)	90980-10869	C15	Cruise Control ECU	90980-11391
A20	Air Fuel Ratio Sensor (Bank 2 Sensor 1)		C16	Camshaft Timing Oil Control Valve LH	90980-10947
A21	A/F Heater Relay	82602-50060	C17	Camshaft Timing Oil Control Valve RH	
A22	A/C Ambient Temp. Sensor	90980-11070	D 1	Data Link Connector 1	90980-11195
A23	A/C Control Assembly	90980-11911	D 3	Data Link Connector 3	90980-11665
A24	A/C Control Assembly	90980-11913	D 4	Daytime Running Light Relay (Main)	90980-12034
A25	A/C Control Assembly	90980-11915	D 6	Diode (Courtesy No.3)	90980-10962
A27	A/C Room Temp. Sensor	90980-11918	D 8	Diode (Daytime Running Light No.2)	
A28	A/C Solar Sensor		D 9	Diode (Dome No.1)	90980-11251
A30	Active Light Relay	90980-11533	D10	Diode (Dome No.2)	
A31	Air Inlet Control Servo Motor	90980-11909	D11	Diode (Dome No.3)	
A32	Air Mix Control Servo Motor (Front)		D12	Diode (Park/Neutral Position SW)	90980-11071
A33	Air Vent Mode Control Servo Motor	90980-11989	D13	Diode (Courtesy No.2)	90980-11251
A34	A/C Evaporator Temp. Sensor (Rear)	90980-11918	D14	Door Courtesy Light Front LH	90980-10121
B 1	Brake Fluid Level Warning SW	90980-11207	D15	Door Courtesy Light Front RH	
B 2	Back-Up Light Relay	82660-20340	D16	Door Courtesy SW Front LH	90980-10871
B 3	Blower Motor	90980-10903	D17	Door Courtesy SW Front RH	
B 4	Blower Resistor	90980-10976	D18	Door Key Lock and Unlock SW Front LH	90980-11169
B 5	Blower SW	90980-10877	D19	Door Key Lock and Unlock SW Front RH	
B 6	Back Door Courtesy SW	90980-11369	D20	Door Lock Control SW Front RH	90980-10797
B 7	Back Door Key Lock and Unlock SW	90980-11471	D21	Door Lock Motor and Unlock Detection SW Front LH	90980-11150
B 8	Back Door Lock Motor	90980-11019	D22	Door Lock Motor and Unlock Detection SW Front RH	
B 9	Back Door Lock Motor and Unlock Detection SW	90980-11150	D23	Diode (A/C Magnetic Clutch)	90980-10962
B11	Blower Motor (Rear Cooling)	90980-10214	D24	Diode (Dome No.4)	90980-11251
B12	Blower Motor (Rear Heater)	90980-10916	D25	Diode (Dome No.5)	
B14	Blower Resistor (Rear Cooling)	90980-11136	D26	Diode (Buckle SW)	90980-10962
B15	Blower Resistor (Rear Heater)	90980-10171	E 1	Electronically Controlled Transmission Solenoid	90980-11658

Note: Not all of the above part numbers of the connector are established for the supply.

Code	Part Name	Part Number	Code	Part Name	Part Number
E 2	Engine Coolant Temp. Sensor	90980-10737	I13	Integration Relay (w/o Door Lock)	90980-11165
E 3	Engine Hood Courtesy SW	90980-11189		Integration Relay (w/ Door Lock)	90980-11877
E 8	Engine Control Module	90980-11638	I14	Interior Light No.1 (CE Grade)	90980-10121
E 9	Engine Control Module	90980-11637		Interior Light No.1 (LE Grade)	90980-10365
E10	Engine Control Module	90980-11586	I15	Interior Light No.2	90980-10121
E11	Engine Control Module	90980-11476	I16	Integration Relay	90980-11497
E12	Engine Control Module	90980-11421	I17	Ignition Key Cylinder Light	90980-10825
F 1	Front Airbag Sensor LH	90980-11898	I18	Ignition Coil and Igniter No.1	90980-11885
F 2	Front Airbag Sensor RH		I19	Ignition Coil and Igniter No.2	
F 3	Front Turn Signal Light and Parking Light LH	90980-11020	I20	Ignition Coil and Igniter No.3	
F 4	Front Turn Signal Light and Parking Light RH		I21	Ignition Coil and Igniter No.4	
F 5	Front Washer Motor	90980-10981	I22	Ignition Coil and Igniter No.5	
F 6	Front Wiper Motor	90980-11024	I23	Ignition Coil and Igniter No.6	
F 8	Fusible Link Block	82620-45010	I24	Inner Mirror	90980-11794
F 9	Fusible Link Block	90980-11775	J 1	Junction Connector	90980-10891
F10	Front Tweeter Speaker LH	90980-10935	J 2	Junction Connector	90980-11661
F11	Front Tweeter Speaker RH		J 3	Junction Connector	
F12	Front Door Speaker LH	90980-10825	J 4	Junction Connector	90980-11502
F13	Front Door Speaker RH		J 5	Junction Connector	
F14	Fuel Pump and Sender	90980-11077	J 6	Junction Connector	
F15	Front Fog Light LH	90980-11096	J 7	Junction Connector	
F16	Front Fog Light RH		J 8	Junction Connector	
F17	Fog Light Relay	82660-20340	J 9	Junction Connector	
F18	Fuel Lid Courtesy SW	90980-11189	J11	Junction Connector	90980-11542
G 1	Generator	90980-11349	J12	Junction Connector	
G 2	Generator	90980-09372	J13	Junction Connector	
G 3	Glass Antenna Amplifier	90980-10871	J14	Junction Connector	
G 4	Garage Door Opener	90980-10799	J15	Junction Connector	90980-11661
H 1	Headlight LH	90980-11314	J16	Junction Connector	90980-11502
H 2	Headlight RH		J17	Junction Connector	
H 5	Horn (High)	90980-10619	J18	Junction Connector	90980-11542
H 6	Horn (Low)		J20	Junction Connector	
H 7	Hazard SW	90980-10801	J21	Junction Connector	90980-10976
H 8	Heater Blower SW (Front)	90980-11527	J22	Junction Connector	90980-11542
H 9	Heated Oxygen Sensor (Bank 1 Sensor 2)	90980-11028	J23	Junction Connector	90980-11166
H10	Heater Blower SW (Rear)	90980-10877	K 1	Knock Sensor 1	
H11	High Mounted Stop Light	90980-11148	K 2	Knock Sensor 2	90980-11142
I 1	Idle Air Control Valve	90980-11145	K 3	Keyless Buzzer	90980-10859
I 6	Injector No.1	90980-11153	L 1	License Plate Light	90980-10935
I 7	Injector No.2		L 2	Luggage Compartment Light	90980-11317
I 8	Injector No.3		M 1	Mass Air Flow Meter	90980-10799
I 9	Injector No.4		M 2	Moon Roof Control SW and Relay	90980-11011
I10	Injector No.5		M 3	Moon Roof Motor and Limit SW	90080-98200
I11	Injector No.6		M 4	Master Cylinder Pressure Sensor	90980-10843
I12	Ignition SW	90980-11615	N 1	Noise Filter (Ignition)	90980-11363
			O 1	Oil Pressure SW	

L PART NUMBER OF CONNECTORS

Code	Part Name	Part Number	Code	Part Name	Part Number
O 2	O/D Main SW	90980-11471	R20	Remote Control Mirror RH (w/o Mirror Heater)	90980-11470
O 3	O/D Direct Clutch Speed Sensor	90980-11158		Remote Control Mirror RH (w/ Mirror Heater)	90980-11487
P 1	Park/Neutral Position SW, A/T Indicator Light SW and Back-Up Light SW	90980-11332	R22	Radio and Player	90980-10803
P 2	Power Steering Oil Pressure SW	90980-11428	R25	Rear Window Defogger SW and Air Inlet Control SW	90980-11923
P 3	Parking Brake SW	90980-10871	R26	Rear A/C SW	90980-11911
P 4	Power Outlet (Front)	90980-10860	R28	Rear Heater Intake Air Temp. Sensor	90980-11369
P 5	Power Quarter Window SW	90980-10801	S 1	Starter	90980-11400
P 6	Personal Light	90980-10908	S 2	Starter	90980-09689
P 7	Power Outlet (Rear)	90980-10760	S 3	Stereo Component Amplifier	90980-10848
P 8	Power Vent Window Motor LH	90980-10825	S 4	Stereo Component Amplifier	90980-11923
P 9	Power Vent Window Motor RH		S 6	Stop Light SW	90980-11118
P10	Power Window Control SW Front RH	90980-10789	S 7	Servo Motor	90980-11319
P11	Power Window Master SW	90980-12122	S 8	Slide Door Courtesy Light LH	90980-10121
P12	Power Window Motor Front LH	90980-11529	S 9	Slide Door Courtesy Light RH	
P13	Power Window Motor Front RH	90980-10860	S10	Slide Door Courtesy SW LH	90980-10871
P14	Pretensioner LH	90980-11862	S11	Slide Door Courtesy SW RH	
P15	Pretensioner RH		S12	Slide Door Junction Connector LH (w/o Power Slide Door)	90980-10794
P16	Power Seat Motor	90980-11001		Slide Door Junction Connector LH (w/ Power Slide Door)	90980-11534
P17	Power Seat SW	90980-10803	S13	Slide Door Junction Connector LH (w/ Theft Deterrent System)	90980-11150
P19	Power Slide Door Main SW	90980-10789		Slide Door Junction Connector LH (w/o Theft Deterrent System)	90980-11019
P21	Power Slide Door LH Control SW (Front)	90980-10797	S14	Slide Door Junction Connector RH (w/o Power Slide Door)	90980-10794
P22	Power Slide Door RH Control SW (Front)	90980-10799		Slide Door Junction Connector RH (w/ Power Slide Door)	90980-11534
P23	Power Slide Door LH Control SW (Rear)	90980-11909	S15	Slide Door Junction Connector RH (w/ Theft Deterrent System)	90980-11150
P24	Power Slide Door RH Control SW (Rear)			Slide Door Junction Connector RH (w/o Theft Deterrent System)	90980-11019
R 1	Radiator Fan Motor	90980-10928	S16	Seat Belt Warning Occupant Detection Sensor	90980-11529
R 2	Rear Washer Motor	90980-10981	S19	Slide Door Junction Connector RH	90980-11019
R 3	Radio and Player (4-Speaker)	90980-10996	S20	Slide Door Junction Connector RH	90980-11466
	Radio and Player (8-Speaker)	90980-12038	S21	Seat Heater Relay	82660-20340
R 4	Radio and Player	90980-10997	S22	Seat Heater SW (Driver's Seat)	90980-10797
R 6	Remote Control Mirror SW	90980-11657	S23	Seat Heater SW (Front Passenger's Seat)	90980-10996
R 7	Rheostat	90980-10908	S24	Steering Sensor	90080-98241
R 8	Rear Combination Light LH	90980-11399	S25	Side Airbag Sensor LH	90980-11857
R 9	Rear Combination Light LH	90980-11085	S26	Side Airbag Sensor RH	
R10	Rear Combination Light RH		S27	Side Airbag Squib LH	90980-11864
R11	Rear Combination Light RH	90980-11399	S28	Side Airbag Squib RH	
R12	Rear HI Relay	90980-10713	S29	Slide Door LH ECU	90080-98187
R13	Rear Speaker LH	90980-10860	S30	Slide Door LH ECU	90080-98185
R14	Rear Speaker RH				
R15	Rear Window Defogger	-			
R16	Rear Window Defogger				
R17	Rear Wiper Motor	90980-10504			
R18	Rear Wiper Relay	90980-10797			
R19	Remote Control Mirror LH (w/o Mirror Heater)	90980-11470			
	Remote Control Mirror LH (w/ Mirror Heater)	90980-11487			

Note: Not all of the above part numbers of the connector are established for the supply.

Code	Part Name	Part Number	Code	Part Name	Part Number
S31	Slide Door RH ECU	90080-98187	V 3	VSV (Intake Air Control)	90980-11149
S32	Slide Door RH ECU	90080-98185	V 4	VSV (Pressure Switching Valve)	90980-11156
S33	Slide Door Junction Connector LH	90980-11019	V 5	Vanity Light LH	90980-11369
S34	Slide Door Junction Connector LH	90980-11466	V 6	Vanity Light RH	
S35	Seat Heater (Driver's Seat)	90980-10907	V 7	Volume SW	90980-10797
T 1	Theft Deterrent Horn	90980-10619	V 8	VSC Actuator	90080-98222
T 2	Throttle Position Sensor	90980-11261	V 9	VSV (Canister Closed Valve)	90980-11162
T 3	Theft Deterrent ECU	90980-11392	V10	VSV (Intake Air Control No.2)	90980-11149
T 4	Theft Deterrent ECU	90980-11424	V11	VVT Solenoid LH	90980-11162
T 5	Theft Deterrent Indicator Light	90980-11490	V12	VVT Solenoid RH	
T 6	Tire Pressure Warning Standardization SW	90980-10906	V13	VSC Buzzer	90980-10906
T 7	Turn Signal Flasher	82751-50010	V14	VSC ECU	90980-11906
T 8	Transponder Key Amplifier	90980-10789	W 1	Washer Level Warning SW	90980-11068
T 9	TRAC OFF SW	90980-10906	W 2	Water Temp. Sender	90980-11428
T10	Translate ECU	90980-11390	W 3	Water Temp. SW No.1	90980-11235
U 1	Unlock Warning SW	90980-10860	W 4	Water Temp. SW No.2	90980-11243
V 1	Vapor Pressure Sensor	90980-11143	W 5	Wireless Door Lock ECU	90980-11165
V 2	VSV (EVAP)	90980-11156	Y 1	Yaw Rate Sensor	90080-98199