


POWER SOURCE

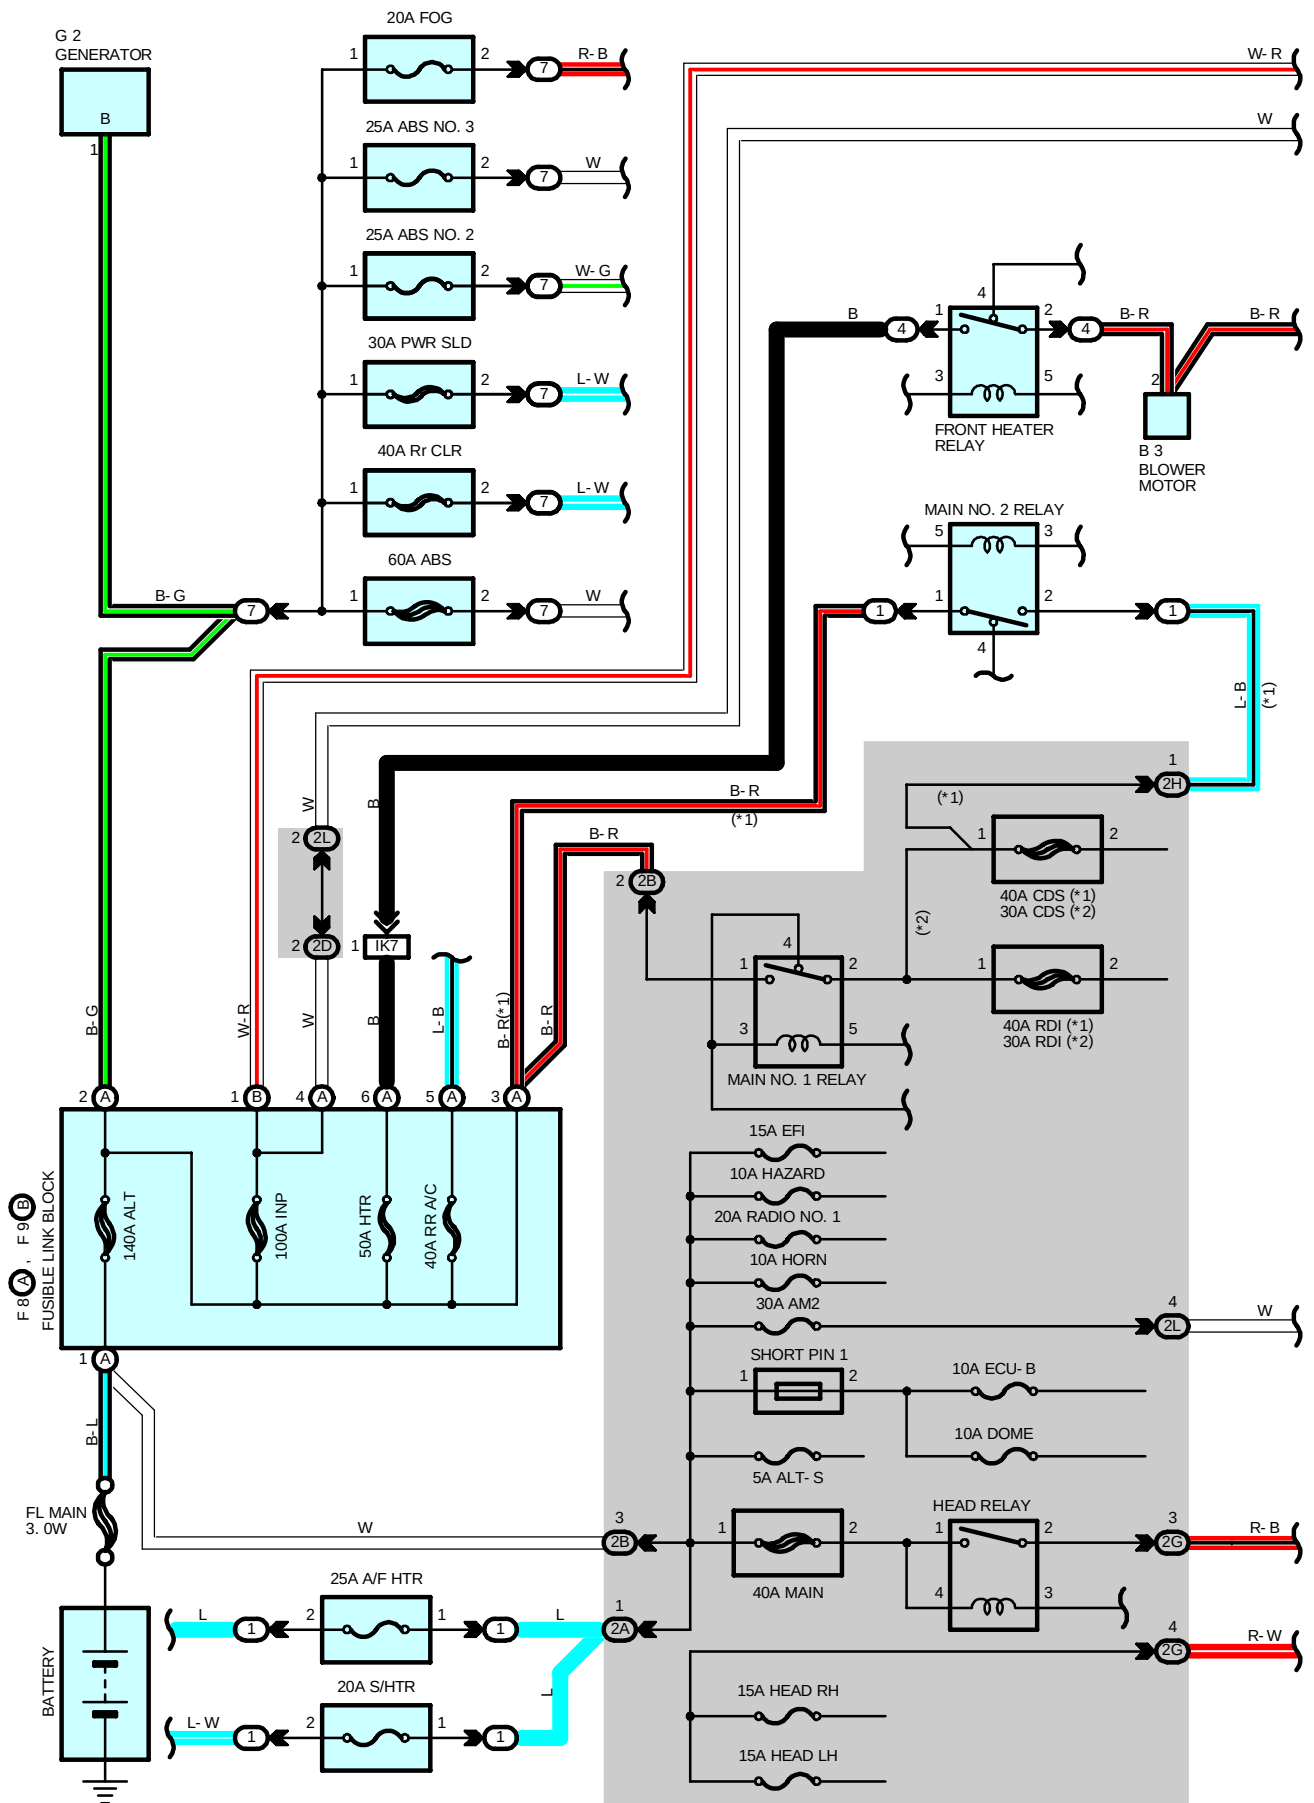

POWER SOURCE

SERVICE HINTS

HEAD RELAY

- 2-1 : Closed with the light control SW at **HEAD** position or the dimmer SW at **FLASH** position
 Closed with the engine running and the parking brake pedal released (Parking brake SW off)

TAILLIGHT RELAY

- 5-3 : Closed with the light control SW at **TAIL** or **HEAD** position

I12 IGNITION SW

- 2-3 : Closed with the ignition key at **ACC** or **ON** position
 2-4 : Closed with the ignition key at **ON** or **ST** position
 7-6 : Closed with the ignition key at **ON** or **ST** position
 7-8 : Closed with the ignition key at **ST** position

: PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
B3	34	F9	B	I12	35
F8	A	G2	32	J1	33

: RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
1	28	Engine Room R/B No.1 (Engine Compartment Left)
4	29	Passenger Side R/B No.4 (Front Side the Blower Motor)
5	29	Driver Side R/B No.5 (Lower Finish Panel)
7	29	R/B No.7 (Engine Compartment Left)

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1B	22	Cowl Wire and Driver Side J/B No.1 (Lower Finish Panel)
1K		
2A	24	Engine Room Main Wire and Engine Room J/B No.2 (Engine Compartment Left)
2B		
2D		
2G		
2H		
2L	24	Cowl Wire and Engine Room J/B No.2 (Engine Compartment Left)

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IK7	44	Engine Room Main Wire and Cowl Wire (Right Cowl Side Panel)

: SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I4	44	Cowl Wire			

