


STARTING AND IGNITION

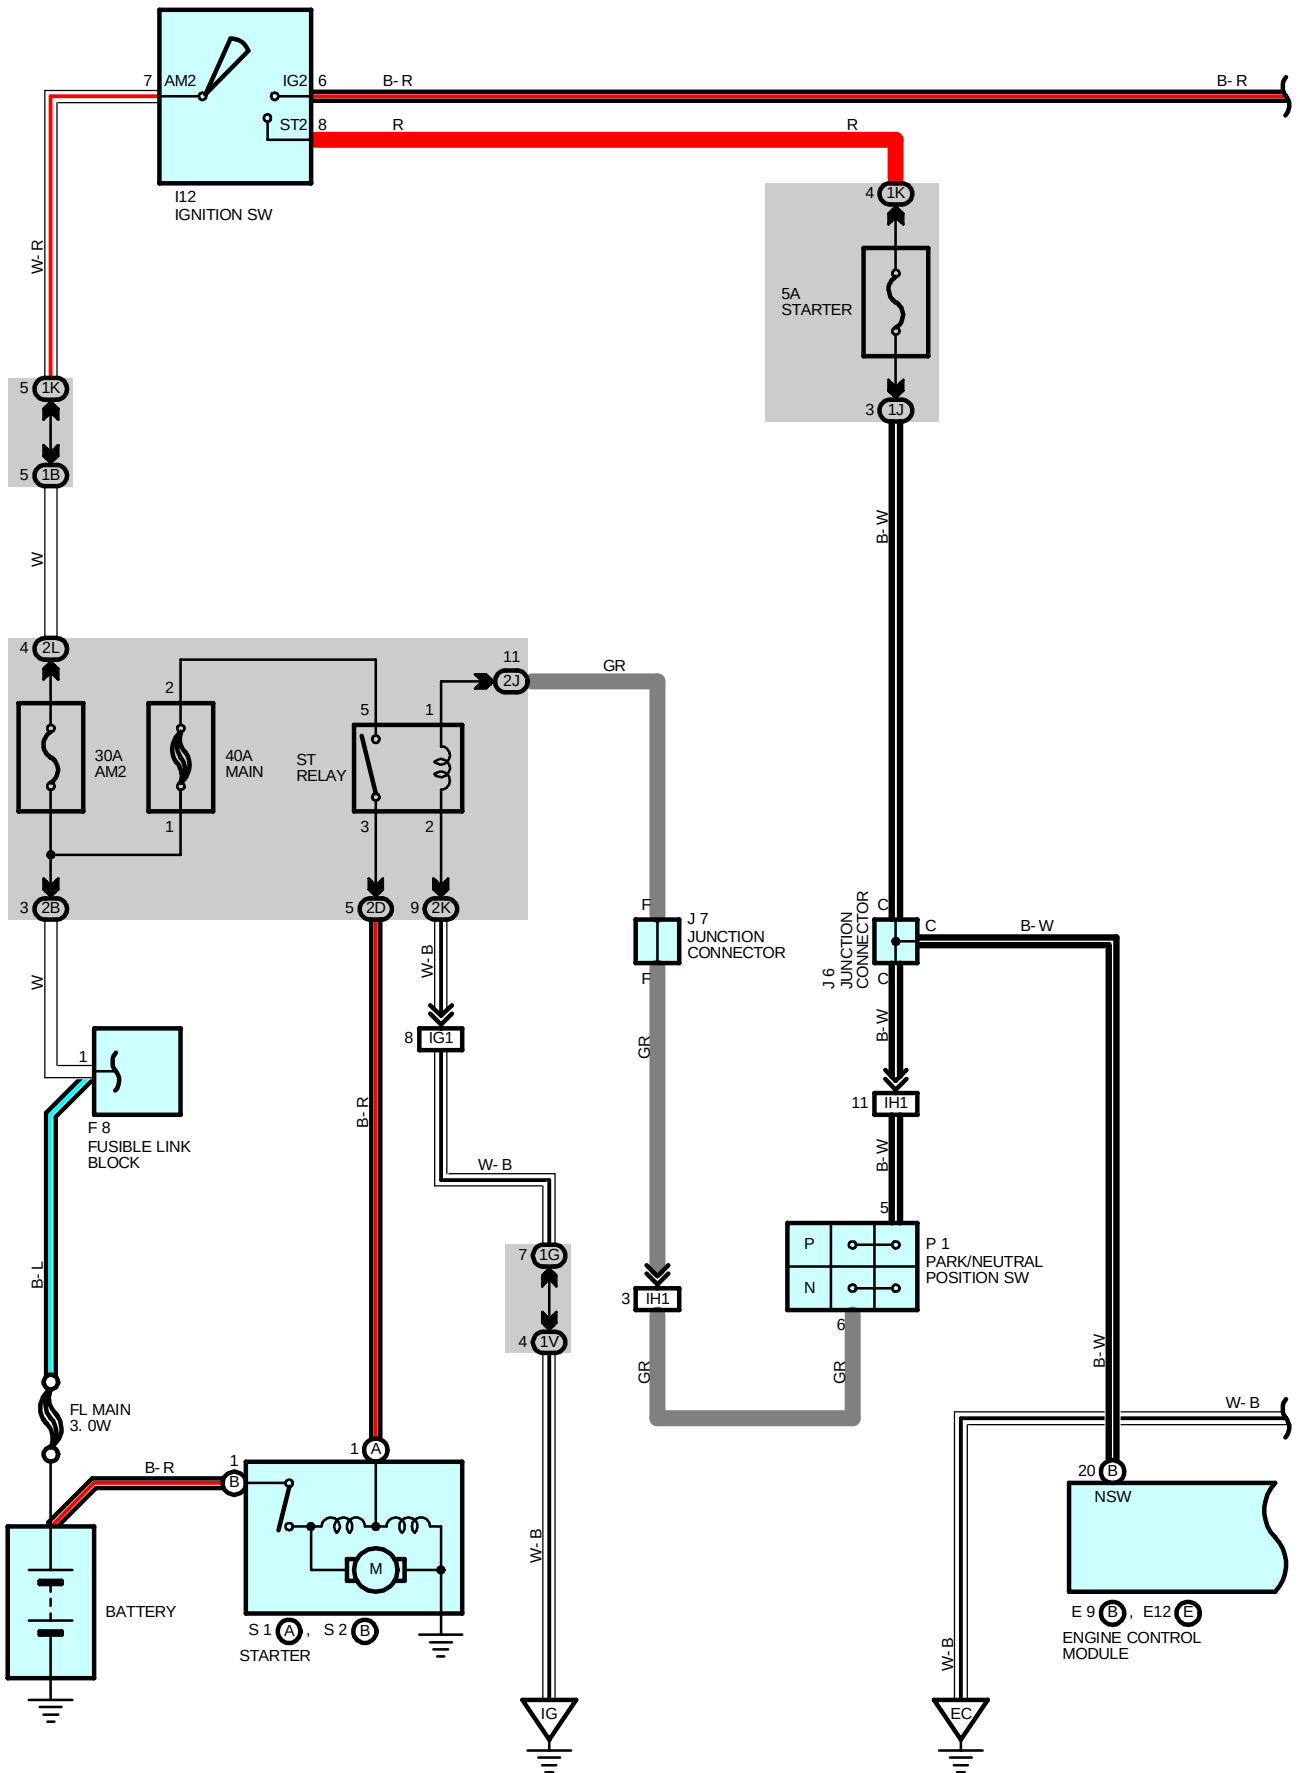

STARTING AND IGNITION

SERVICE HINTS

I12 IGNITION SW

7-6 : Closed with the ignition SW at **ON** or **ST** position

7-8 : Closed with the ignition SW at **ST** position

P1 PARK/NEUTRAL POSITION SW

5-6 : Closed with the A/T shift lever in **P** or **N** position

S1 (A), S2 (B) STARTER

Points closed with the Park/Neutral position SW at **P** or **N** position and the ignition SW at **ST** position

: PARTS LOCATION

Code		See Page	Code	See Page	Code	See Page	
E9	B	34	I20	33	J13	35	
E12	E	34	I21	33	N1	33	
F8		32	I22	33	P1	33	
I12		35	I23	33	S1	A	33
I18		33	J6	35	S2	B	33
I19		33	J7	35			

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1B	22	Cowl Wire and Driver Side J/B No.1 (Lower Finish Panel)
1C		
1G	22	Instrument Panel Wire and Driver Side J/B No.1 (Lower Finish Panel)
1J	22	Cowl Wire and Driver Side J/B No.1 (Lower Finish Panel)
1K		
1V		
2B	24	Engine Room Main Wire and Engine Room J/B No.2 (Engine Compartment Left)
2D		
2J	24	Cowl Wire and Engine Room J/B No.2 (Engine Compartment Left)
2K		
2L		

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IG1	42	Instrument Panel Wire and Cowl Wire (Behind the Combination Meter)
IH1	44	Engine Wire and Cowl Wire (Front Side of the Blower Motor)

: GROUND POINTS

Code	See Page	Ground Points Location
EC	40	Rear Side of the Surge Tank
IG	42	Left Cowl Side Panel

: SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E5	40	Engine Wire			

