


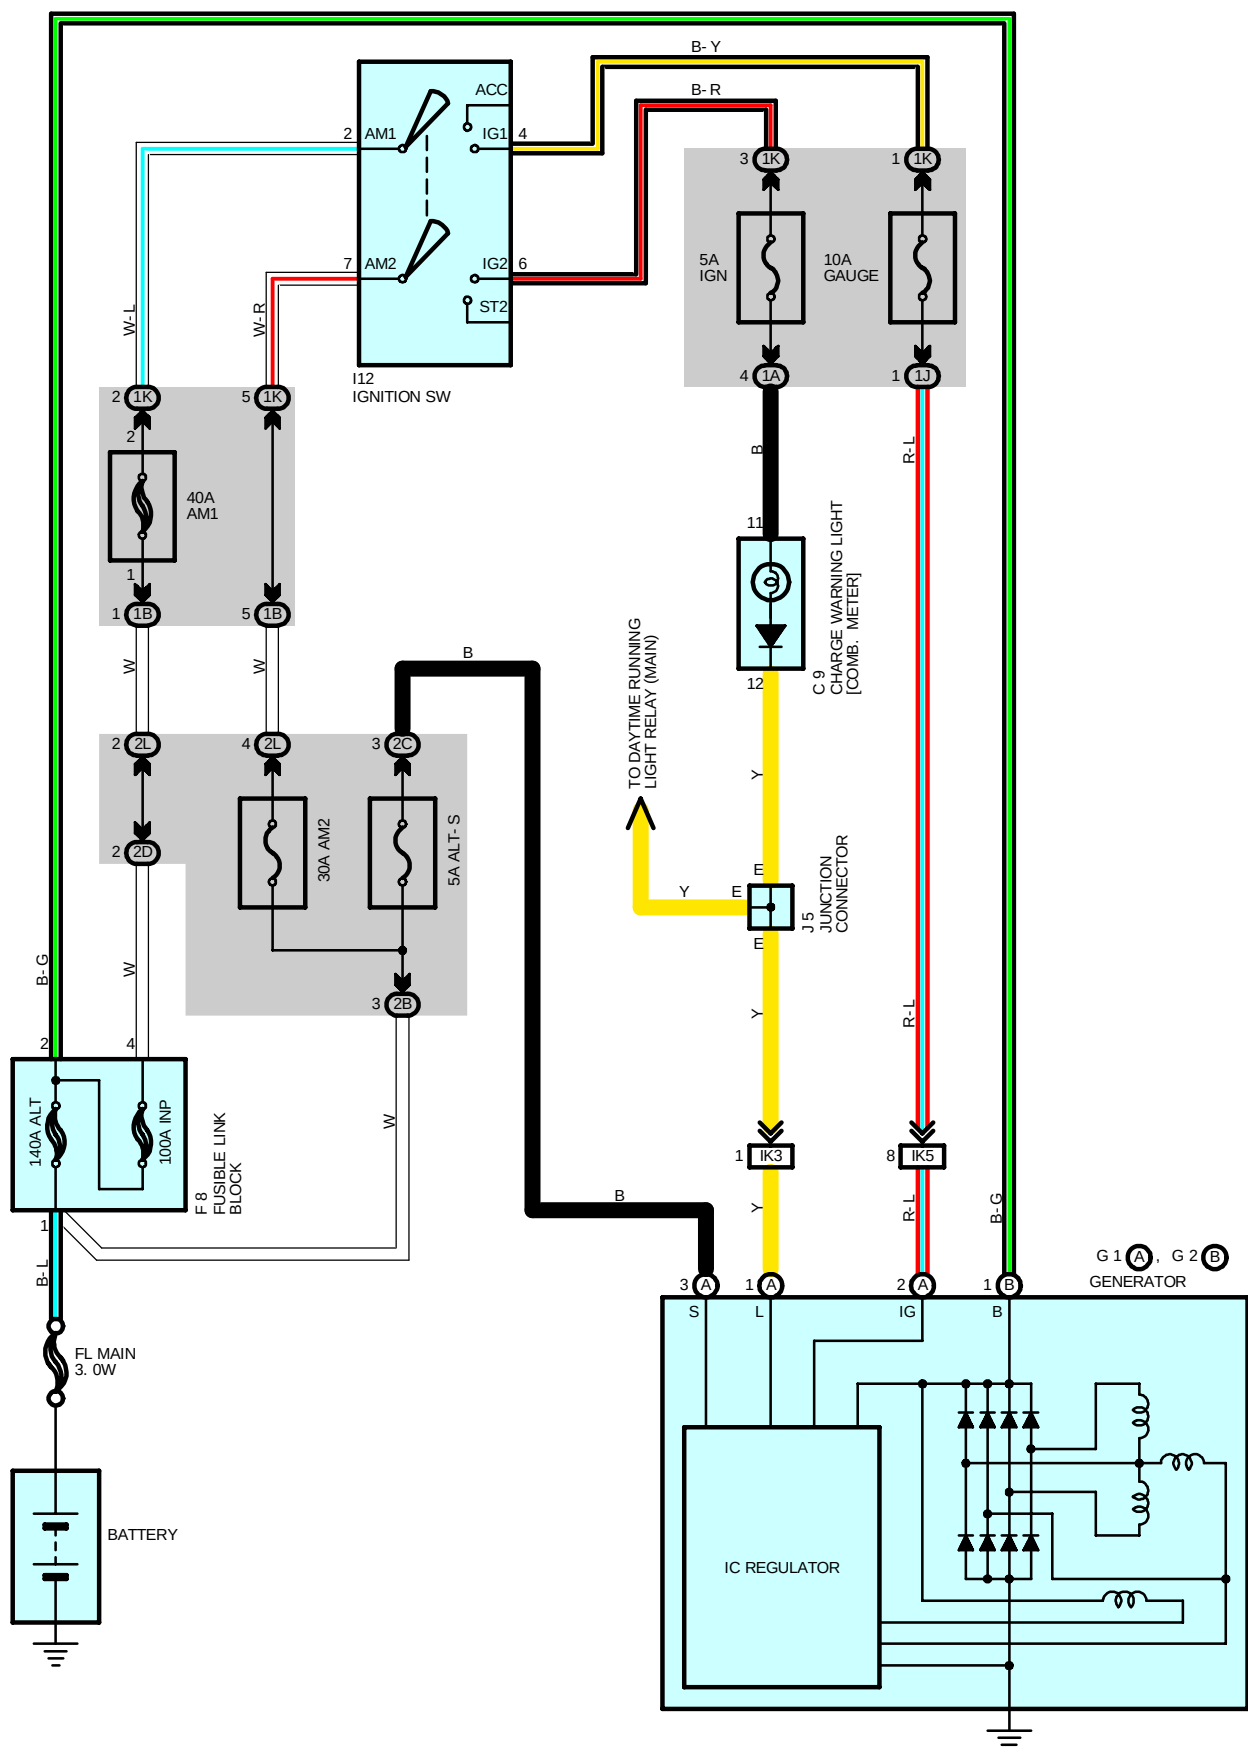

SERVICE HINTS

G1 (A) GENERATOR

(A) 3-GROUND : **13.8- 14.7** volts with the engine running at **2000** rpm and **25°C (77°F)**
13.2- 14.0 volts with the engine running at **5000** rpm and **115°C (239°F)**

: PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
C9	34	G1	A	I12	35
F8	32	G2	B	J5	35

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	22	Cowl Wire and Driver Side J/B No.1 (Lower Finish Panel)
1B		
1J		
1K		
2B	24	Engine Room Main Wire and Engine Room J/B No.2 (Engine Compartment Left)
2C		
2D		
2L	24	Cowl Wire and Engine Room J/B No.2 (Engine Compartment Left)

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IK3	44	Engine Room Main Wire and Cowl Wire (Right Cowl Side Panel)
IK5		