


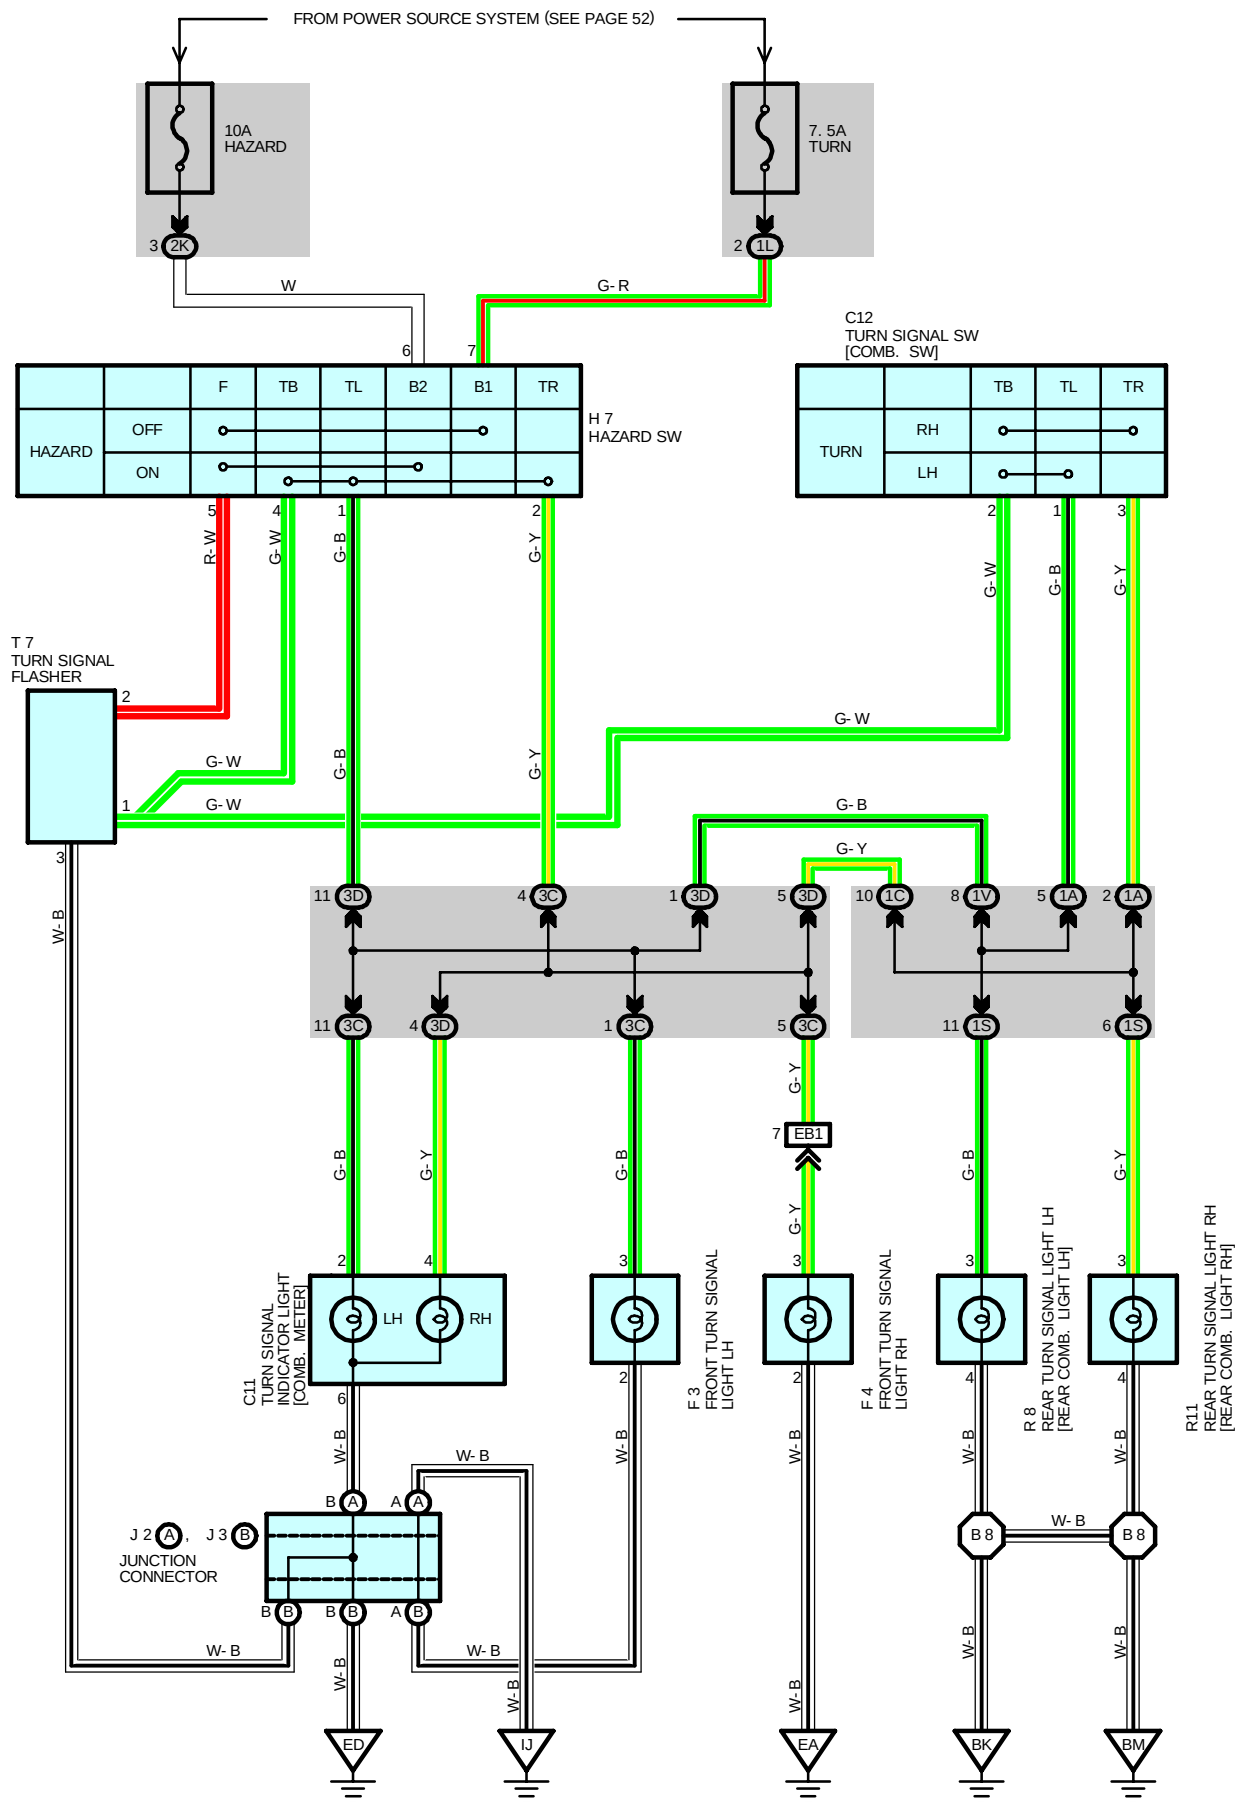

SERVICE HINTS

T7 TURN SIGNAL FLASHER

- 2-GROUND : Approx. **12** volts with the ignition SW on or the hazard SW on
 1-GROUND : Changes from **12** to **0** volts with the ignition SW on and the turn signal SW at **LH** or **RH** position,
 or with the hazard SW on
 3-GROUND : Always continuity

: PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
C11	34	H7	34	R11	37
C12	34	J2	A 35	T7	35
F3	32	J3	B 35		
F4	32	R8	37		

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	22	Cowl Wire and Driver Side J/B No.1 (Lower Finish Panel)
1C		
1L		
1S	22	Floor Wire and Driver Side J/B No.1 (Lower Finish Panel)
1V	22	Cowl Wire and Driver Side J/B No.1 (Lower Finish Panel)
2K	24	Cowl Wire and Engine Room J/B No.2 (Engine Compartment Left)
3C	26	Cowl Wire and J/B No.3 (Behind the Combination Meter)
3D		

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EB1	40	Cowl Wire and Engine Room Main Wire (Inside the Lower Cover of Engine Room J/B No.2)

: GROUND POINTS

Code	See Page	Ground Points Location
EA	40	Front Side of the Right Fender Apron
ED	40	Near the Left Front Suspension Support
IJ	42	Right Cowl Side Panel
BK	46	Under the Left Center Pillar
BM	46	Left Rear Quarter Panel

: SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
B8	46	Floor Wire			