


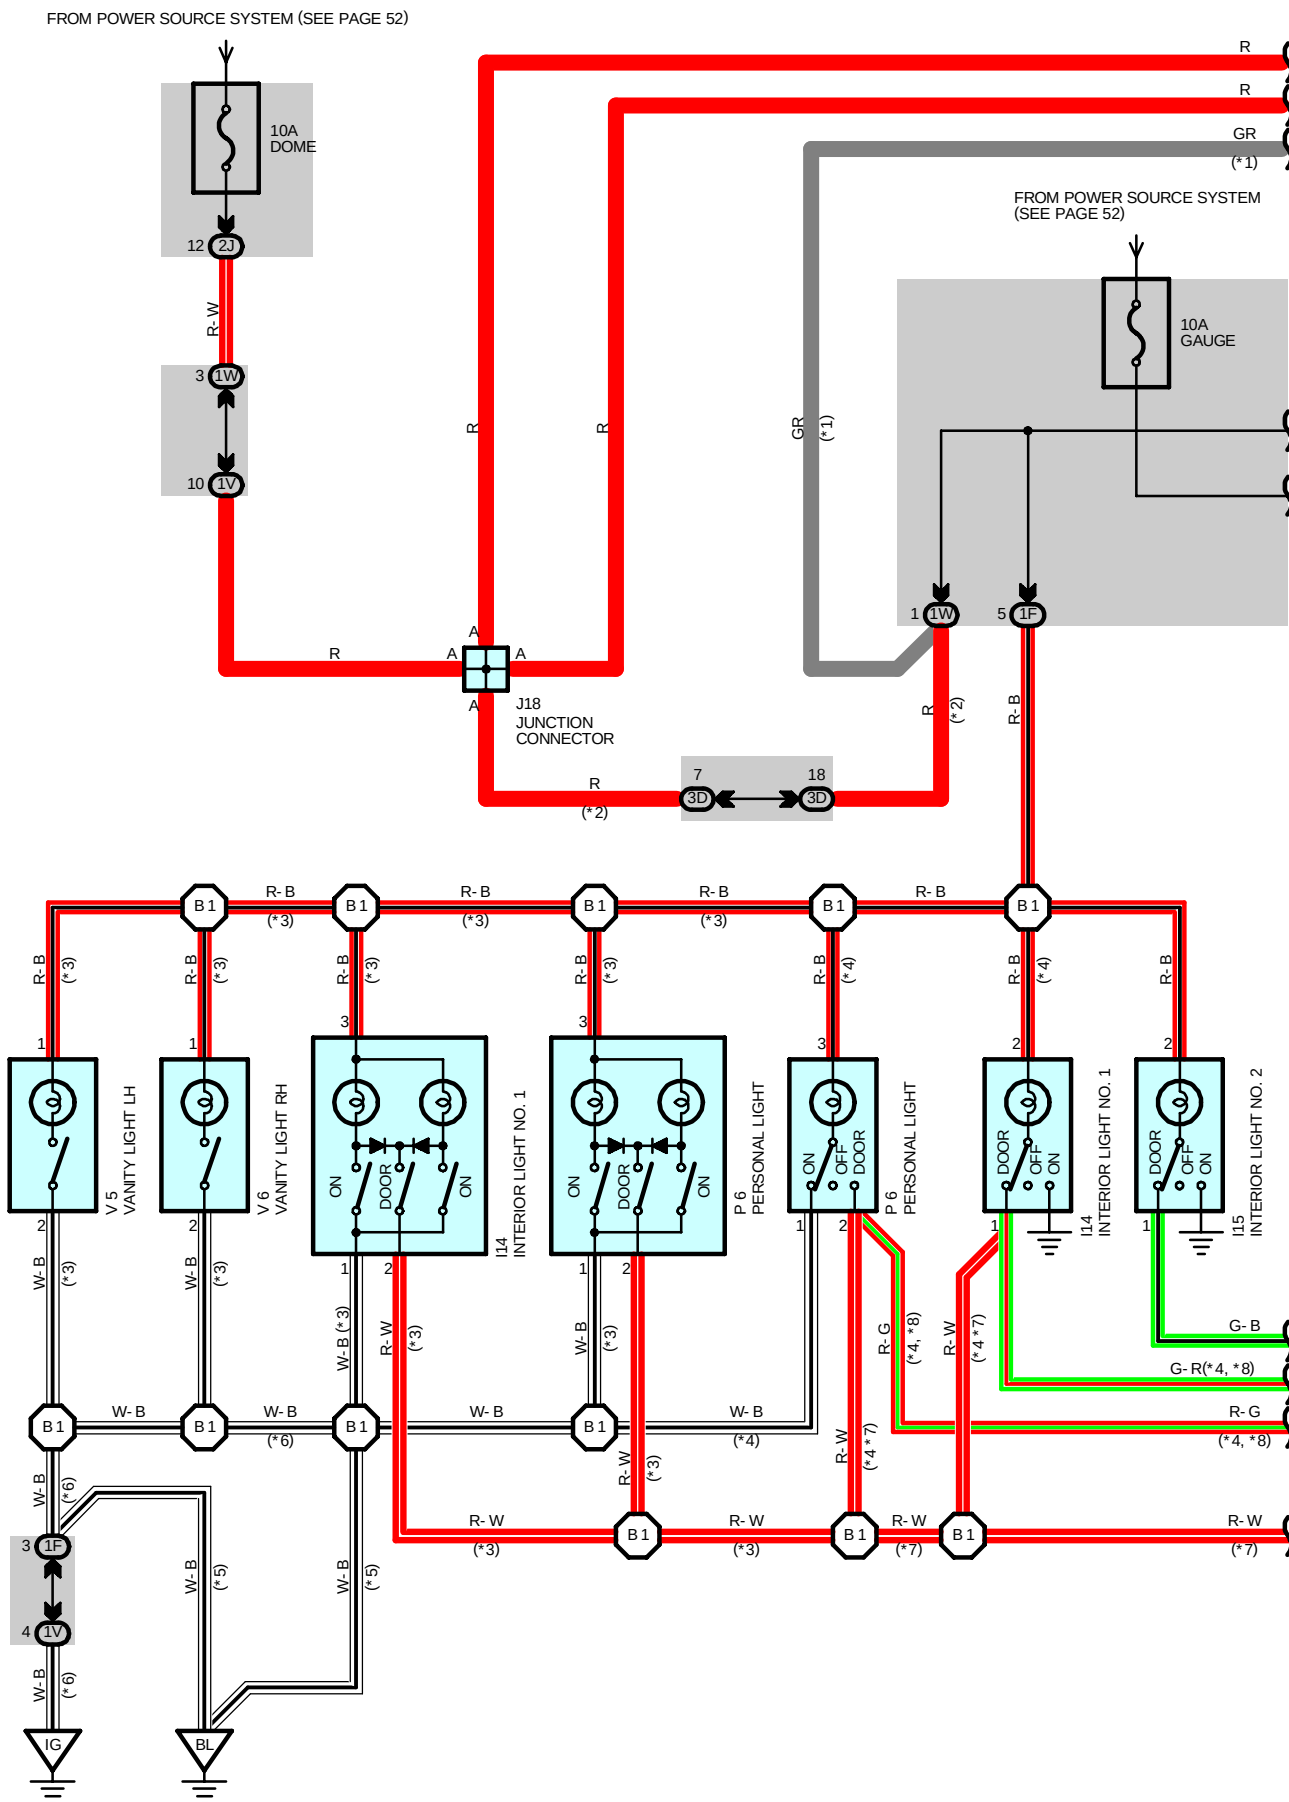


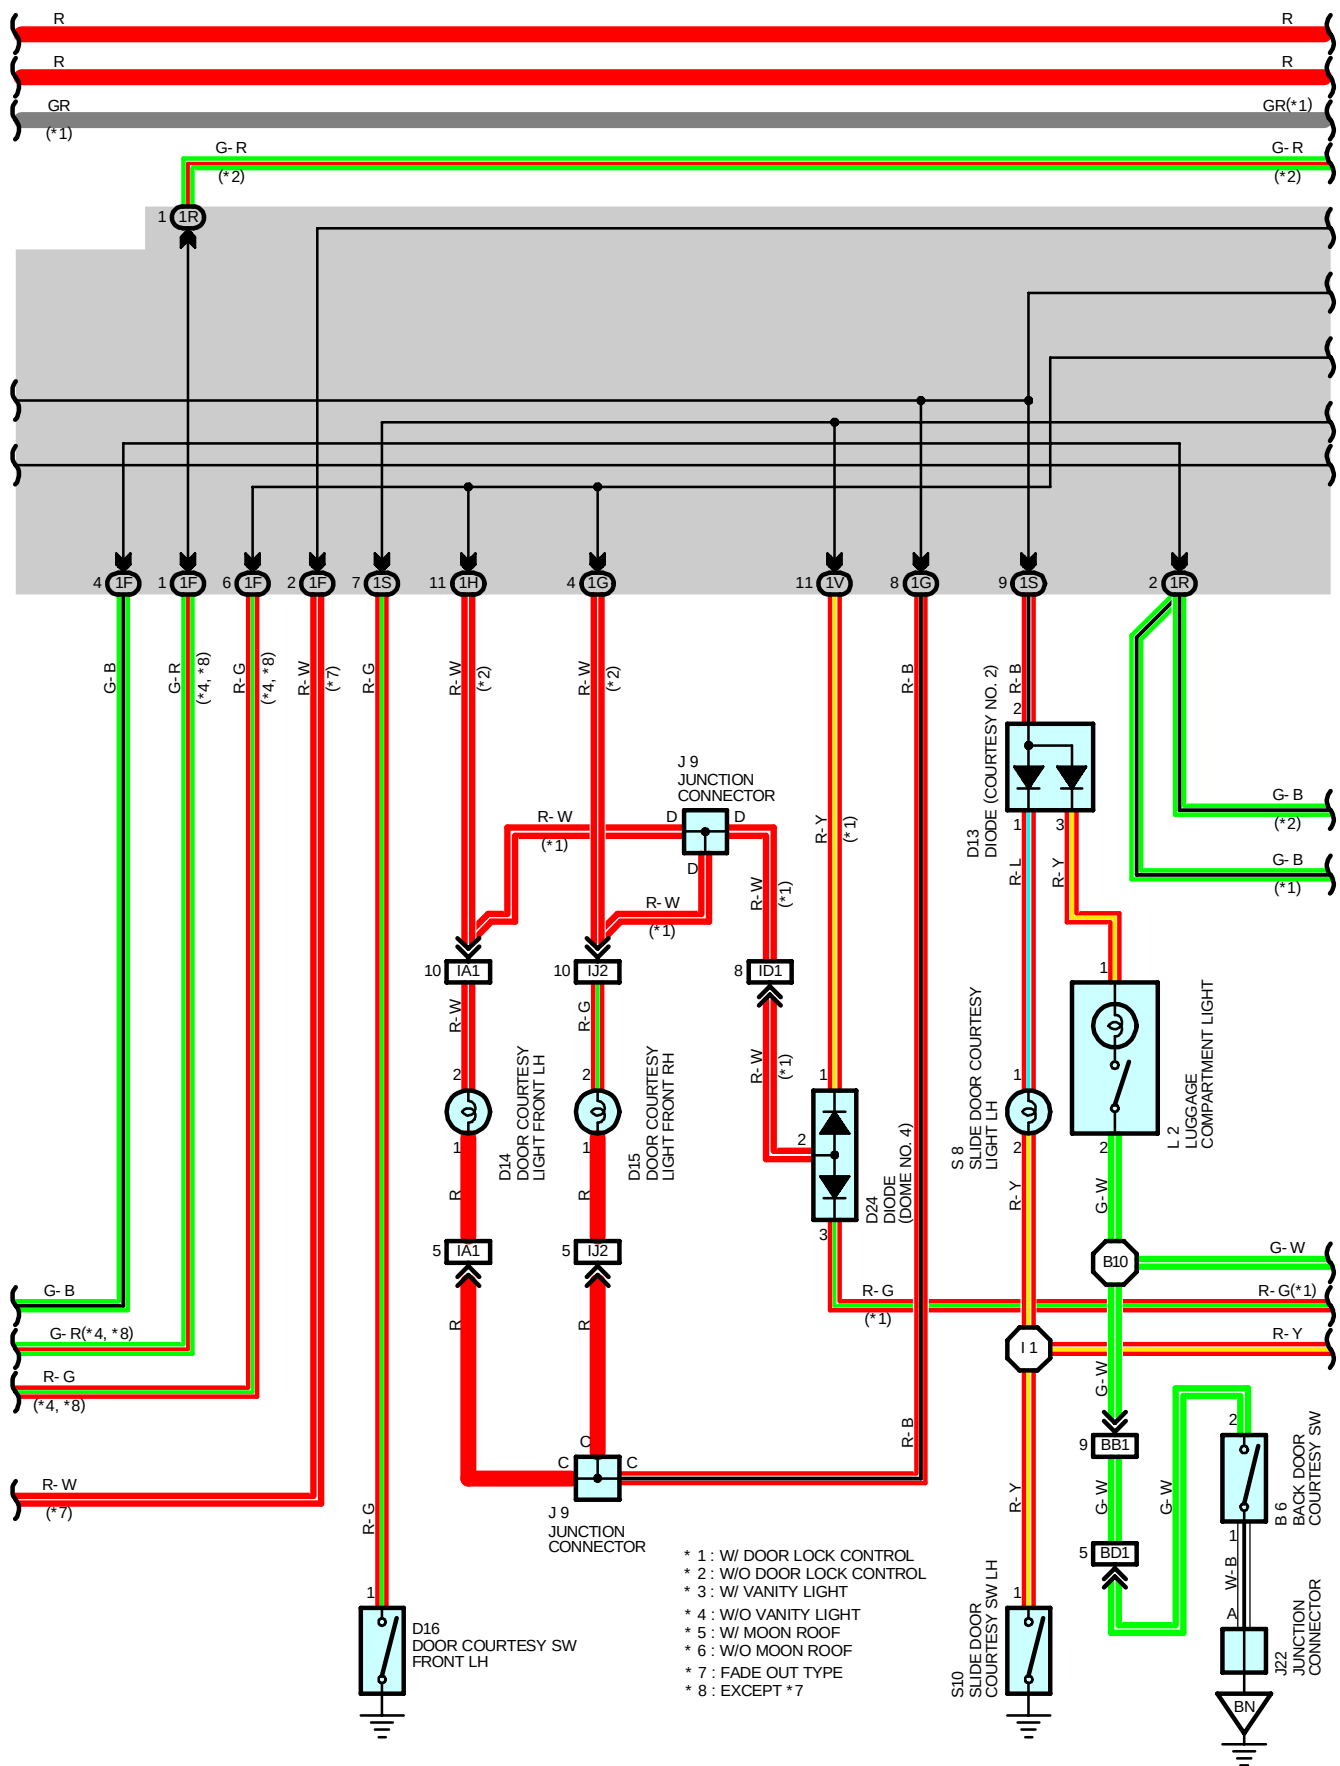


INTERIOR LIGHT

FROM POWER SOURCE SYSTEM (SEE PAGE 52)

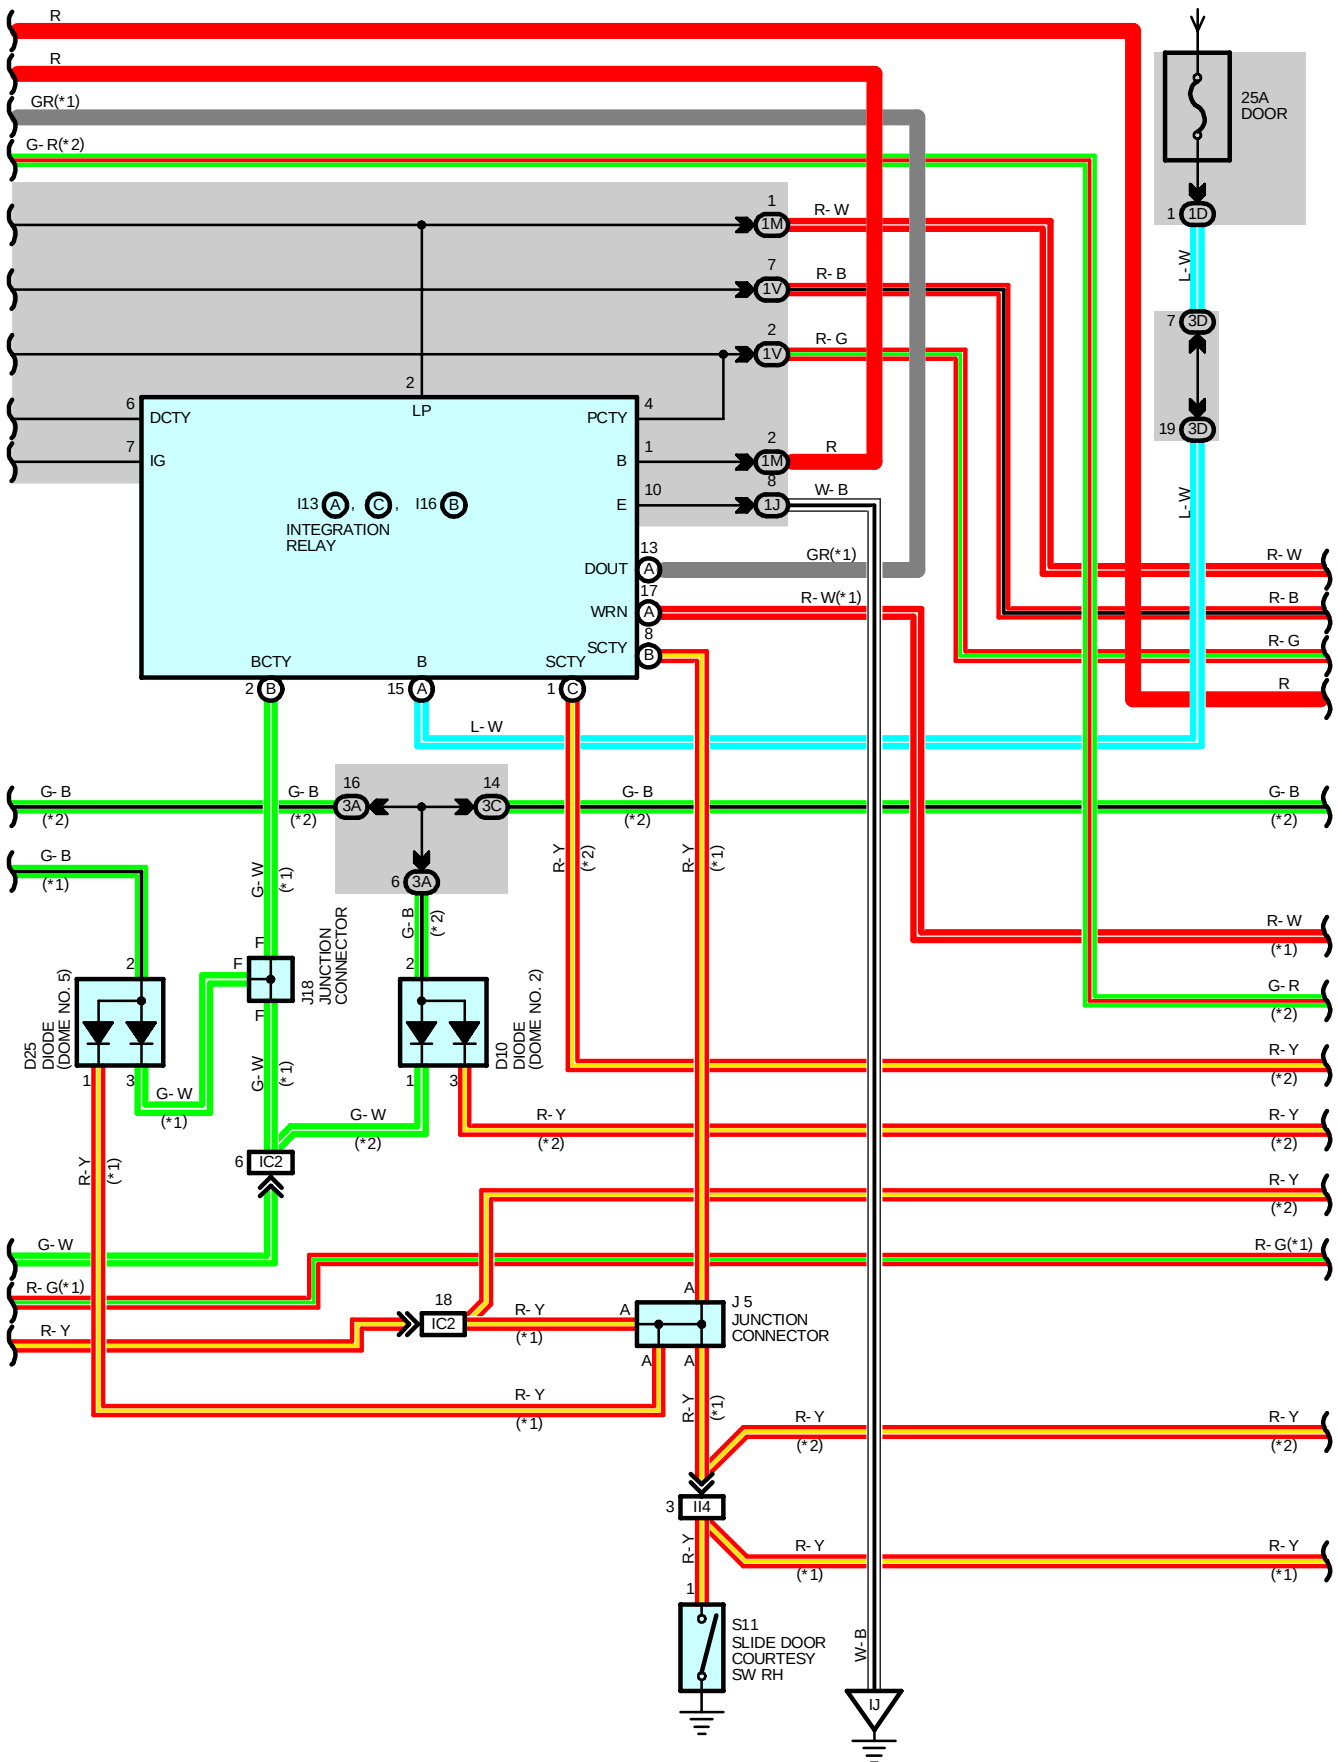

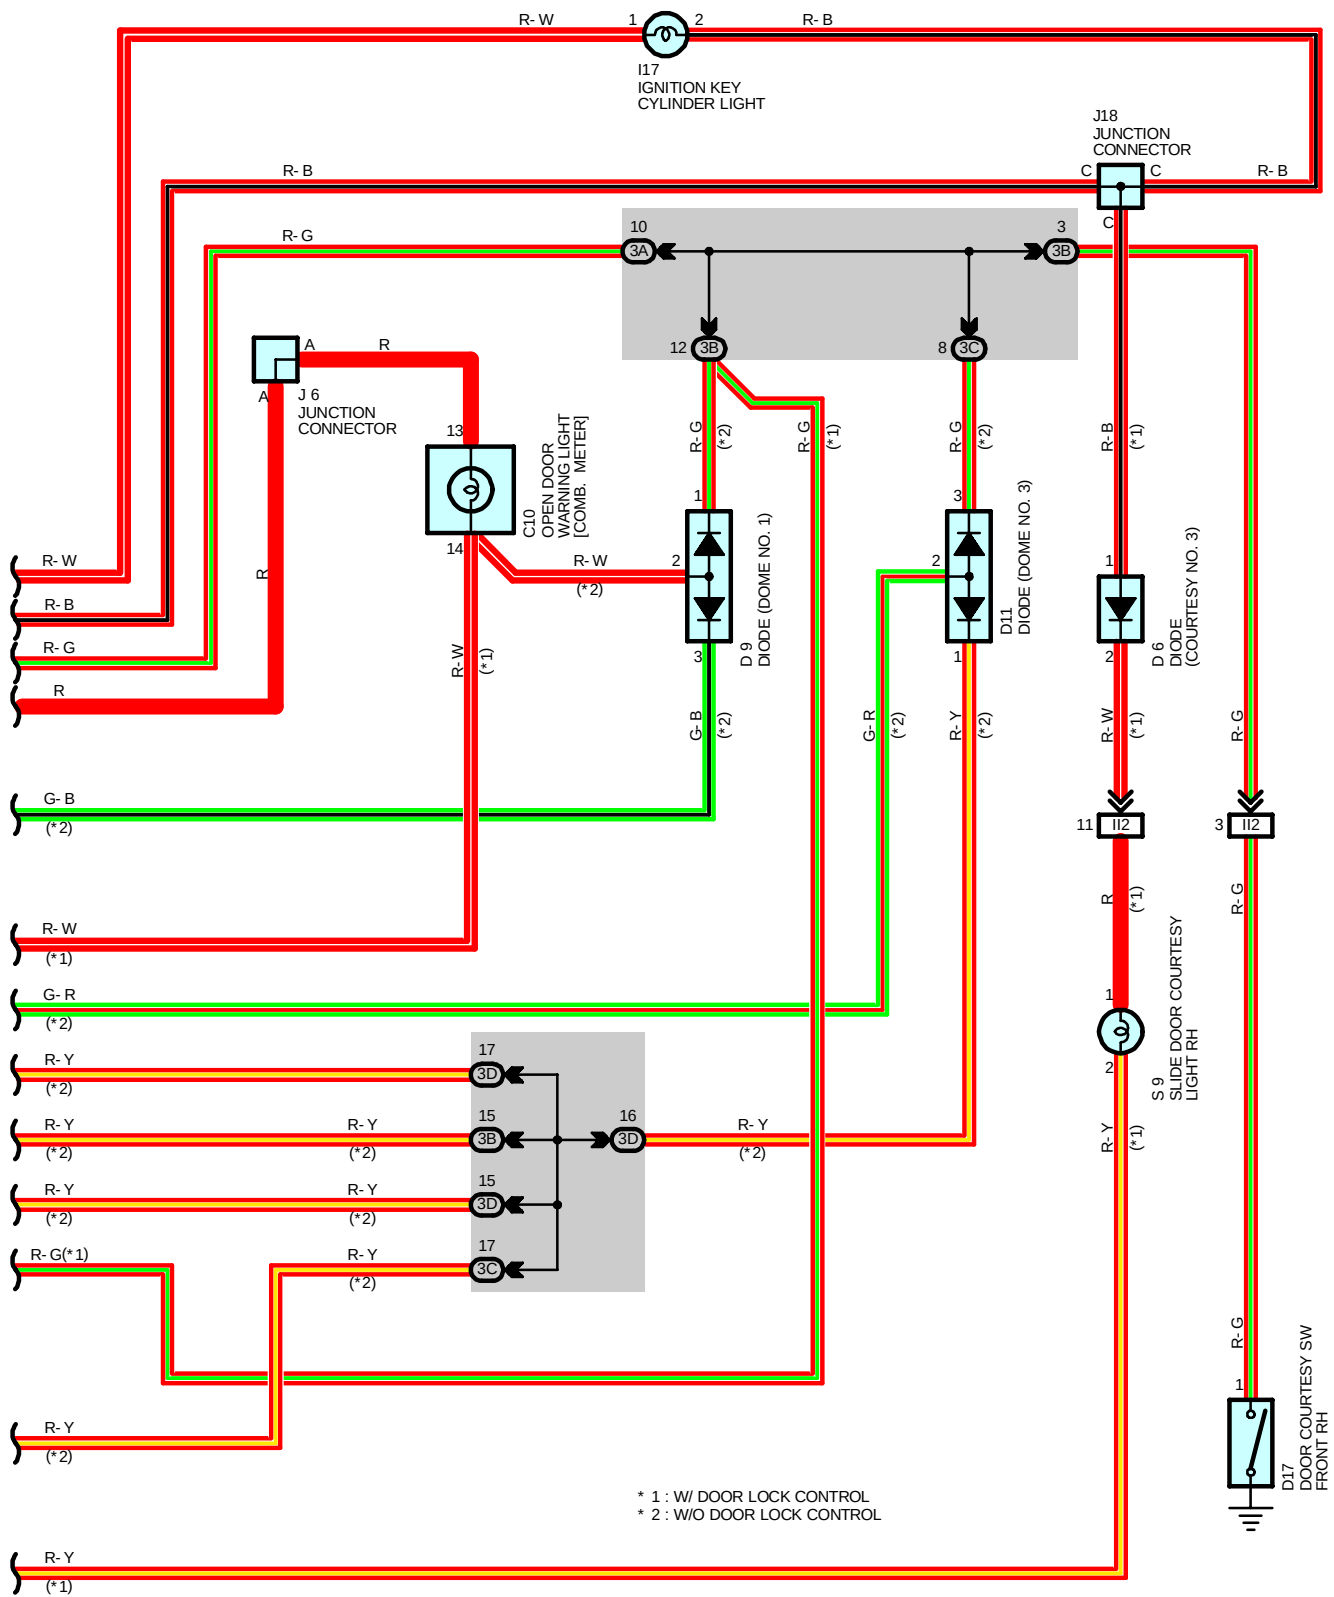

INTERIOR LIGHT

SERVICE HINTS

INTEGRATION RELAY

- 1-GROUND : Always approx. **12** volts
- 4-GROUND : Continuity with the front RH door open
- 6-GROUND : Continuity with the front LH door open
- 10-GROUND : Always continuity

D16, D17 DOOR COURTESY SW FRONT LH, RH

- 1-GROUND : Closed with the front LH, RH door open

S10, S11 SLIDE DOOR COURTESY SW LH, RH

- 1-GROUND : Closed with the slide door open

L2 LUGGAGE COMPARTMENT LIGHT

- 2-GROUND : Closed with the luggage compartment door open

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
B6	36	D24	34	J18	35
C10	34	D25	34	J22	36
D6	34	I13	A	L2	36
D9	34		C	P6	37
D10	34	I14	36	S8	37
D11	34	I15	36	S9	37
D13	36	I16	B	S10	37
D14	36	I17	35	S11	37
D15	36	J5	35	V5	37
D16	36	J6	35	V6	37
D17	36	J9	35		

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1D	22	Cowl Wire and Driver Side J/B No.1 (Lower Finish Panel)
1F	22	Roof Wire and Driver Side J/B No.1 (Lower Finish Panel)
1G	22	Instrument Panel Wire and Driver Side J/B No.1 (Lower Finish Panel)
1H		
1J	22	Cowl Wire and Driver Side J/B No.1 (Lower Finish Panel)
1M		
1R		
1S	22	Floor Wire and Driver Side J/B No.1 (Lower Finish Panel)
1V	22	Cowl Wire and Driver Side J/B No.1 (Lower Finish Panel)
1W		
2J	24	Cowl Wire and Engine Room J/B No.2 (Engine Compartment Left)
3A	26	Cowl Wire and J/B No.3 (Behind the Combination Meter)
3B		
3C		
3D		

 : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	42	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IC2	42	Cowl Wire and Floor Wire (Left Cowl Side Panel)
ID1	42	Instrument Panel Wire and Cowl Wire (The Back Side of the Lower Finish Panel)
II2	44	Floor No.2 Wire and Cowl Wire (Right Kick Panel)
II4		
IJ2	44	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
BB1	46	Back Door No.1 Wire and Floor Wire (Left Rear Quarter Panel)
BD1	46	Back Door No.1 Wire and Back Door No.2 Wire (Left Side of the Back Door)

 : GROUND POINTS

Code	See Page	Ground Points Location
IG	42	Left Cowl Side Panel
IJ	42	Right Cowl Side Panel
BL	46	Left Side of the Roof Side Panel
BN	46	Right Side of the Back Door

 : SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I1	44	Floor Wire	B10	46	Floor Wire
B1	46	Roof Wire			