




ILLUMINATION

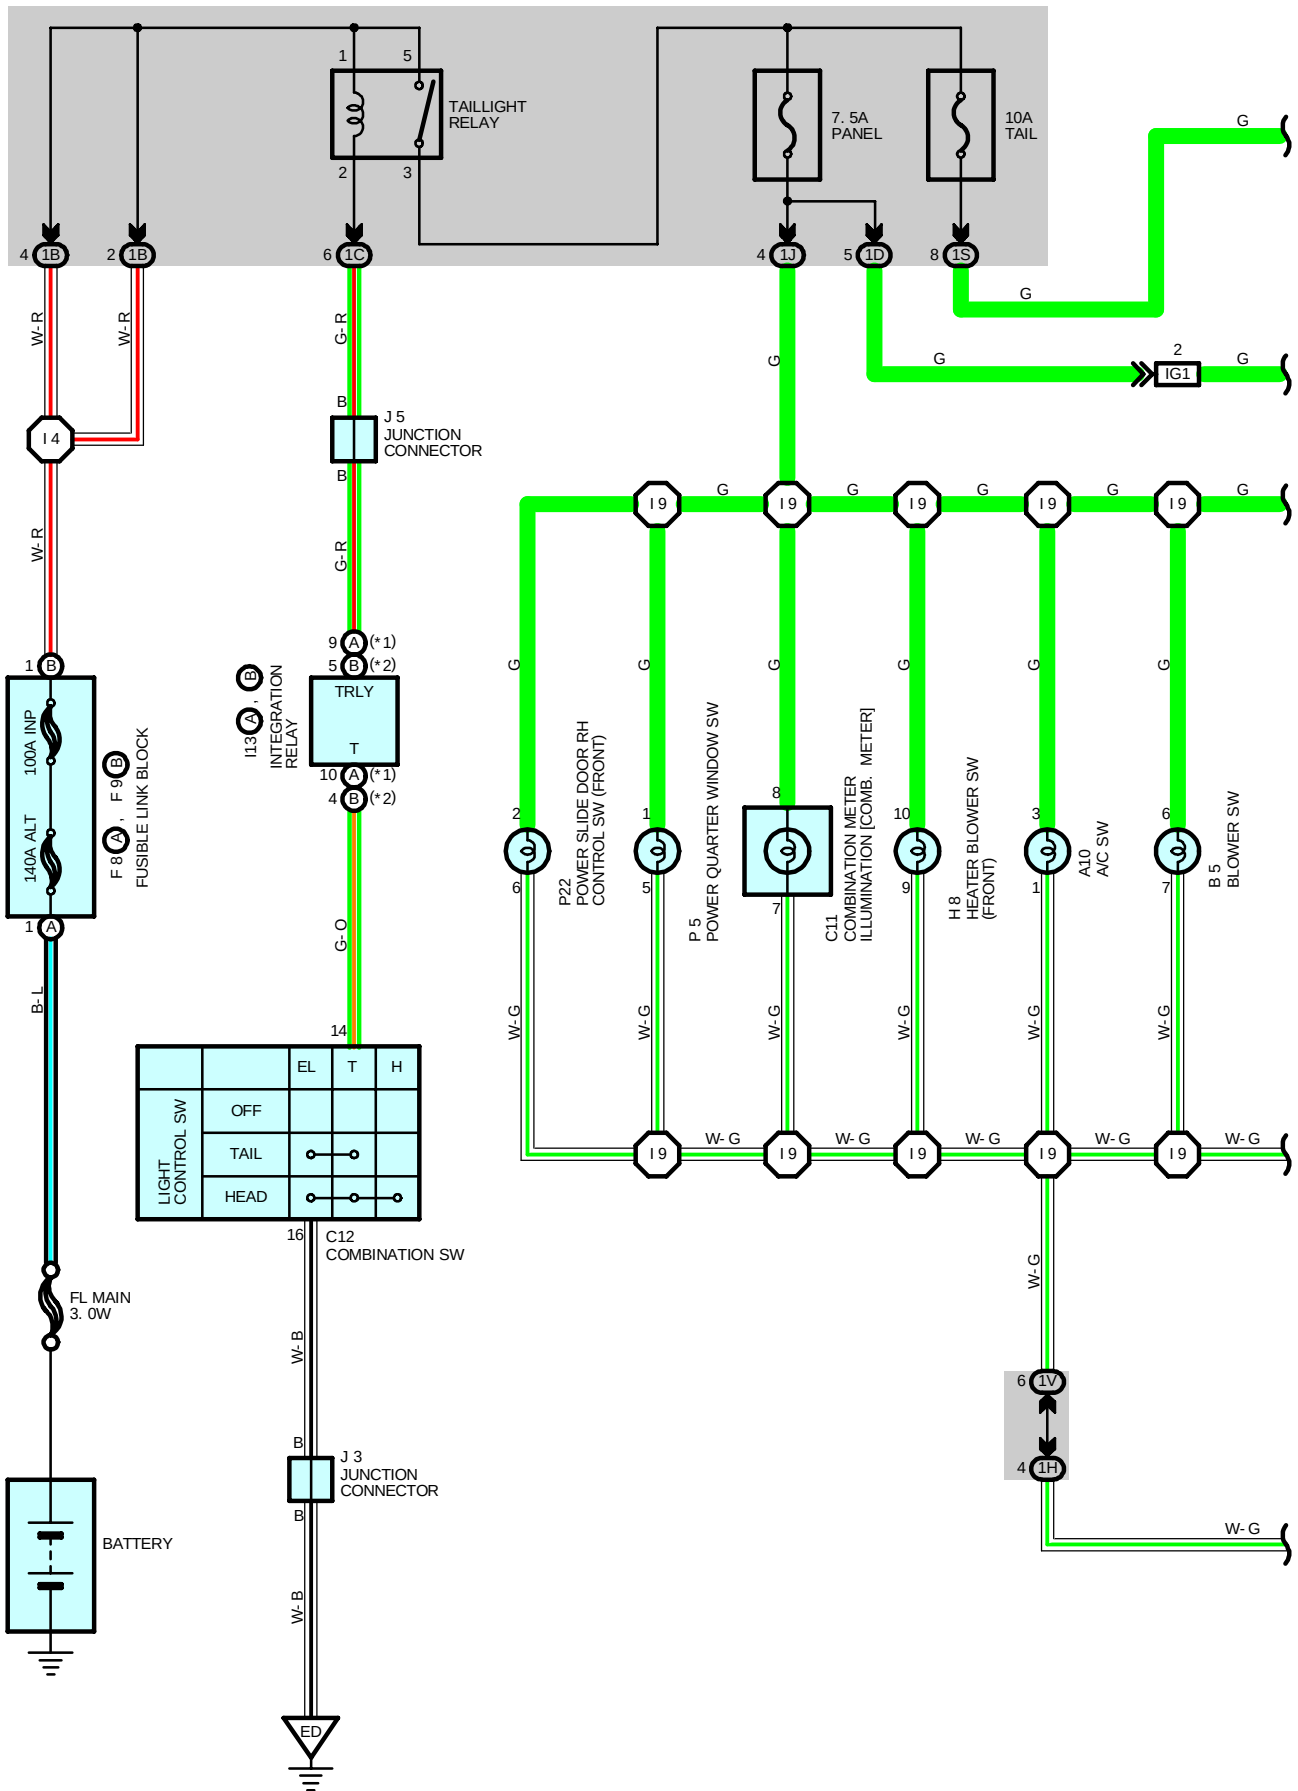

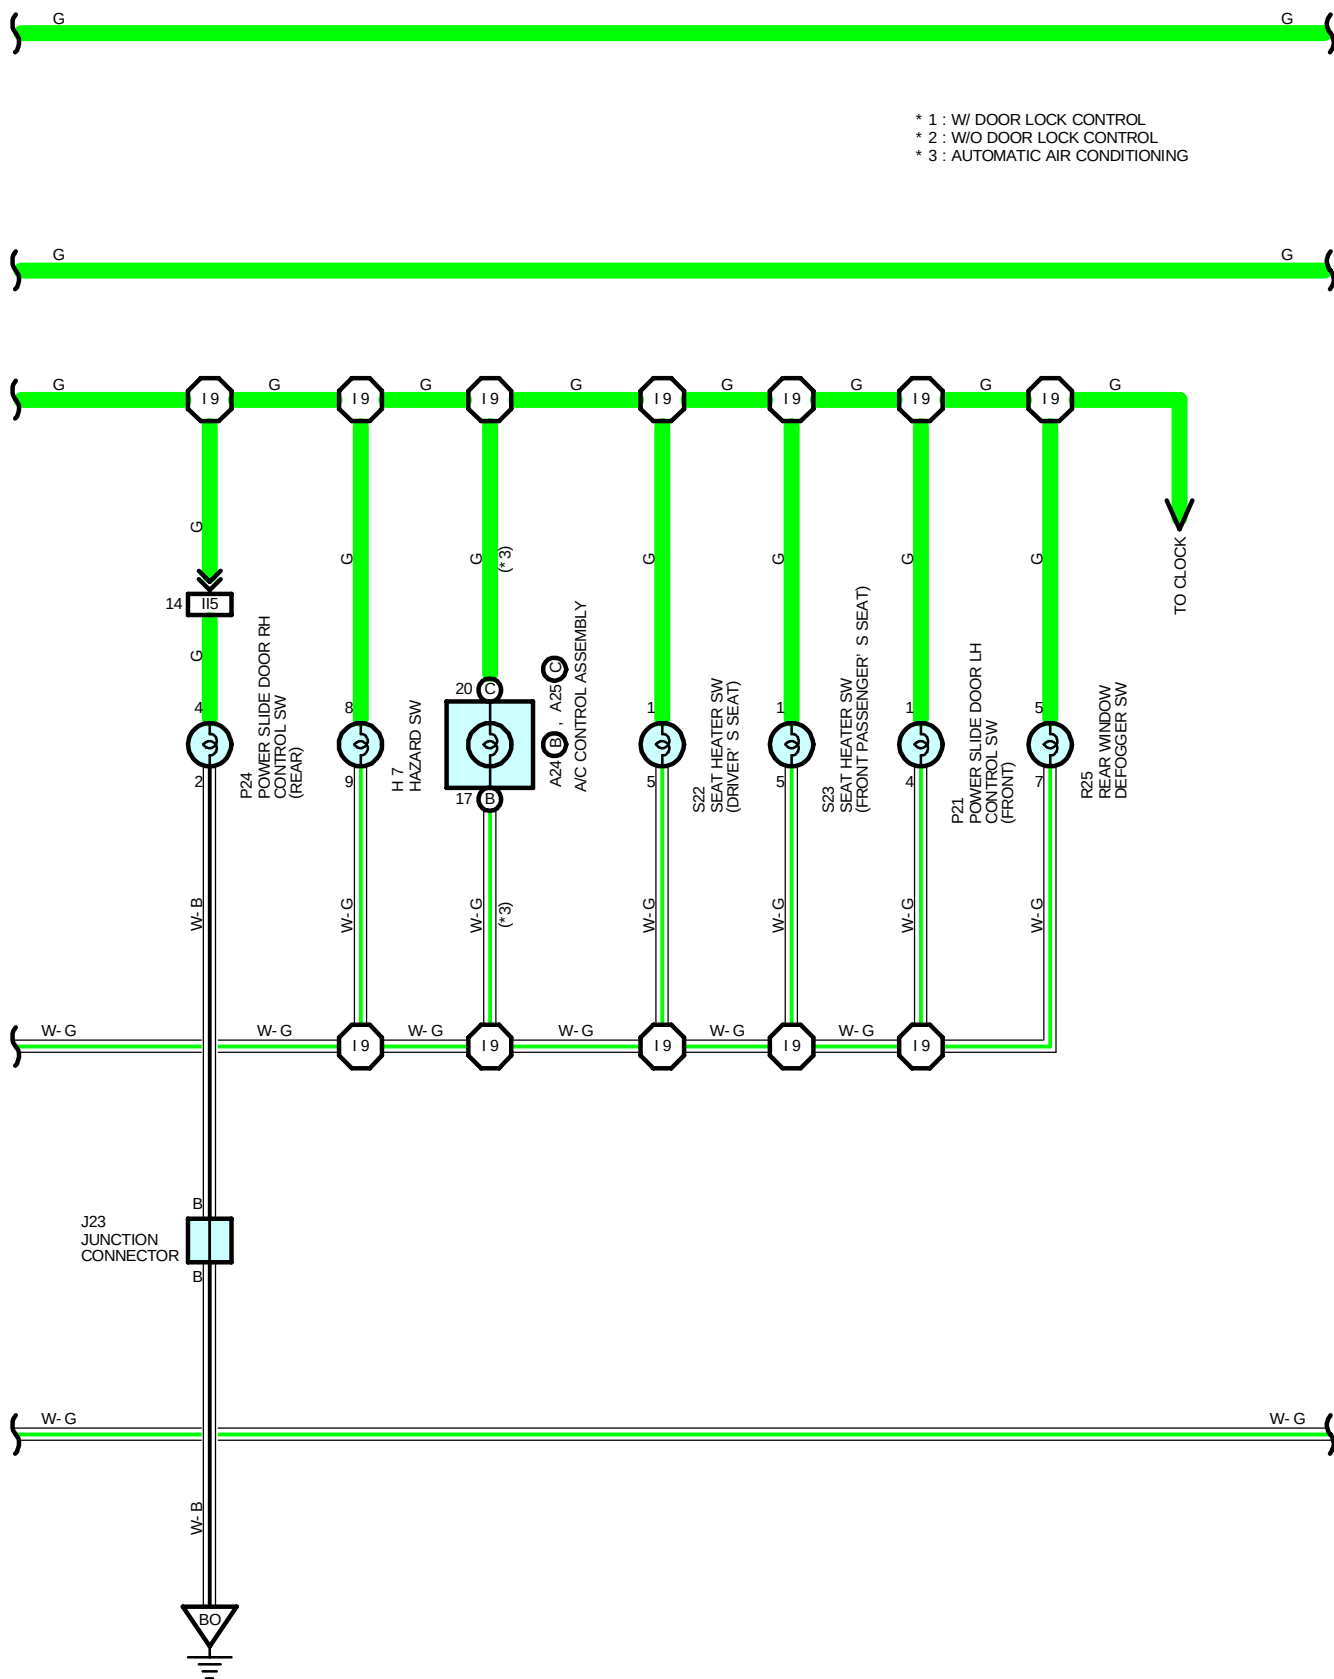

ILLUMINATION

* 3 : AUTOMATIC AIR CONDITIONING
* 4 : MANUAL AIR CONDITIONING

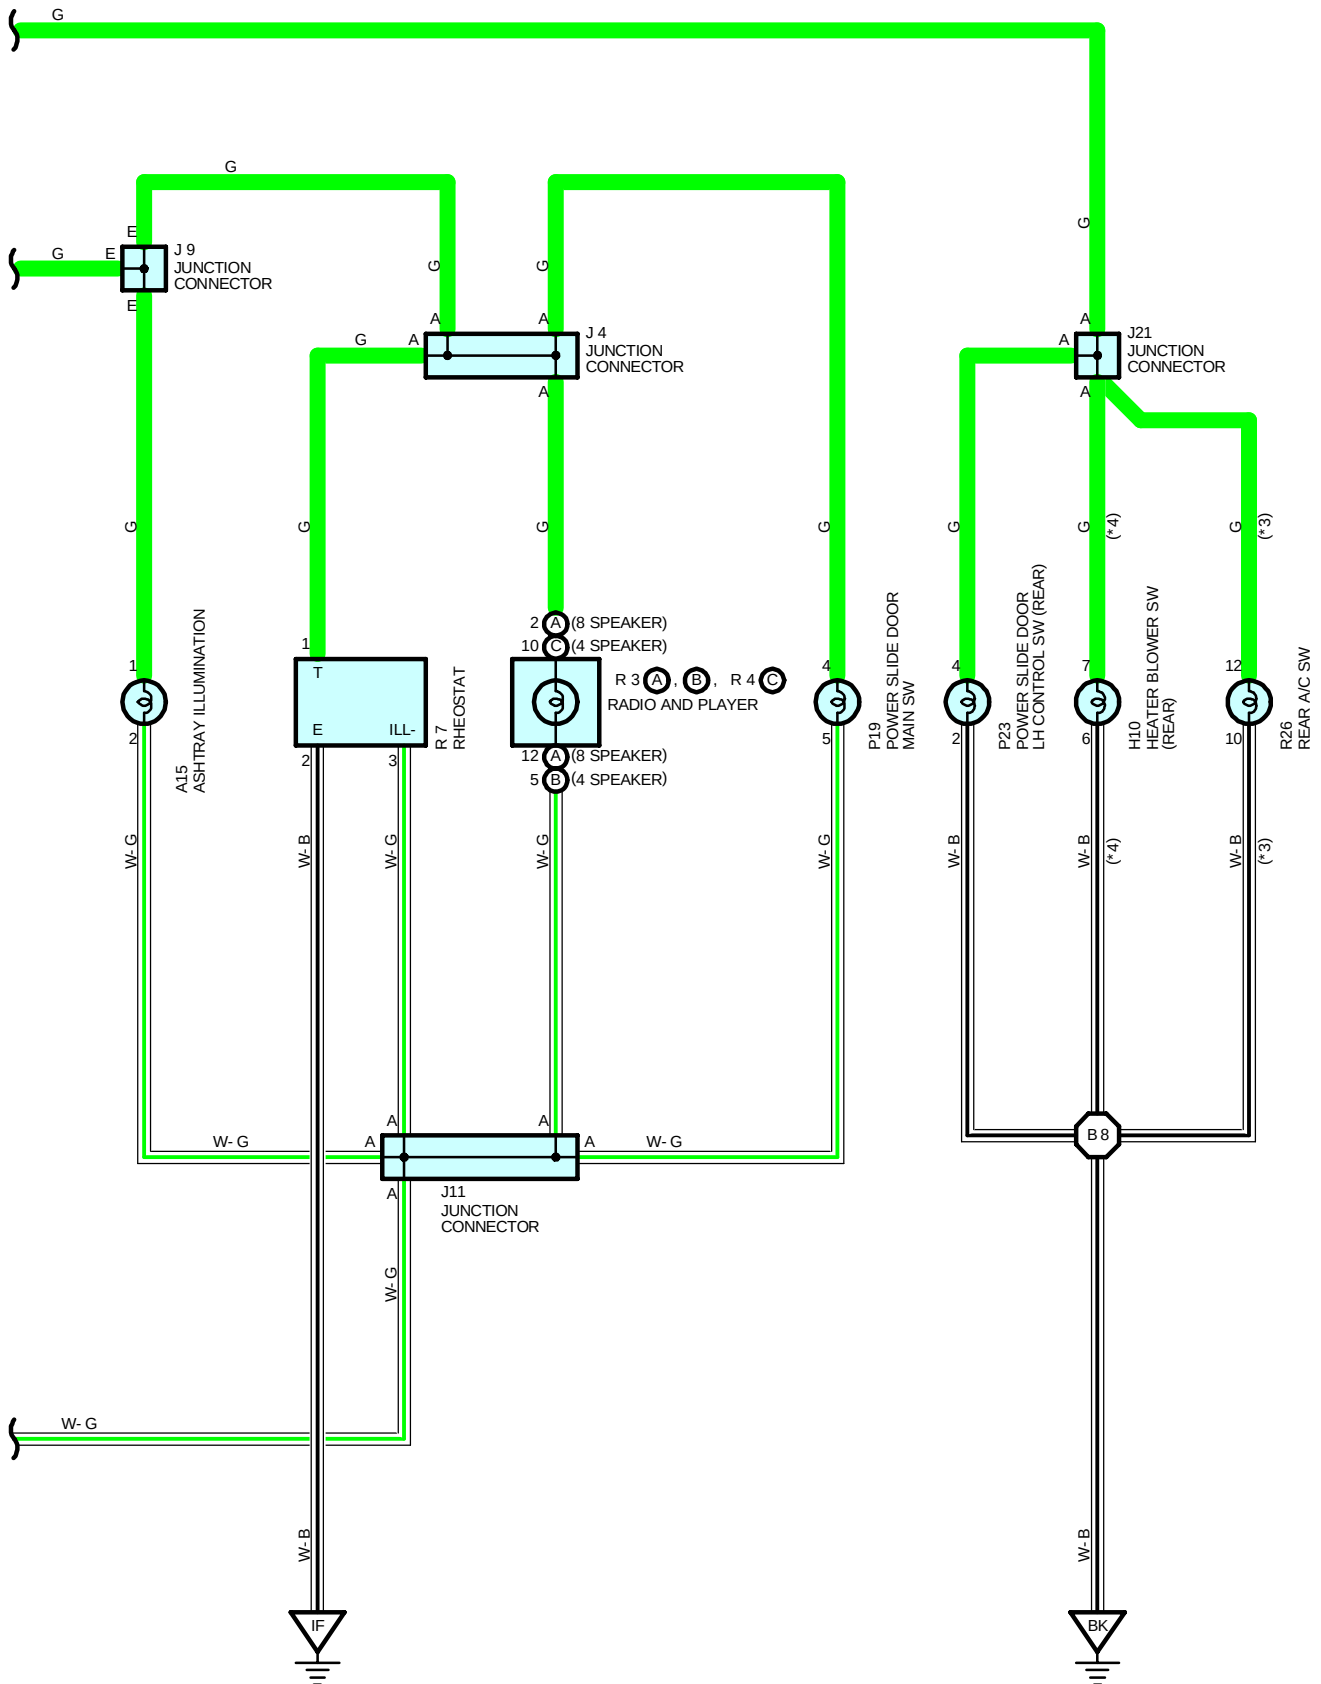

SERVICE HINTS

TAILLIGHT RELAY

5-3 : Closed with the light control SW at **TAIL** or **HEAD** position

C12 COMBINATION SW

14-16 : Closed with the light control SW at **TAIL** or **HEAD** position

: PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
A10	34	I13	A 35	P22	35
A15	34		B 35	P23	37
A24	B 34	J3	35	P24	37
A25	C 34	J4	35	R3	A 35
B5	34	J5	35		B 35
C11	34	J9	35	R4	C 35
C12	34	J11	35	R7	35
F8	A 32	J21	36	R25	35
F9	B 32	J23	36	R26	37
H7	34	P5	35	S22	35
H8	34	P19	35	S23	35
H10	36	P21	35		

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1B	22	Cowl Wire and Driver Side J/B No.1 (Lower Finish Panel)
1C		
1D		
1H	22	Instrument Panel Wire and Driver Side J/B No.1 (Lower Finish Panel)
1J	22	Cowl Wire and Driver Side J/B No.1 (Lower Finish Panel)
1S	22	Floor Wire and Driver Side J/B No.1 (Lower Finish Panel)
1V	22	Cowl Wire and Driver Side J/B No.1 (Lower Finish Panel)

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IG1	42	Instrument Panel Wire and Cowl Wire (Behind the Combination Meter)
II5	44	Floor No.2 Wire and Cowl Wire (Right Kick Panel)

: GROUND POINTS

Code	See Page	Ground Points Location
ED	40	Near the Left Front Suspension Support
IF	42	Left Kick Panel
BK	46	Under the Left Center Pillar
BO	46	Right Rear Quarter Panel

: SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I4	44	Cowl Wire	B8	46	Floor Wire
I9					