


STOP LIGHT

FROM POWER SOURCE SYSTEM (SEE PAGE 52)

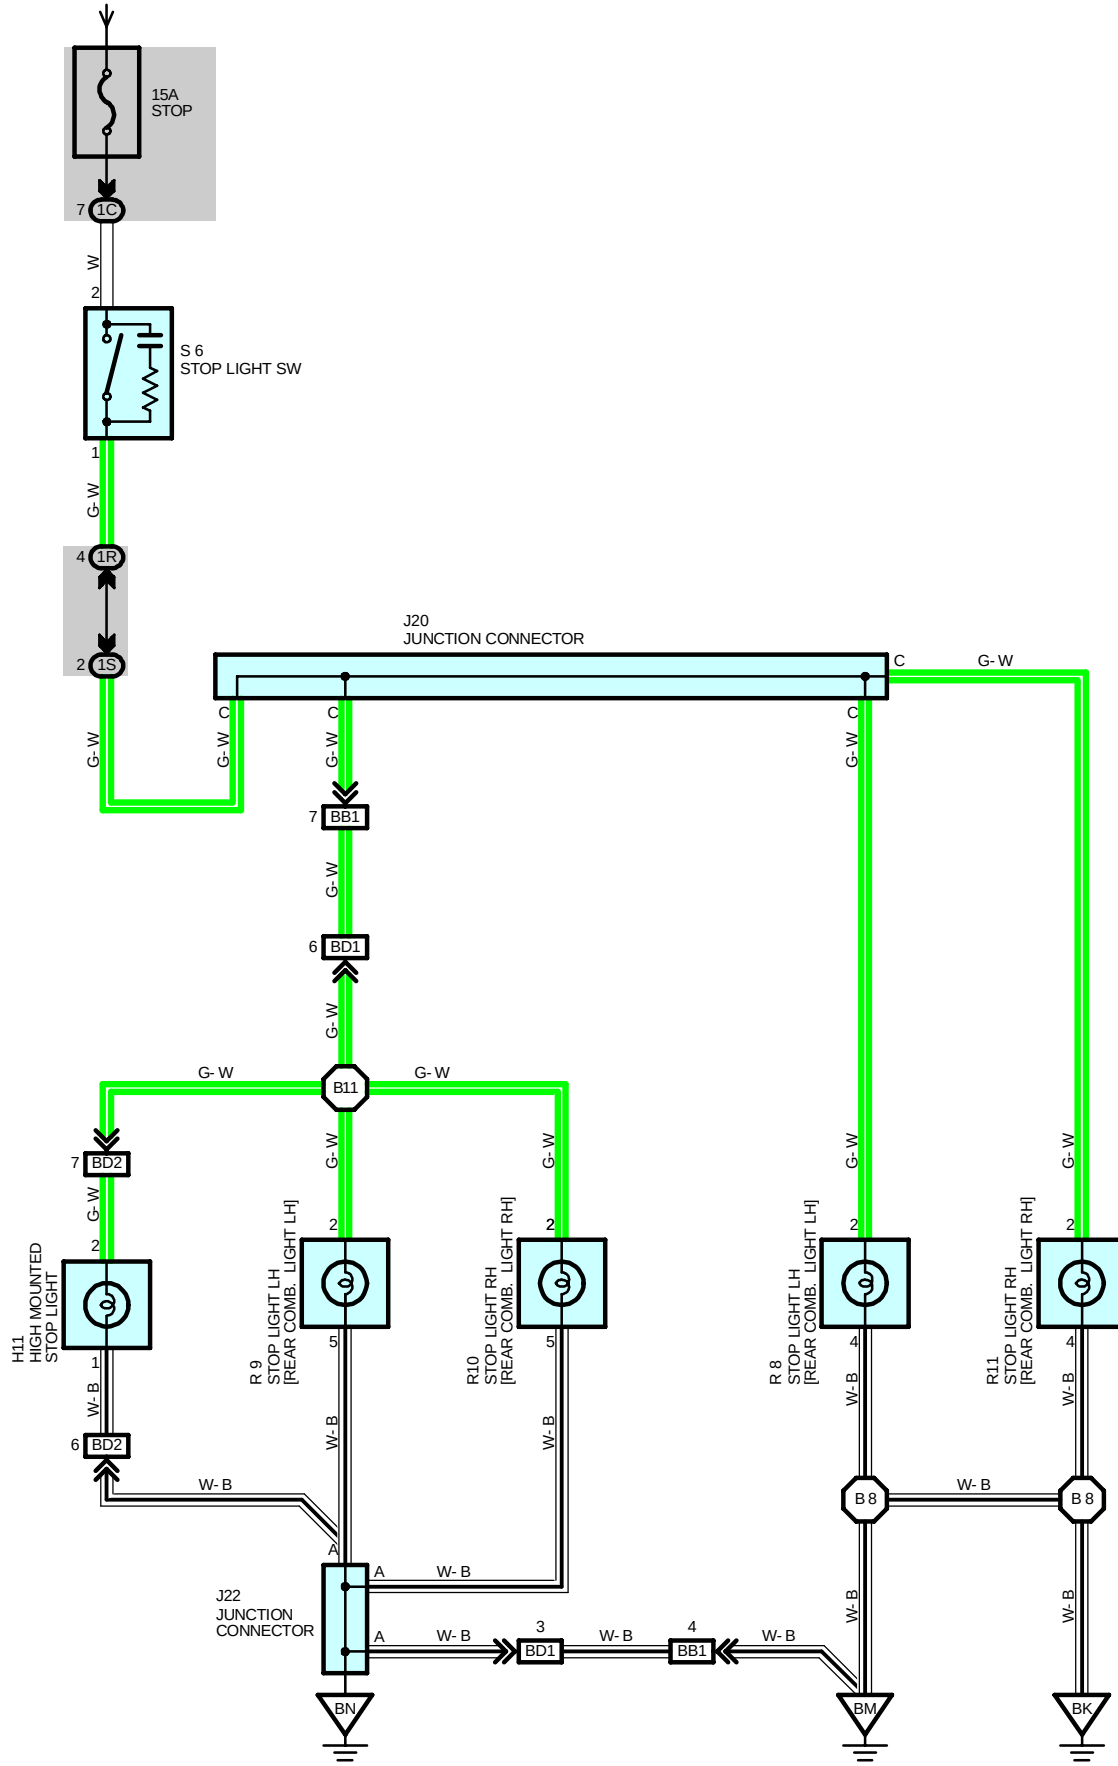

SERVICE HINTS**S6 STOP LIGHT SW**

2-1 : Closed with brake pedal depressed

 : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
H11	36	R8	37	R11	37
J20	36	R9	37	S6	35
J22	36	R10	37		

 : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1C	22	Cowl Wire and Driver Side J/B No.1 (Lower Finish Panel)
1R		
1S	22	Floor Wire and Driver Side J/B No.1 (Lower Finish Panel)

 : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
BB1	46	Back Door No.1 Wire and Floor Wire (Left Rear Quarter Panel)
BD1	46	Back Door No.1 Wire and Back Door No.2 Wire (Left Side of the Back Door)
BD2		

 : GROUND POINTS

Code	See Page	Ground Points Location
BK	46	Under the Left Center Pillar
BM	46	Left Rear Quarter Panel
BN	46	Right Side of the Back Door

 : SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
B8	46	Floor Wire	B11	46	Back Door No.2 Wire