


REMOTE CONTROL MIRROR

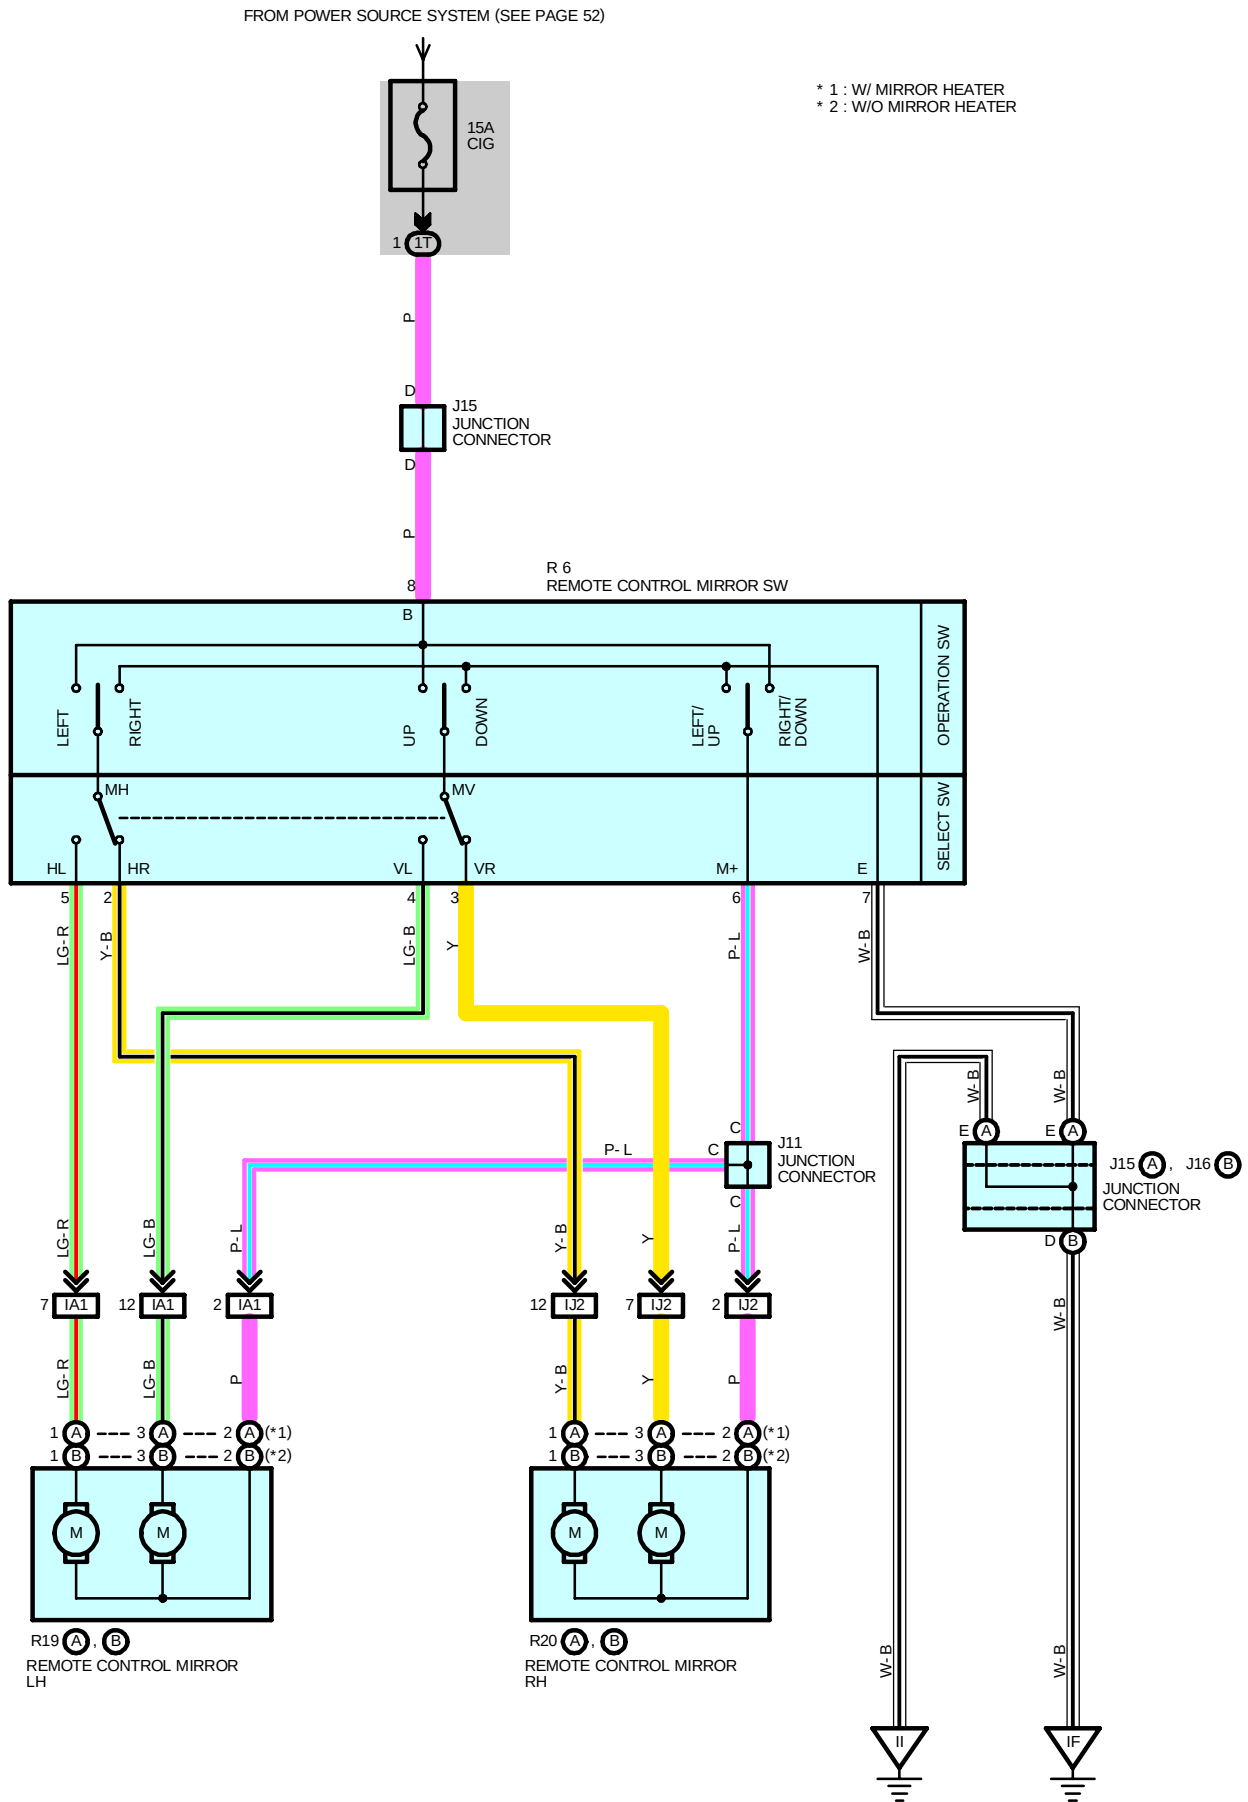

SERVICE HINTS

R6 REMOTE CONTROL MIRROR SW

- 8-GROUND : Approx. **12** volts with the ignition SW at **ACC** or **ON** position
- 6-7 : Continuity with the operation SW at **UP** or **LEFT** position
- 8-6 : Continuity with the operation SW at **DOWN** or **RIGHT** position

○ : PARTS LOCATION

Code		See Page		Code		See Page		Code		See Page	
J11		35		J16	B	35		R19	B	37	
J15		35		R6		35		R20	A	37	
J15	A	35		R19	A	37			B	37	

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1T	22	Instrument Panel Wire and Driver Side J/B No.1 (Lower Finish Panel)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	42	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IJ2	44	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)

▽ : GROUND POINTS

Code	See Page	Ground Points Location
IF	42	Left Kick Panel
II	42	Right Kick Panel