


SEAT HEATER

FROM POWER SOURCE SYSTEM (SEE PAGE 52)

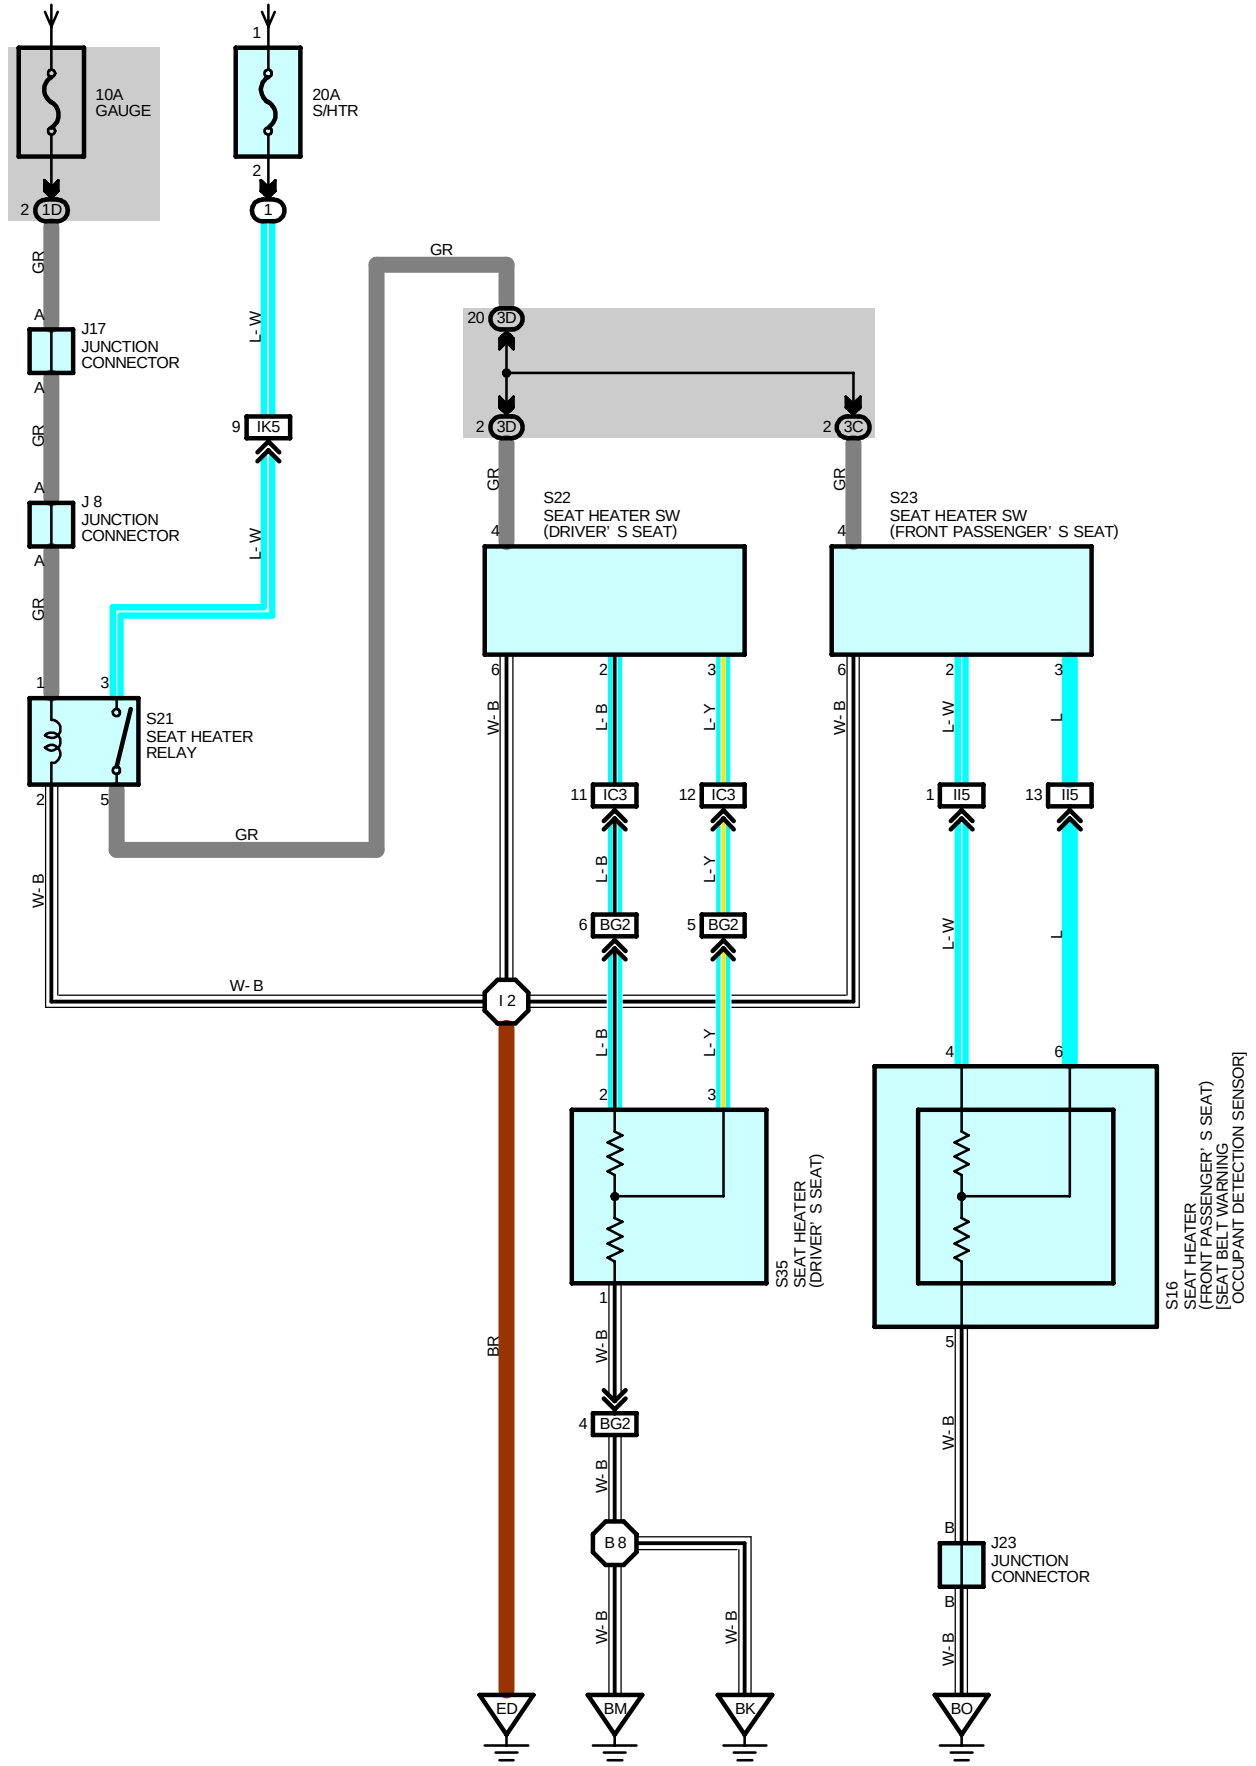

SERVICE HINTS

S21 SEAT HEATER RELAY

3-5 : Closed with the ignition SW at **ON** or **ST** position

: PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
J8	35	S16	38	S23	35
J17	35	S21	35	S35	38
J23	36	S22	35		

: RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
1	28	Engine Room R/B No.1 (Engine Compartment Left)

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1D	22	Cowl Wire and Driver Side J/B No.1 (Lower Finish Panel)
3C	26	Cowl Wire and J/B No.3 (Behind the Combination Meter)
3D		

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC3	42	Cowl Wire and Floor Wire (Left Cowl Side Panel)
II5	44	Floor No.2 Wire and Cowl Wire (Right Kick Panel)
IK5	44	Engine Room Main Wire and Cowl Wire (Right Cowl Side Panel)
BG2	48	Floor Wire and Seat Wire (Beneath the Driver Seat)

: GROUND POINTS

Code	See Page	Ground Points Location
ED	40	Near the Left Front Suspension Support
BK	46	Under the Left Center Pillar
BM	46	Left Rear Quarter Panel
BO	46	Right Rear Quarter Panel

: SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I2	44	Cowl Wire	B8	46	Floor Wire