


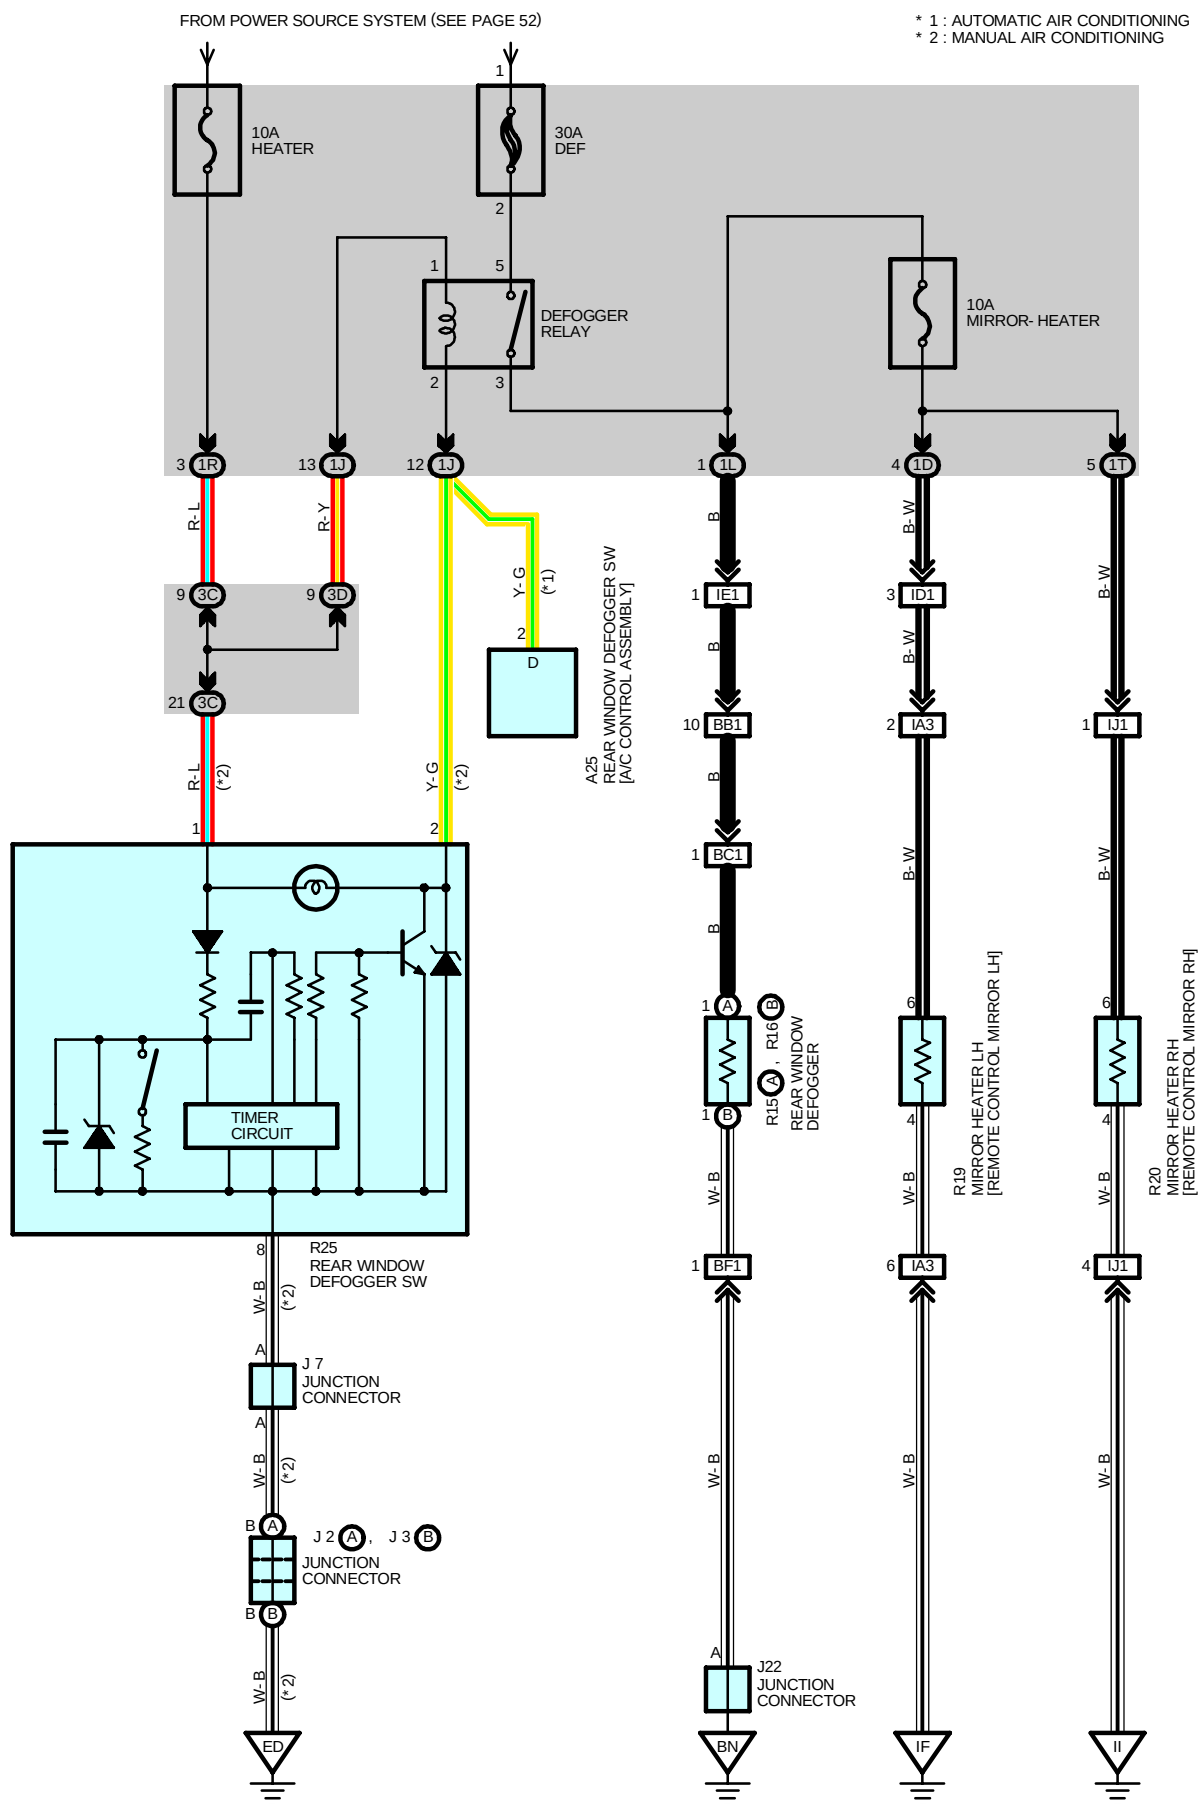

SERVICE HINTS

DEFOGGER RELAY

5-3 : Closed with the ignition SW on and the rear window defogger SW on

R25 REAR WINDOW DEFOGGER SW (MANUAL AIR CONDITIONING)

2-GROUND : Approx. **12** volts with the ignition SW on

3-GROUND : Always continuity

6-GROUND : Continuity with the defogger SW on and approx. **15** minutes thereafter

R19, R20 MIRROR HEATER LH, RH [REMOTE CONTROL MIRROR LH, RH]

6-GROUND : Approx. **12** volts with the ignition SW on and the rear window defogger SW on

4-GROUND : Always continuity

: PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
A25	34	J22	36	R20	37
J2	A 35	R15	A 37	R25	35
J3	B 35	R16	B 37		
J7	35	R19	37		

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1D	22	Cowl Wire and Driver Side J/B No.1 (Lower Finish Panel)
1J		
1L		
1R		
1T	22	Instrument Panel Wire and Driver Side J/B No.1 (Lower Finish Panel)
3C	26	Cowl Wire and J/B No.3 (Behind the Combination Meter)
3D		

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA3	42	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
ID1	42	Instrument Panel Wire and Cowl Wire (The Back Side of the Lower Finish Panel)
IE1	42	Floor Wire and Cowl Wire (The Back Side of the Lower Finish Panel)
IJ1	44	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
BB1	46	Back Door No.1 Wire and Floor Wire (Left Rear Quarter Panel)
BC1	46	Rear Window No.1 Wire and Back Door No.1 Wire (Left Side of the Back Door)
BF1	46	Rear Window No.2 Wire and Back Door No.2 Wire (Right Side of the Back Door)

: GROUND POINTS

Code	See Page	Ground Points Location
ED	40	Near the Left Front Suspension Support
IF	42	Left Kick Panel
II	42	Right Kick Panel
BN	46	Right Side of the Back Door