



RADIO AND PLAYER (8 SPEAKER)

FROM POWER SOURCE SYSTEM (SEE PAGE 52)

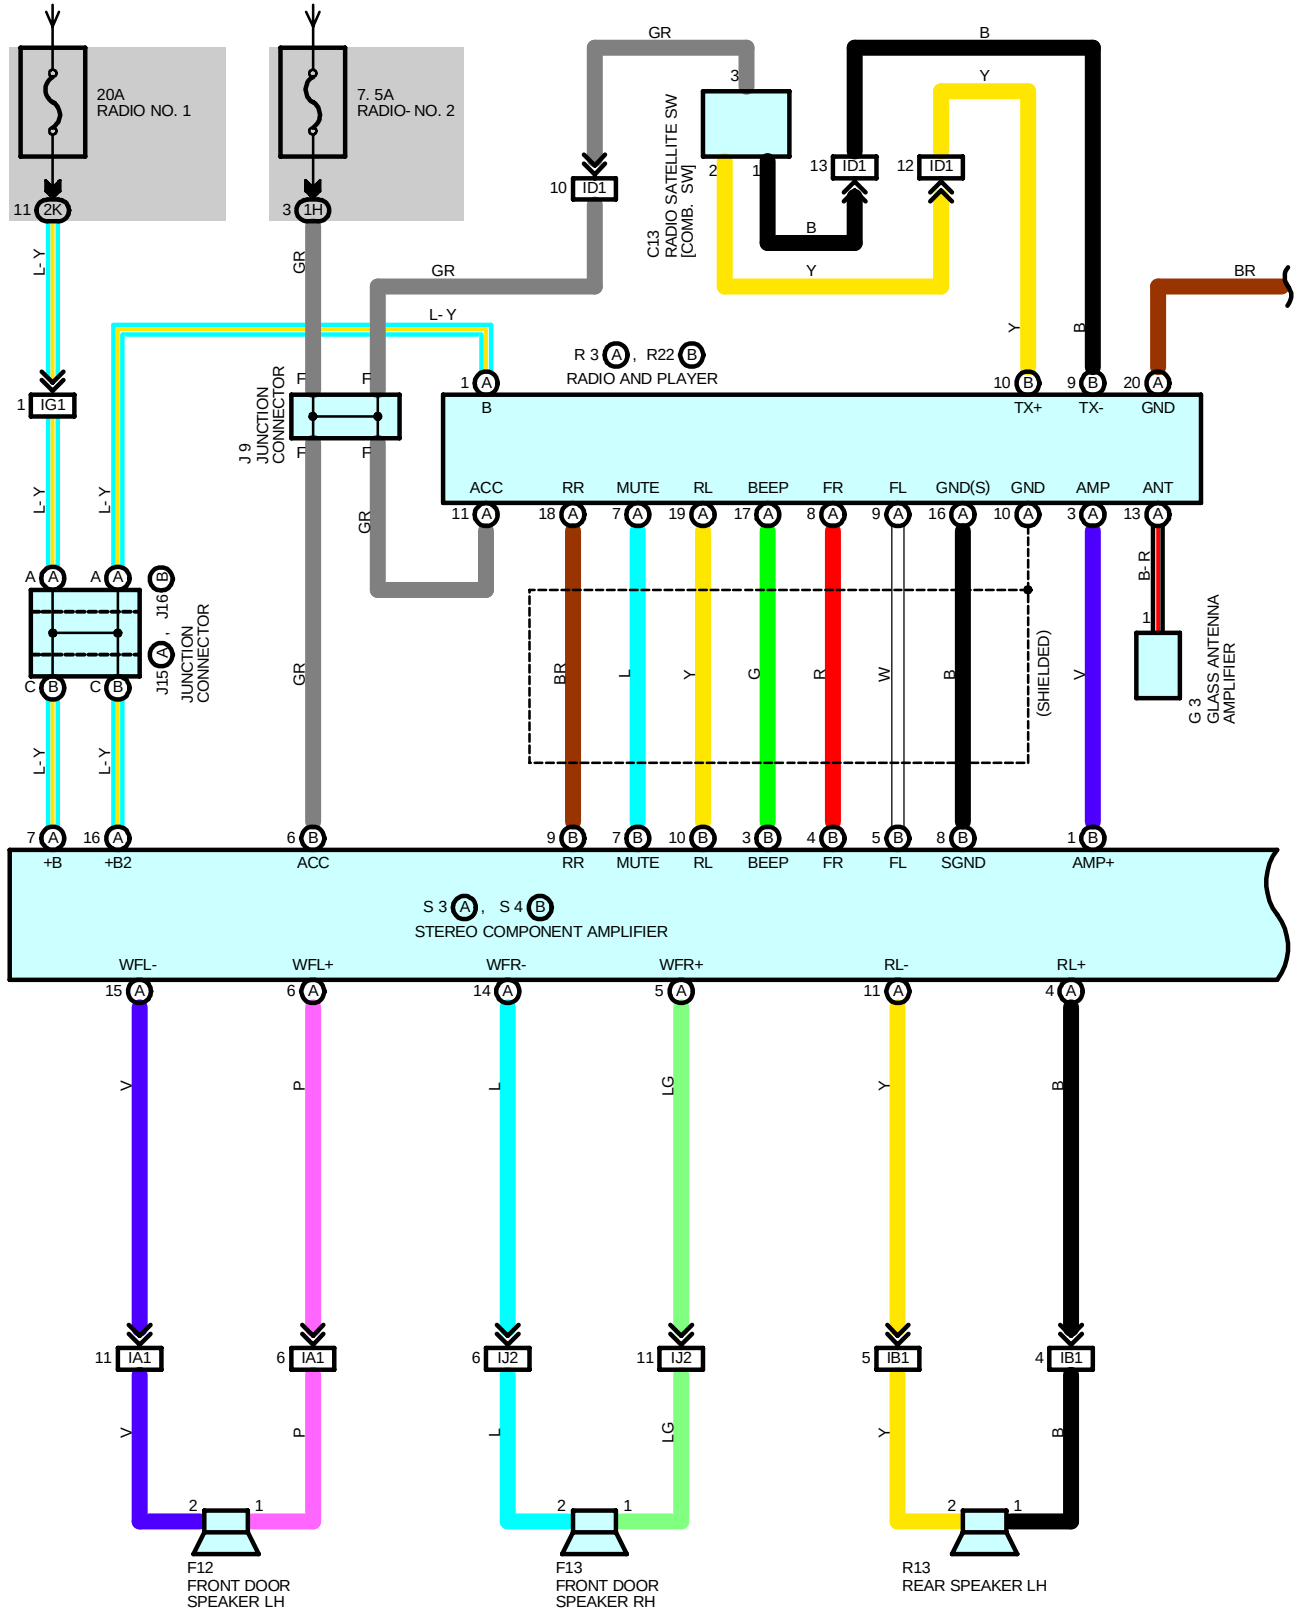

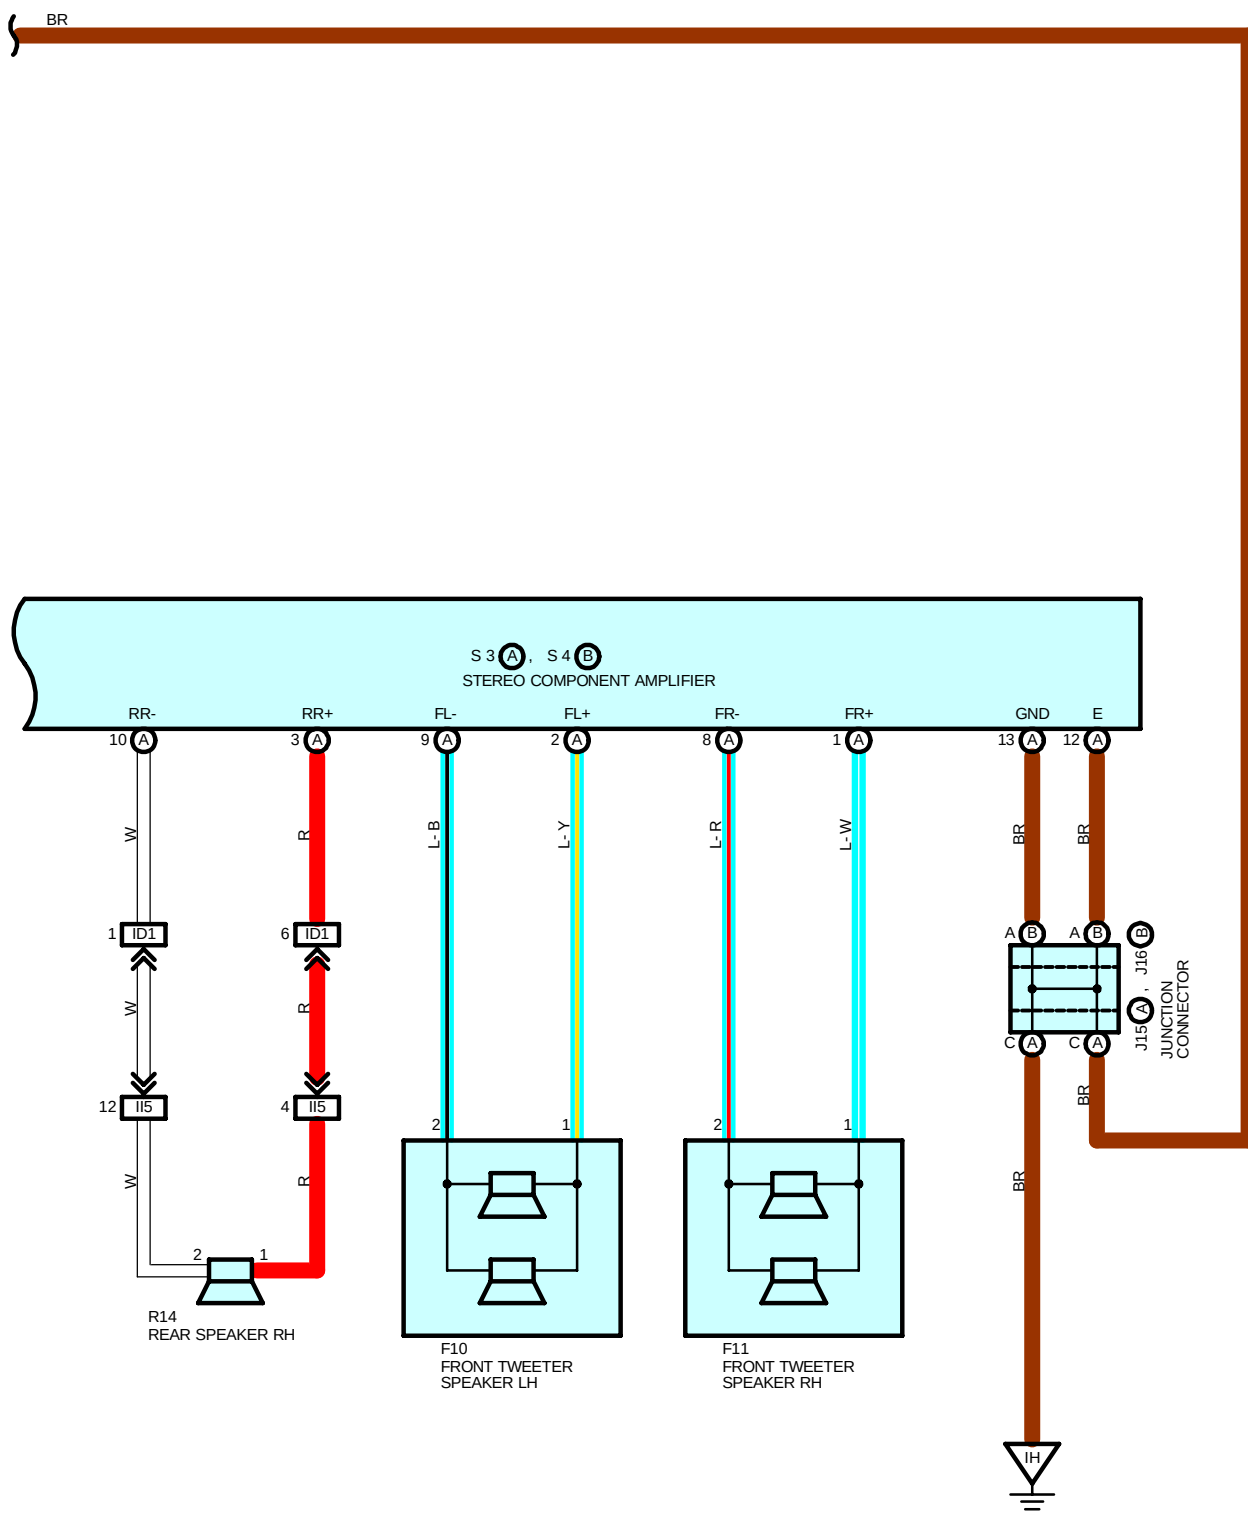

RADIO AND PLAYER (8 SPEAKER)

SERVICE HINTS

S3 (A), S4 (B) STEREO COMPONENT AMPLIFIER

(A) 7, (A) 16-GROUND : Always approx. **12** volts

(B) 6-GROUND : Approx. **12** volts with the ignition SW at **ON** or **ACC** position

(A) 12, (A) 13-GROUND : Always continuity

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
C13	34	G3	34	R13	37
F10	34	J9	35	R14	37
F11	34	J15	A 35	R22	B 35
F12	36	J16	B 35	S3	A 35
F13	36	R3	A 35	S4	B 35

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1H	22	Instrument Panel Wire and Driver Side J/B No.1 (Lower Finish Panel)
2K	24	Cowl Wire and Engine Room J/B No.2 (Engine Compartment Left)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	42	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IB1	42	Floor Wire and Instrument Panel Wire (Left Kick Panel)
ID1	42	Instrument Panel Wire and Cowl Wire (The Back Side of the Lower Finish Panel)
IG1	42	Instrument Panel Wire and Cowl Wire (Behind the Combination Meter)
II5	44	Floor No.2 Wire and Cowl Wire (Right Kick Panel)
IJ2	44	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)

▽ : GROUND POINTS

Code	See Page	Ground Points Location
IH	42	Right Instrument Panel Brace

