





COMBINATION METER

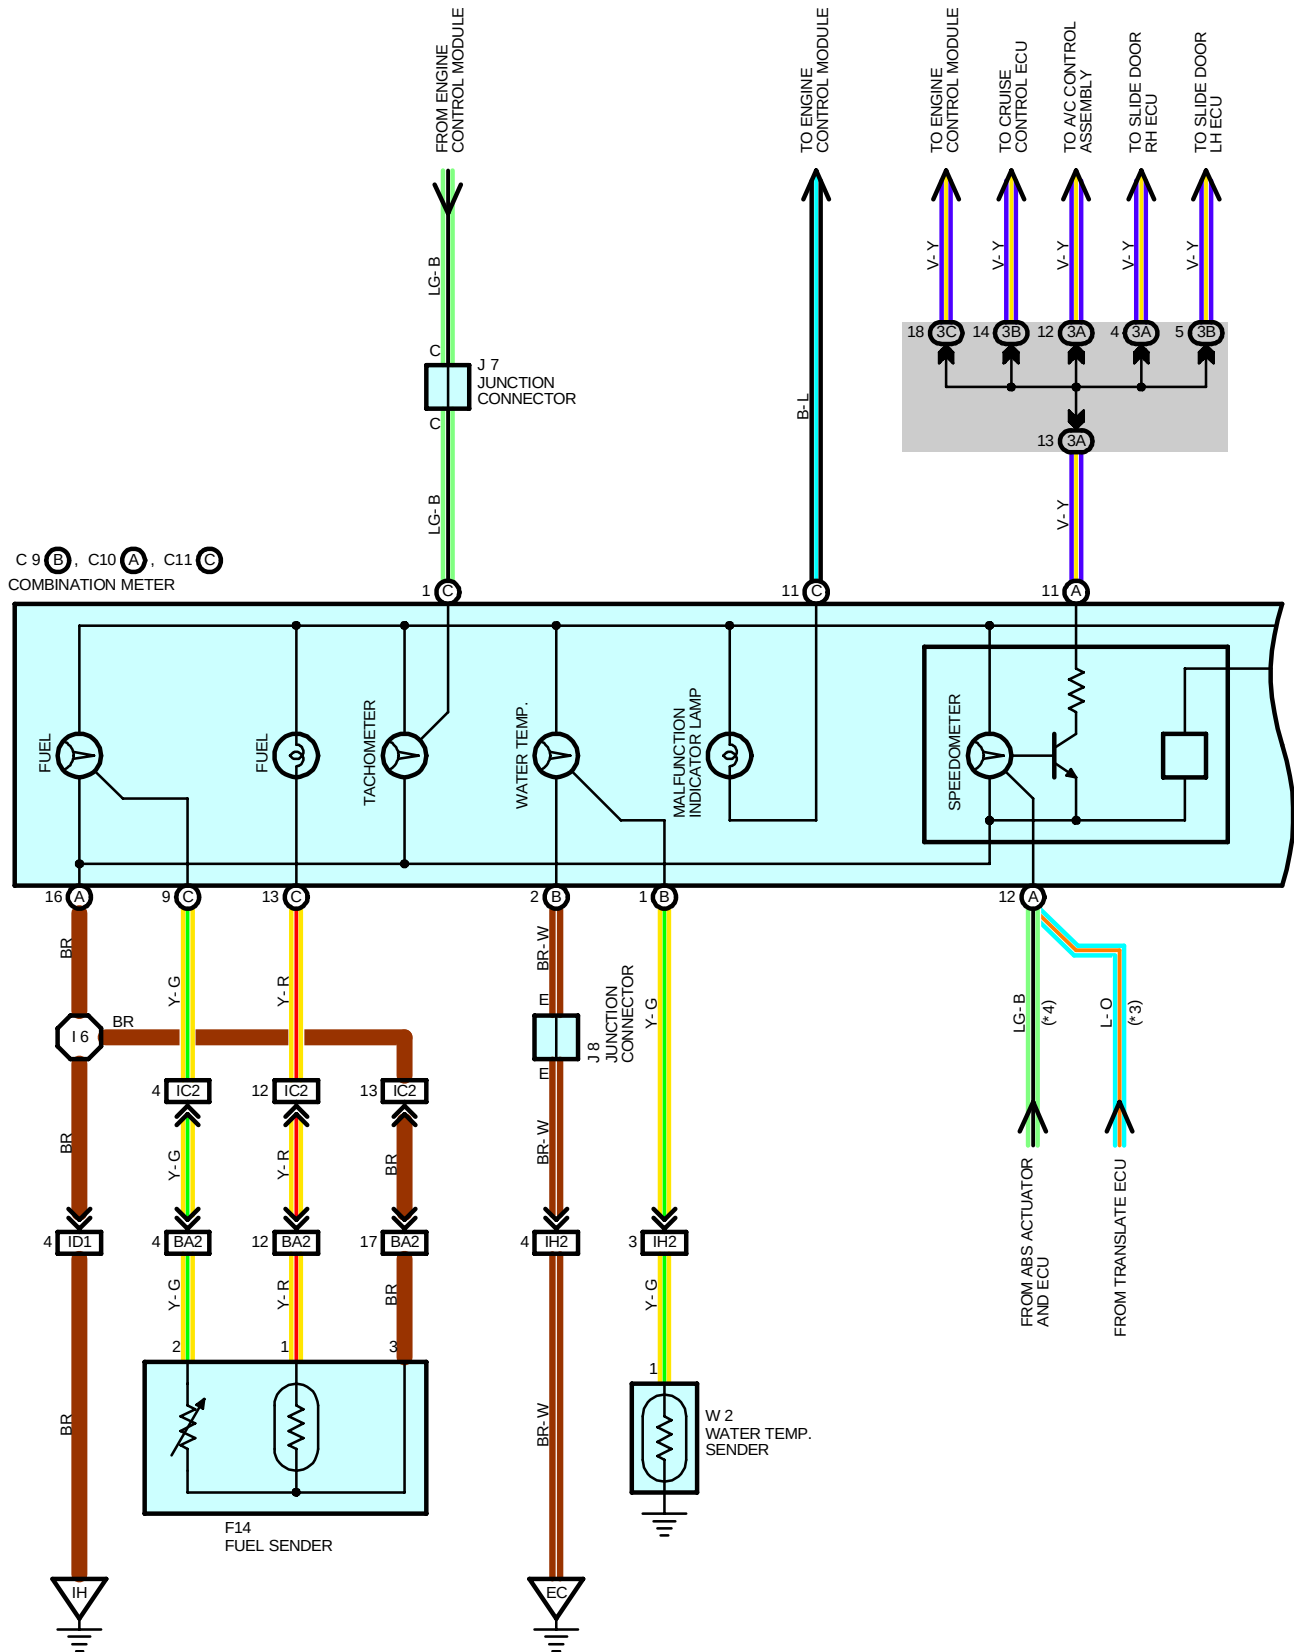

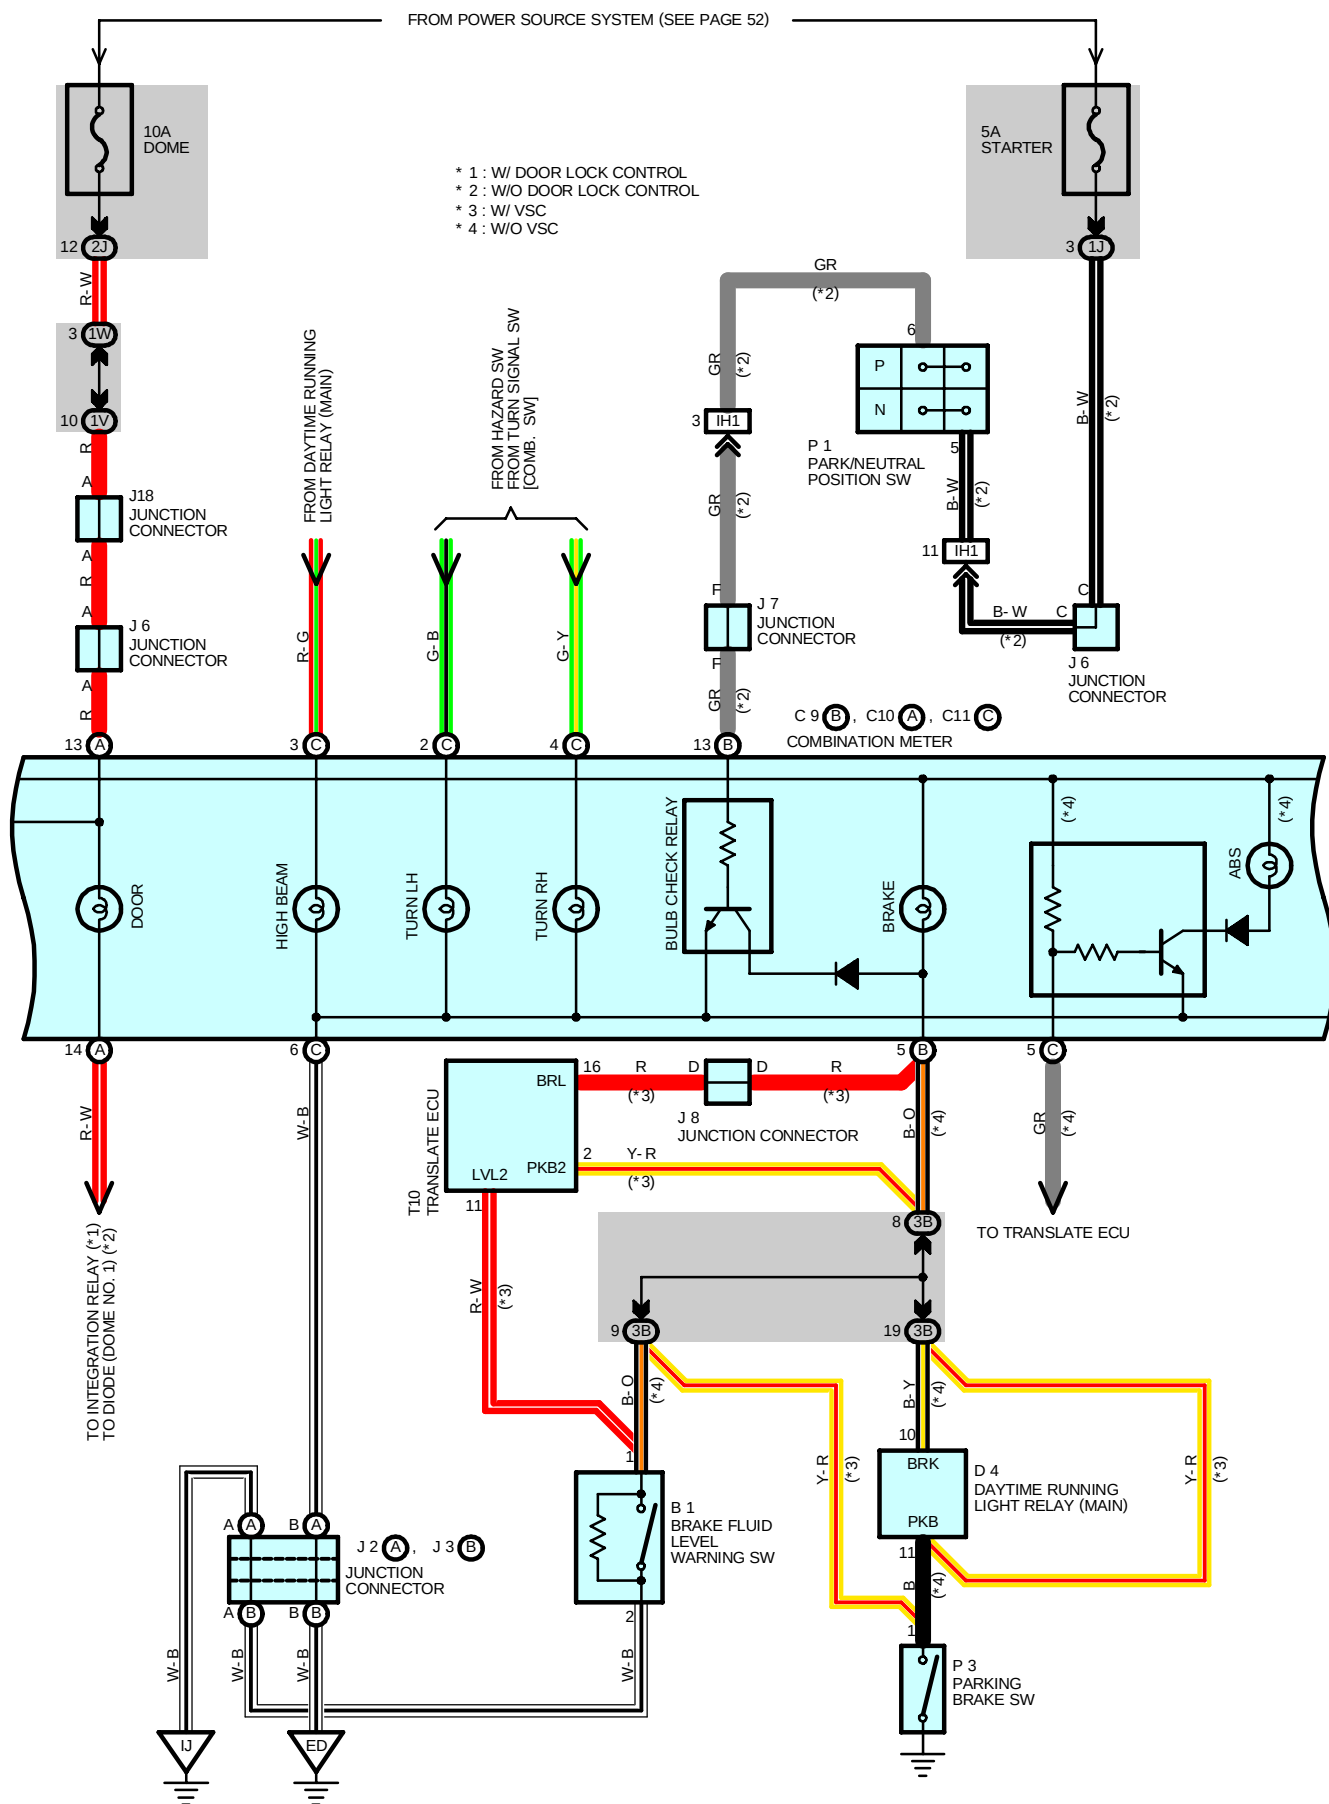

COMBINATION METER

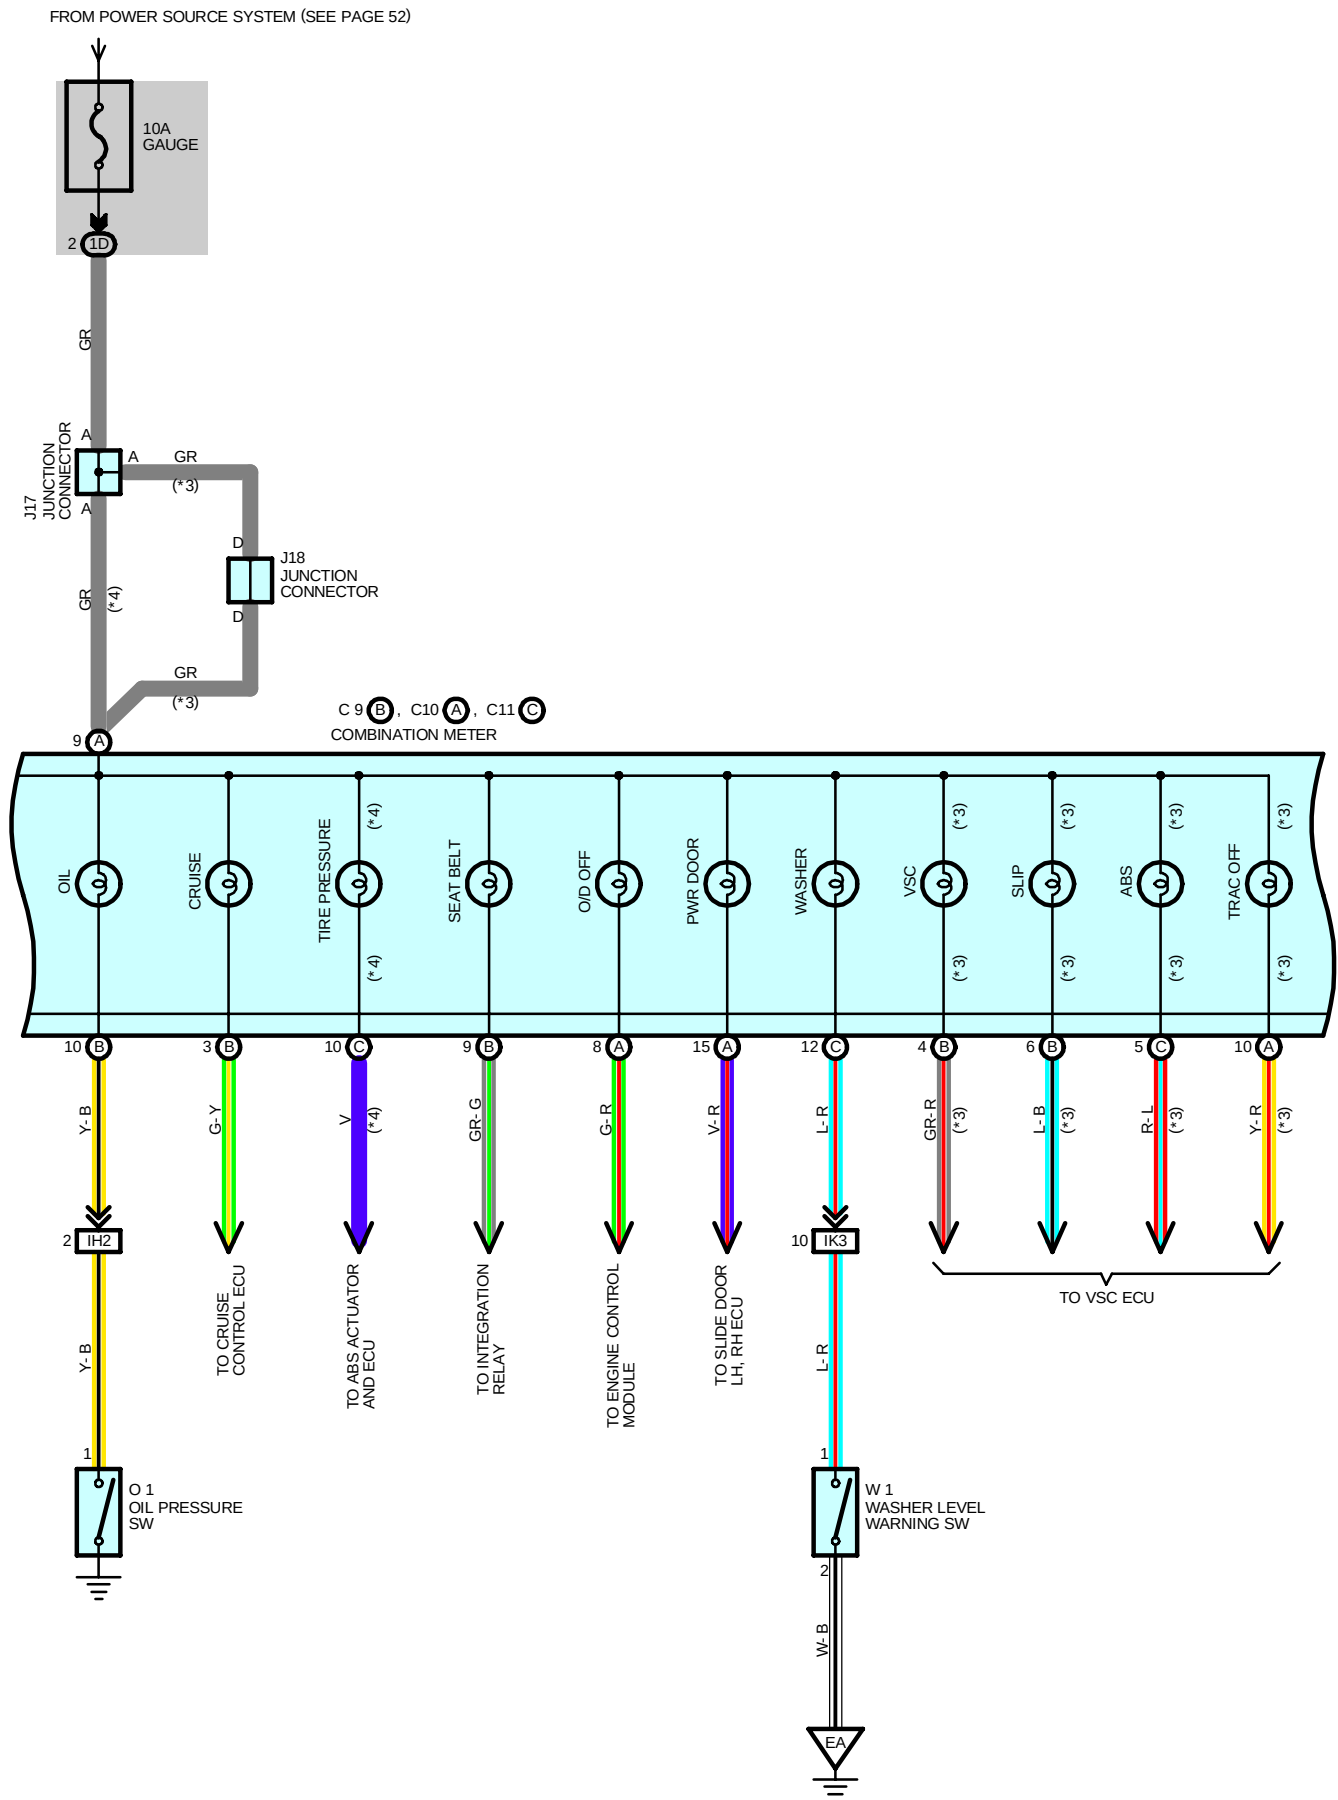

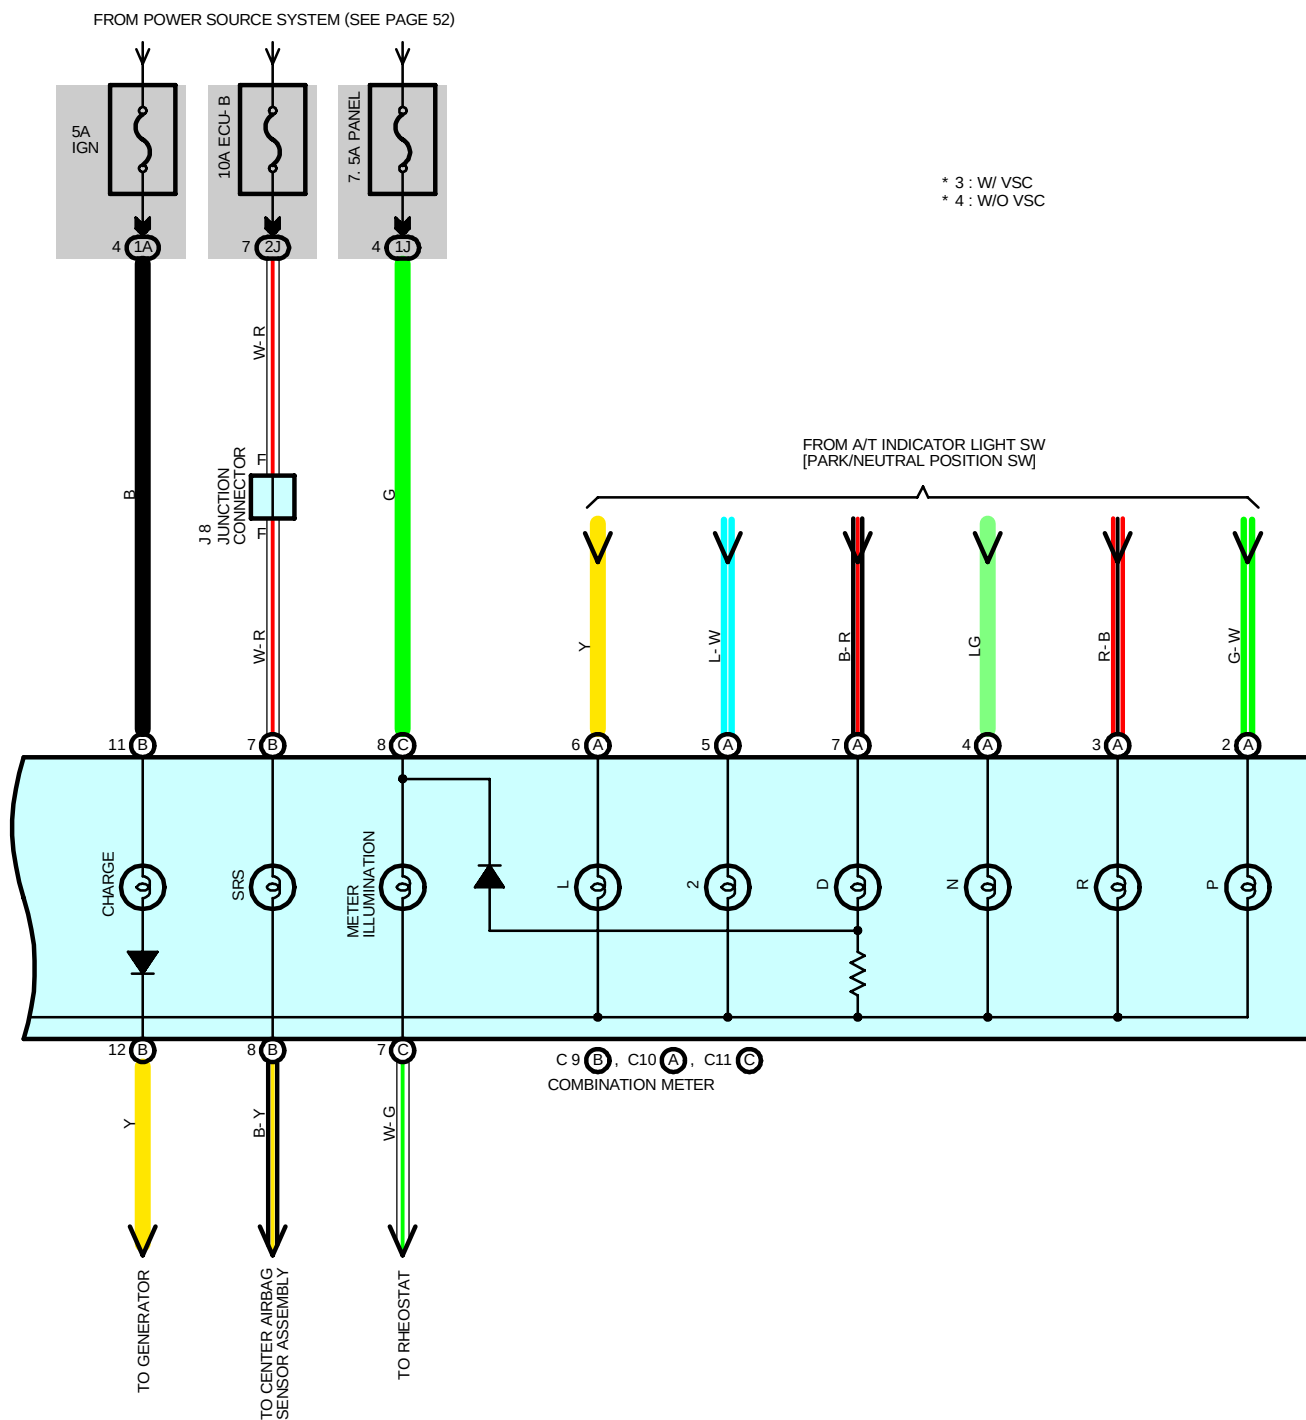

COMBINATION METER

SERVICE HINTS

B1 BRAKE FLUID LEVEL WARNING SW

1-2 : Closed with the float down

C9 (B), C10 (A), C11 (C) COMBINATION METER

(B)13-GROUND : Approx. **12** volts with the ignition SW at **ST** position and the shift lever at **P** or **N** position

(B) 11, (A) 9-GROUND : Approx. **12** volts with the ignition SW at **ON** position

(A) 13, (B) 7-GROUND : Always approx. **12** volts

(B) 2, (A)16, (C) 6-GROUND : Always continuity

O1 OIL PRESSURE SW

1-GROUND : Closed with the oil pressure above approx. **19.6 kpa (2.8 psi, 0.2 kgf/cm²)**

P3 PARKING BRAKE SW

1-GROUND : Closed with the parking brake pedal is depressed

W2 WATER TEMP. SENDER

1-GROUND : Approx. **160- 240 Ω (50°C,122°F)**

Approx. **17.1- 21.2 Ω (120°C, 288°F)**



: PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
B1	32	J3 B	35	P1	33
C9 B	34	J6	35	P3	35
C10 A	34	J7	35	T10	34
C11 C	34	J8	35	W1	33
D4	34	J17	35	W2	33
F14	36	J18	35		
J2 A	35	O1	33		



: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	22	Cowl Wire and Driver Side J/B No.1 (Lower Finish Panel)
1D		
1J		
1V		
1W		
2J	24	Cowl Wire and Engine Room J/B No.2 (Engine Compartment Left)
3A	26	Cowl Wire and J/B No.3 (Behind the Combination Meter)
3B		
3C		



: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC2	42	Cowl Wire and Floor Wire (Left Cowl Side Panel)
ID1	42	Instrument Panel Wire and Cowl Wire (The Back Side of the Lower Finish Panel)
IH1	44	Engine Wire and Cowl Wire (Front Side of the Blower Motor)
IH2		
IK3	44	Engine Room Main Wire and Cowl Wire (Right Cowl Side Panel)
BA2	46	Gauge Wire and Floor Wire (On the Left Rear Wheel House)

**: GROUND POINTS**

Code	See Page	Ground Points Location
EA	40	Front Side of the Right Fender Apron
EC	40	Rear Side of the Surge Tank
ED	40	Near the Left Front Suspension Support
IH	42	Right Instrument Panel Brace
IJ	42	Right Cowl Side Panel

**: SPLICE POINTS**

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I6	44	Cowl Wire			