



AUTOMATIC AIR CONDITIONING (REAR)

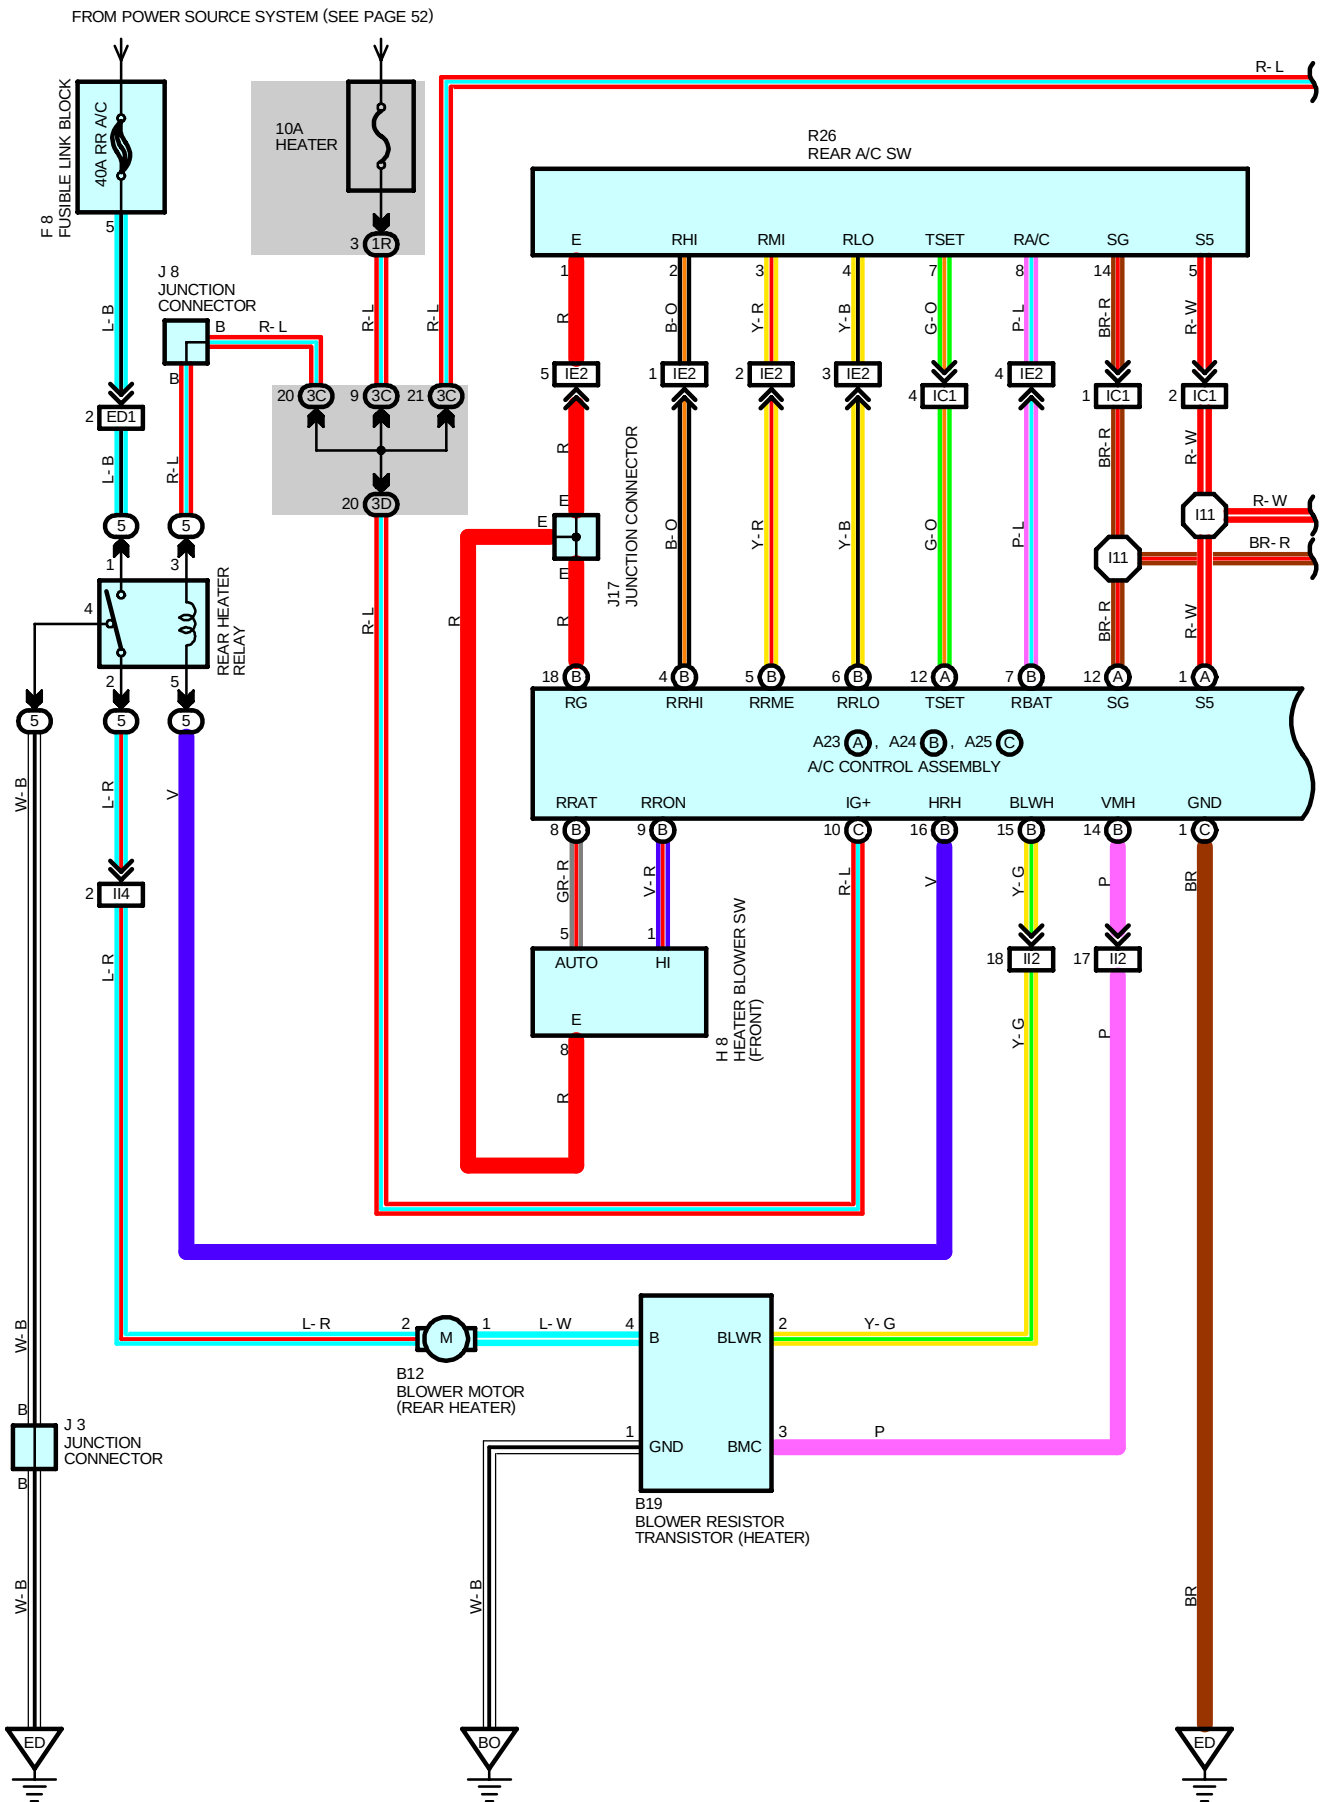

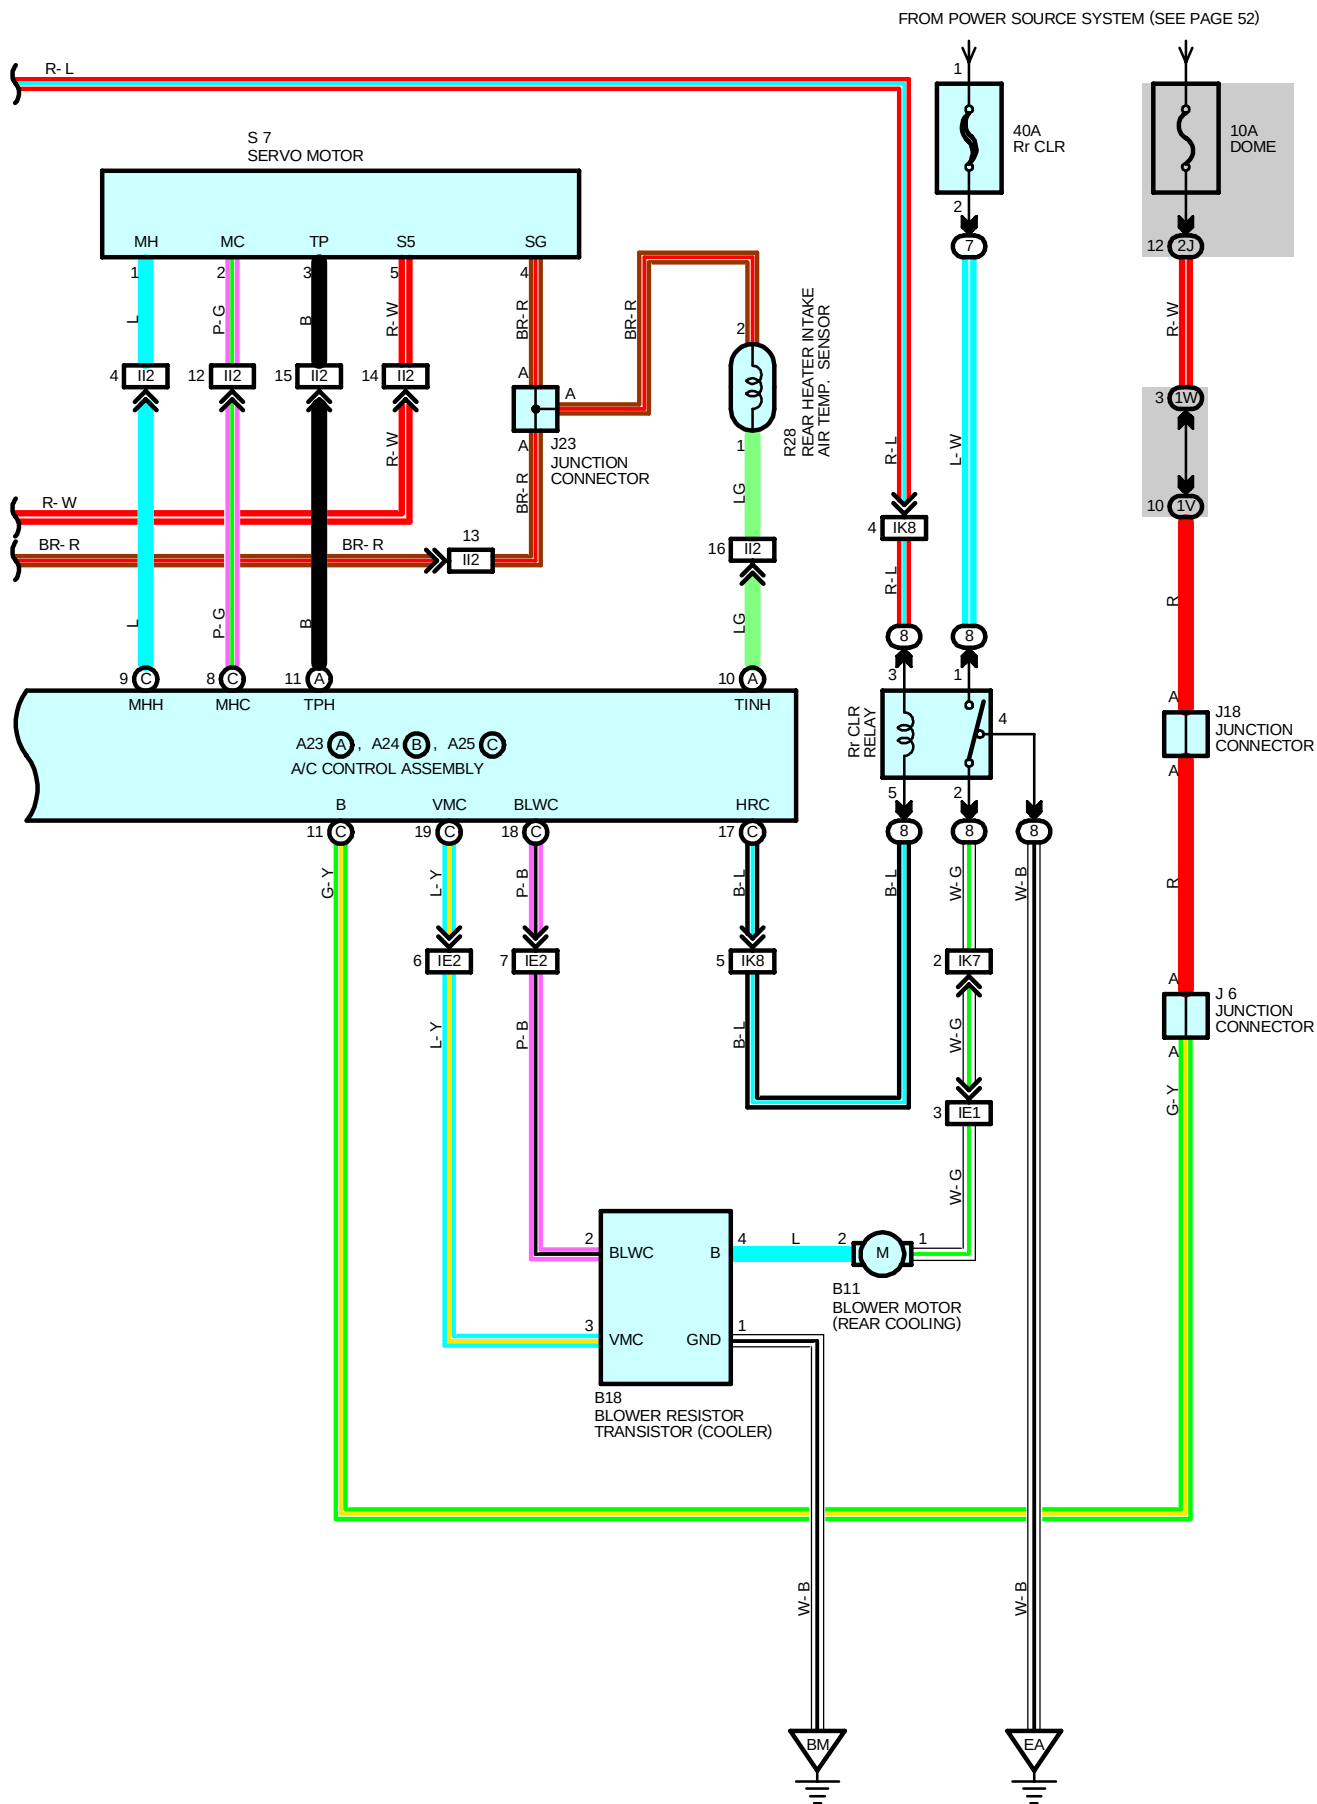

AUTOMATIC AIR CONDITIONING (REAR)

SERVICE HINTS

A25 (C) A/C CONTROL ASSEMBLY

- 11-GROUND : Always approx. **12** volts
- 10-GROUND : Approx. **12** volts with the ignition SW at **ON** position
- 1-GROUND : Always continuity

○ : PARTS LOCATION

Code		See Page	Code	See Page	Code	See Page
A23	A	34	B19	37	J17	35
A24	B	34	F8	32	J18	35
A25	C	34	H8	34	J23	36
B11		36	J3	35	R26	37
B12		36	J6	35	R28	37
B18		37	J8	35	S7	37

○ : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
5	29	Driver Side R/B No.5 (Lower Finish Panel)
7	29	R/B No.7 (Engine Compartment Left)
8	30	R/B No.8 (Engine Compartment Right)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1R	22	Cowl Wire and Driver Side J/B No.1 (Lower Finish Panel)
1V		
1W		
2J	24	Cowl Wire and Engine Room J/B No.2 (Engine Compartment Left)
3C	26	Cowl Wire and J/B No.3 (Behind the Combination Meter)
3D		

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
ED1	40	Cowl Wire and Engine Room Main Wire (Behind Headlight LH)
IC1	42	Cowl Wire and Floor Wire (Left Cowl Side Panel)
IE1	42	Floor Wire and Cowl Wire (The Back Side of the Lower Finish Panel)
IE2		
II2	44	Floor No.2 Wire and Cowl Wire (Right Kick Panel)
II4		
IK7	44	Engine Room Main Wire and Cowl Wire (Right Cowl Side Panel)
IK8		

▽ : GROUND POINTS

Code	See Page	Ground Points Location
EA	40	Front Side of the Right Fender Apron
ED	40	Near the Left Front Suspension Support
BM	46	Left Rear Quarter Panel
BO	46	Right Rear Quarter Panel

○ : SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I11	44	Cowl Wire			

