

PROBLEM SYMPTOMS TABLE

If a normal code is displayed during the DTC check but the problem still occurs, check the circuits for each problem symptom in the order given in the table below and proceed to the relevant troubleshooting page.

Symptom	Suspect Area	See page
ABS does not operate	Only when 1. - 4. are all normal and the problem is still occurring, replace the skid control ECU. 3. Check the DTC reconfirming that the normal code is output. 4. Power source circuit 5. Speed sensor circuit 6. Hydraulic circuit for leakage.	DI-220 DI-239 DI-233 DI-256
ABS does not operate efficiently	Only when 1. - 5. are all normal and the problem is still occurring, replace the skid control ECU. 1. Check the DTC reconfirming that the normal code is output. 2. Speed sensor circuit 3. Stop light switch circuit 4. Power source circuit 5. Hydraulic circuit for leakage	DI-220 DI-233 DI-243 DI-239 DI-256
ABS warning light abnormal	1. ABS warning light circuit 2. Skid control ECU	DI-250 DI-247
DTC check cannot be done	Only when 1. and 2. are all normal and the problem is still occurring, replace the ABS actuator assembly. 1. ABS warning light circuit 2. Tc terminal circuit	DI-250 DI-252
Speed sensor signal check cannot be done	1. Ts terminal circuit 2. Skid control ECU	DI-254 DI-247