


VSC Warning Light Circuit

CIRCUIT DESCRIPTION

If the ECU stores DTC to be necessary to shut down VSC operation, the VSC warning light lights on the combination meter.

WIRING DIAGRAM

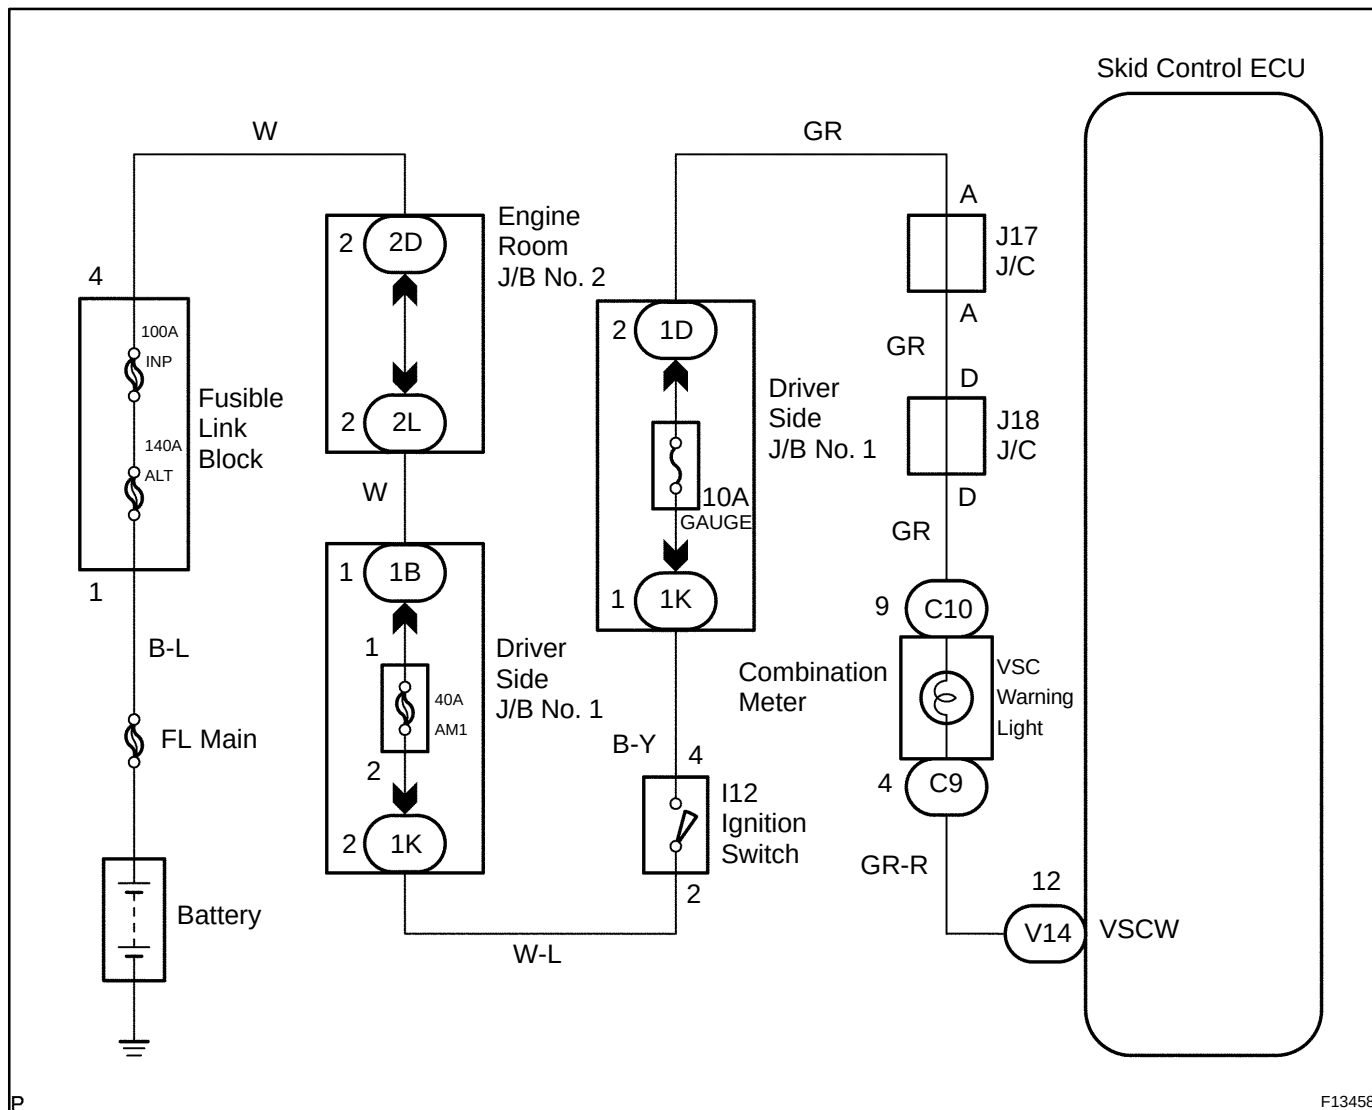

P

F13458

INSPECTION PROCEDURE

HINT:

Start the inspection from step 1 in case of using the TOYOTA hand-held tester and start from step 2 in case of not using the TOYOTA hand-held tester.

1	Check operation of the VSC warning light.
----------	--

PREPARATION:

- (a) Connect the TOYOTA hand-held tester to the DLC3.
- (b) Turn the ignition switch ON and push the TOYOTA hand-held tester main switch ON.
- (c) Select the ACTIVE TEST mode on the TOYOTA hand-held tester.

CHECK:

Check that "ON" and "OFF" of the VSC warning light can be shown on the combination meter with the TOYOTA hand-held tester.

OK

Go to step 4.

NG

2	Is DTC output?
----------	-----------------------

YES

Repair circuit indicated by the output code.

NO

3	Check VSC warning light.
----------	---------------------------------

See the combination meter troubleshooting on page [BE-2](#).

NG

Repair or replace bulb or combination meter.

OK

4	Check for open and short circuit in harness and connector between skid control ECU and VSC warning light, IG switch and VSC warning light (See page IN-31).
---	--

NG

Repair or replace harness or connector.

OK

Check and replace skid control ECU.