

PROBLEM SYMPTOMS TABLE

If a normal code is displayed during the DTC check but the problem still occurs, check the circuits for each problem symptom in the order given in the table below and proceed to the relevant troubleshooting page.

NOTICE:

When replacing skid control ECU, sensor, etc., turn the IG switch OFF.

Symptom	Suspect Area	See page
ABS does not operate	If the symptoms still occur even after the following circuits in suspect areas are inspected and proved to be normal, replace the skid control ECU. 5. Check the DTC, reconfirming that the normal code is output. 6. IG power source circuit 7. Speed sensor circuit 8. Check the ABS & VSC actuator with a TOYOTA hand-held tester. If abnormal, check the hydraulic circuit for leakage (See page DI-355).	DI-259 DI-308 DI-275 BR-43
ABS does not operate efficiently	If the symptoms still occur even after the following circuits in suspect areas are inspected and proved to be normal, replace the skid control ECU. 1. Check the DTC, reconfirming that the normal code is output. 2. Speed sensor circuit 3. Stop light switch circuit 4. Check the ABS & VSC actuator with a TOYOTA hand-held tester. If abnormal, check the hydraulic circuit for leakage (See page DI-355).	DI-259 DI-275 DI-314 BR-43
ABS warning light abnormal	1. ABS warning light circuit 2. Skid control ECU	DI-334
DTC check cannot be done	If the symptoms still occur even after the following circuits in suspect areas are inspected and proved to be normal, replace the skid control ECU. 1. ABS warning light circuit 2. VSC warning light circuit 3. Tc terminal circuit	DI-334 DI-336 DI-351
Speed sensor signal check cannot be done	1. Ts terminal circuit 2. Skid control ECU	DI-353
VSC does not operate	If the symptoms still occur even after the following circuits in suspect areas are inspected and proved to be normal, replace the skid control ECU. 1. Check the DTC, reconfirming that the normal code is output. 2. IG power source circuit 3. Hydraulic circuit for leakage 4. Speed sensor circuit	DI-259 DI-308 DI-355 DI-275
BA does not operate	Stop light switch circuit	DI-314
SLIP indicator light abnormal	SLIP indicator light circuit	DI-342

BRAKE warning light abnormal	1. BRAKE warning light circuit 2. Skid control ECU	DI-339
TRAC OFF indicator light abnormal	If the symptoms still occur even after the following circuits in suspect areas are inspected and proved to be normal, replace the skid control ECU. 1. TRAC OFF indicator light circuit 2. TRAC OFF switch circuit	DI-345 DI-345