


Door courtesy switch circuit

CIRCUIT DESCRIPTION

The door courtesy switch goes on when the door is opened and goes off when door is closed.

WIRING DIAGRAM

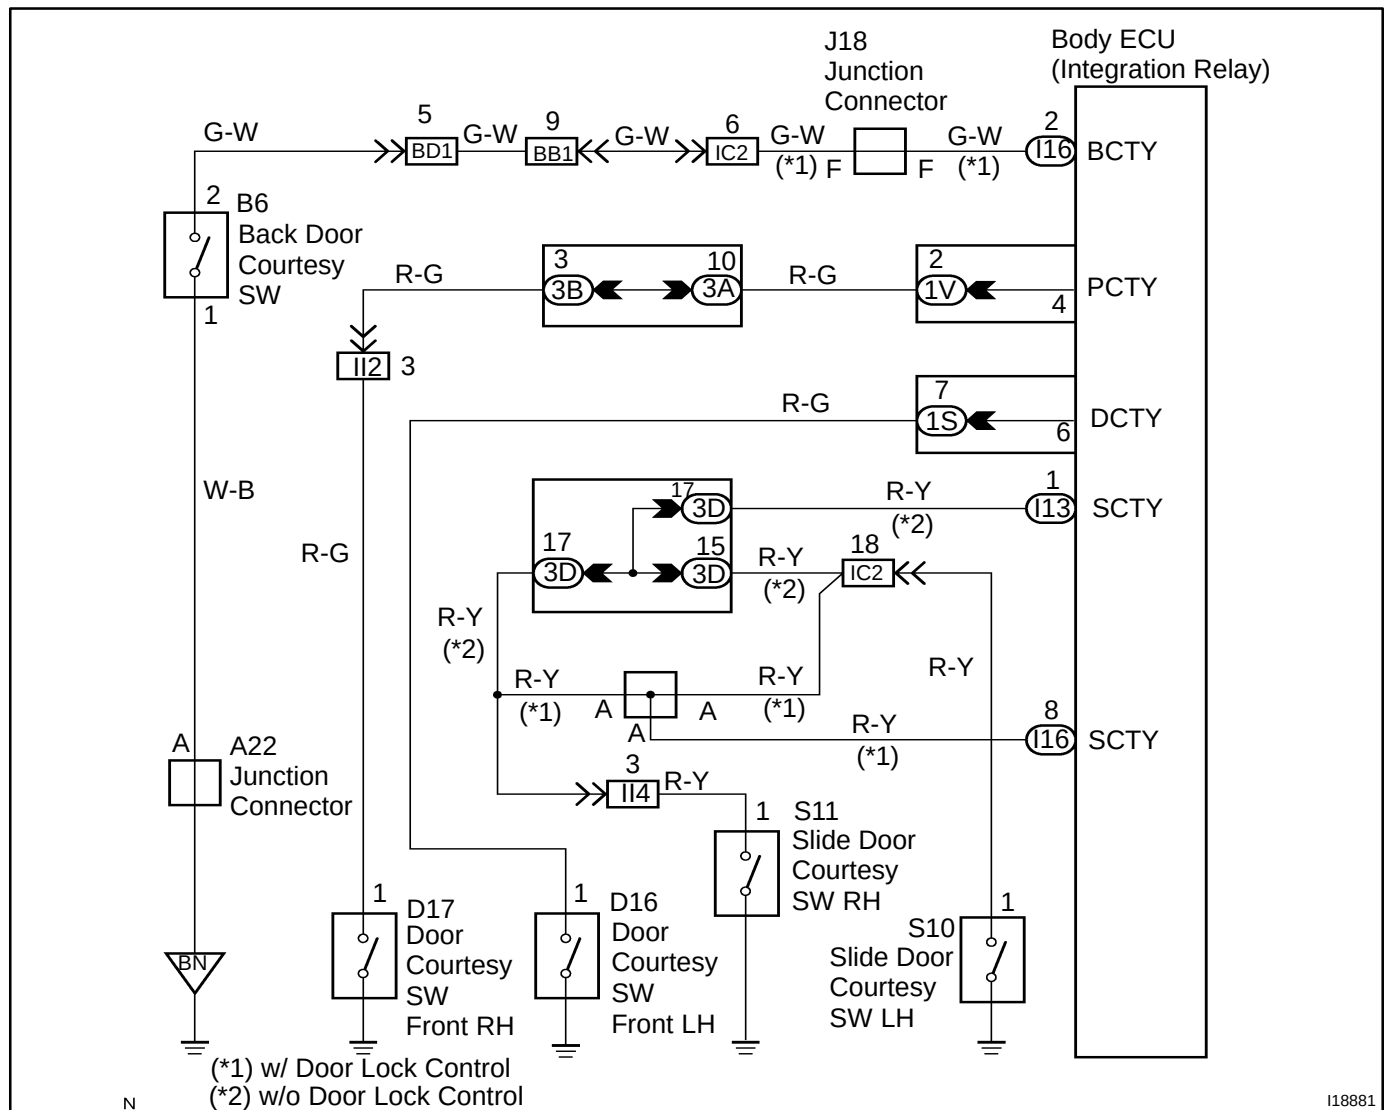

INSPECTION PROCEDURE

1	Check operation of door courtesy light.
----------	--

CHECK:

Check that door courtesy light comes on when door opened, and goes off when door is closed.

OK:

Must be operated normally.

OK

Proceed to next circuit inspection shown on problem symptom table (See page [DI-636](#)).

NG

2	Check courtesy switch (See page BE-31).
----------	---

NG

Replace the courtesy switch.

OK

3	Check wireharness and connector between courtesy light and body ECU, courtesy switch and body door ECU (See page IN-31).
----------	--

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-636](#)).