


Door lock motor circuit

WIRING DIAGRAM

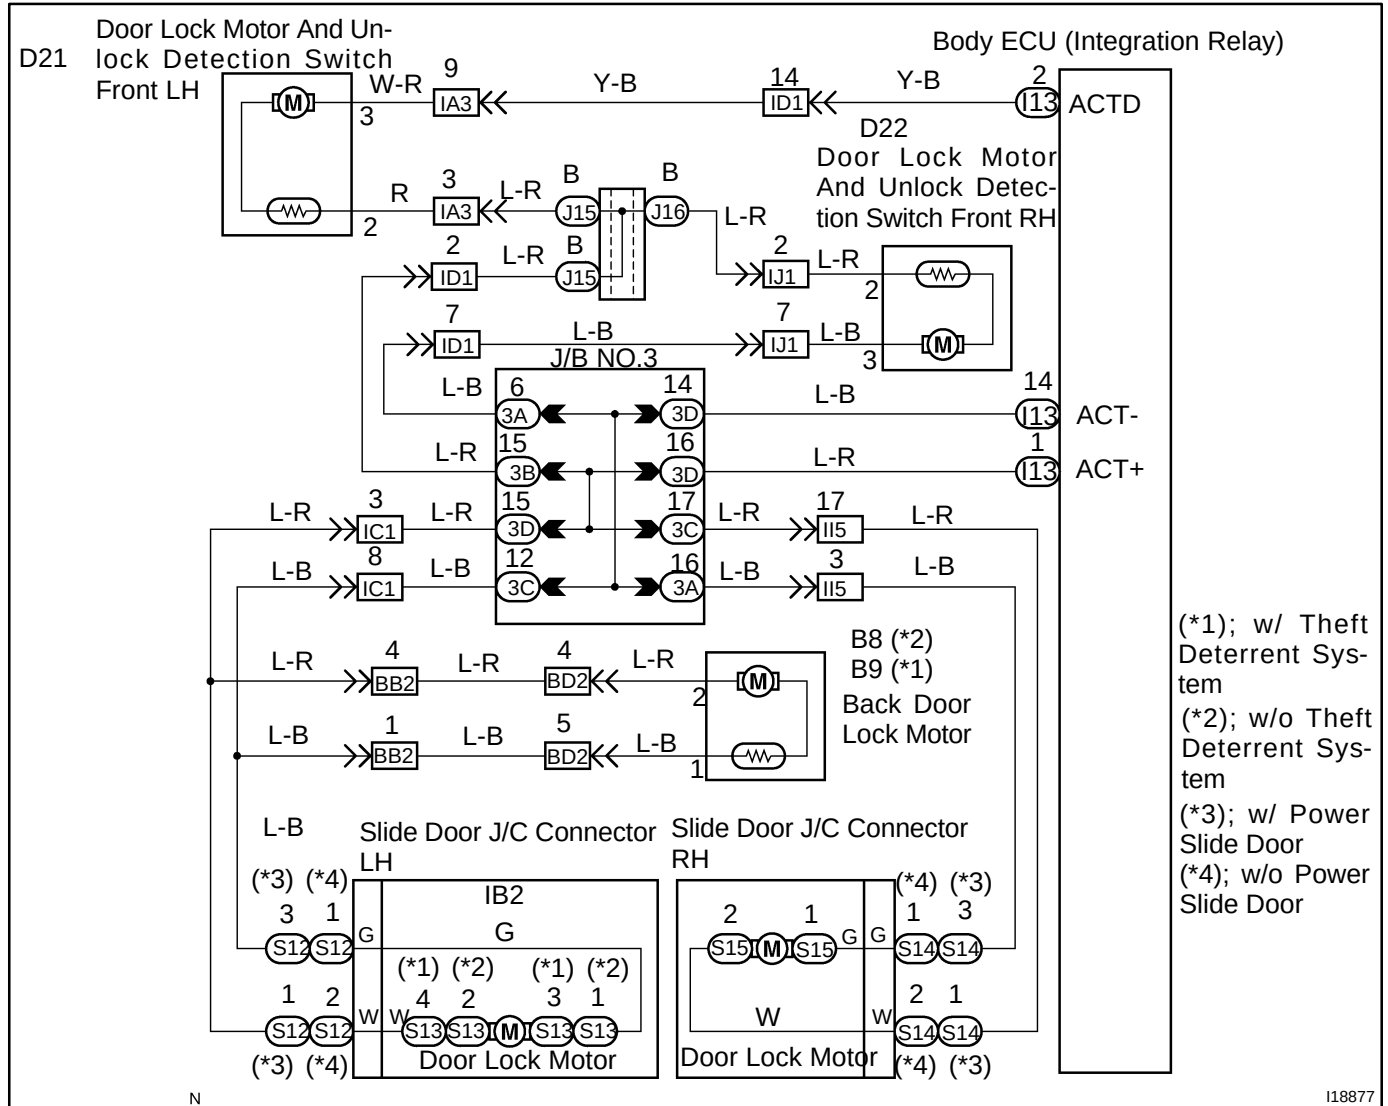

INSPECTION PROCEDURE

1	Check door lock motor. (See page BE-73)
---	--

NG

Replace the door lock motor.

OK

2	Check wireharness and connector between door lock motor and body ECU. (See page IN-31)
---	---

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table.
(See page [DI-636](#))