



Illumination circuit

CIRCUIT DESCRIPTION

Receiving the courtesy signal from either of the door ECU, the Body ECU will make the interior light, ignition light, and foot light come on.

WIRING DIAGRAM

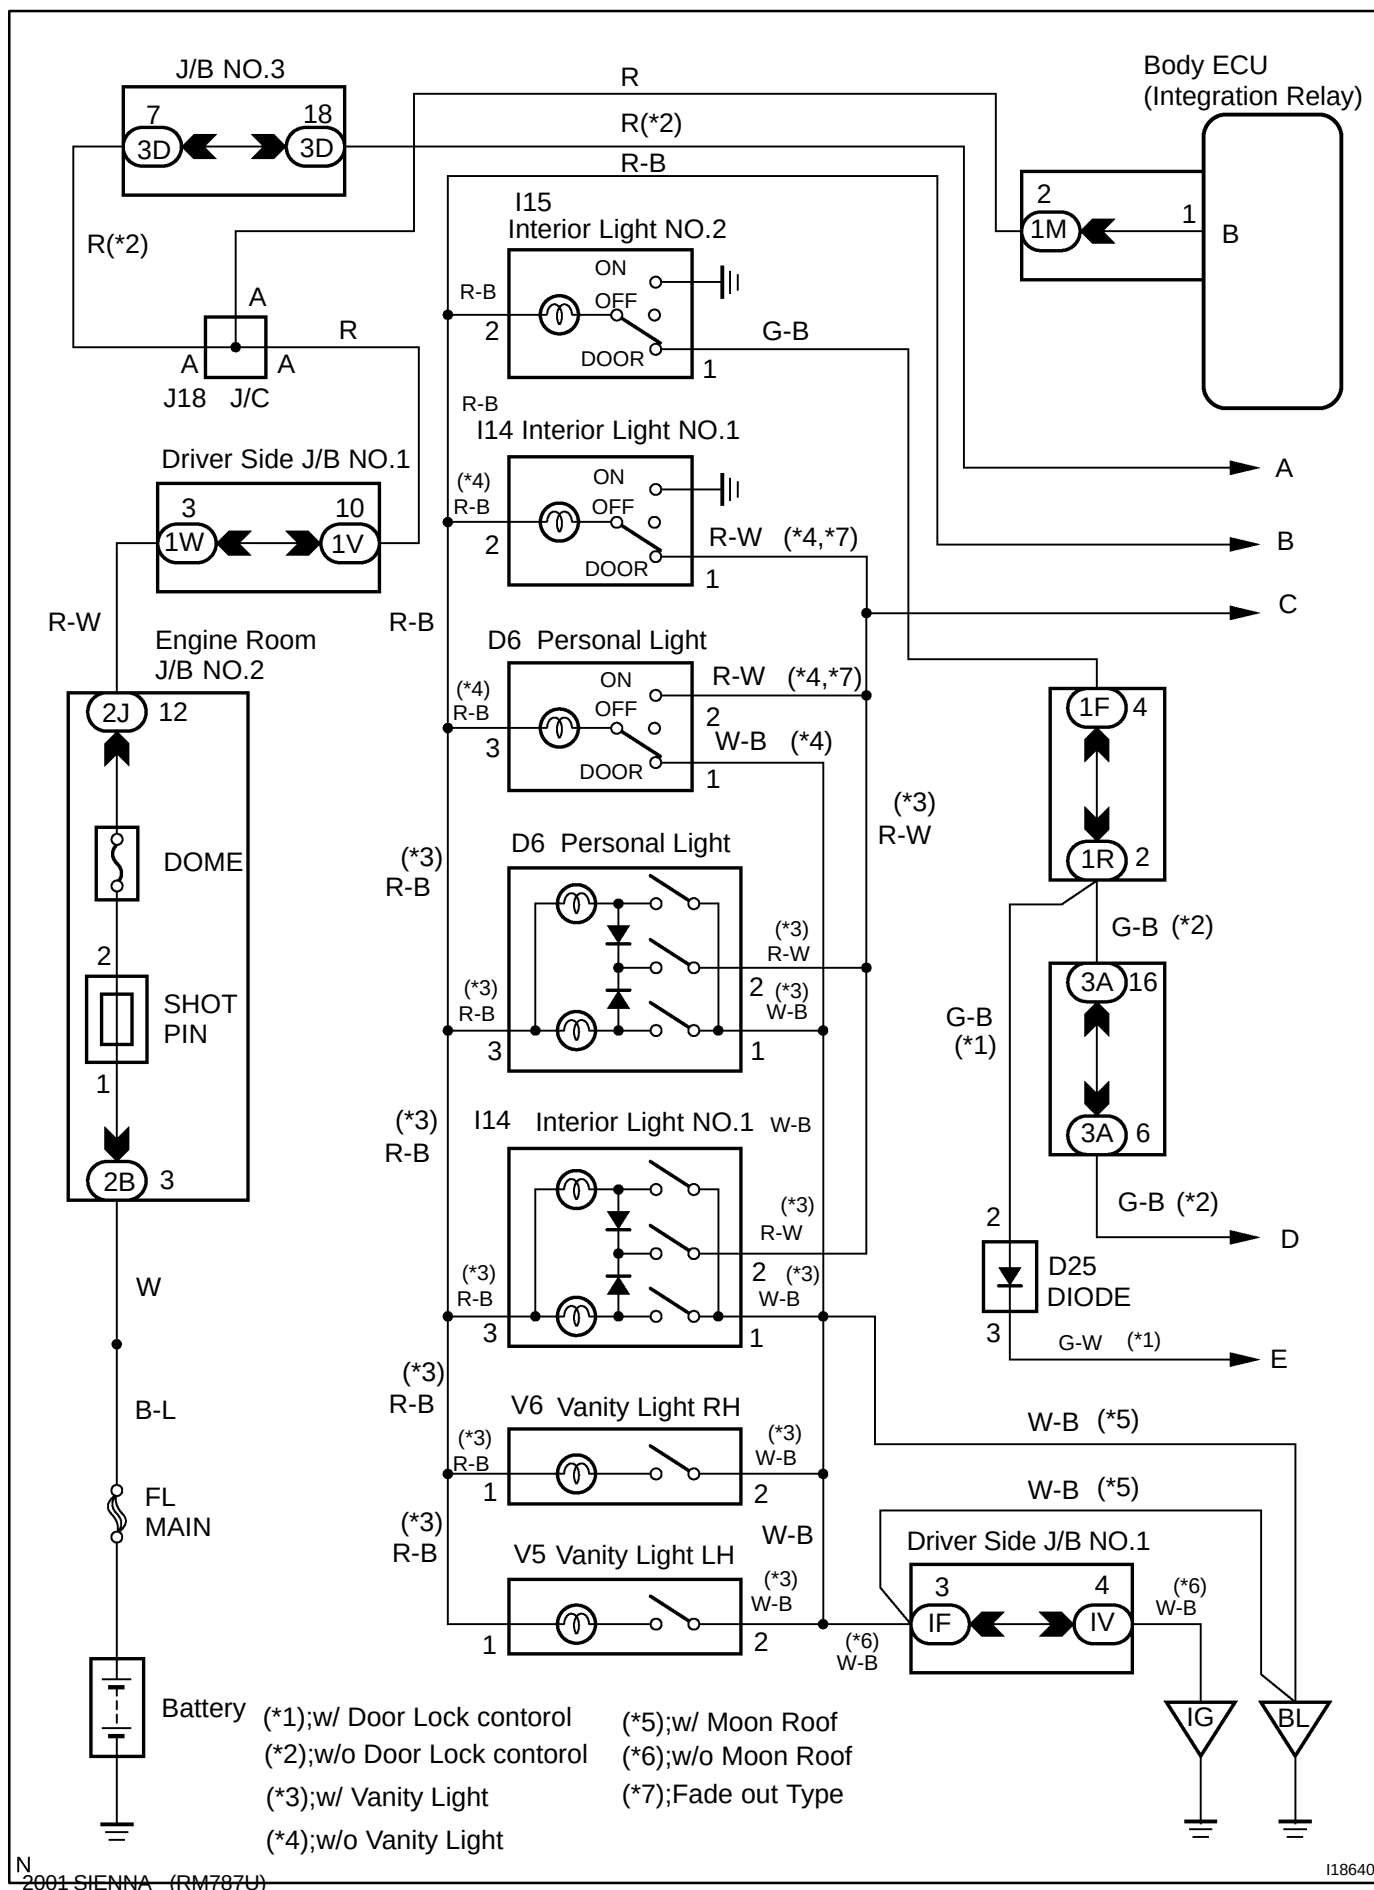

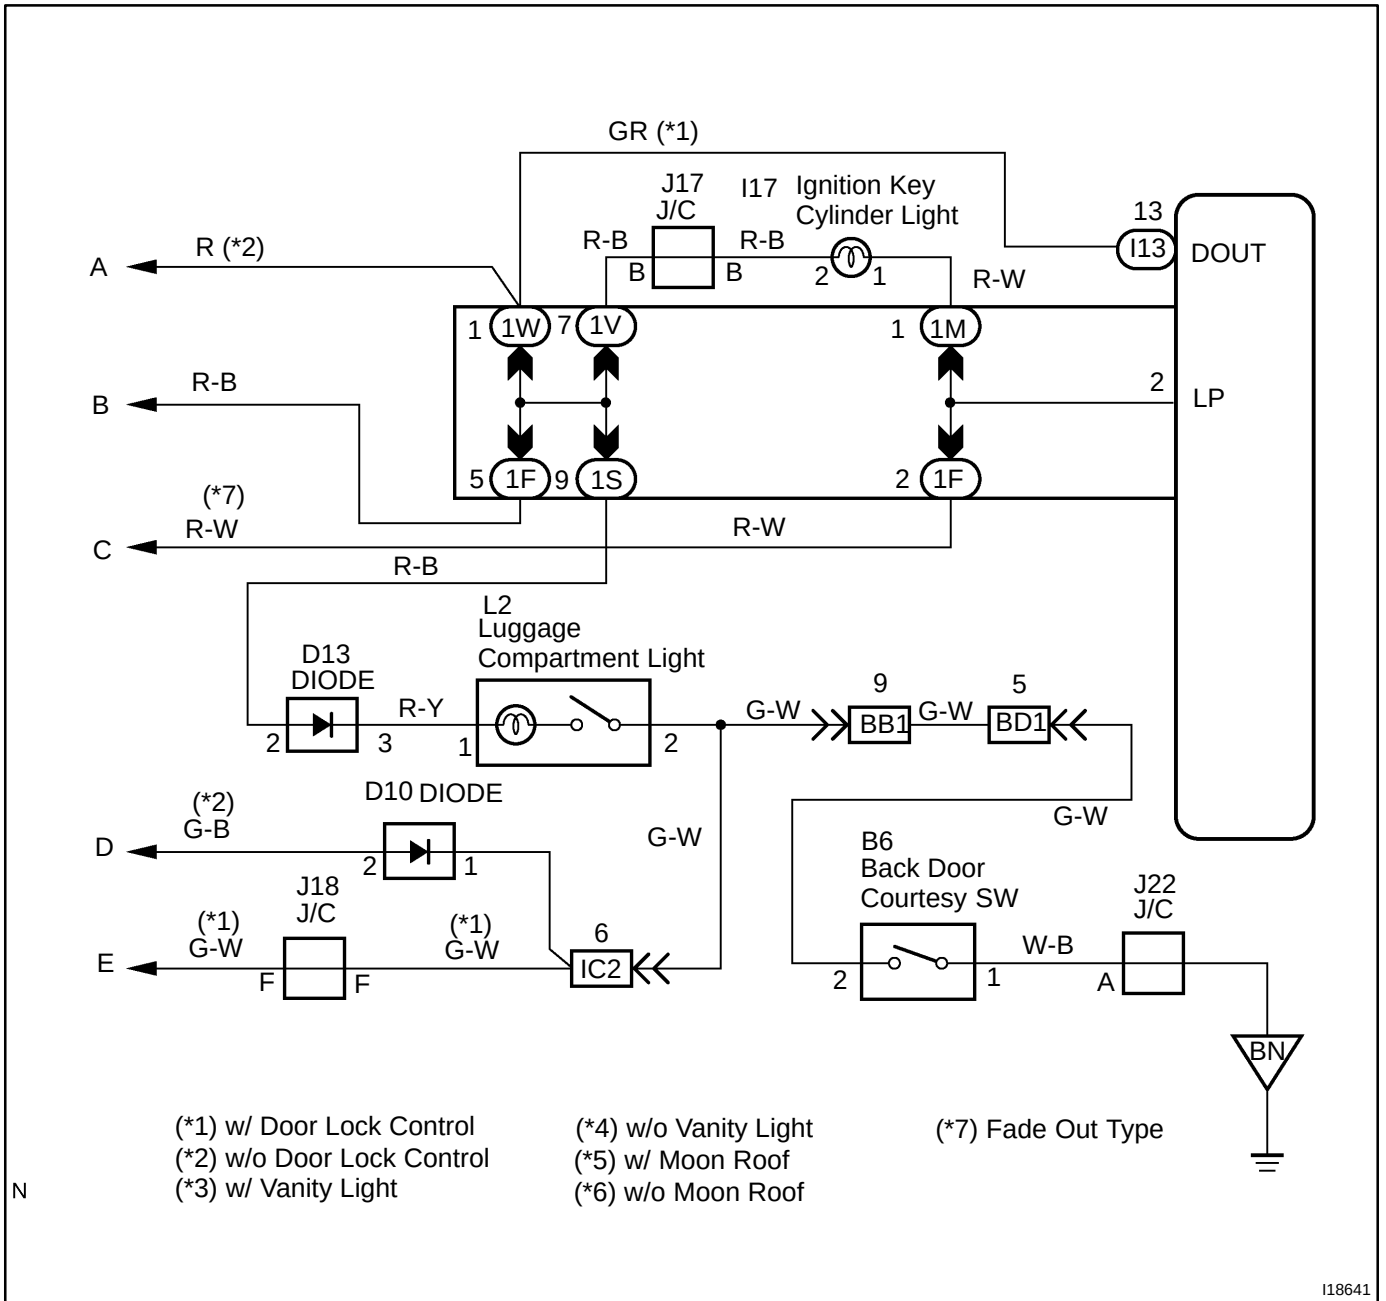

INSPECTION PROCEDURE

1	Check illumination light (Interior light system)(See page BE-31).
---	--

NG	Replace the failure light.
----	----------------------------

OK

2	Check wireharness and connector between each illumination light and Body ECU, battery and each illumination light (See page IN-31).
---	--

NG	Repair or replace wireharness or connector.
----	---

OK

Proceed to next circuit inspection shown on problem symptoms table (See page DI-636).
--