


## CRUISE MAIN Indicator Light Circuit

## CIRCUIT DESCRIPTION


When the cruise control main switch is turned ON, CRUISE MAIN indicator light lights up.

## WIRING DIAGRAM

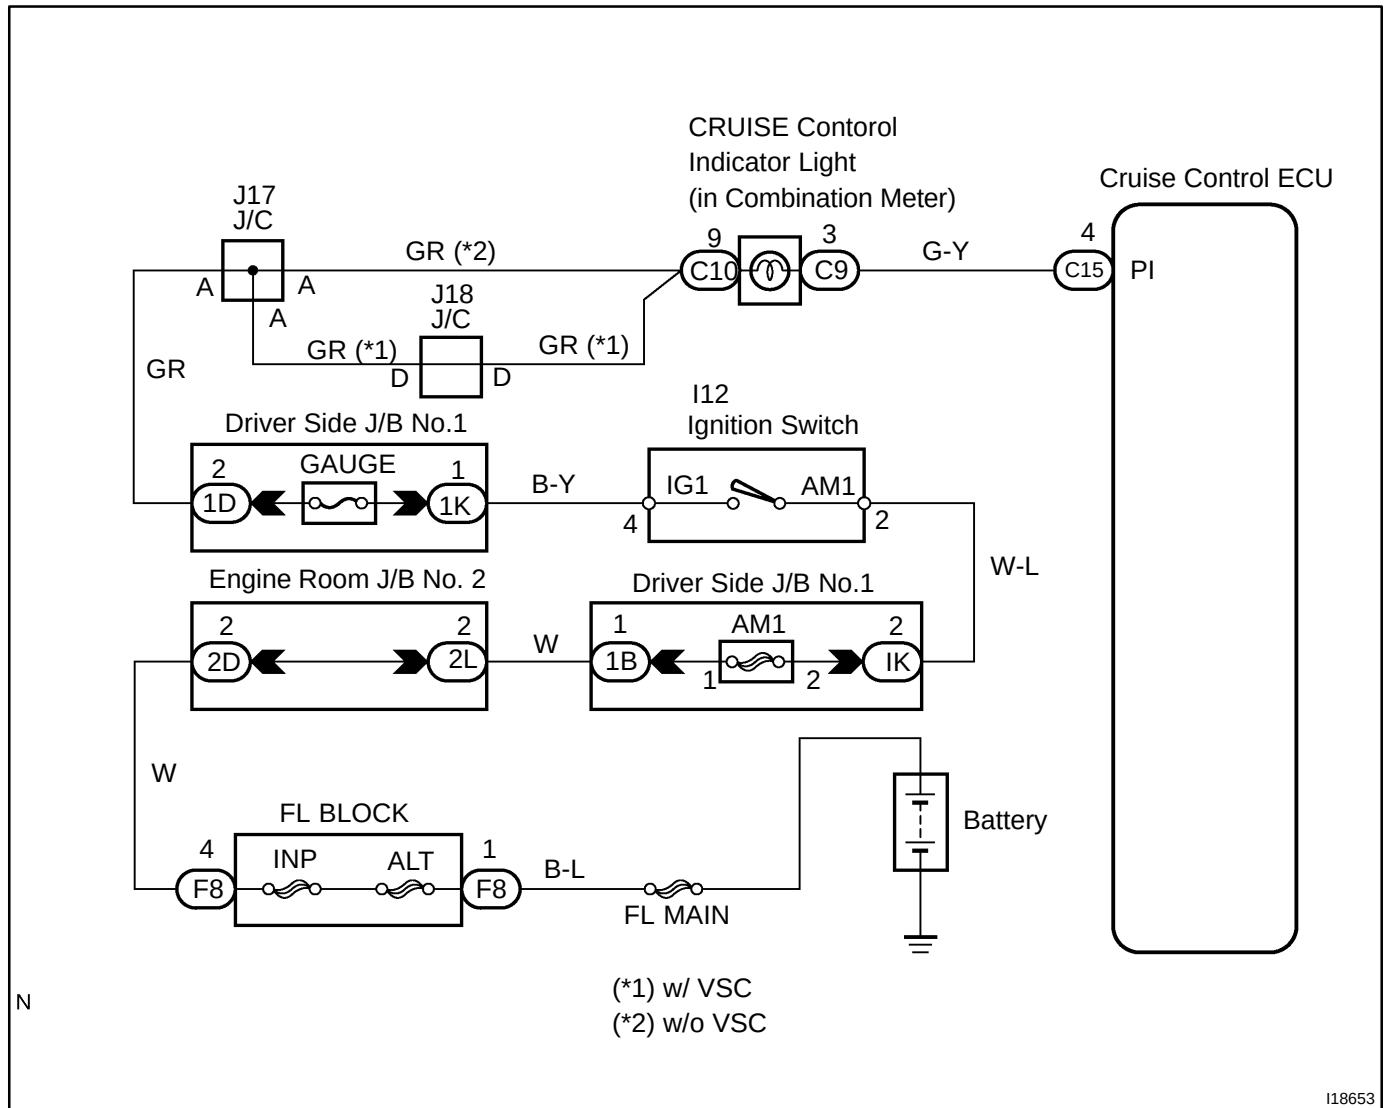

**INSPECTION PROCEDURE**

- 1** Check voltage between terminals PI and GND of cruise control ECU connector.

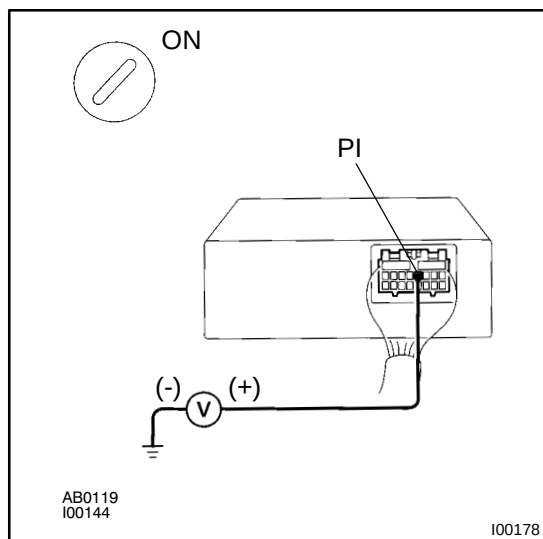**PREPARATION:**

Turn ignition switch ON.

**CHECK:**

Measure voltage between terminals PI and GND of cruise control ECU connector when main switch is on and off.

**OK:**

| Switch position | Voltage     |
|-----------------|-------------|
| OFF             | 10 - 16 V   |
| ON              | Below 1.2 V |

OK

Proceed to next circuit inspection shown on problem symptom table (See page [DI-572](#) ).

NG

- 2** Check combination meter. (See page [BE-2](#) )

NG

Replace combination meter.

OK

Check and replace cruise control ECU (See page [IN-31](#) ).