

PROBLEM SYMPTOMS TABLE

Symptom	Suspect Area	See page
SET not occurring or CANCEL occurring. (DTC is Normal)	3. Vehicle Speed Sensor 4. Control Switch Circuit (Cruise control switch) 5. Stop Light Switch Circuit 6. Park/Neutral Position Switch Circuit 7. Actuator Motor Circuit 8. Cruise Control Cable 9. Cruise Control ECU	DI-580 DI-583 DI-589 DI-595 DI-573 DI-605 IN-31
SET not occurring or CANCEL occurring. (DTC dose not output)	1. ECU Power Source Circuit 2. Cruise Control ECU	DI-598 IN-31
Actual vehicle speed deviates above or below the set speed.	1. Cruise Control Cable 2. Vehicle Speed Signal Abnormal 3. Electronically Controlled Transmission Communication Circuit 4. Actuator Motor Circuit 5. Idle Signal Circuit (Main throttle position sensor) 6. Cruise Control ECU	DI-605 DI-580 DI-592 DI-573 DI-586 IN-31
Gear shifting frequent between 3rd O/D when driving on uphill road. (Hurting)	1. Electronically Controlled Transmission Communication Circuit 2. Cruise Control ECU	DI-592 IN-31
Cruise control not cancelled, even when brake pedal is depressed.	1. Cruise Control Cable 2. Stop Light Switch Circuit 3. Actuator Motor Circuit 4. Cruise Control ECU	DI-605 DI-589 DI-573 IN-31
Cruise control not cancelled, even when transmission is shifted to "N" position.	1. Cruise Control Cable 2. Park/Neutral Position Switch Circuit 3. Actuator Motor Circuit 4. Cruise Control ECU	DI-605 DI-595 DI-573 IN-31
Cruise control not cancelled, even when clutch pedal is depressed.	1. Cruise Control Cable 2. Actuator Motor Circuit 3. Cruise Control ECU	DI-605 DI-573 IN-31
Control switch does not operate. (SET/COAST, ACC/RES, CANCEL not possible)	1. Cruise Control Cable 2. Control Switch Circuit 3. Actuator Motor Circuit 4. Cruise Control ECU	DI-605 - DI-573 IN-31
SET possible at 40 km/h (25 mph) or less, or CANCEL does not operate at 40 km/h (25 mph) or less.	1. Cruise Control Cable 2. Vehicle Speed Signal Abnormal 3. Actuator Motor Circuit 4. Cruise Control ECU	DI-605 DI-580 DI-573 IN-31
Poor response in ACCEL and RESUME modes.	1. Cruise Control Cable 2. Electronically Controlled Transmission Communication Circuit 3. Actuator Motor Circuit 4. Cruise Control ECU	DI-605 DI-592 DI-573 IN-31
O/D does not RESUME, even though the road is not uphill.	1. Electronically Controlled Transmission Communication Circuit 2. Cruise Control ECU	DI-592 IN-31
DTC memory is erased.	1. Cruise Control ECU	IN-31
DTC is not output, or is output when should not be.	1. Diagnosis Circuit 2. Cruise Control ECU	DI-603 IN-31
Cruise MAIN indicator light remains ON or falls to light up.	1. Cruise MAIN Indicator Light Switch Circuit	DI-601