

PROBLEM SYMPTOMS TABLE

Symptom	Suspect Area	See page
Immobiliser is not set. (Engine starts with key codes other than the registered key code.)	2. ECM	IN-31
Engine does not start.	1. Key 2. Wire harness 3. Transponder key coil 4. Amplifier 5. ECM	*1 IN-31 BE-159 - IN-31
Security indicator is always ON.	1. Security indicator 2. Wire harness 3. ECM	*2 IN-31 IN-31
Security indicator is always ON. (Although code has been registered in the automatic registration mode, indicator is not OFF.)	1. Wire harness 2. Transponder key coil 3. Amplifier 4. ECM	IN-31 BE-159 - IN-31
Security indicator is OFF (When DTC of immobiliser is output)	1. Wire harness 2. Transponder key coil 3. Amplifier 4. ECM	IN-31 BE-159 - IN-31
Security indicator is OFF. (When DTC of immobiliser is not output)	1. Wire harness 2. ECM	IN-31 IN-31
Security indicator is abnormally brinking.	1. Wire harness 2. ECM	IN-31 IN-31

*1 : Check that the key which did not start the engine has been registered and that it is possible to start with other already registered key codes.

*2 : Finish the automatic registration mode because the mode might still remain.