


TERMINALS OF ECU

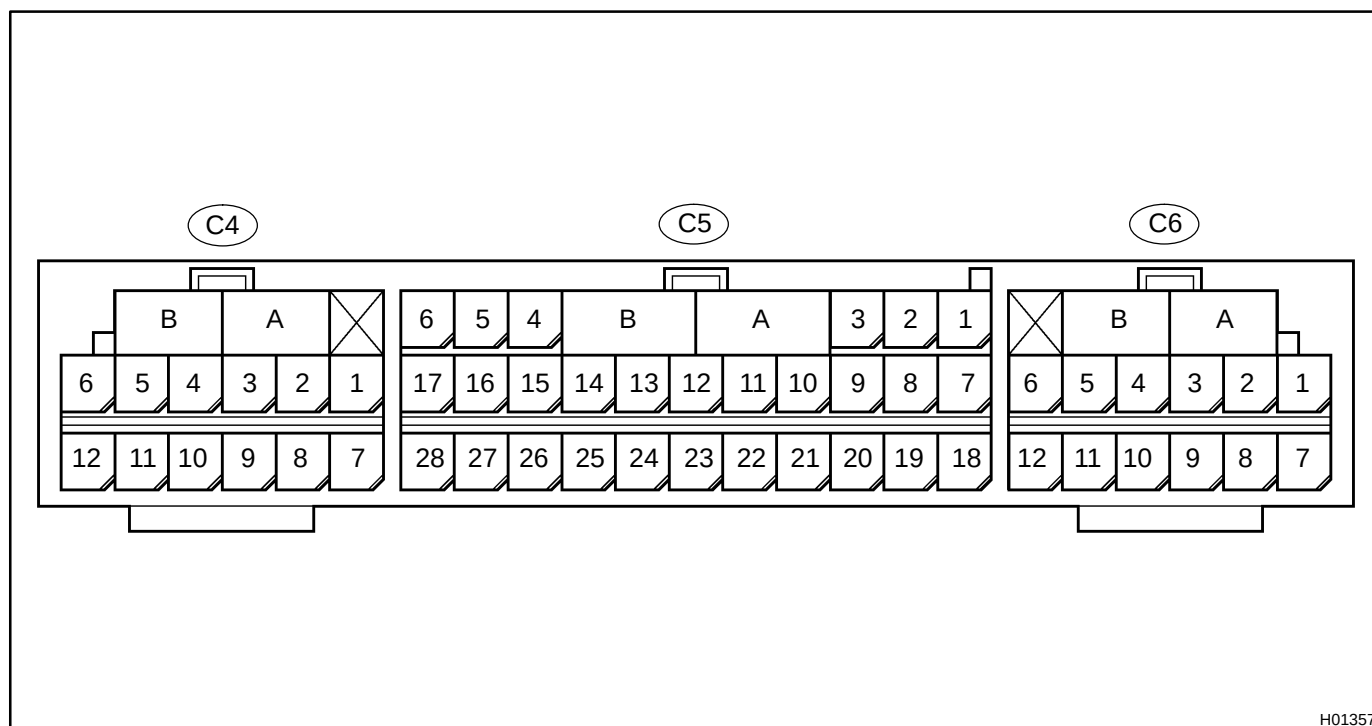

H01357

No.	Symbol	Terminal Name
A	-	Electrical Connector Check Mechanism
B	-	Electrical Connector Check Mechanism
C5 - 3	LA	SRS Warning Light
C5 - 5	IG2	Power Source
C5 - 6	ACC	Power Source
C5 - 9	SR+	Front Airbag Sensor (RH)
C5 - 10	P+	Squib (Passenger)
C5 - 11	P-	Squib (Passenger)
C5 - 12	SIL	Diagnosis
C5 - 13	D-	Squib (Driver)
C5 - 14	D+	Squib (Driver)
C5 - 15	SL+	Front Airbag Sensor (LH)
C5 - 19	Tc	Diagnosis
C5 - 20	SR-	Front Airbag Sensor (RH)
C5 - 23	GSW2	ECM
C5 - 26	SL-	Front Airbag Sensor (LH)
C5 - 27	E1	Ground
C5 - 28	E2	Ground
C4 - 1	PL-	Squib (Seat Belt Pretensioner, LH)
C4 - 2	PL+	Squib (Seat Belt Pretensioner, LH)
C4 - 5	SFL-	Squib (Side, LH)
C4 - 6	SFL+	Squib (Side, LH)
C4 - 7	VUPL	Side Airbag Sensor (LH)
C4 - 9	ESL	Side Airbag Sensor (LH)
C4 - 10	SSL+	Side Airbag Sensor (LH)

DIAGNOSTICS - SUPPLEMENTAL RESTRAINT SYSTEM

C4 - 11	LBE+	Seat Belt Buckle Switch (LH)
C4 - 12	SSL-	Side Airbag Sensor (LH)
C6 - 1	SFR+	Squib (Side, RH)
C6 - 2	SFR-	Squib (Side, RH)
C6 - 5	PR+	Squib (Pretensioner, RH)
C6 - 6	PR-	Squib (Pretensioner, RH)
C6 - 7	SSR-	Side Airbag Sensor (RH)
C6 - 9	SSR+	Side Airbag Sensor (RH)
C6 - 10	ESR	Side Airbag Sensor (RH)
C6 - 12	VUPR	Side Airbag Sensor (RH)
C6 - 8	RBE+	Seat Belt Buckle Switch (RH)