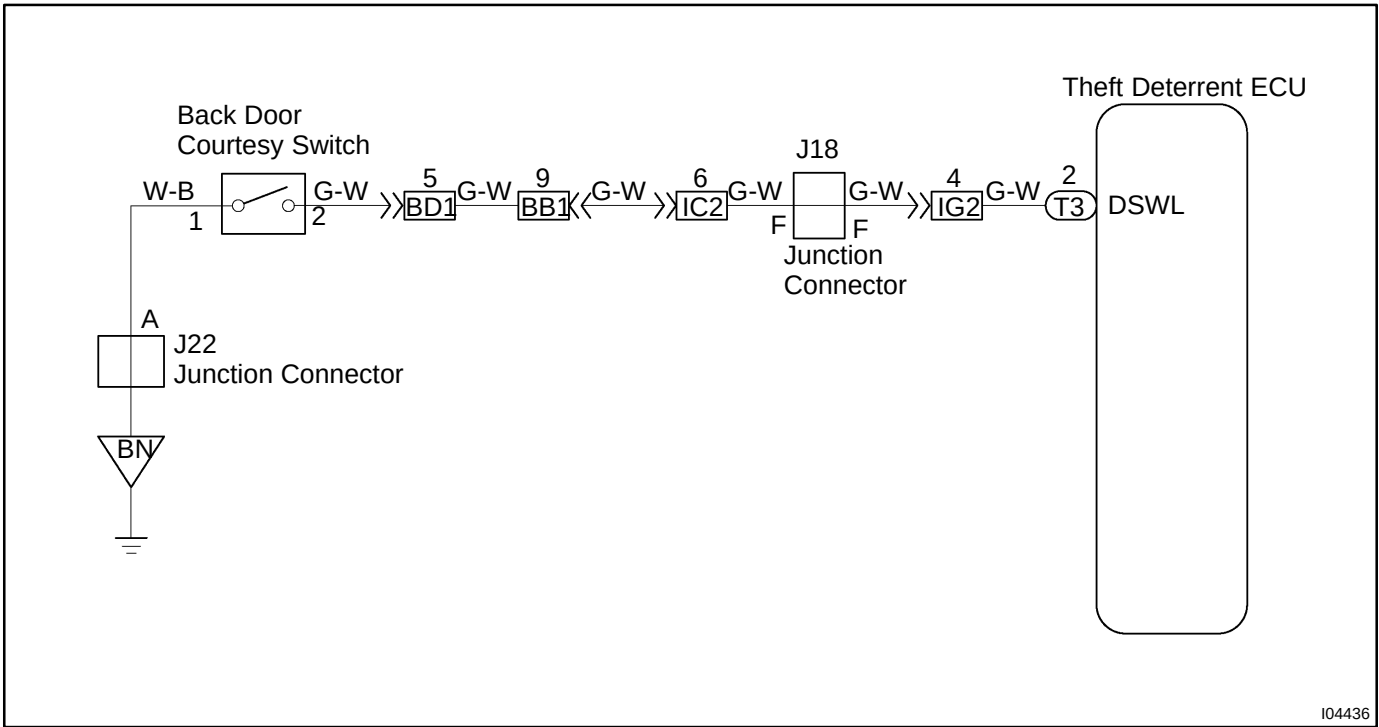


Back Door Key Lock and Unlock Switch Circuit

CIRCUIT DESCRIPTION

The back door courtesy switch goes ON when back door key cylinder is opened and goes OFF when the back door is closed.

WIRING DIAGRAM



INSPECTION PROCEDURE

1	Check operation of back door courtesy light.
---	--

CHECK:

 
Check that back door courtesy light goes OFF when back door courtesy switch is pushed, and comes ON when switch is not pushed.

NG

 
Check and repair back door courtesy light circuit (See page [BE-31](#)).

OK

2	Check for open in harness and connector between theft deterrent ECU and back door courtesy switch (See page IN-31).
---	--

NG

Repair or replace harness or connector.

OK

Check and replace theft deterrent ECU. *1

*1: When there is a malfunction that prevents the theft deterrent system from being set, proceed to the next numbered circuit inspection shown on matrix chart (See page [DI-532](#)).